
XIAO ESP32S3 + Wio-SX1262

Assembly guide

Antennas first. USB power last.

Use the matching ESP32S3 kit with B2B connector.

0 Parts

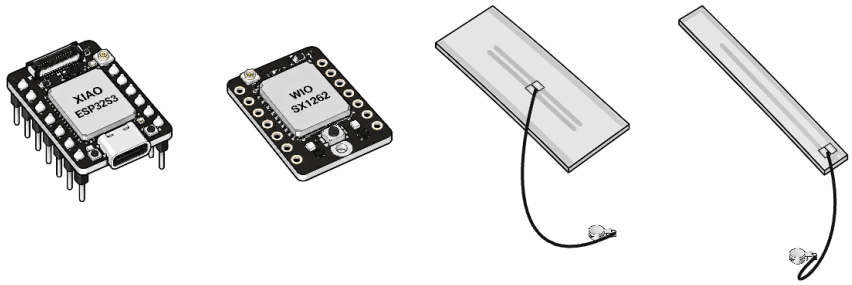


1x XIAO
with pin headers

1x Wio
SX1262

1x Wi-Fi
2.4 GHz

1x LoRa
860-930 MHz


1 Wi-Fi / Bluetooth antenna

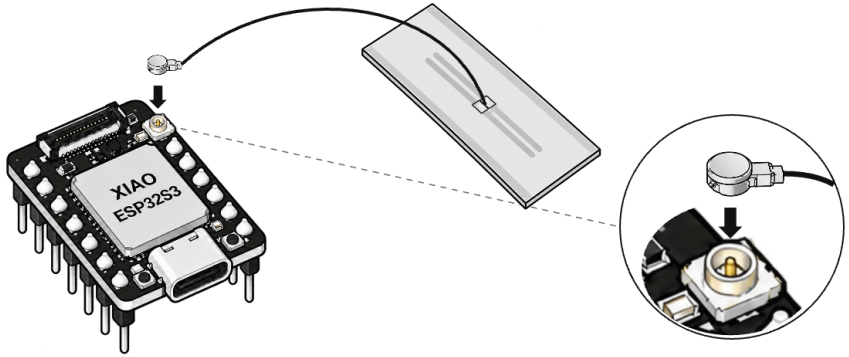

Broad antenna connects to XIAO.

Align the metal cap, then seat it gently.


2 LoRa antenna

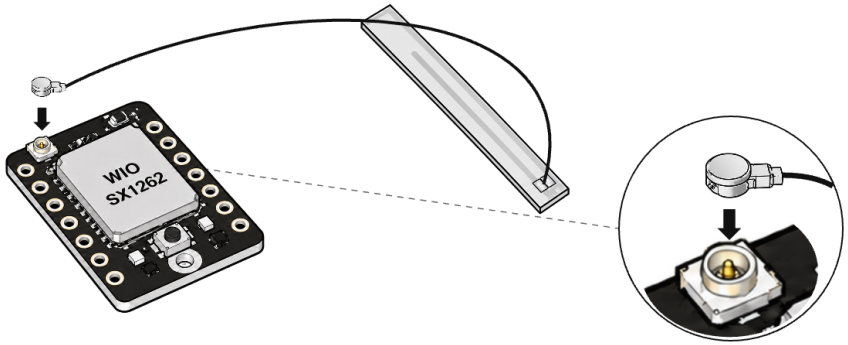

Slim antenna connects to Wio.

Align the metal cap, then seat it gently.

3 Board stack

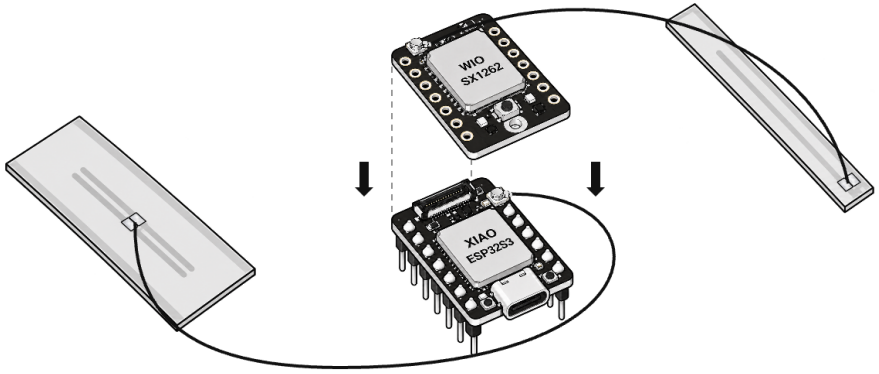

Wio above XIAO. Align the small B2B connector.

Press evenly. Keep antenna cables outside the stack.

Attach antennas before USB power. Simplified drawings, click for references. Step 3 gap enlarged.

Images: Seeed Studio kit wiki