

SIGNAL LOST / USB POWERED FICTIONAL RADIO

QT Py OLED connects at its built-in STEMMA QT socket (Wire1).

J1 to MAX98357A: VIN, GND, LRC, BCLK, DIN. Leave GAIN and SD at breakout defaults.

Speaker connects only to amplifier OUT+ and OUT-, never to ground.

Encoder common and push switch return to GND. Firmware uses internal pull-ups.

U1: QT_PY_ESP32_S3

J1: SECRET_STATION

SW1: PEC11-4215F-S24

TP1: COPPER_TOUCH

U2: MAX98357A_BREAKOUT

R1, R2: 330R

D1, D2: LED_GREEN

J2: USB_C

Sheet: /
File: signal-lost.kicad_sch
Title: Signal Lost carrier
Size: A4 **Date:** **Rev: 0.1**
KiCad E.D.A. 9.0.4 **Id: 1/1**

The schematic diagram illustrates the electrical connections for a 'Signal Lost' carrier board. The central component is the microcontroller U1 (QT_PY_ESP32_S3), which is connected to an I2S DAC J1 (MAX98357A_BREAKOUT) for audio output. A push switch SW1 (PEC11-4215F-S24) is connected to the microcontroller's GPIO pins. A touch sensor TP1 (COPPER_TOUCH) is also connected to the microcontroller. Two LEDs, D1 and D2 (LED_GREEN), are connected to the microcontroller's GPIO pins through 330R resistors R1 and R2. The board is powered by a USB-C connector X1 (USB_C_12) and a 5V regulator U2 (MAX3490). The schematic is titled 'SIGNAL LOST / USB POWERED FICTIONAL RADIO' and includes a title block with 'Signal Lost carrier', 'Rev: 0.1', and 'KiCad E.D.A. 9.0.4'.

SIGNAL LOST / USB POWERED FICTIONAL RADIO

QT Py OLED connects at its built-in STEMMA QT socket (Wire1).

J1 to MAX98357A: VIN, GND, LRC, BCLK, DIN. Leave GAIN and SD at breakout defaults.

Speaker connects only to amplifier OUT+ and OUT-, never to ground.

Encoder common and push switch return to GND. Firmware uses internal pull-ups.

U1: QT_PY_ESP32_S3

J1: SECRET_STATION

SW1: PEC11-4215F-S24

TP1: COPPER_TOUCH

D1, D2: LED_GREEN

R1, R2: 330R

J1: MAX98357A_BREAKOUT

A: USB_C

GND

Sheet: /
File: signal-lost.kicad_sch
Title: Signal Lost carrier
Size: A4 **Date:** **Rev: 0.1**
KiCad E.D.A. 9.0.4 **Id: 1/1**

SIGNAL LOST / USB POWERED FICTIONAL RADIO

QT Py OLED connects at its built-in STEMMA QT socket (Wire1).

J1 to MAX98357A: VIN, GND, LRC, BCLK, DIN. Leave GAIN and SD at breakout defaults.

Speaker connects only to amplifier OUT+ and OUT-, never to ground.

Encoder common and push switch return to GND. Firmware uses internal pull-ups.

U1: QT_PY_ESP32_S3

J1: SECRET_STATION

SW1: PEC11-4215F-S24

TP1: COPPER_TOUCH









D1, D2: LED_GREEN

R1, R2: 330R

MAX98357A_BREAKOUT

MP1: MP1

The schematic diagram illustrates the electrical connections for a 'Signal Lost' carrier board. The central component is the QT_PY_ESP32_S3 microcontroller (U1), which is connected to an I2S DAC (J1: MAX98357A_BREAKOUT) and a push switch (SW1: PEC11-4215F-S24). The board also features a touch sensor (TP1: COPPER_TOUCH) and two LEDs (D1, D2: LED_GREEN) with 330R resistors (R1, R2). The power supply section includes a USB-C connector (X1) and a 5V regulator (U2: MAX3490). The schematic is titled 'SIGNAL LOST / USB POWERED FICTIONAL RADIO' and includes a title block with the project name 'Signal Lost carrier', revision '0.1', and date '9.0.4'.

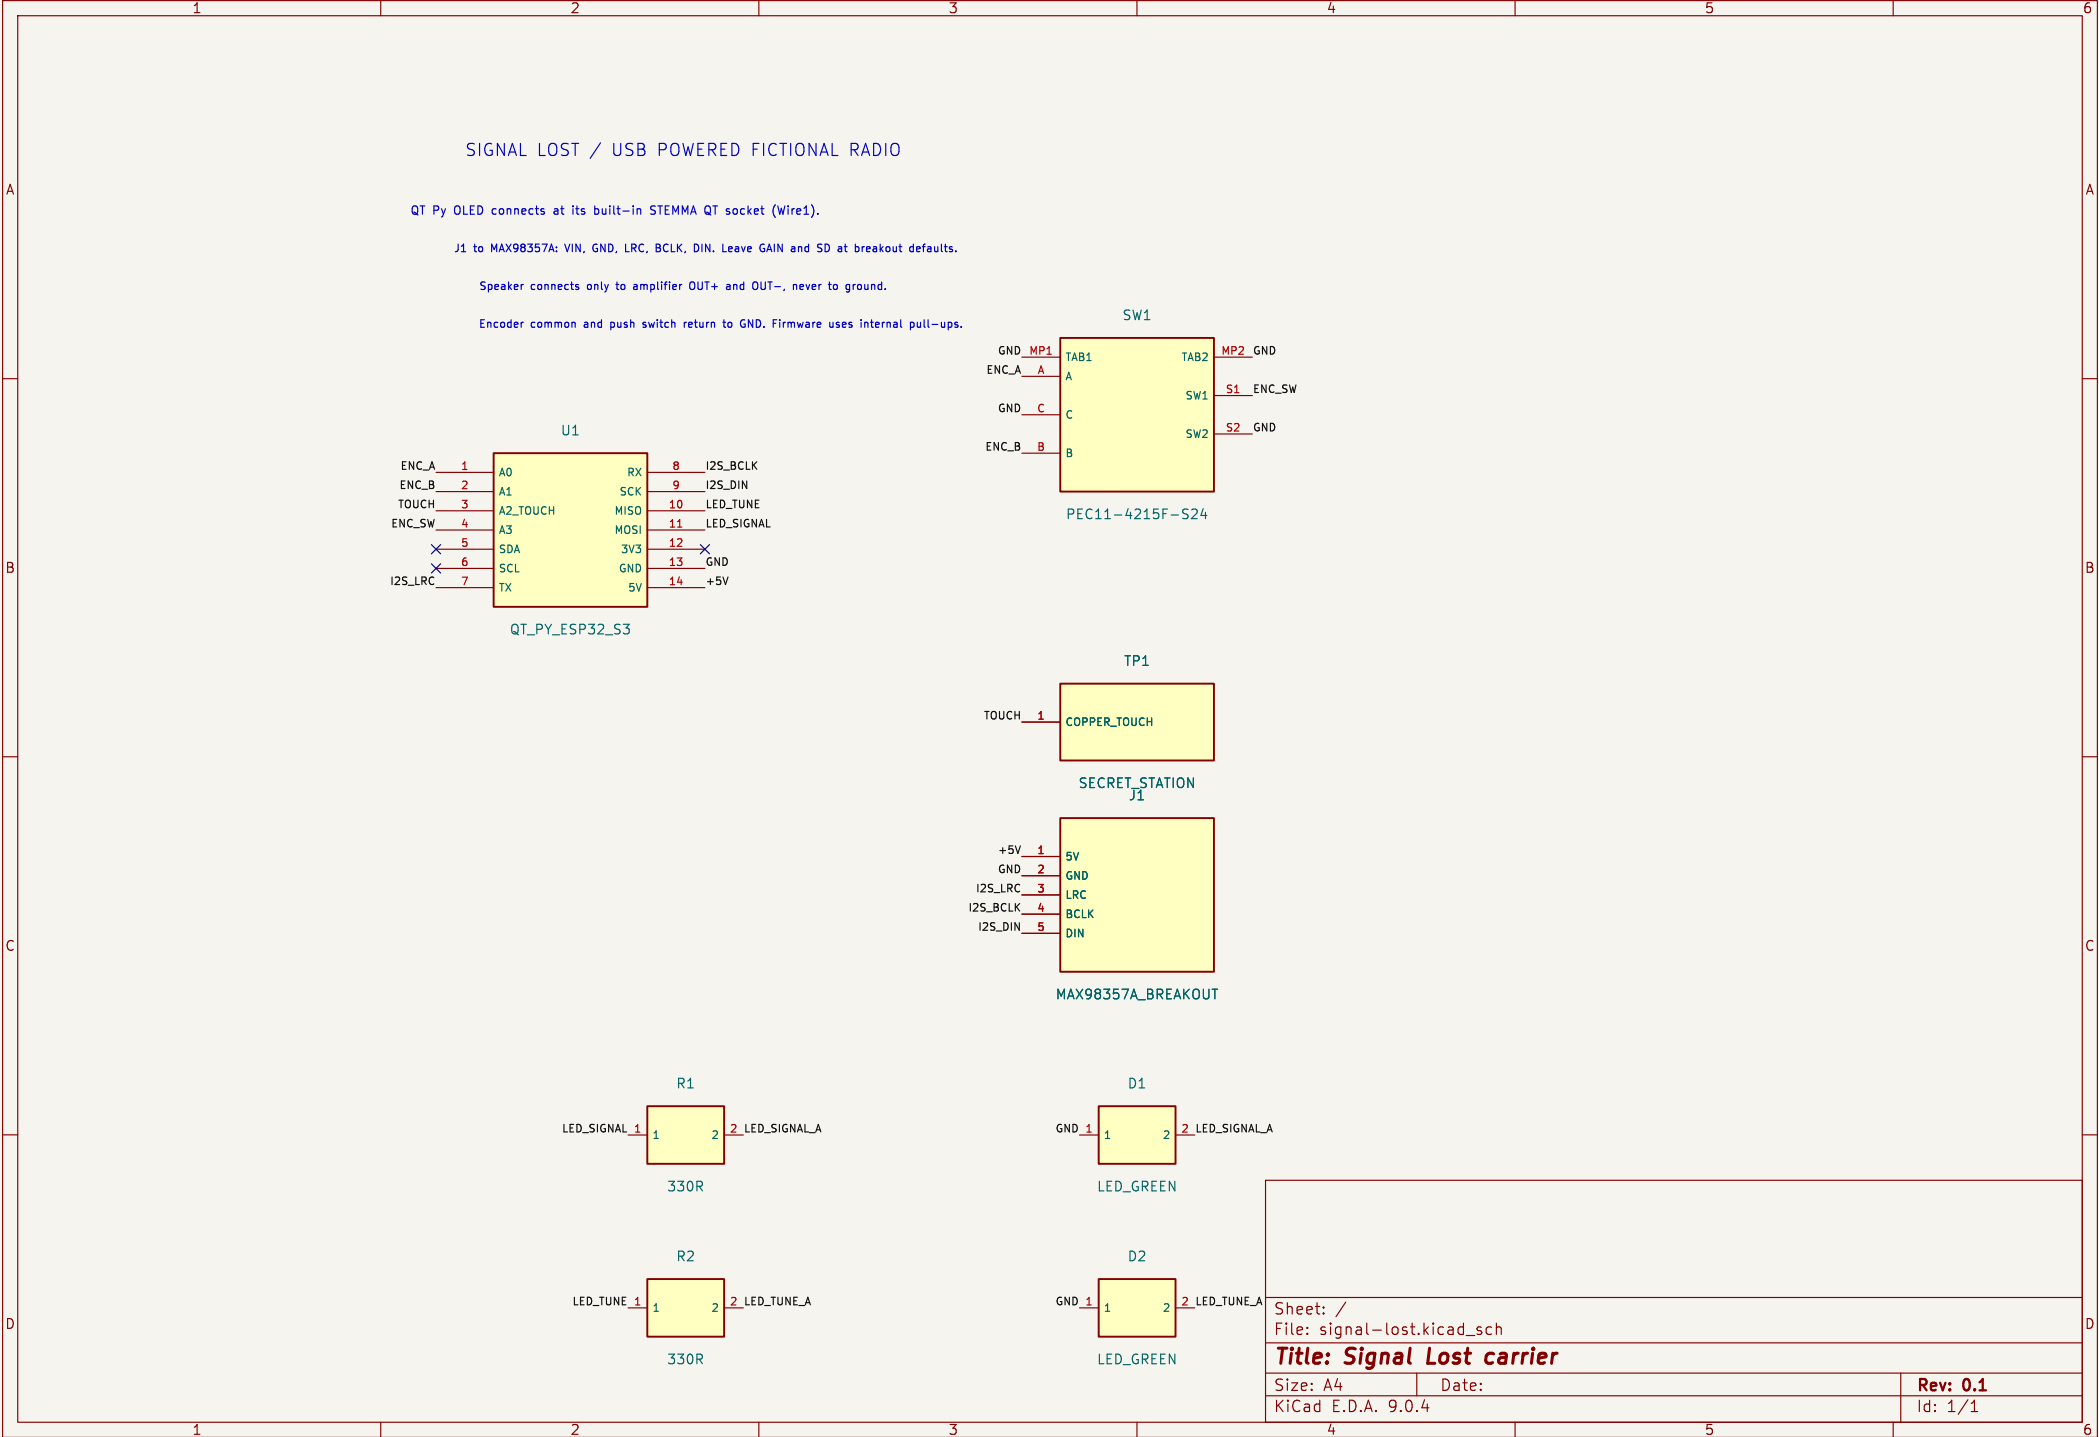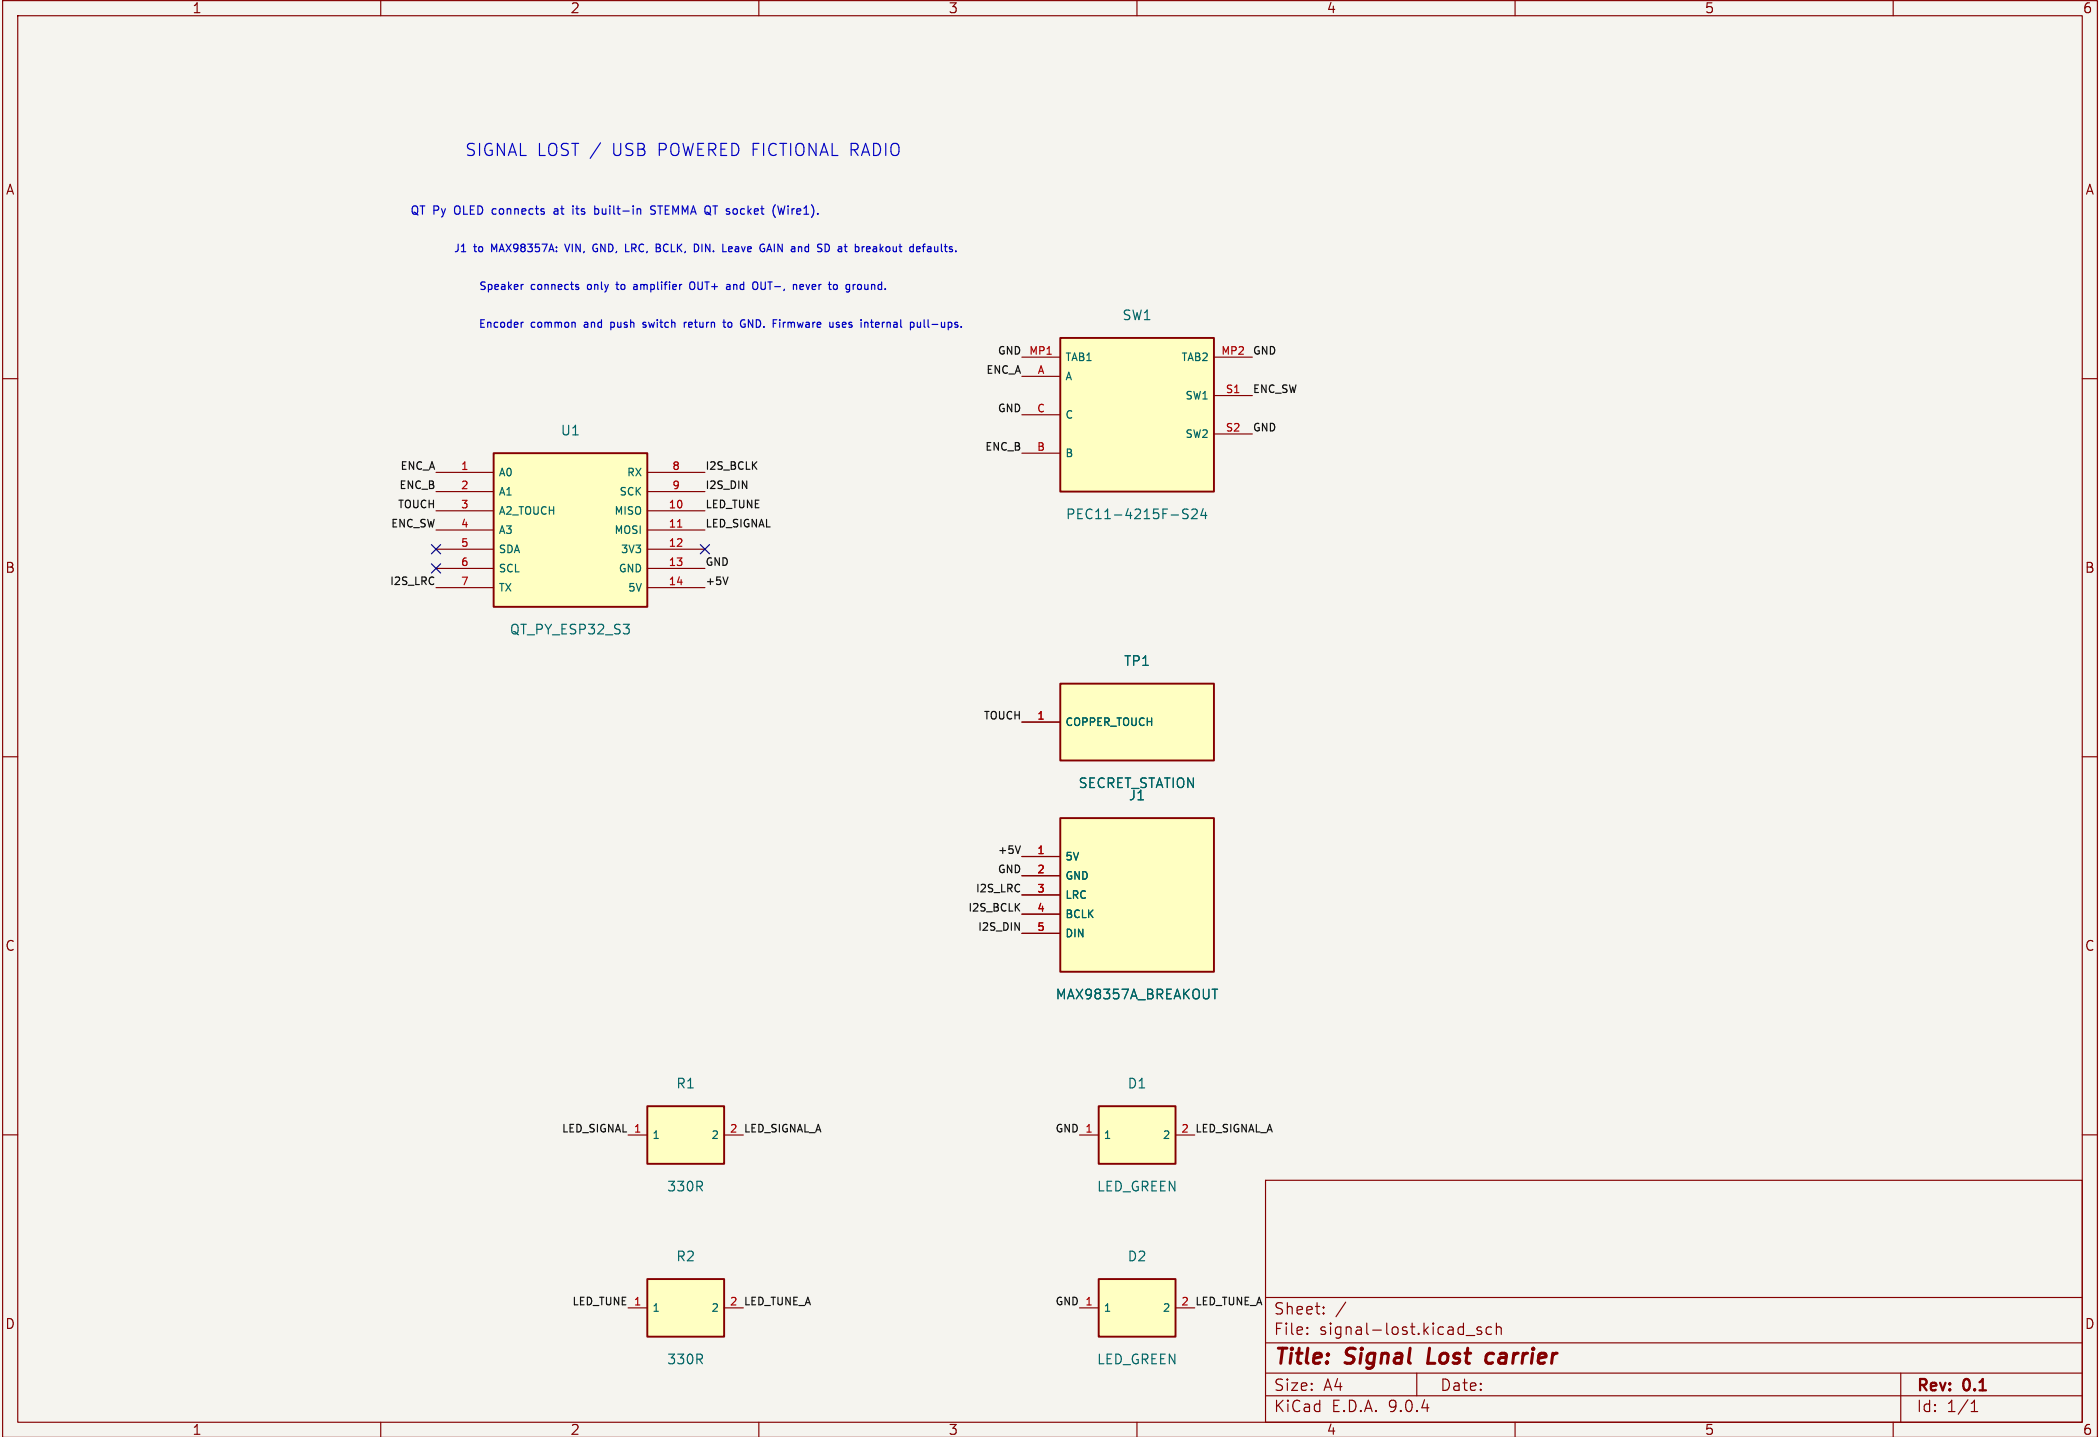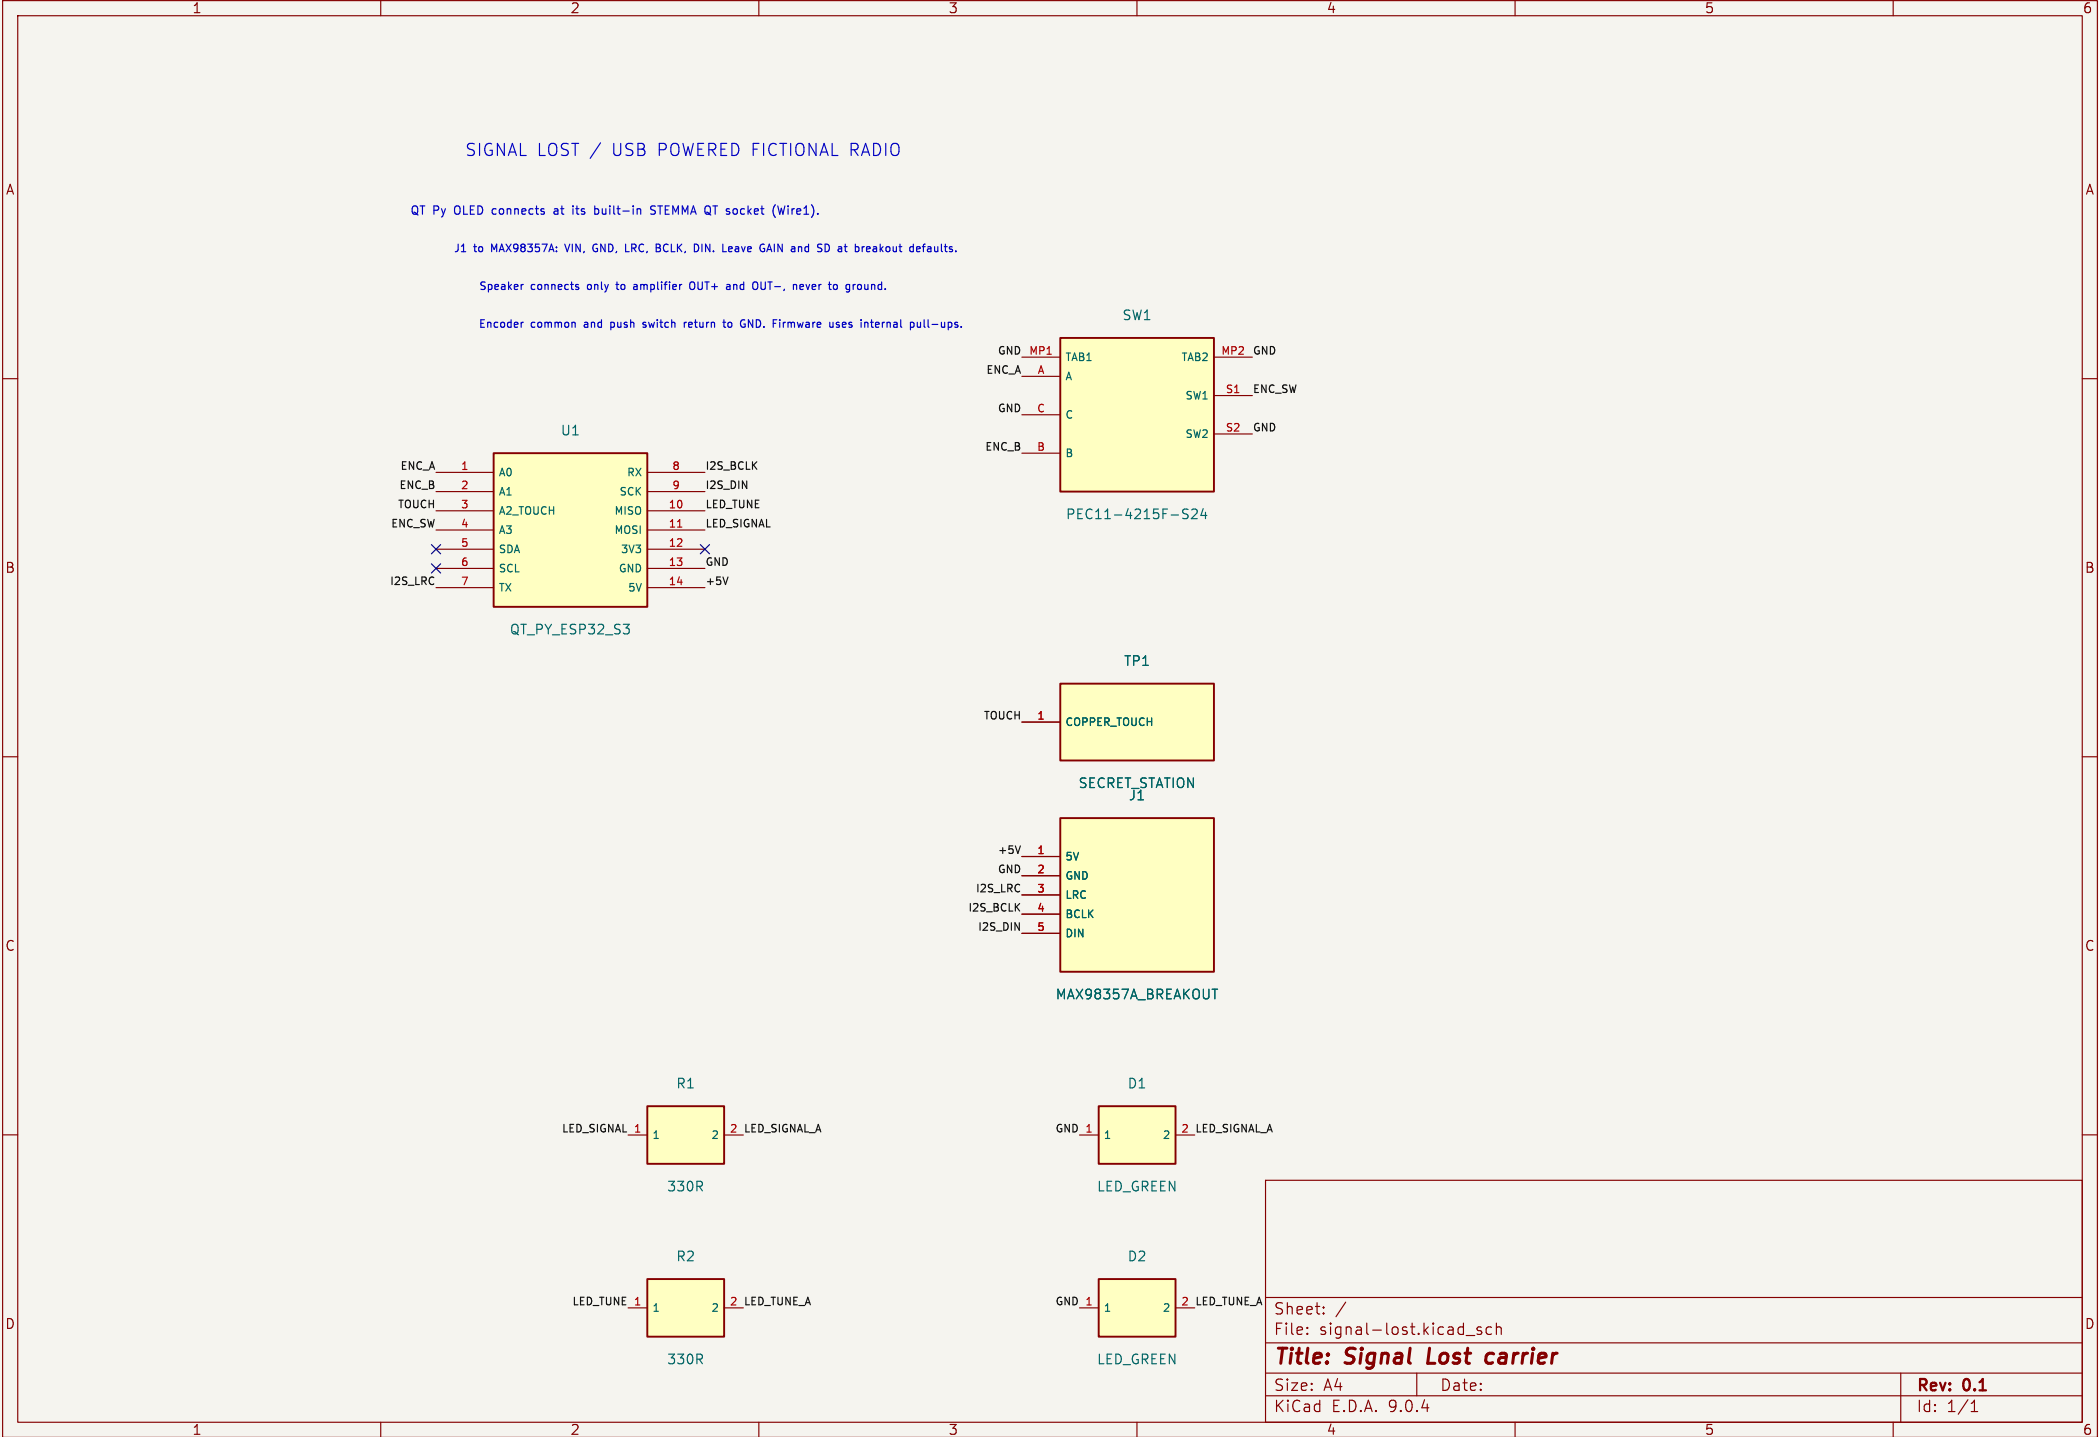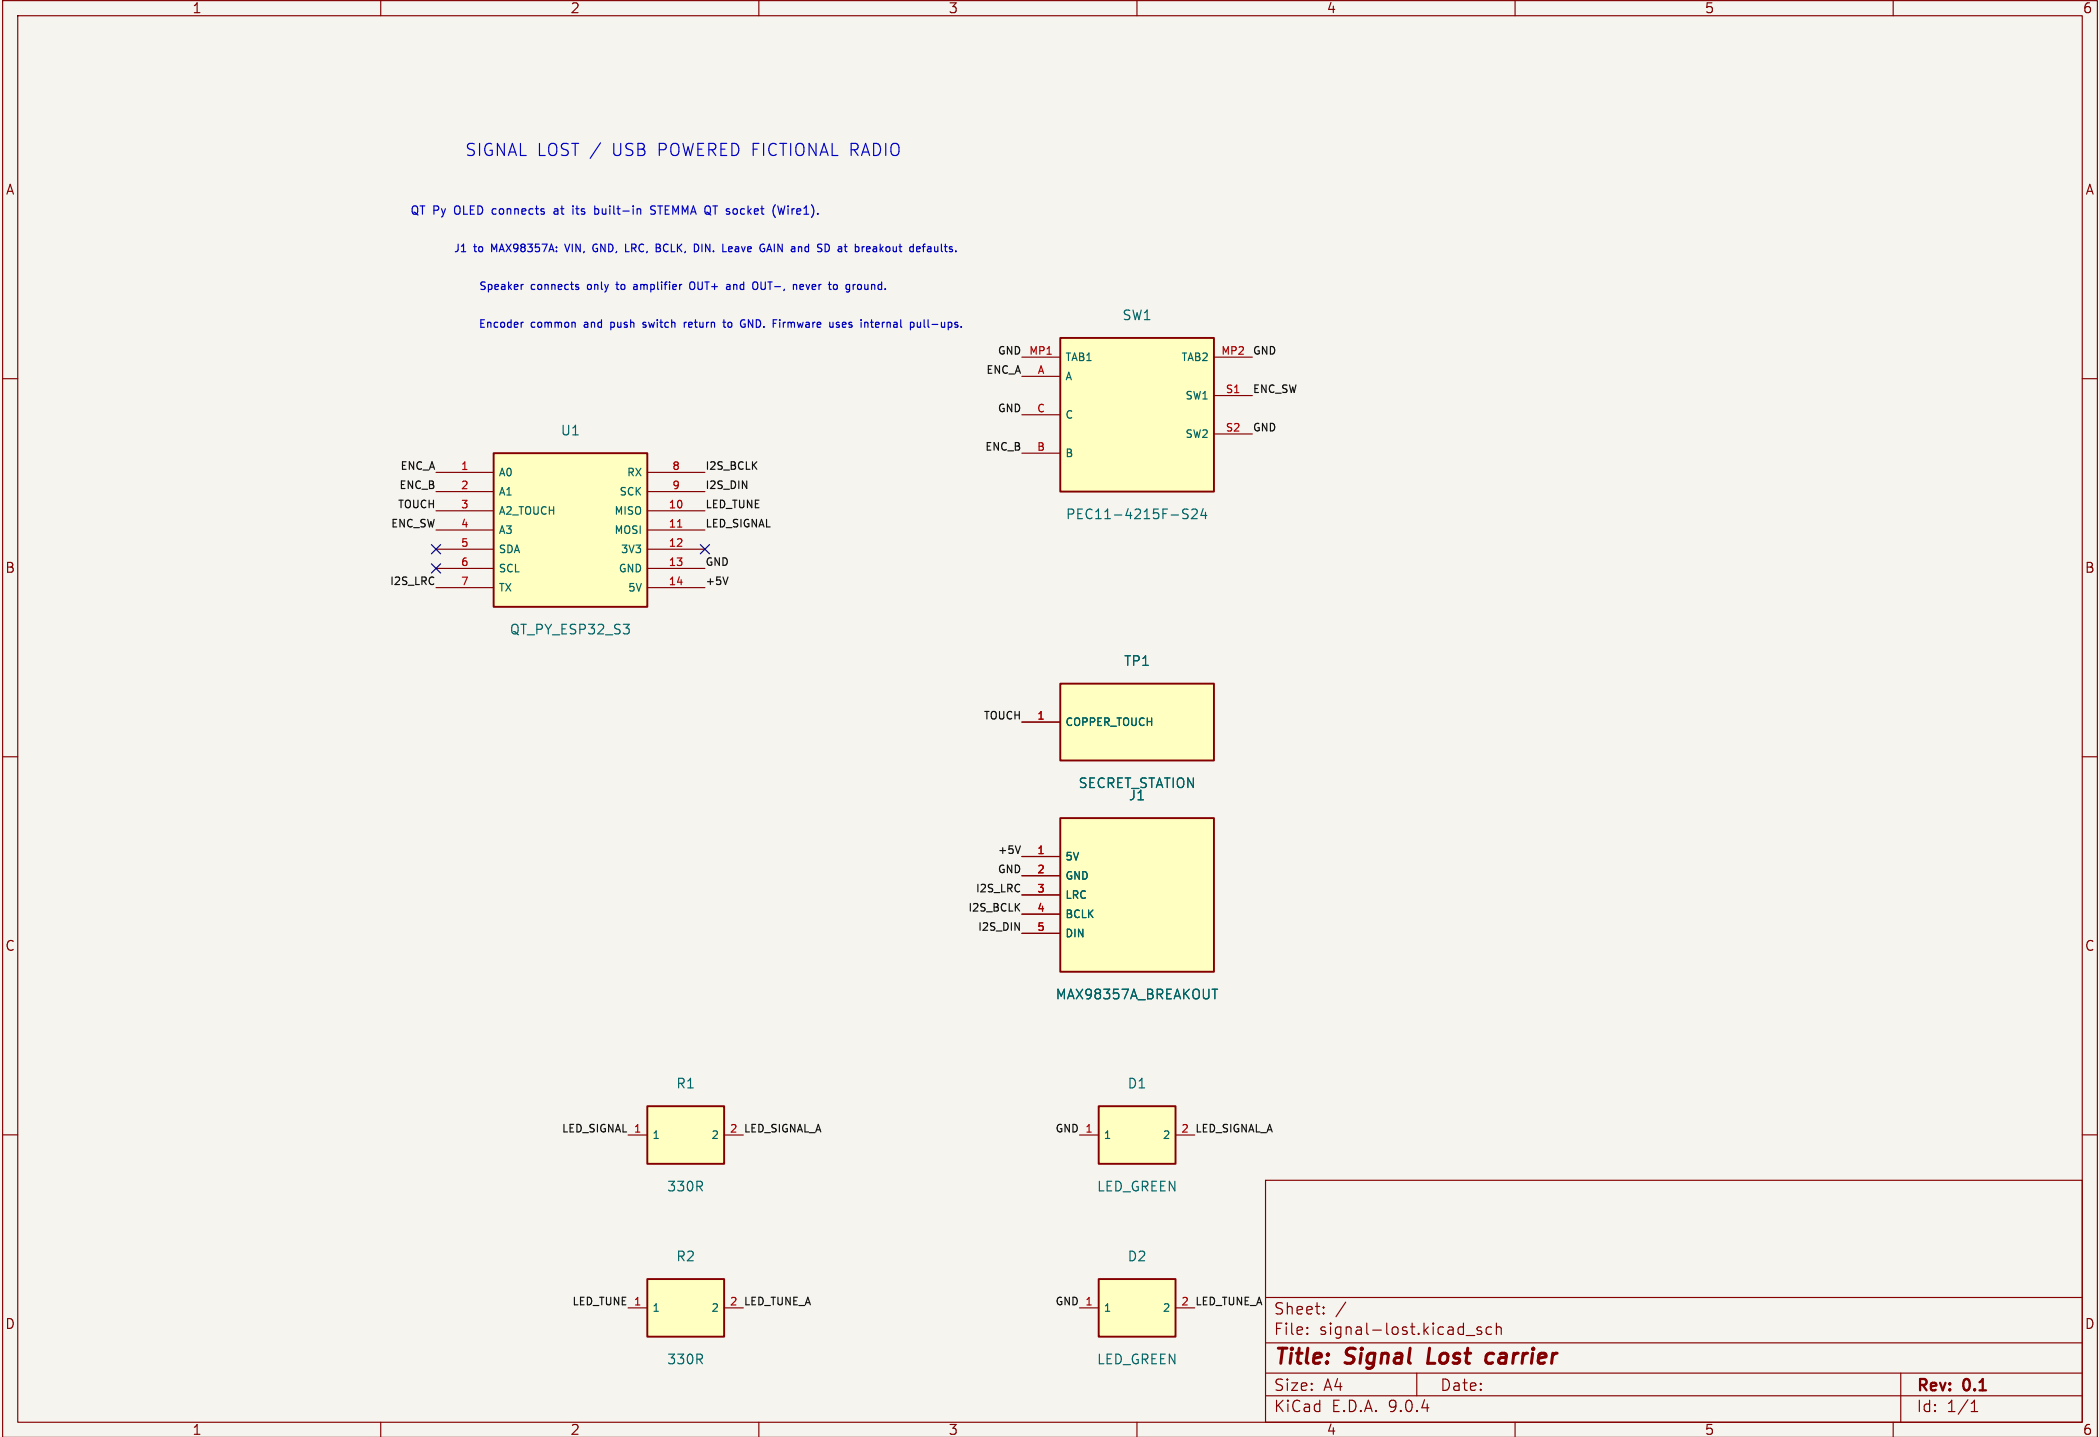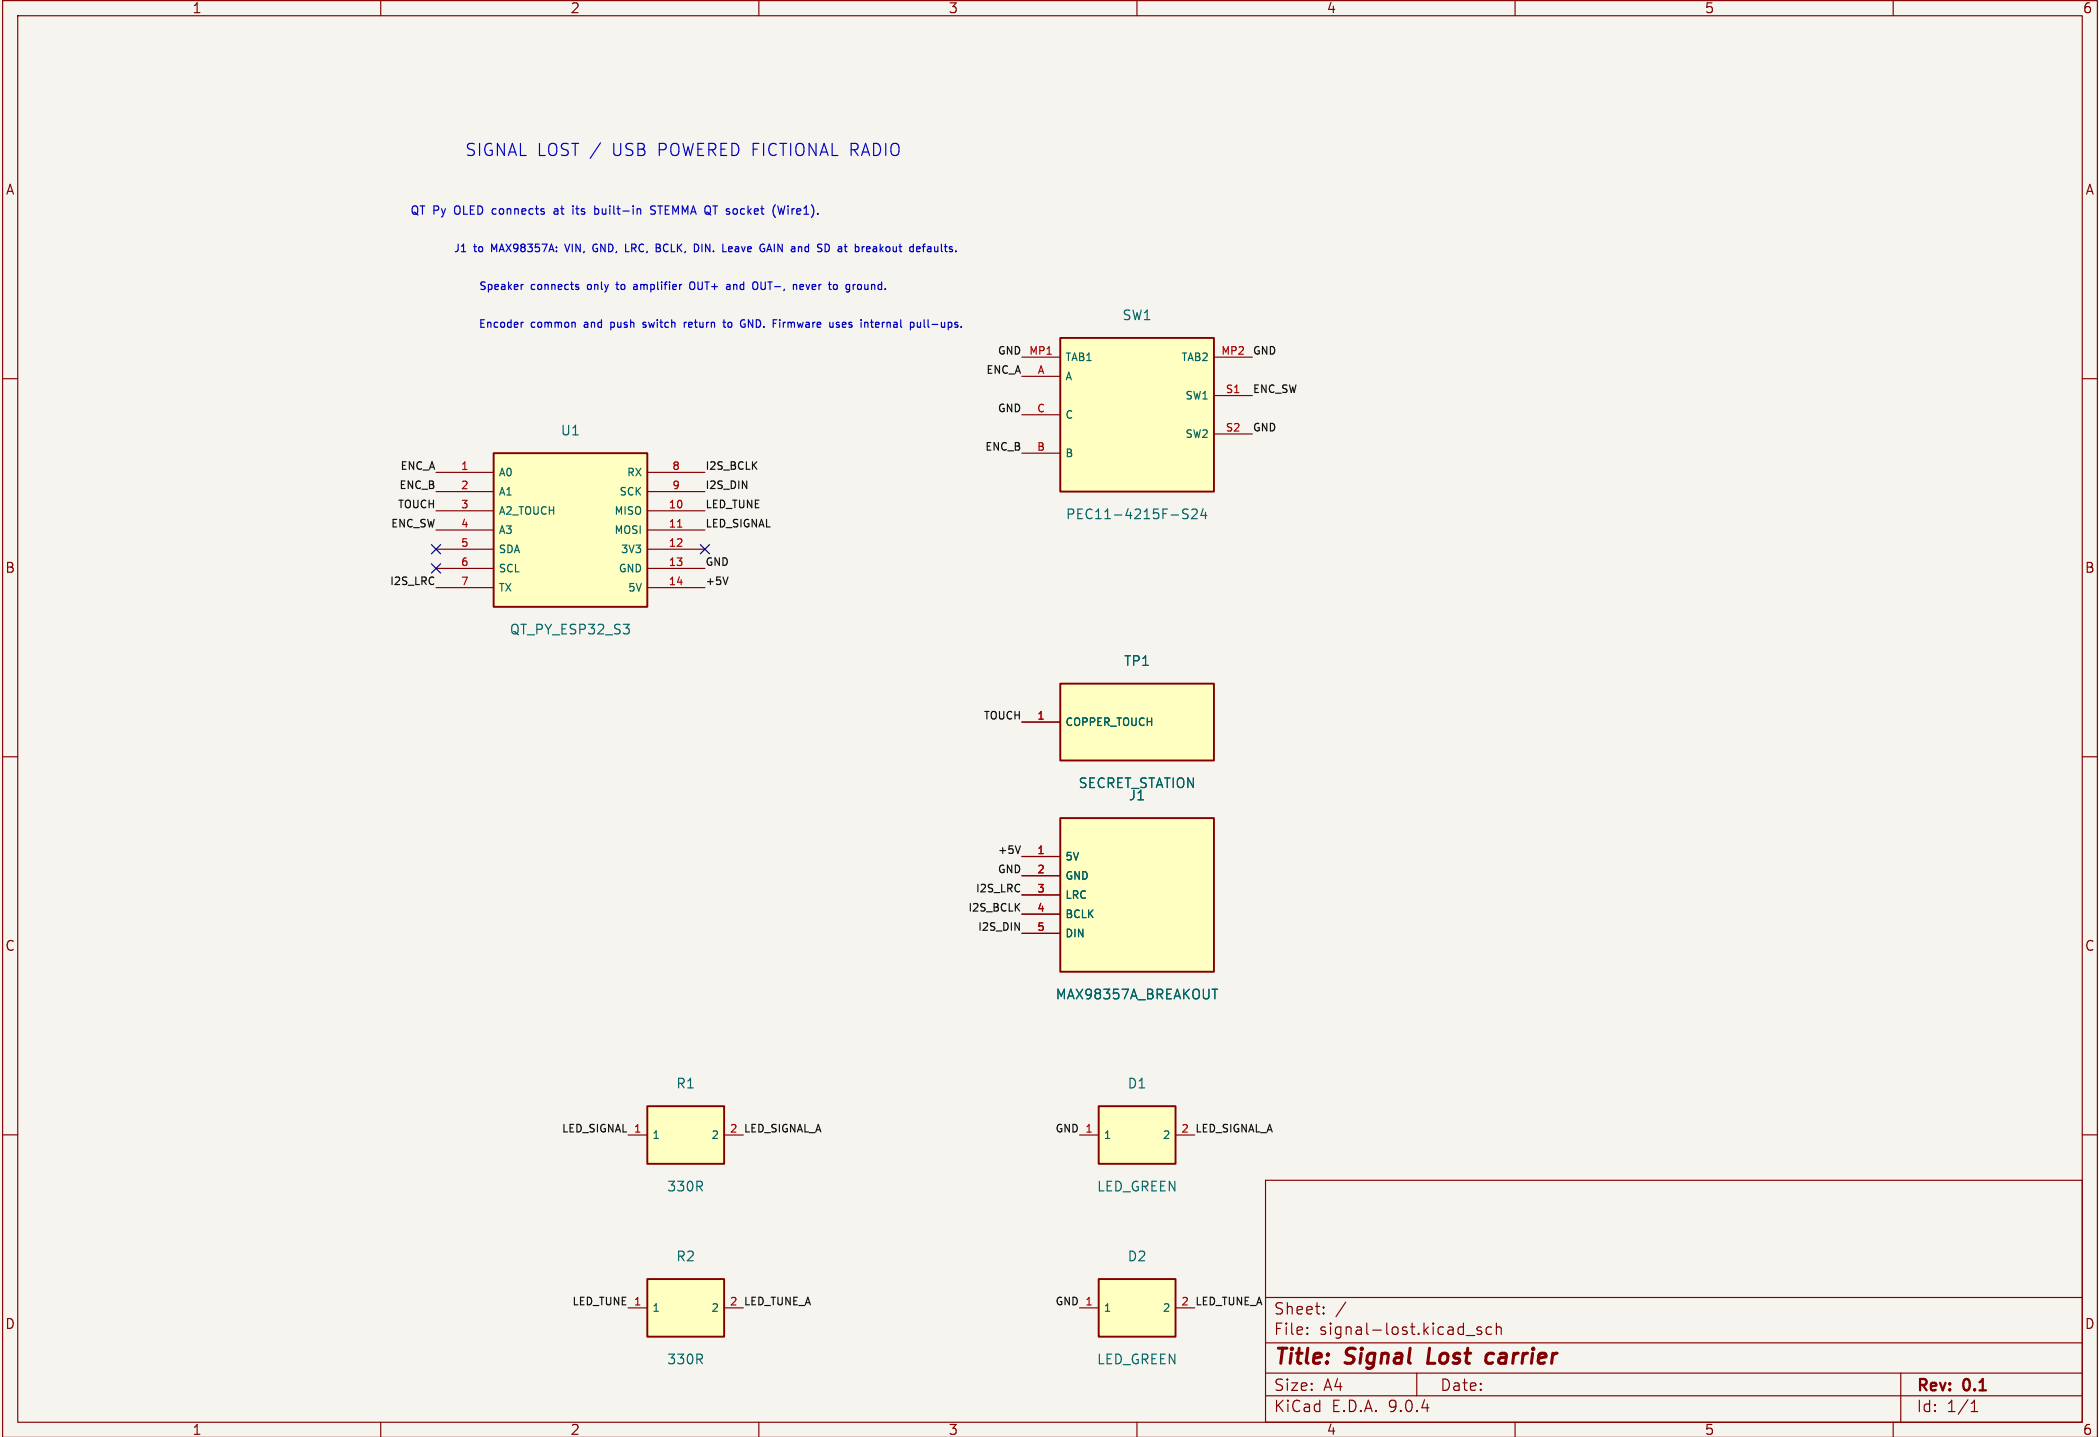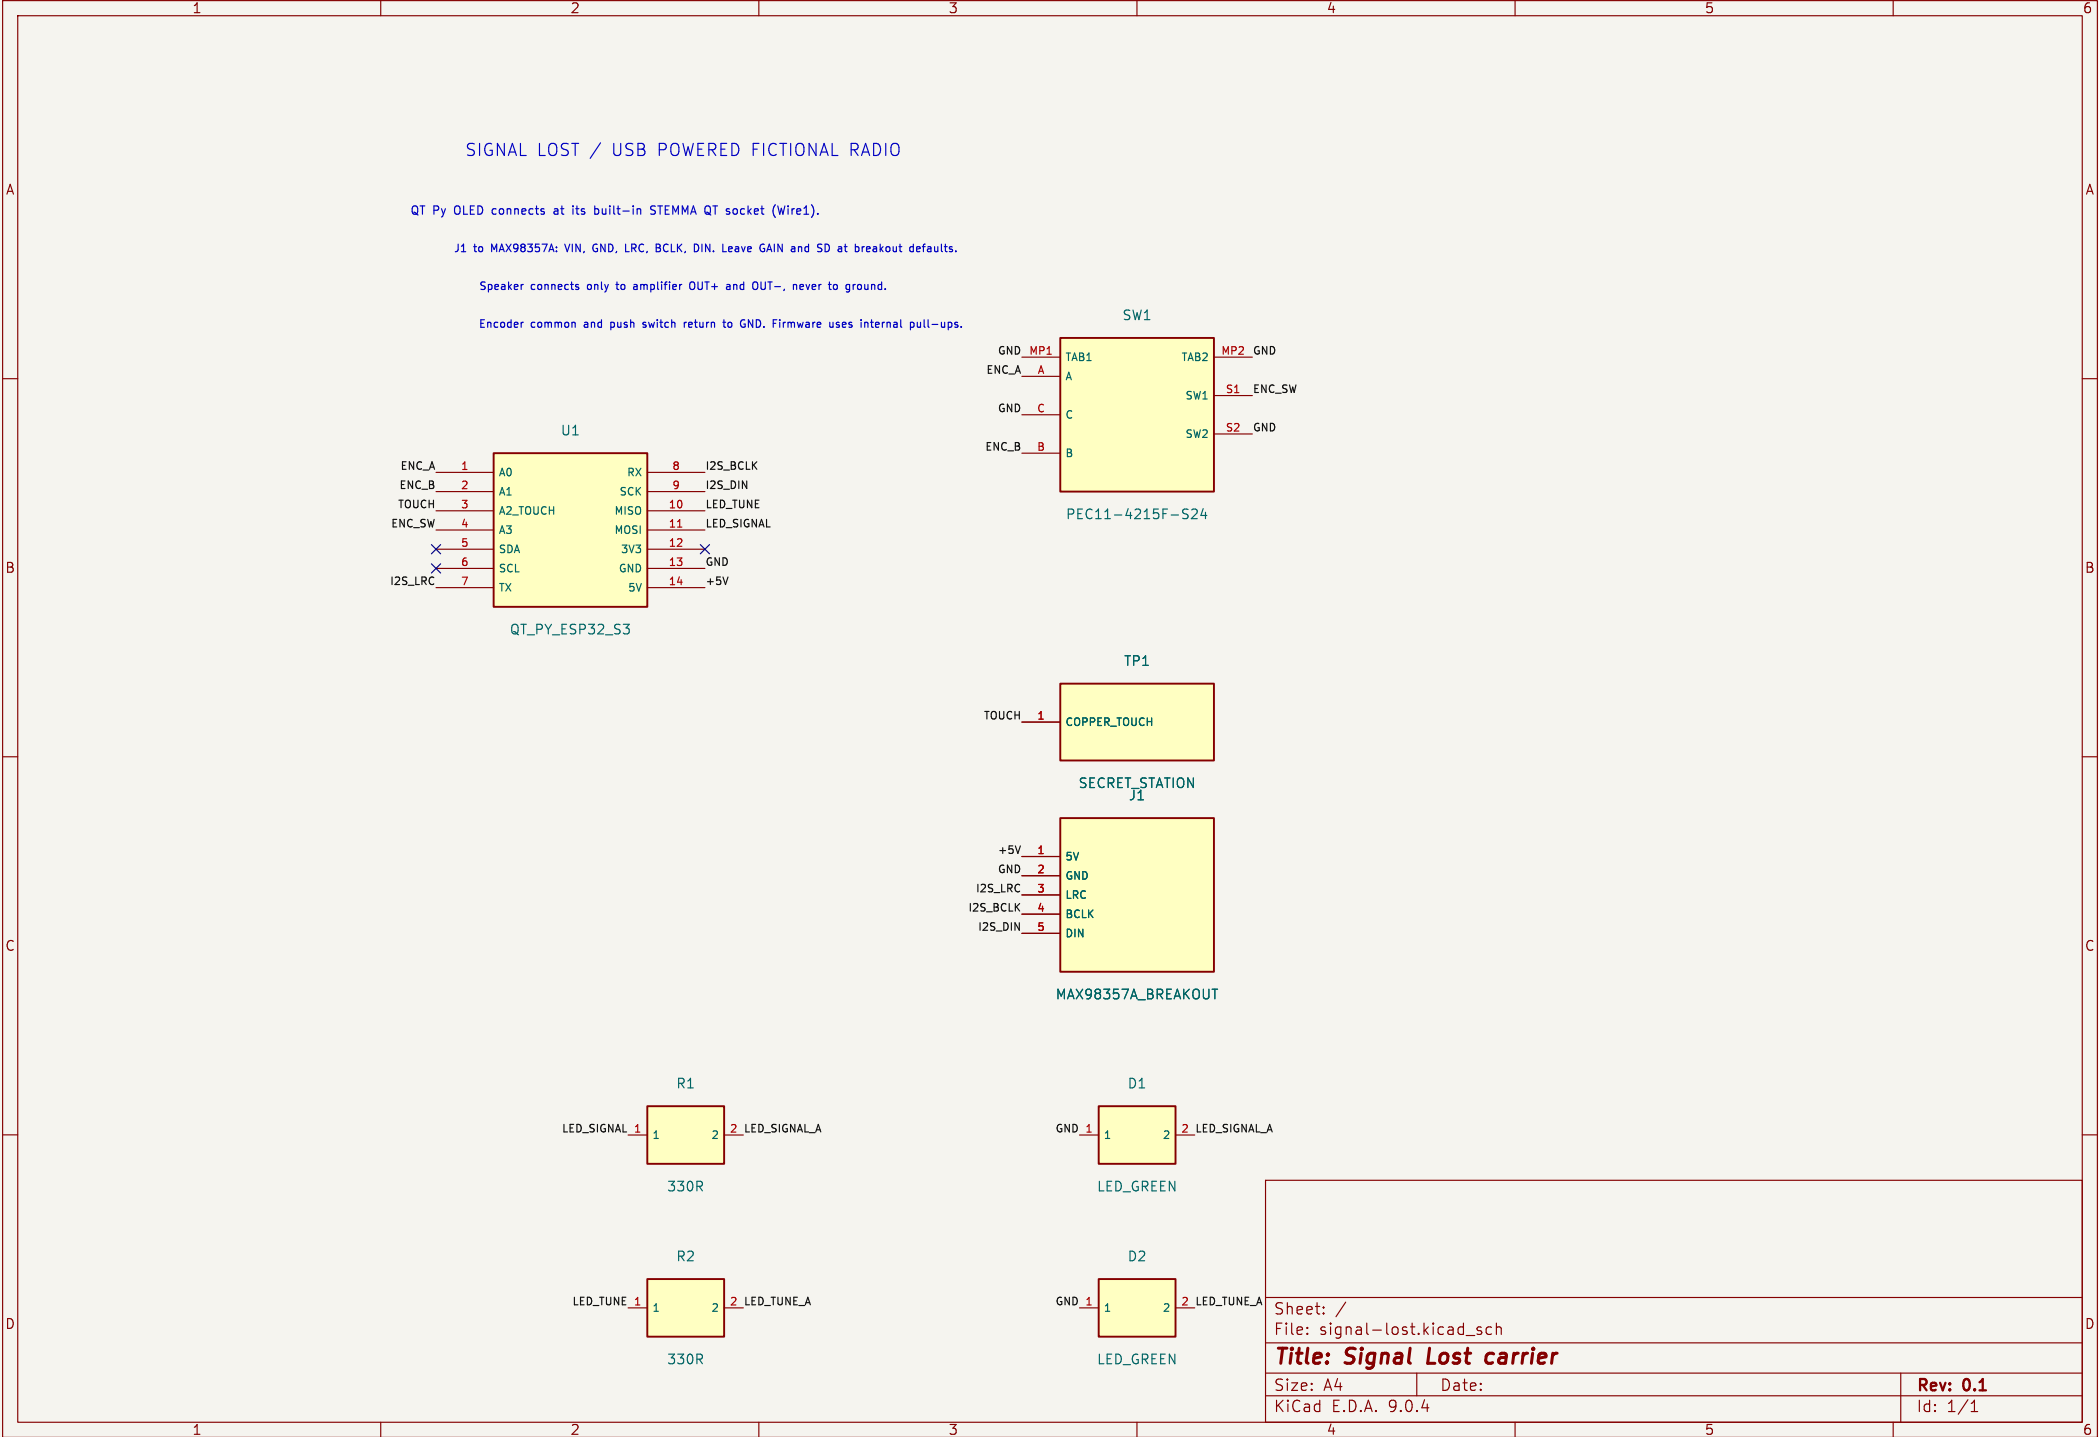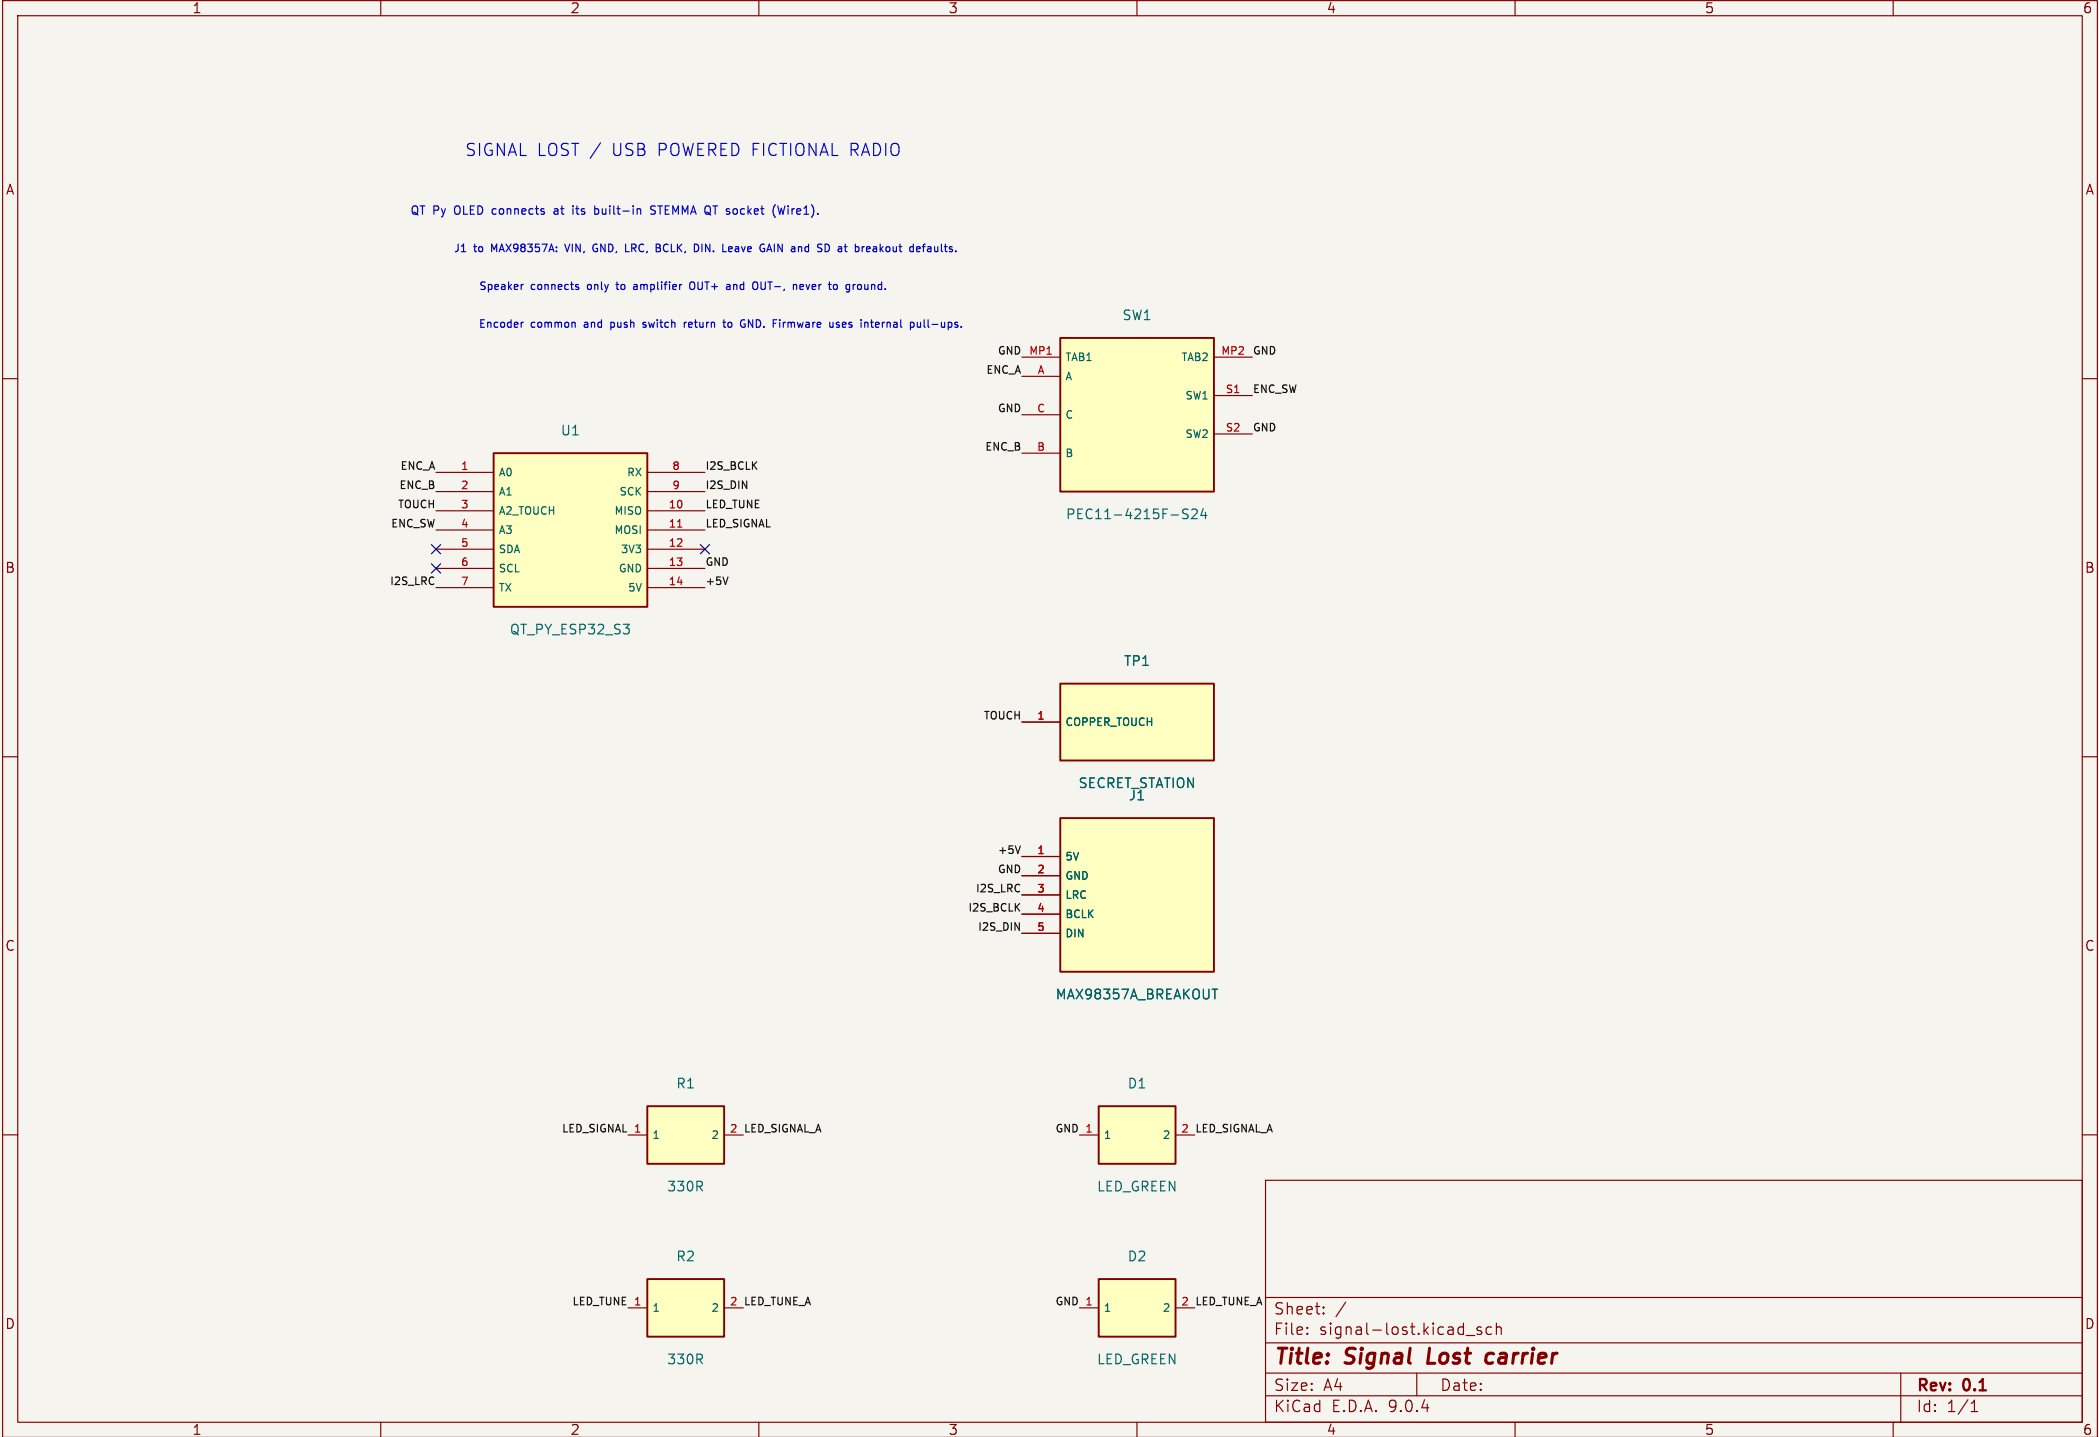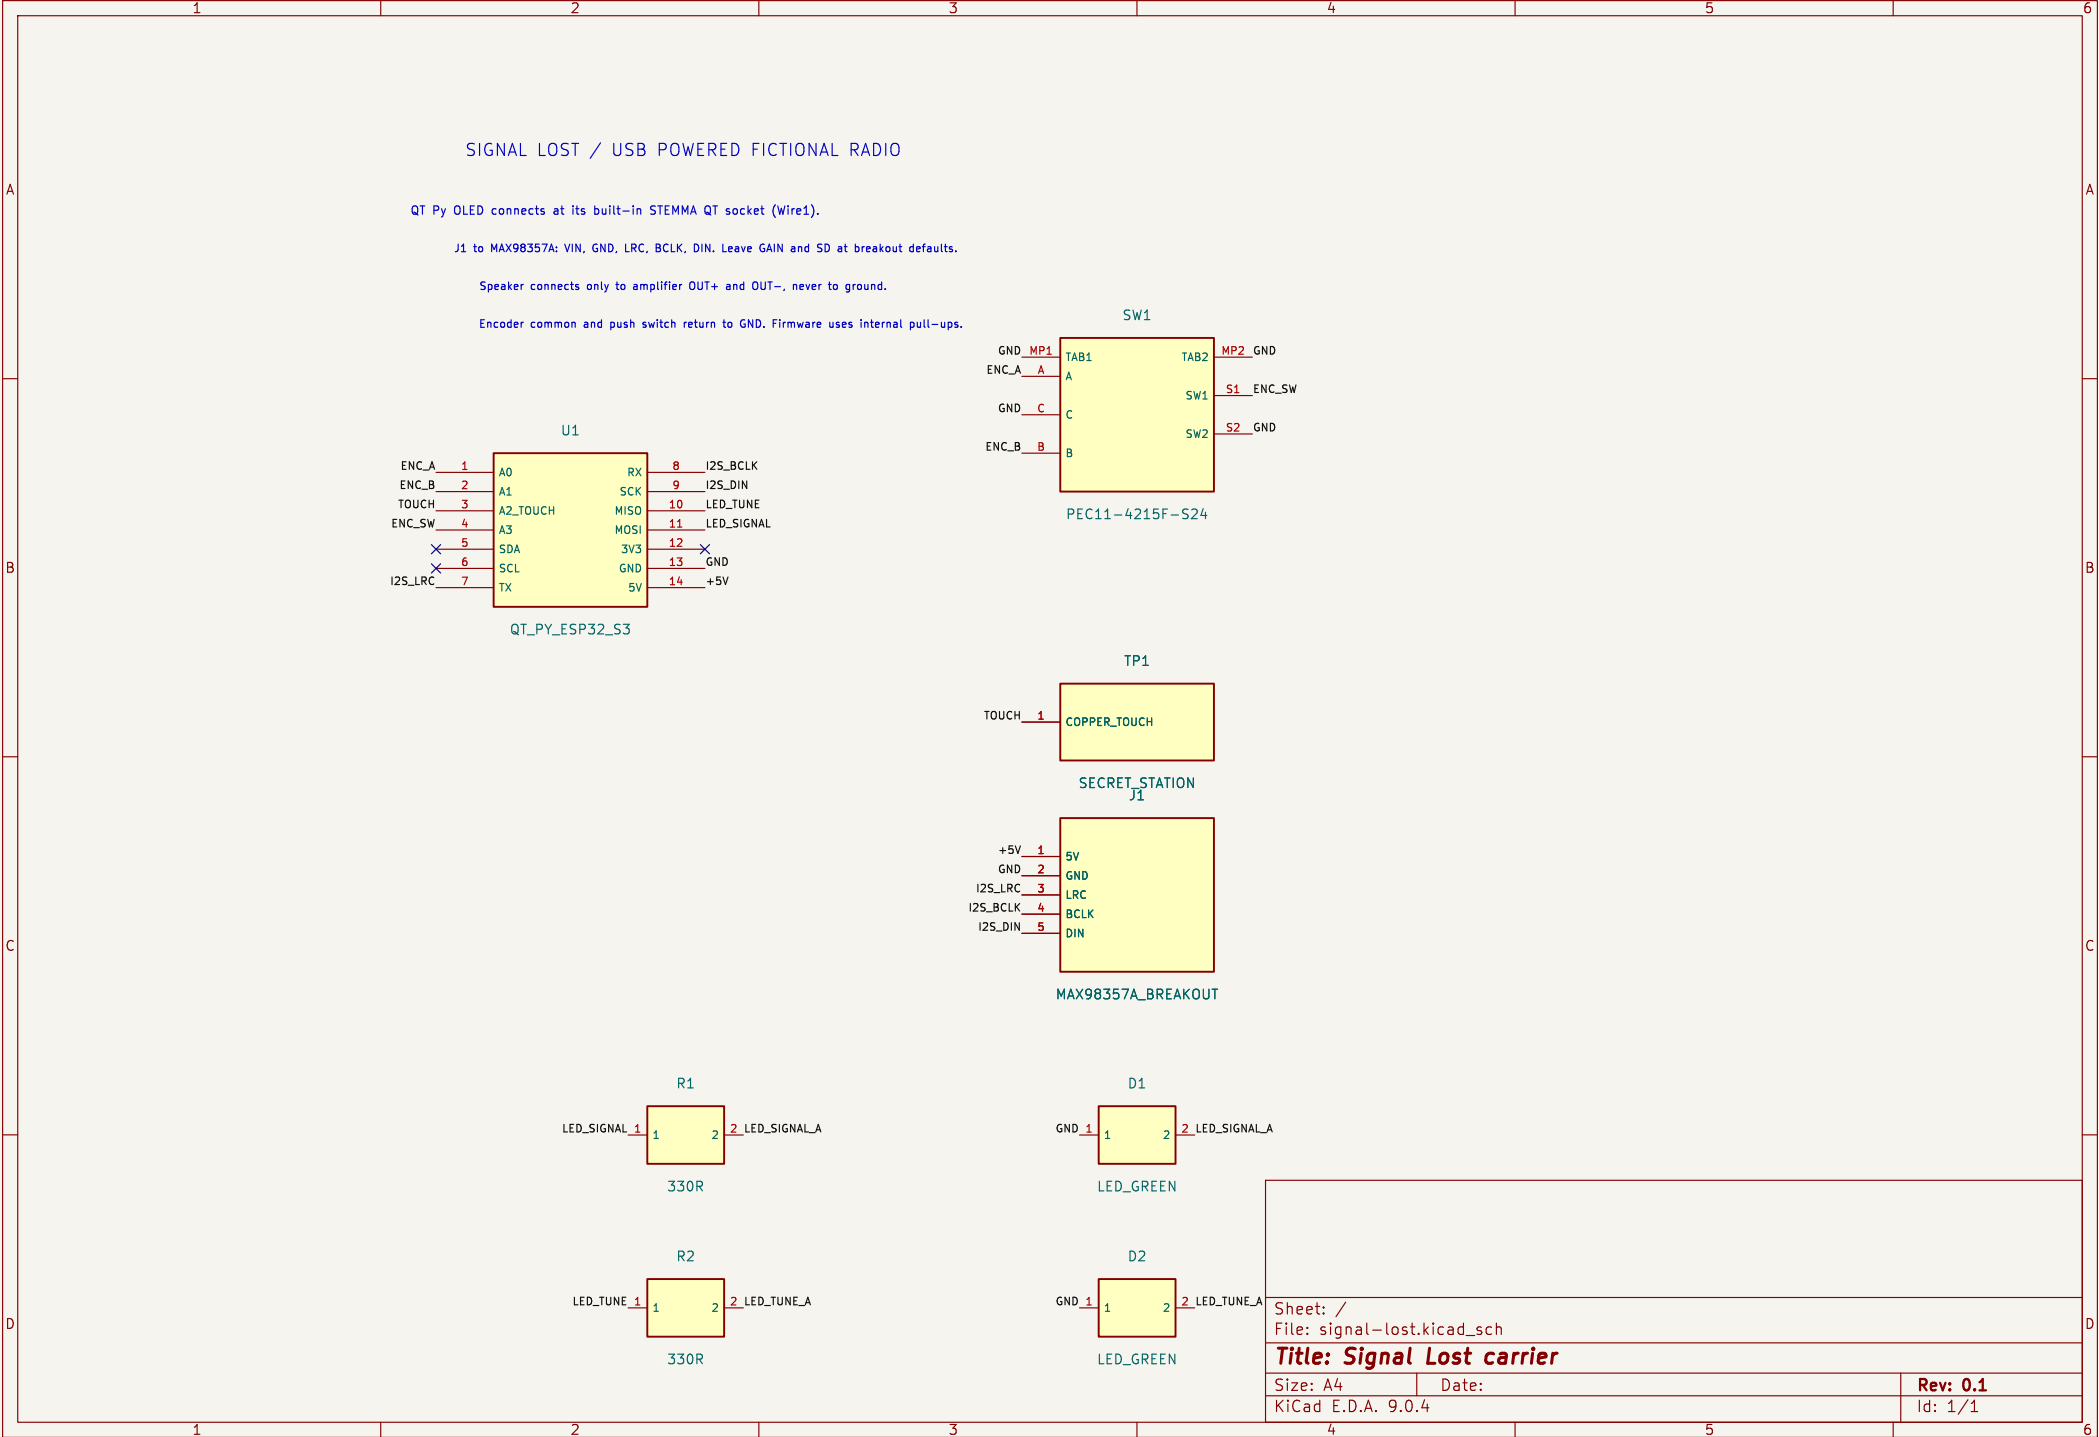

SIGNAL LOST / USB POWERED FICTIONAL RADIO

QT Py OLED connects at its built-in STEMMA QT socket (Wire1).

J1 to MAX98357A: VIN, GND, LRC, BCLK, DIN. Leave GAIN and SD at breakout defaults.

Speaker connects only to amplifier OUT+ and OUT-, never to ground.

Encoder common and push switch return to GND. Firmware uses internal pull-ups.

U1: QT_PY_ESP32_S3

J1: MAX98357A_BREAKOUT

SW1: PEC11-4215F-S24

TP1: COPPER_TOUCH

D1, D2: LED_GREEN

R1, R2: 330R

Sheet: /
File: signal-lost.kicad_sch
Title: Signal Lost carrier
Size: A4 **Date:** **Rev: 0.1**
KiCad E.D.A. 9.0.4 **Id: 1/1**