Why signoff corner

The slow-slow hot corner is the pessimistic signoff PVT for delay

The idea

- GOLDEN: signoff_corner=ss_0p9_125, derate=1.1


Pick corner

SIGNOFF CORNER PICK

Pick corner

Step 1 / 5 · pick · module01-03-signoff-corner

Signoff flow (corners → checks → ECO → tapeout)

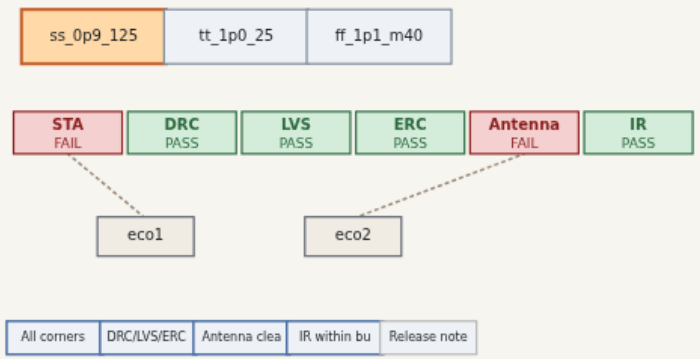

Explanation

signoff_corner selects the slow-slow signoff PVT.

- pick

```
ss
```


Pick corner

Vdd 0.9

SIGNOFF CORNER PICK

Vdd 0.9

Step 2 / 5 · vdd · module01-03-signoff-corner

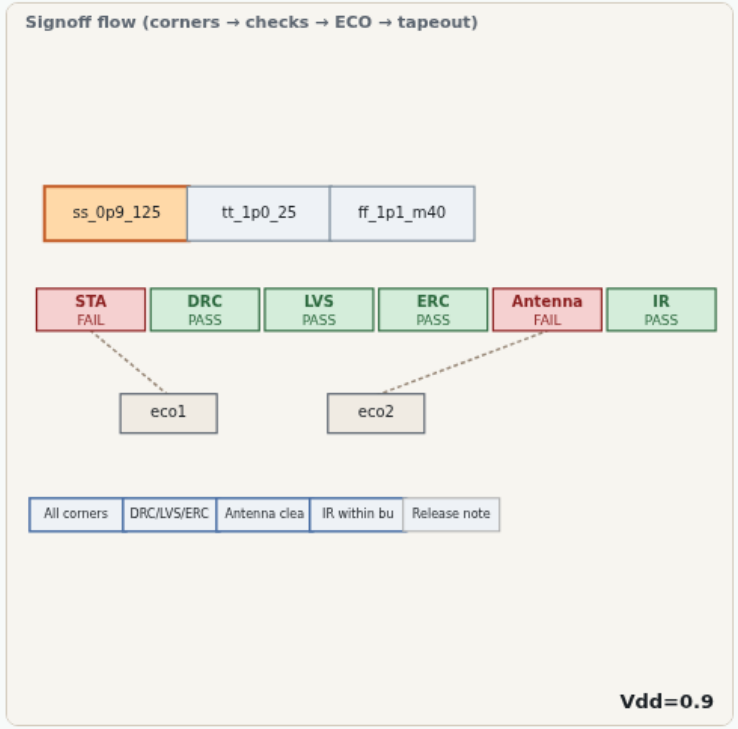

Explanation

Lower Vdd at high temp is the pessimistic corner.

- vdd

```
0.9
```


Vdd 0.9

Temp 125

SIGNOFF CORNER PICK

Temp 125

Step 3 / 5 · temp · module01-03-signoff-corner

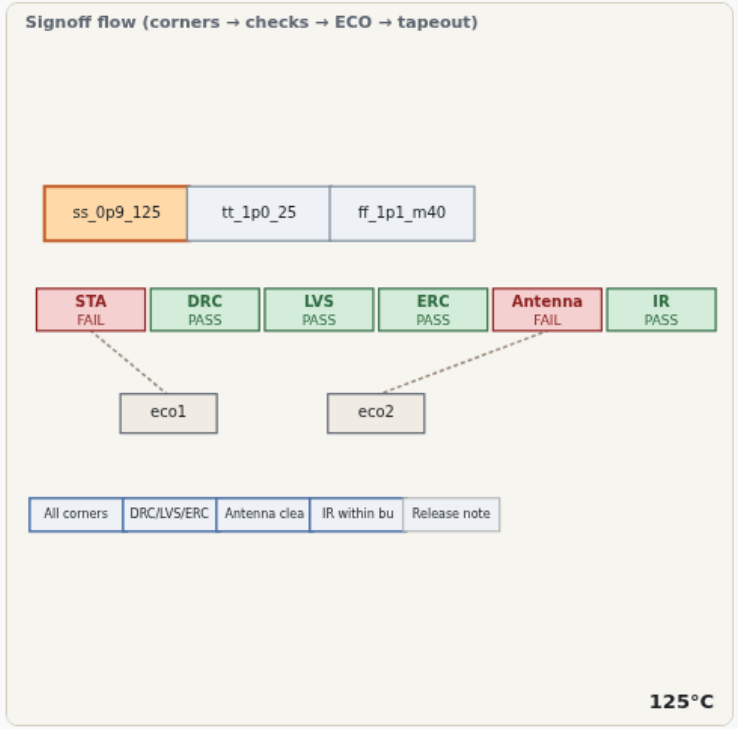

Explanation


Hot slow corner for max delay.

- temp

```
125
```

Temp 125

Derate 1.1

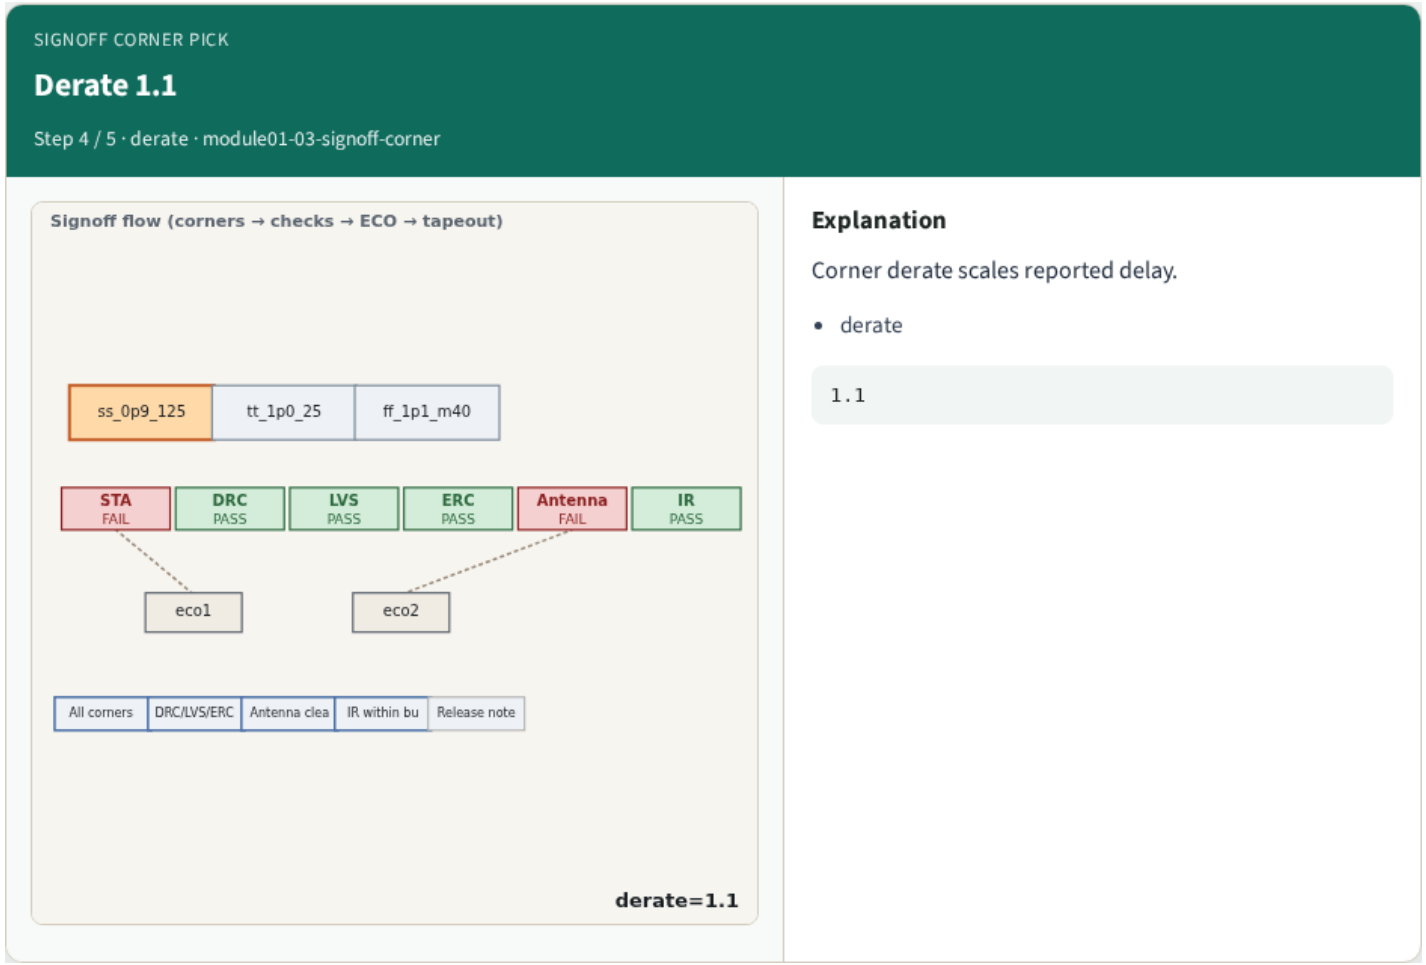


Derate 1.1

Golden

SIGNOFF CORNER PICK

Golden

Step 5 / 5 · golden · module01-03-signoff-corner

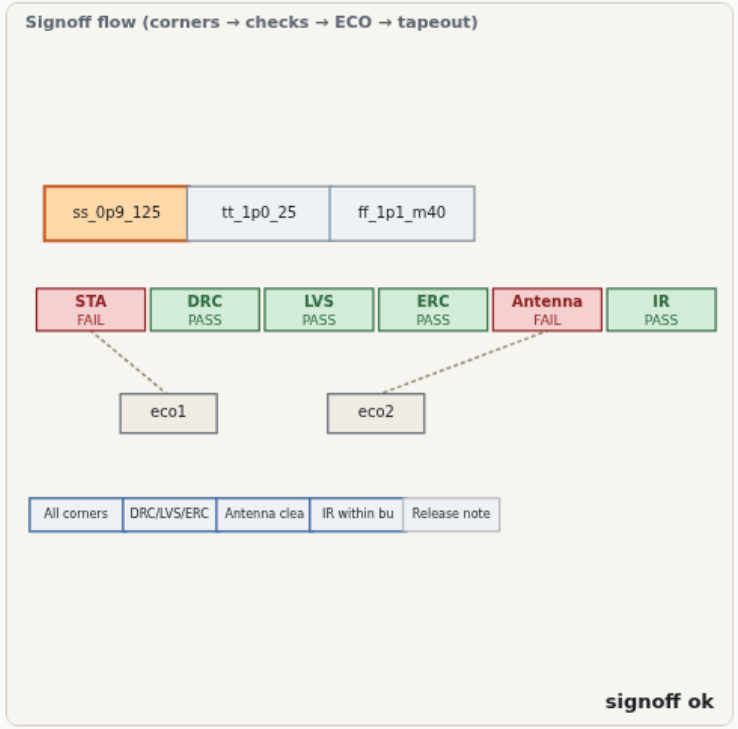

Explanation


GOLDEN: ss_0p9_125 derate=1.1.

- GOLDEN

```
1.1
```

Golden

Browser lab track

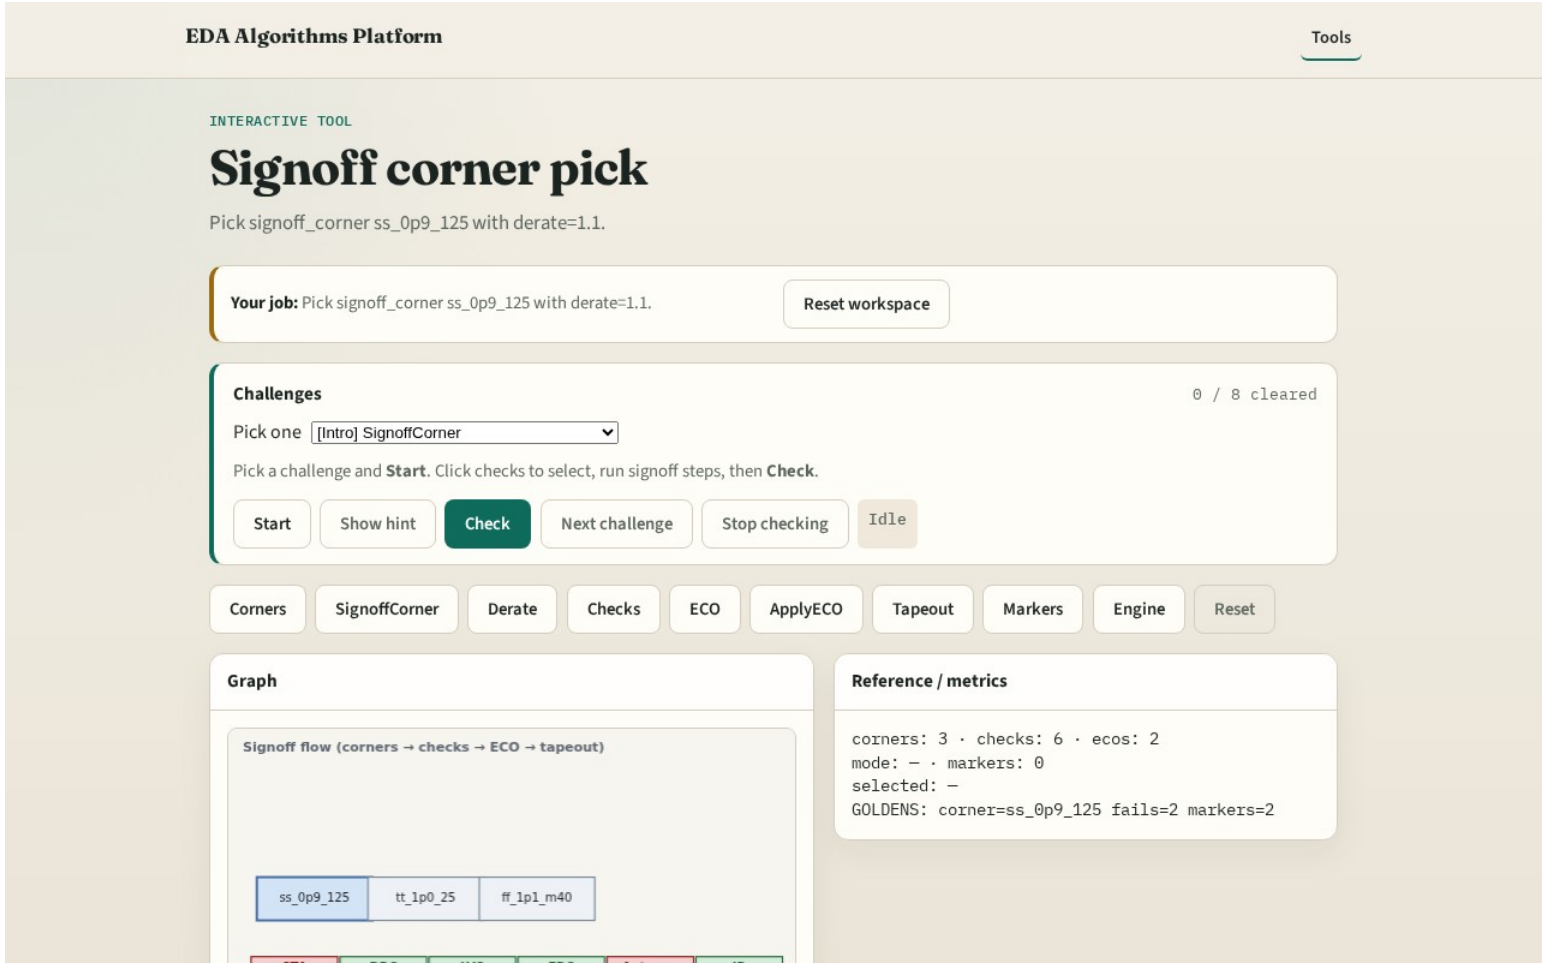

Browser lab starter

Implement track

- Call pick_signoff_corner(); assert id and derate match goldens

Pitfalls

- Using tt for signoff
- Ignoring derate on ss

Your turn

- Next: apply derate