
Why delay map

Delay-oriented techmap adds buffer NAND for timing literacy

The idea


- GOLDEN: techmap_nand_count_delay=7

Extra buffer NAND

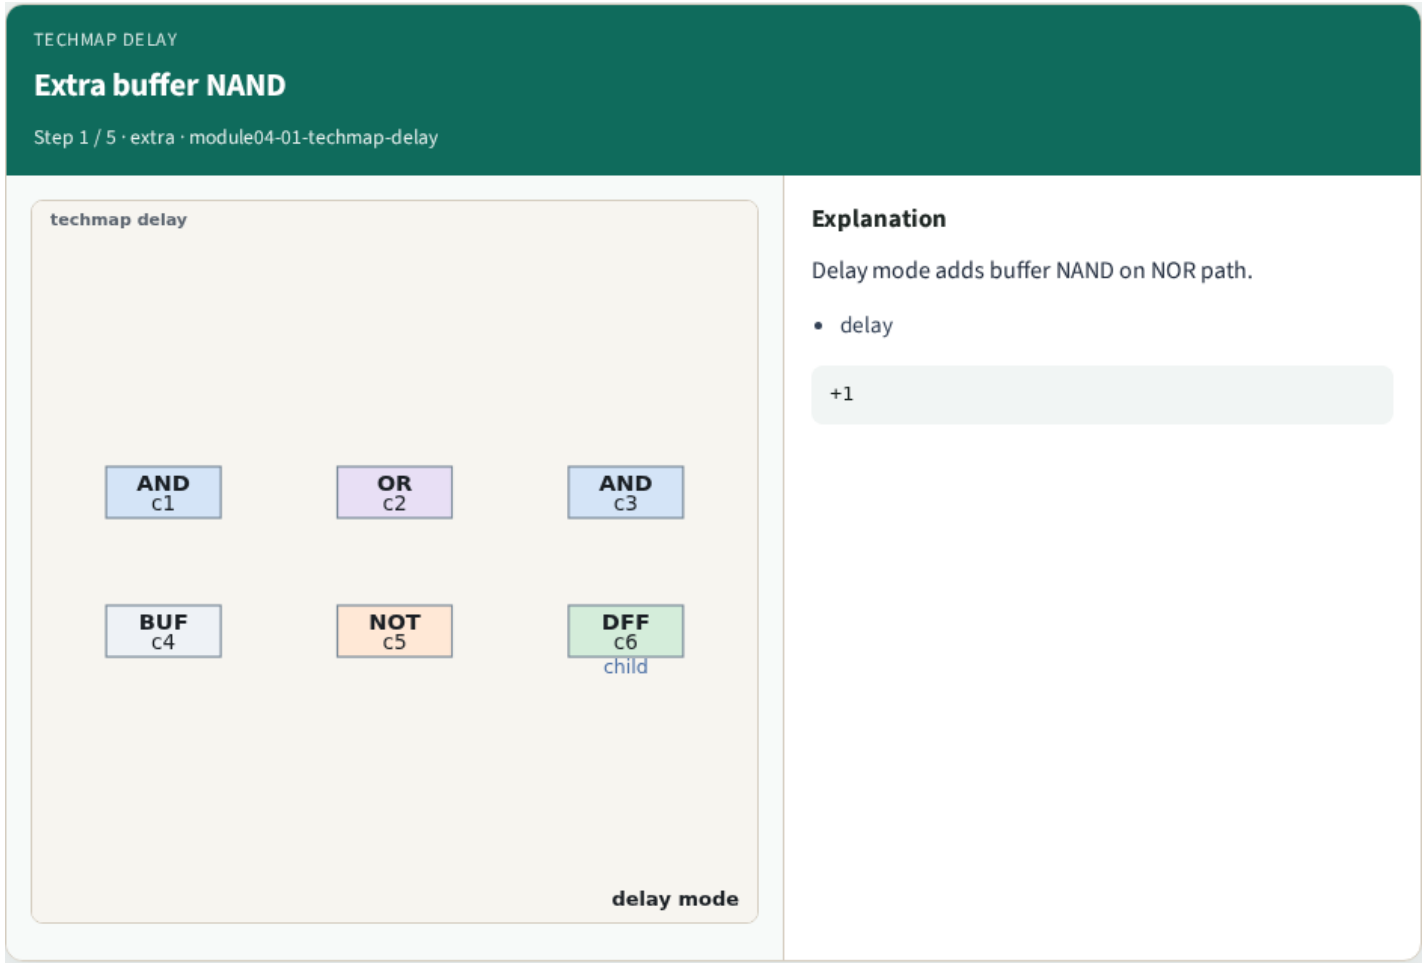


Extra buffer NAND

NOR five NAND

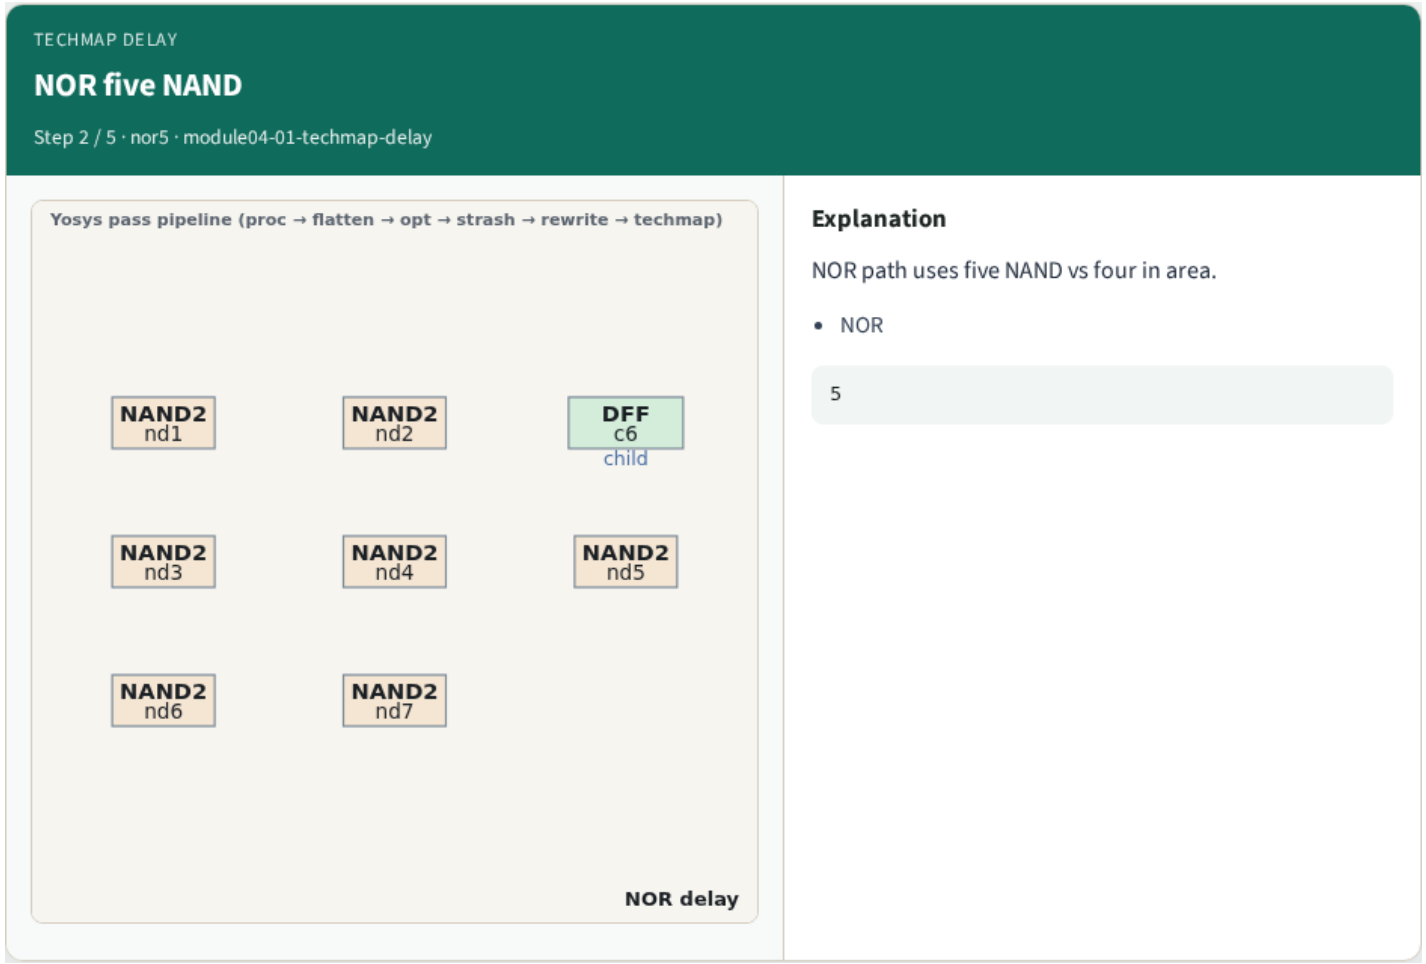


NOR five NAND

Total NAND

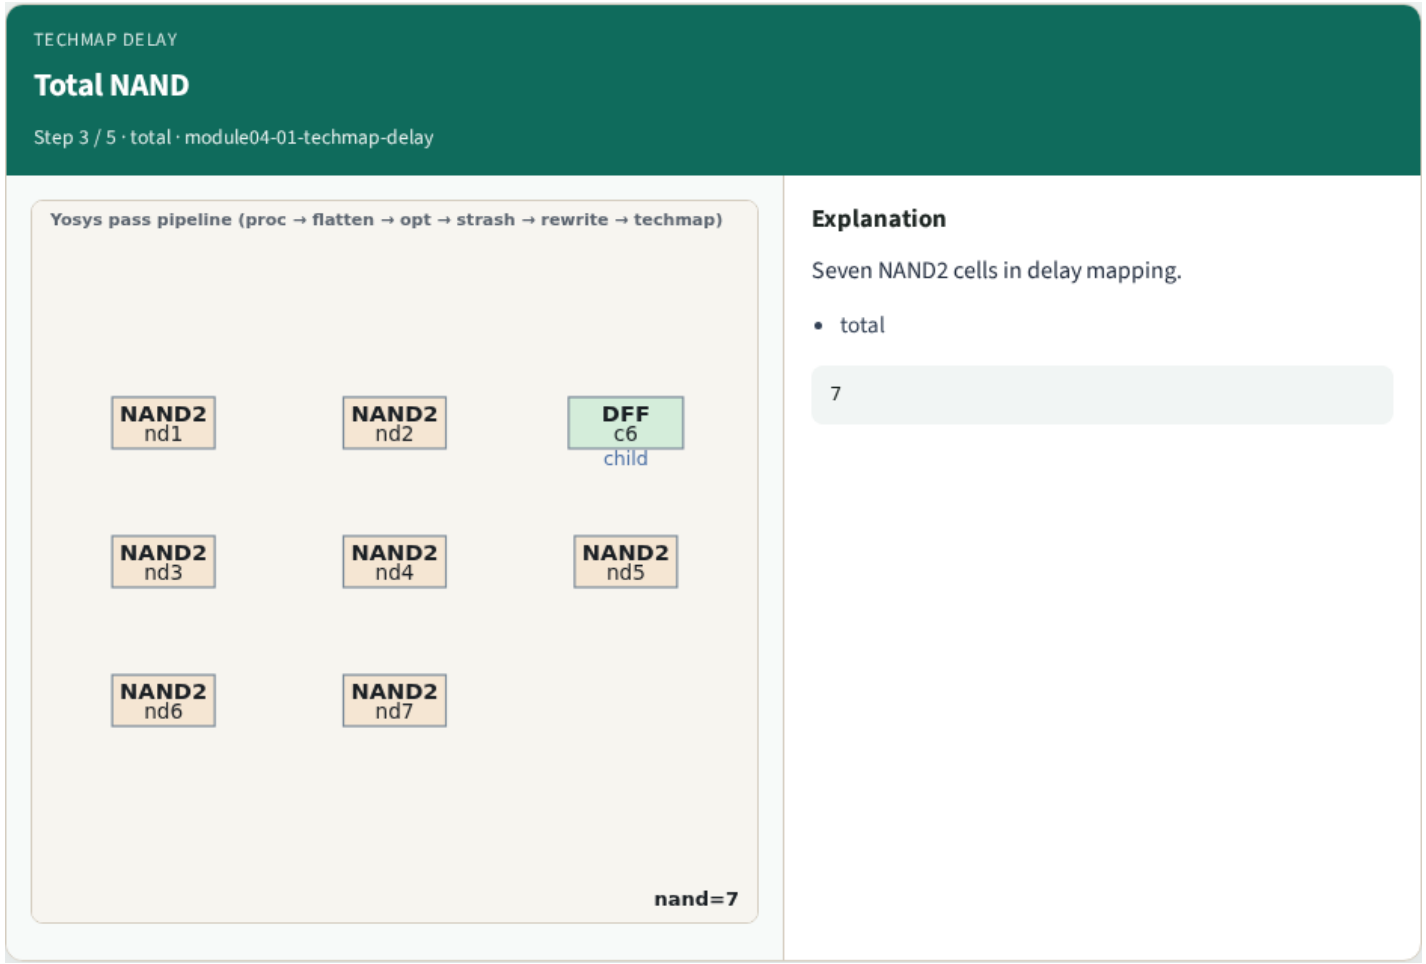


Total NAND

Area vs delay

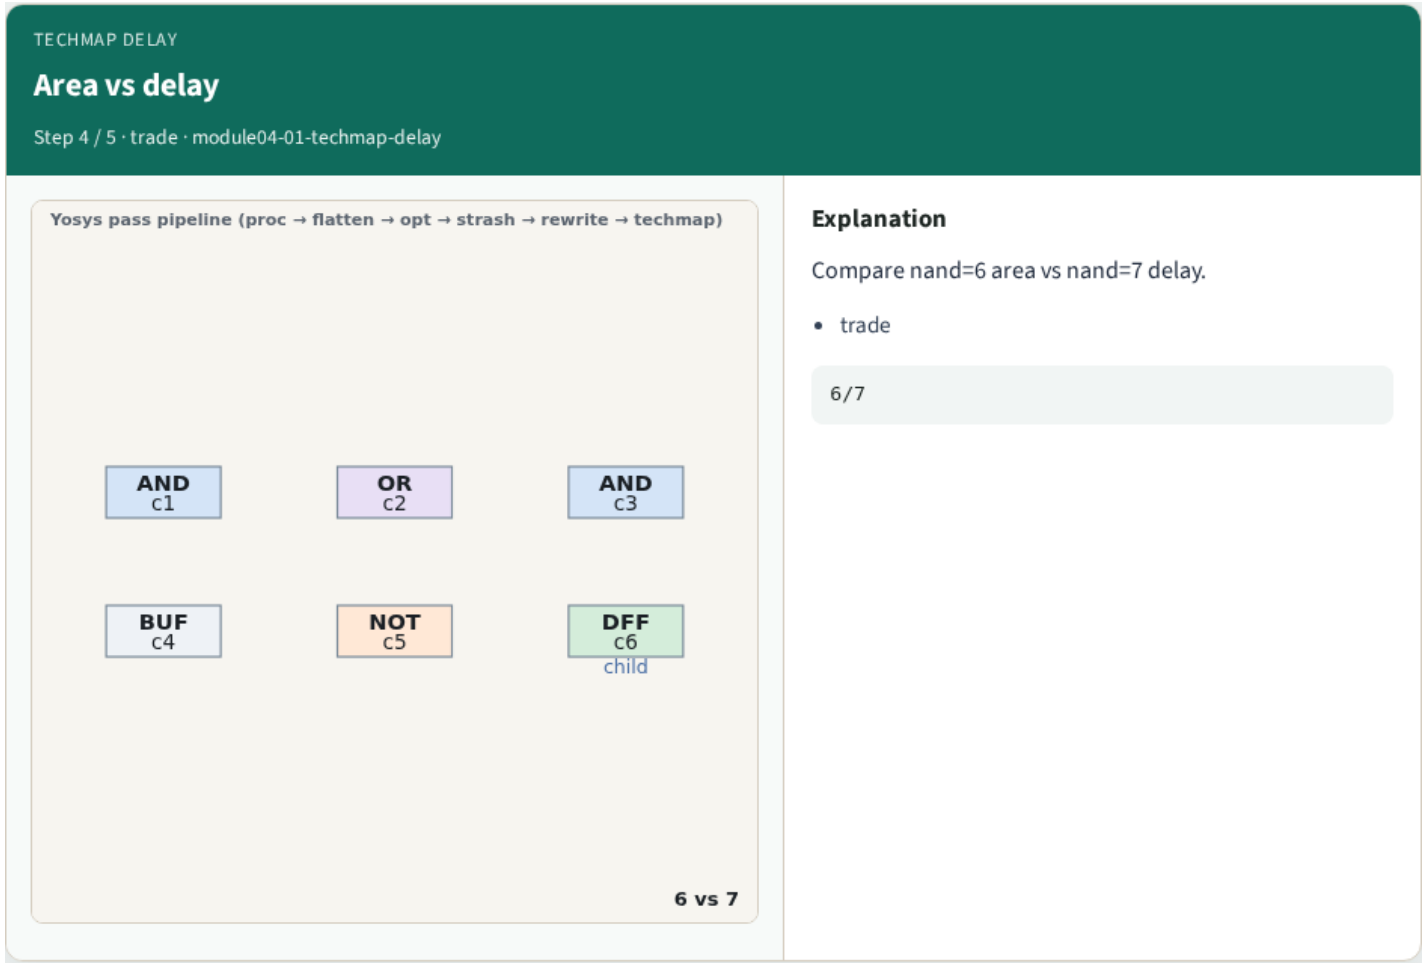


Area vs delay

Golden

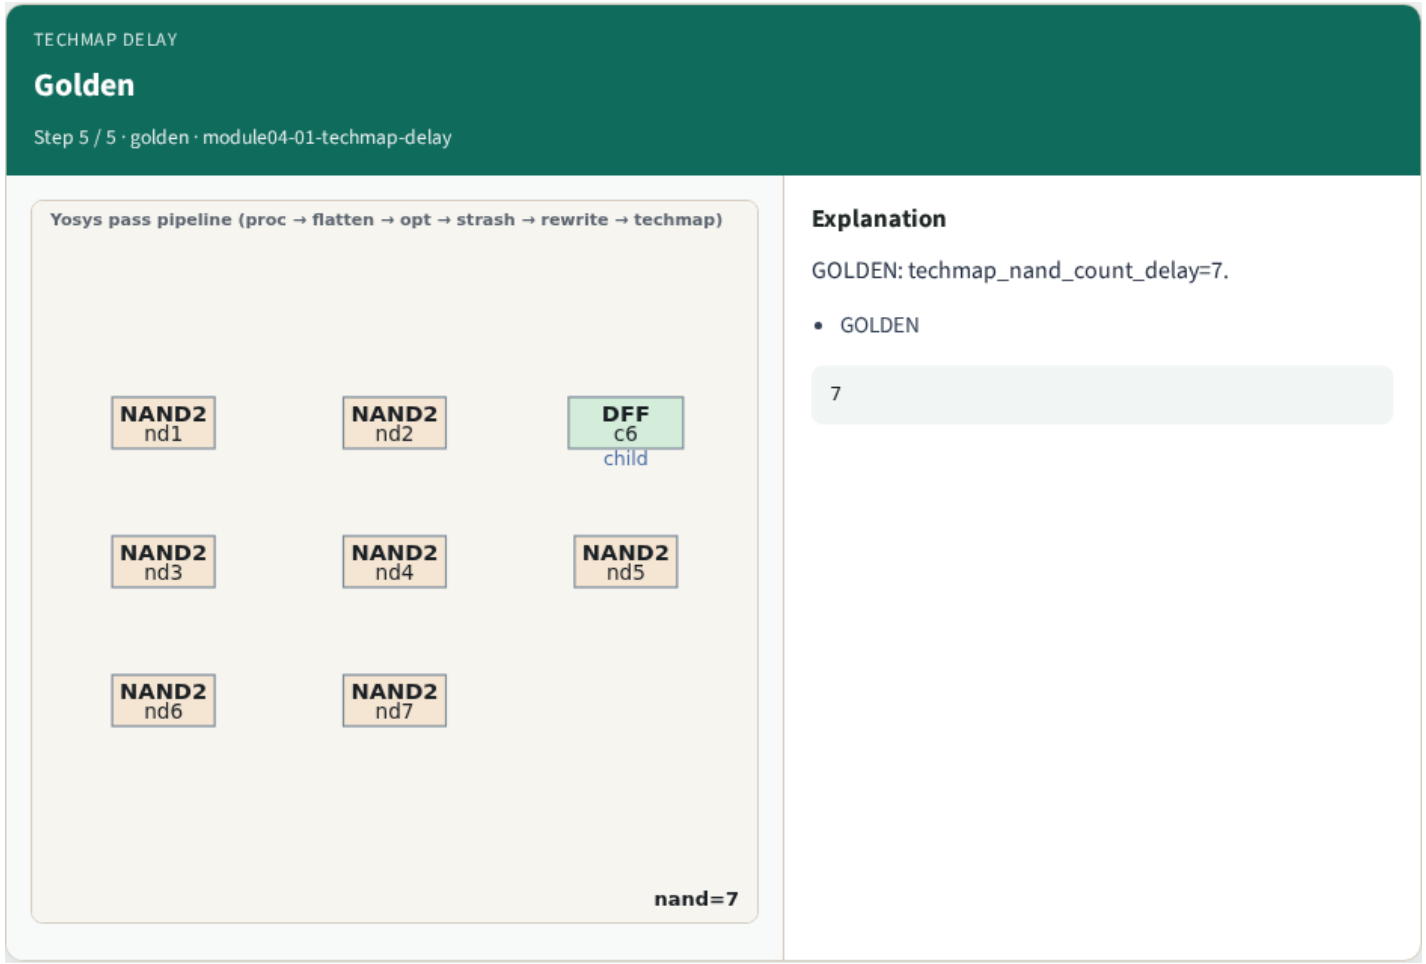

Golden

Browser lab track

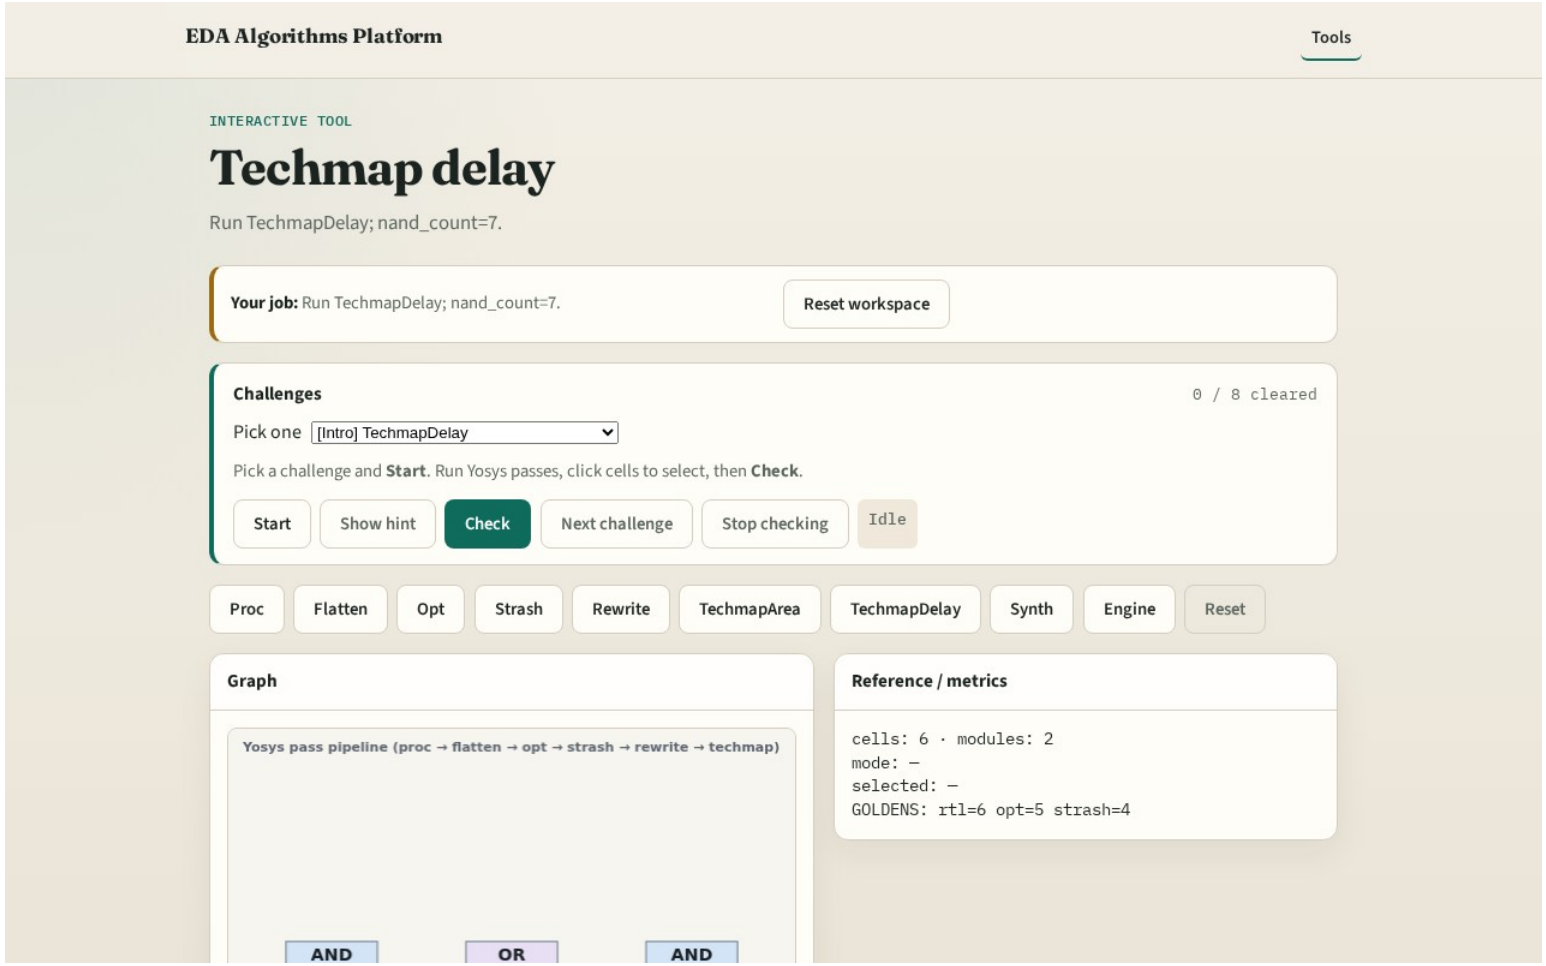

Browser lab starter

Implement track

- Call pass_techmap(mode='delay'); assert nand_count==7

Pitfalls

- Expecting same count as area
- Ignoring DFF passthrough

Your turn

- Next: synth script