
Why read a real pass

Algorithms in Part C match moves

The idea


- GOLDEN: mark used from outputs; delete unused cells; then unused wires
- Prefer proc before opt_clean

File home

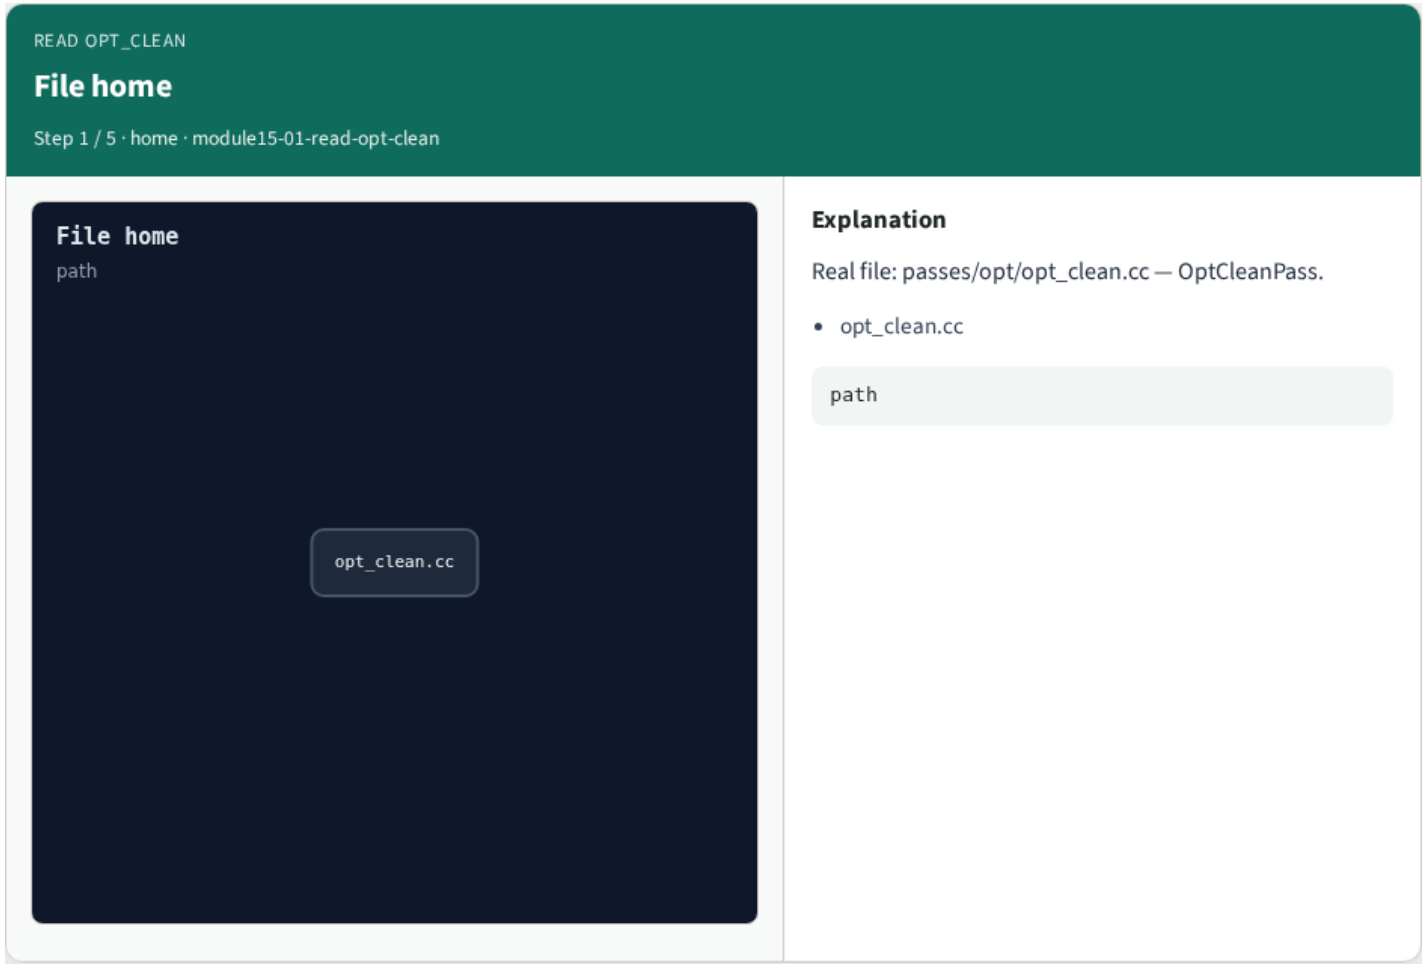


File home

Mark used

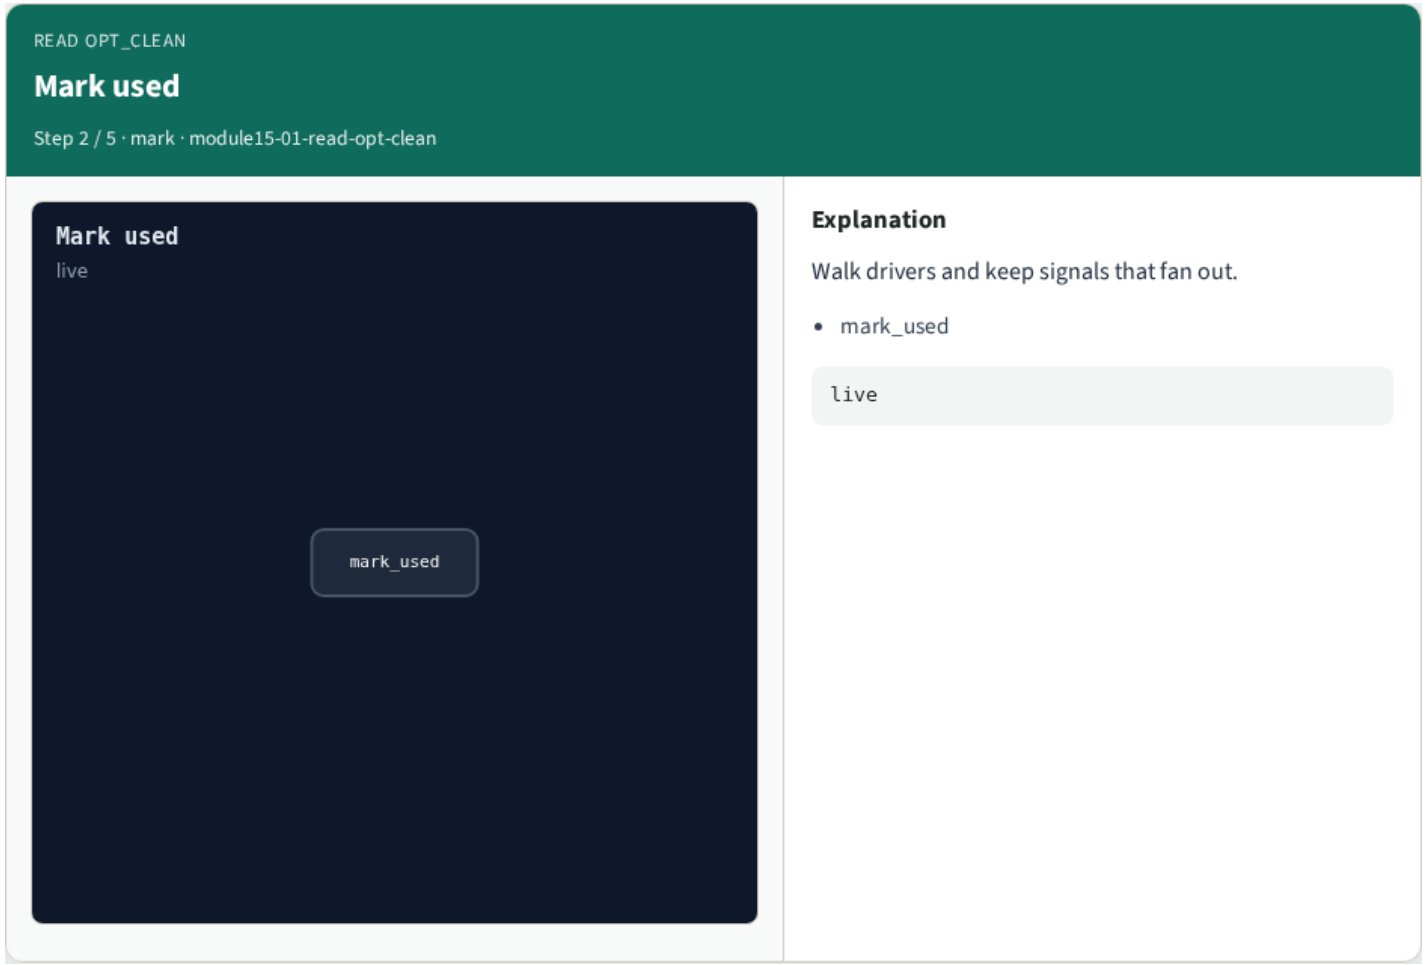


Mark used

Remove cells

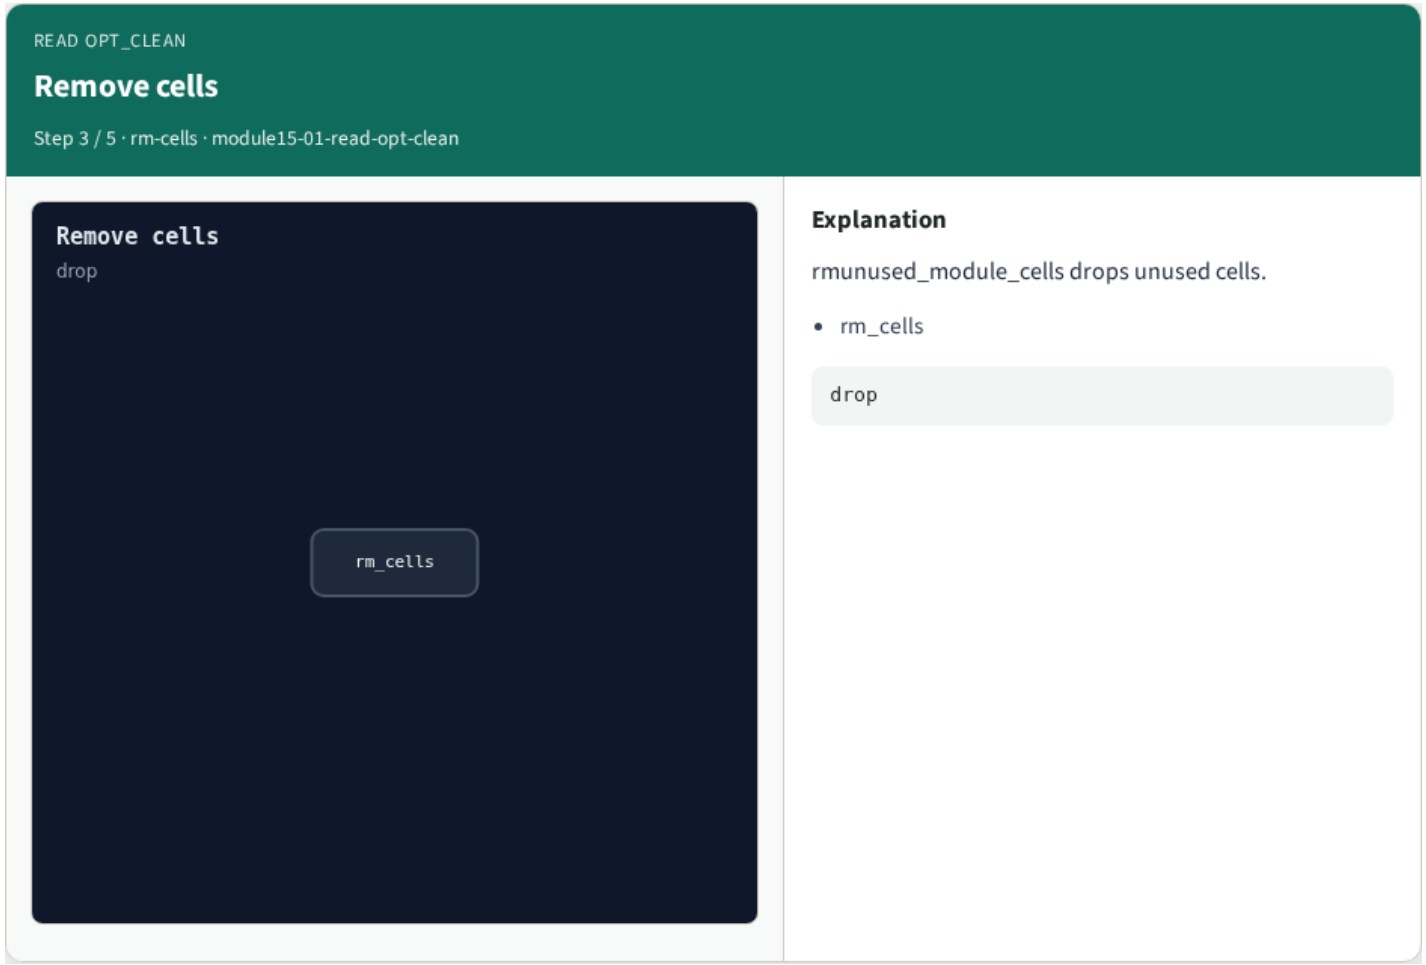


Remove cells

Remove wires

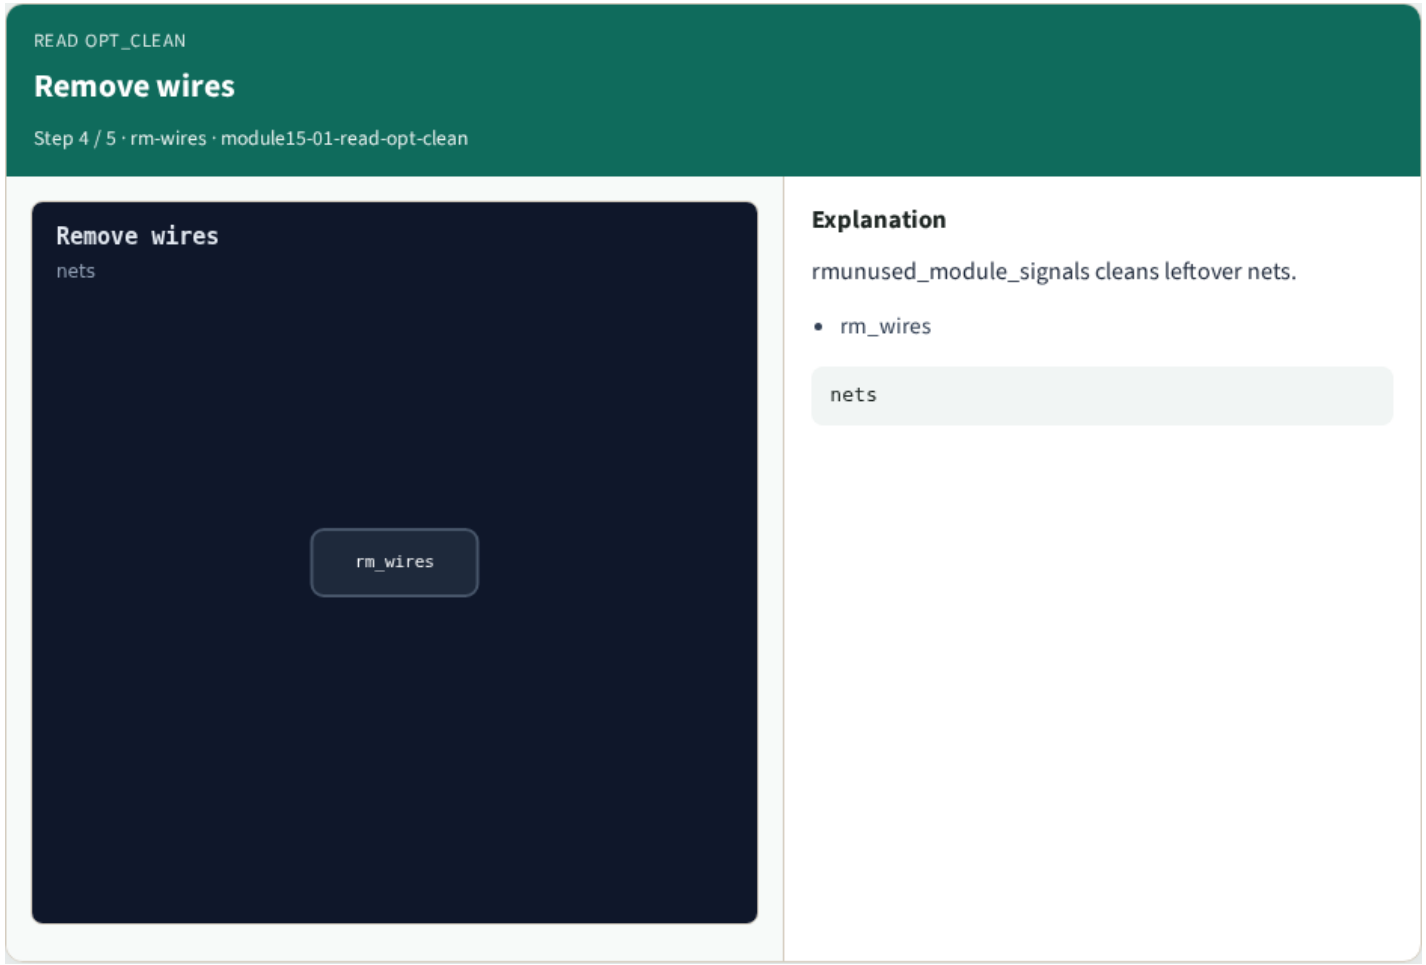

Remove wires

Golden

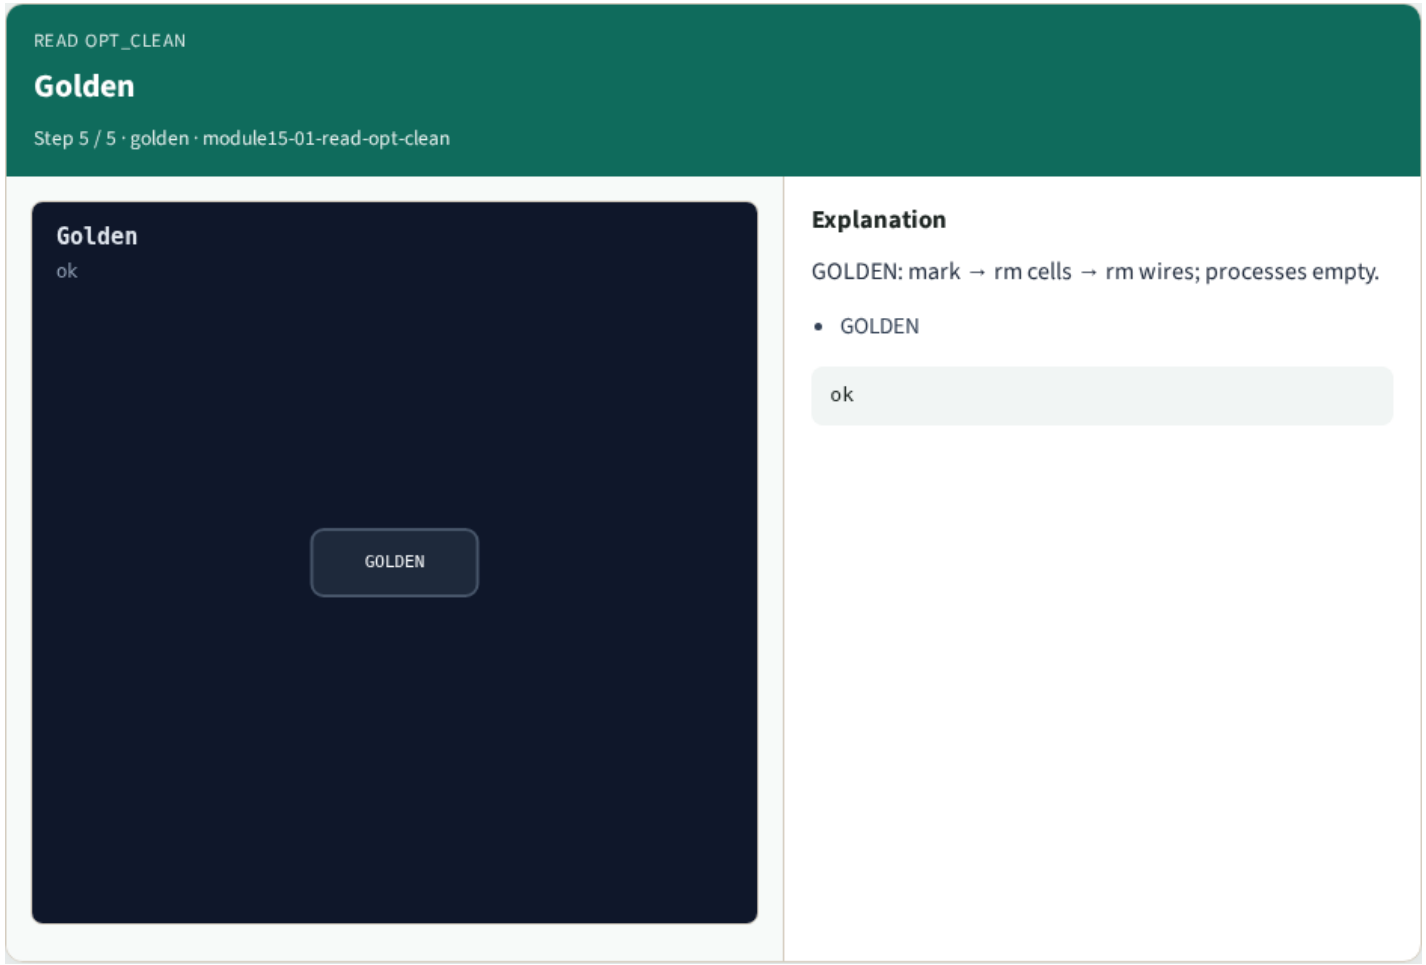

Golden

Browser lab track

- Open **read-opt-clean**
- Step the mark/delete pipeline and check

Implement track

- Call read_opt_clean(); assert stage order and process guard

Pitfalls

- Expecting opt_clean to lower processes
- Deleting wires before cells blindly

Try these

- From the common folder, call read_opt_clean and print the stages

Try these — try these

```
cd courses/learn_yosys/common
python3 -c "from internals_solvers import read_opt_clean;
print(read_opt_clean())"
```

Pseudocode

- Here is the opt_clean flow in plain steps

Pseudocode — try these

```
for module in selected:
  if processes: warn/skip
  mark_used(outputs)
  rmunused_module_cells
  rmunused_module_signals
```

Next

- Complete the quiz for this part
- Next: contribute a minimal pass of your own