Wire jogs

Wires must bend or stretch when cells move during compaction

The idea


- Add_jog inserts a bend; stretch_wire_to_bbox retargets a horizontal wire to the cell union

Wire W

WIRE JOGS

Wire W

Step 1 / 5 · w · module03-01-wire-jogs

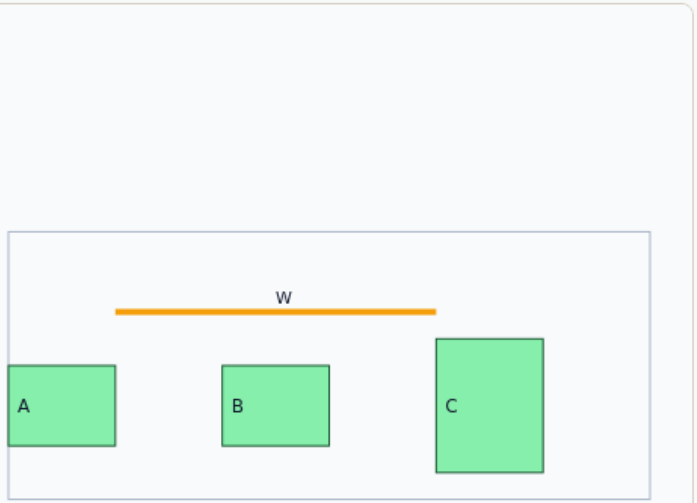

Explanation

W is horizontal at y=7 spanning x=4..16.

- wire

```
M1
```


Wire W

Jog

WIRE JOGS

Jog

Step 2 / 5 · jog · module03-01-wire-jogs

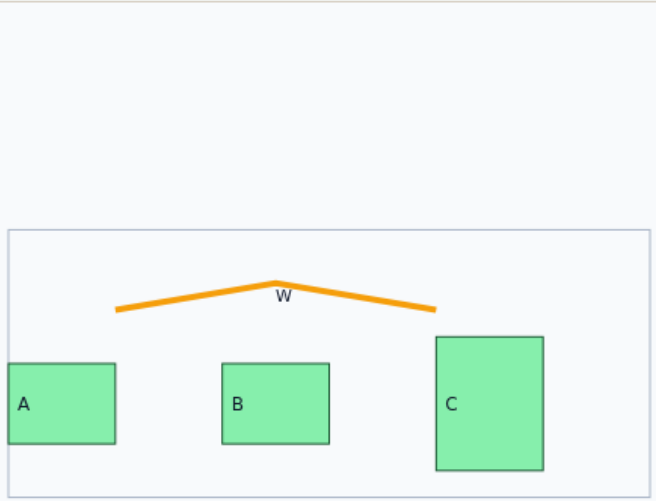

Explanation


add_jog records a bend point.

- bend

```
polyline
```

Jog

Stretch

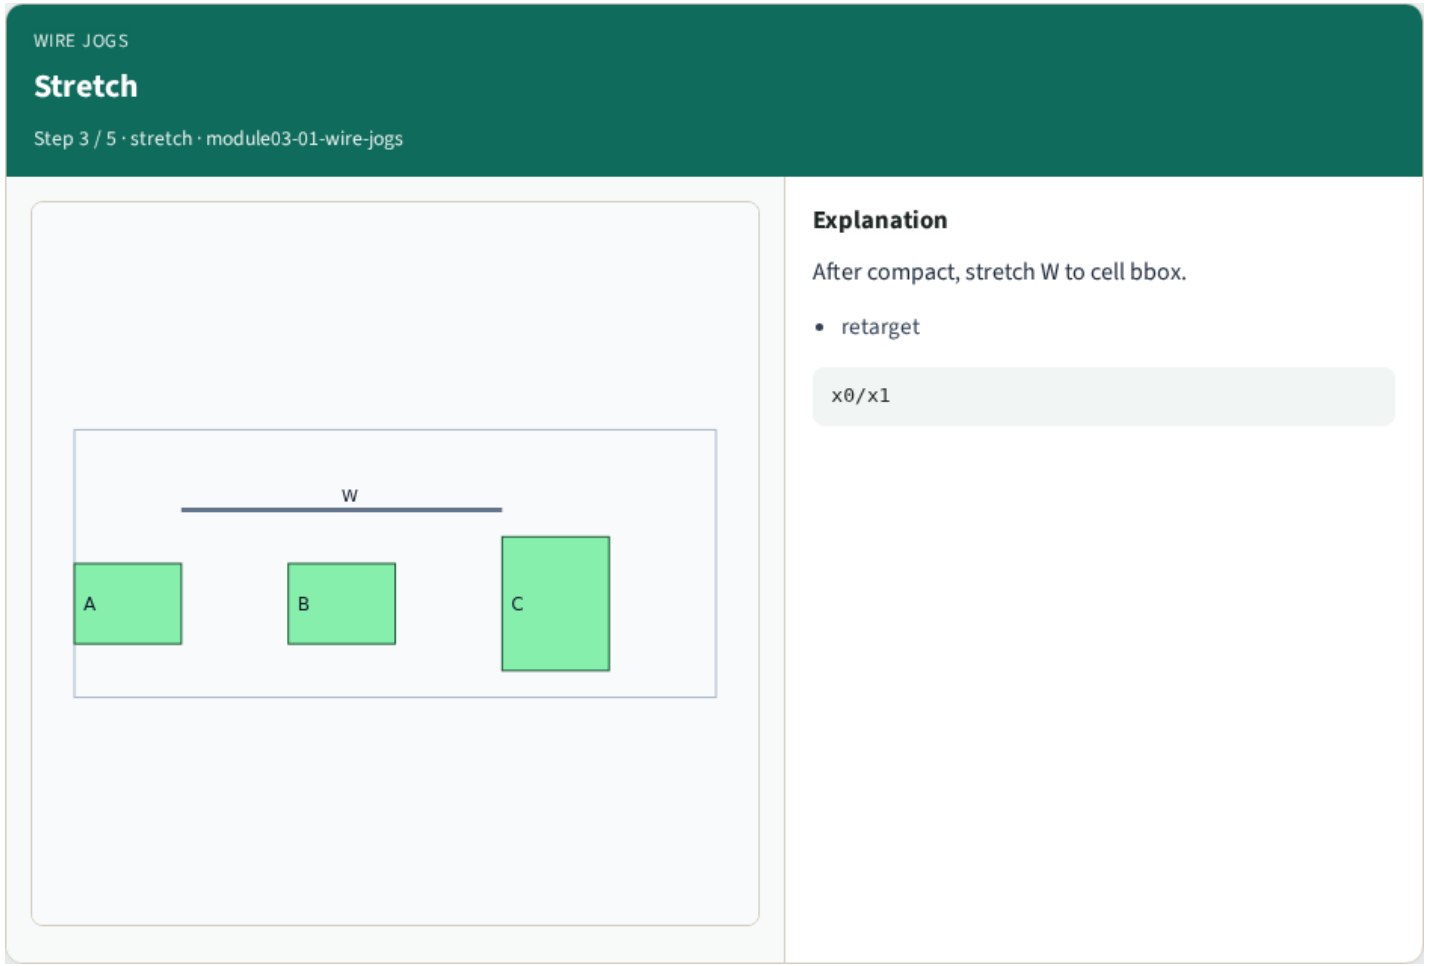


Stretch

Points

WIRE JOGS

Points

Step 4 / 5 · pts · module03-01-wire-jogs

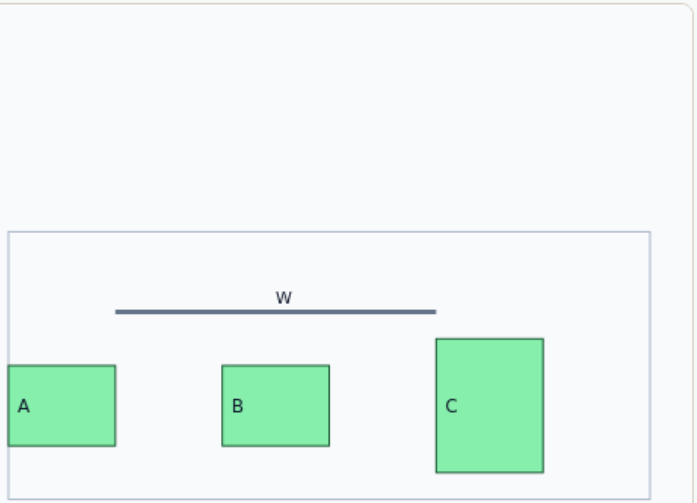

Explanation

points list holds polyline vertices.

- geometry

```
3 pts
```


Points

Why

WIRE JOGS

Why

Step 5 / 5 · why · module03-01-wire-jogs

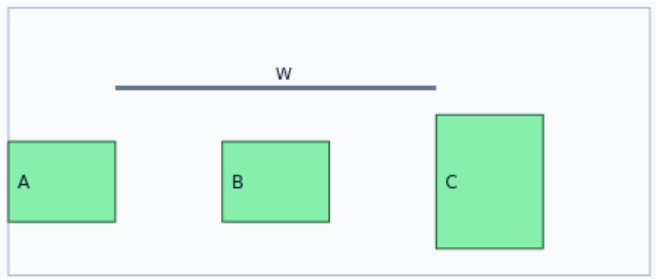

Explanation


Without jogs, wires disconnect from moving pins.

- connectivity

```
need bend
```

Why

Browser lab track

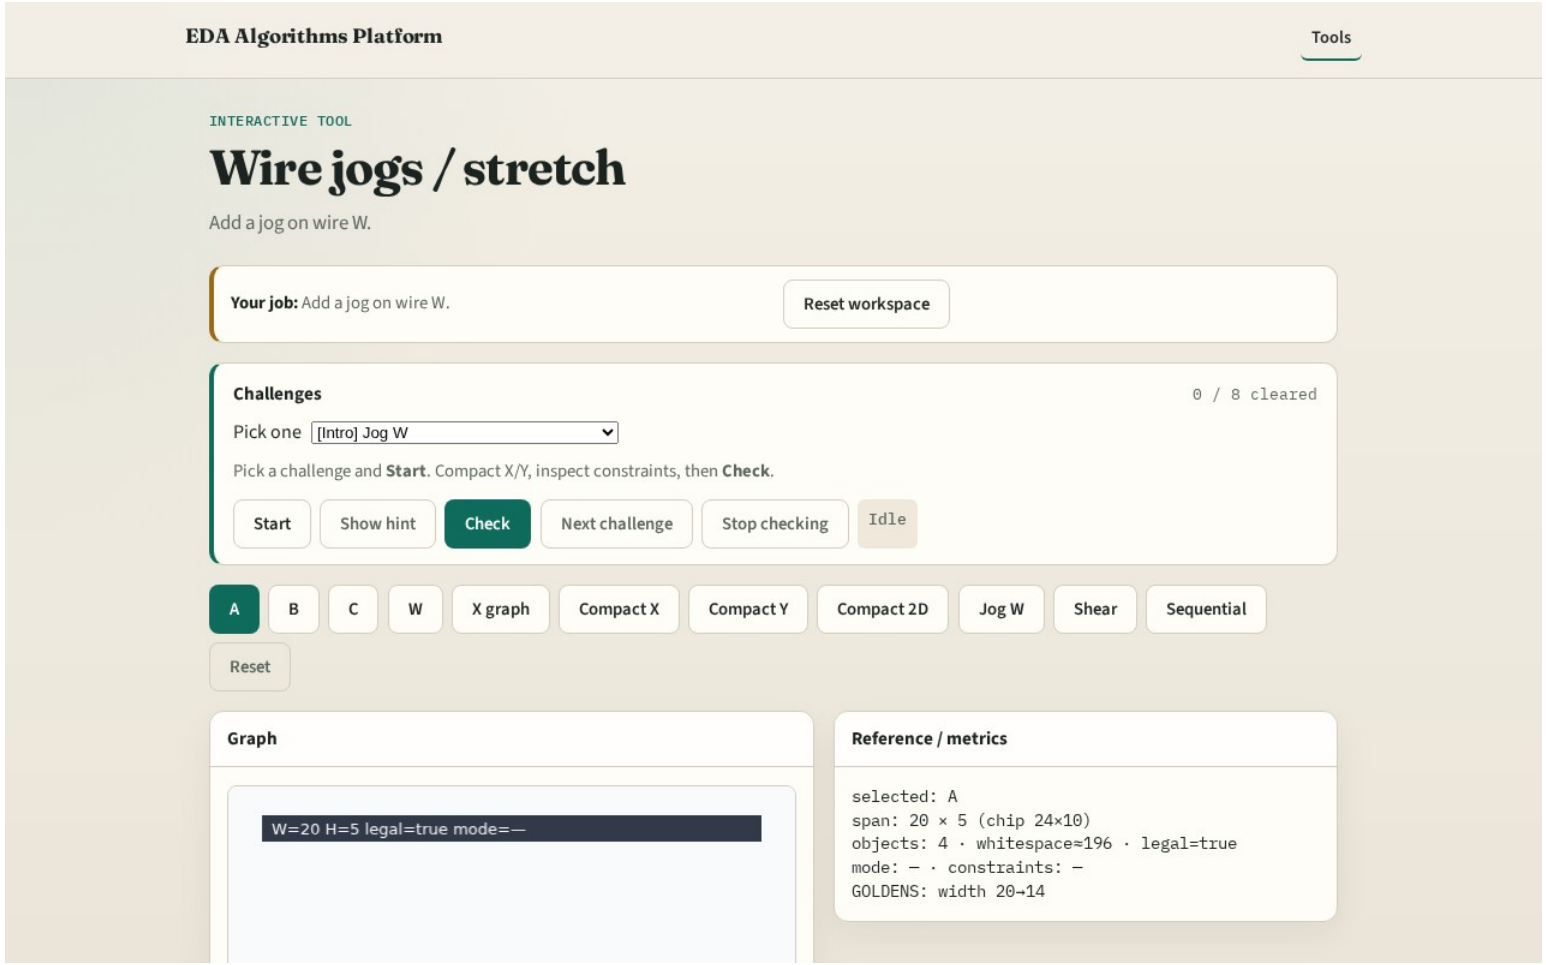

Browser lab starter

Implement track

- Call add_jog on W; stretch_wire_to_bbox after compact_1d

Pitfalls

- Deleting the wire
- Stretching without updating y

Your turn

- Next: shear lite