
Why drivers

ERC needs drivers and loads , output pins drive; input pins load

The idea


- GOLDEN: z has 2 drivers; float_n has 0 drivers and 1 load

Out pins

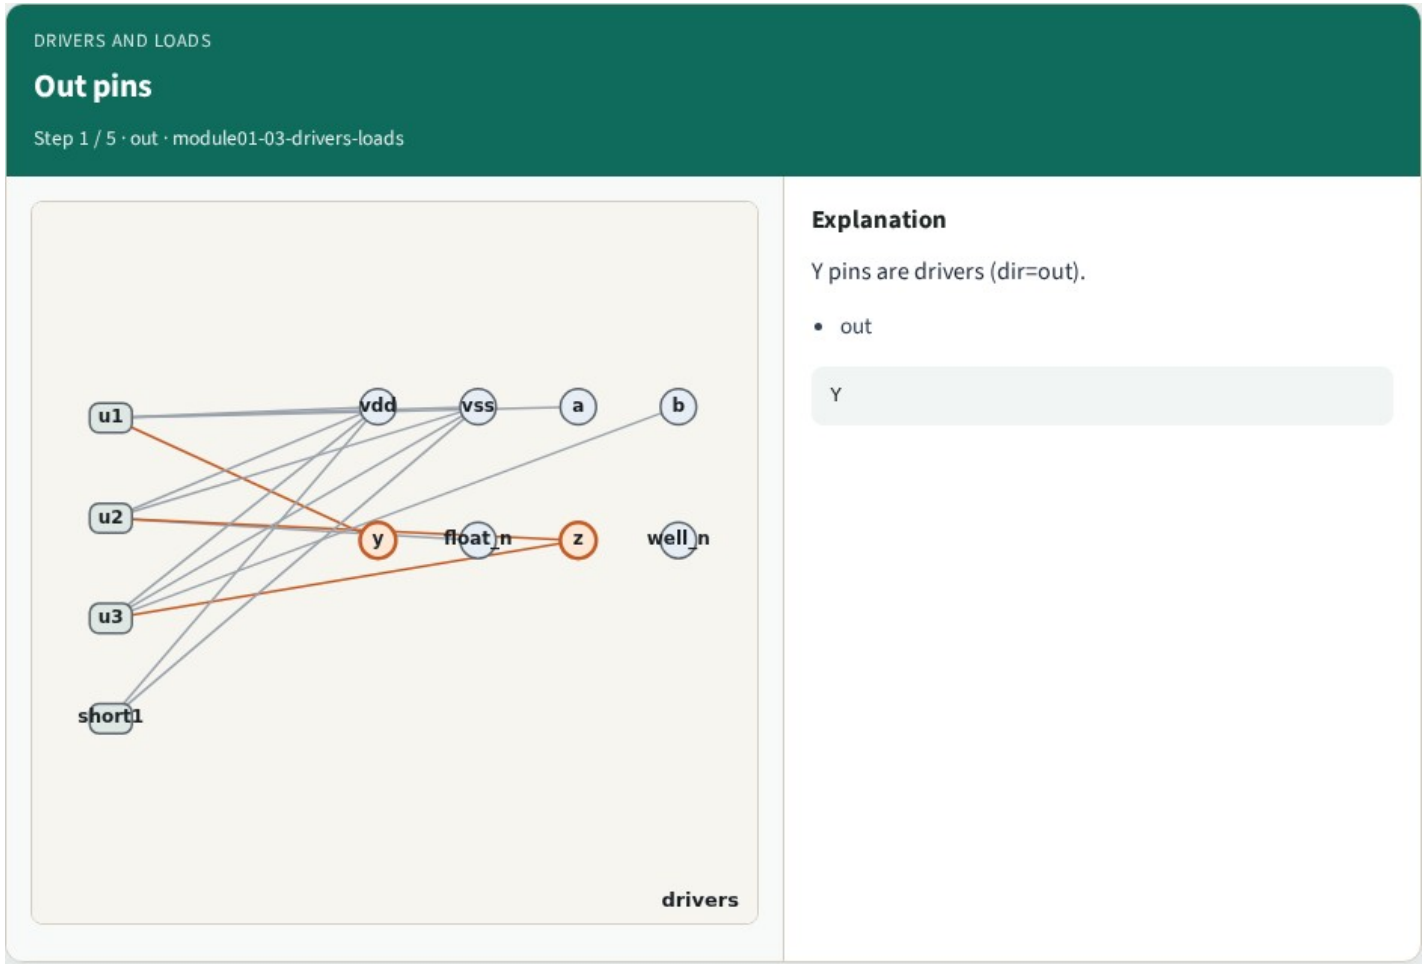


Out pins

In pins

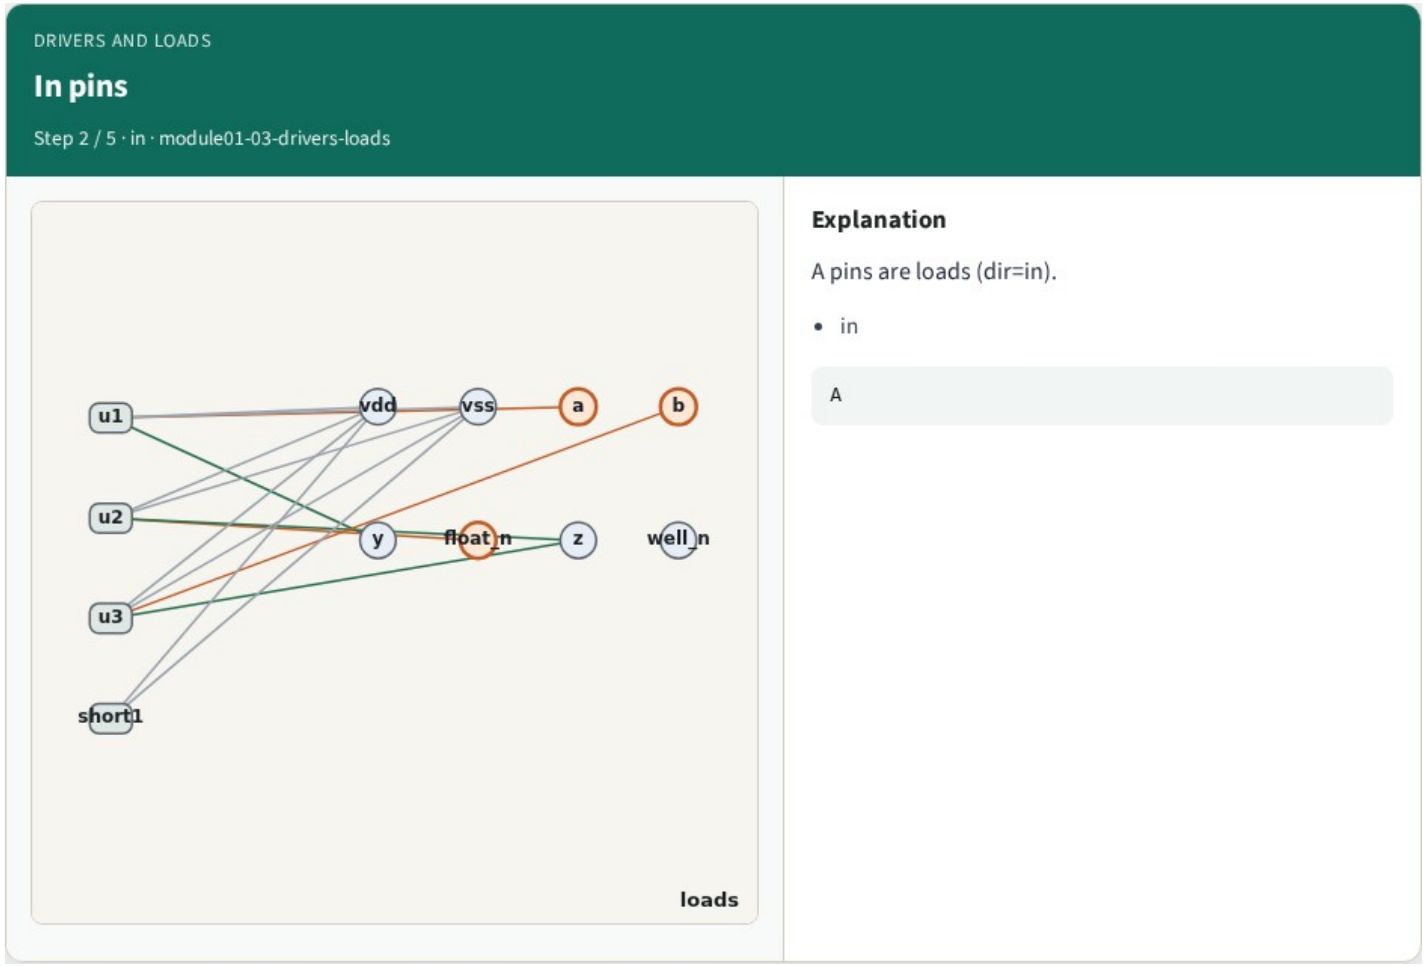


In pins

z drivers

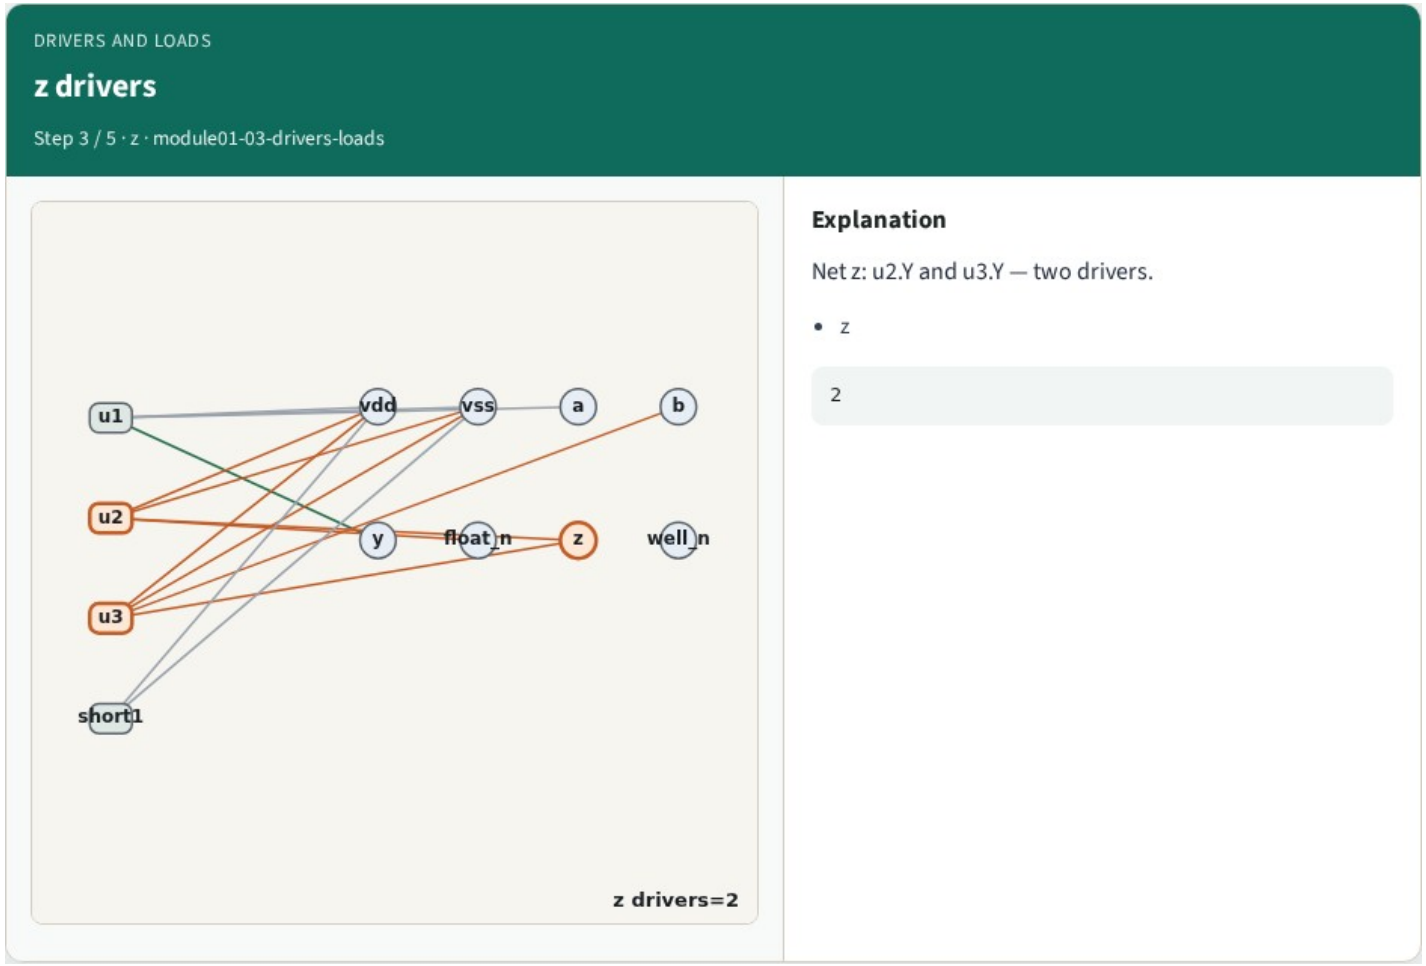


z drivers

float

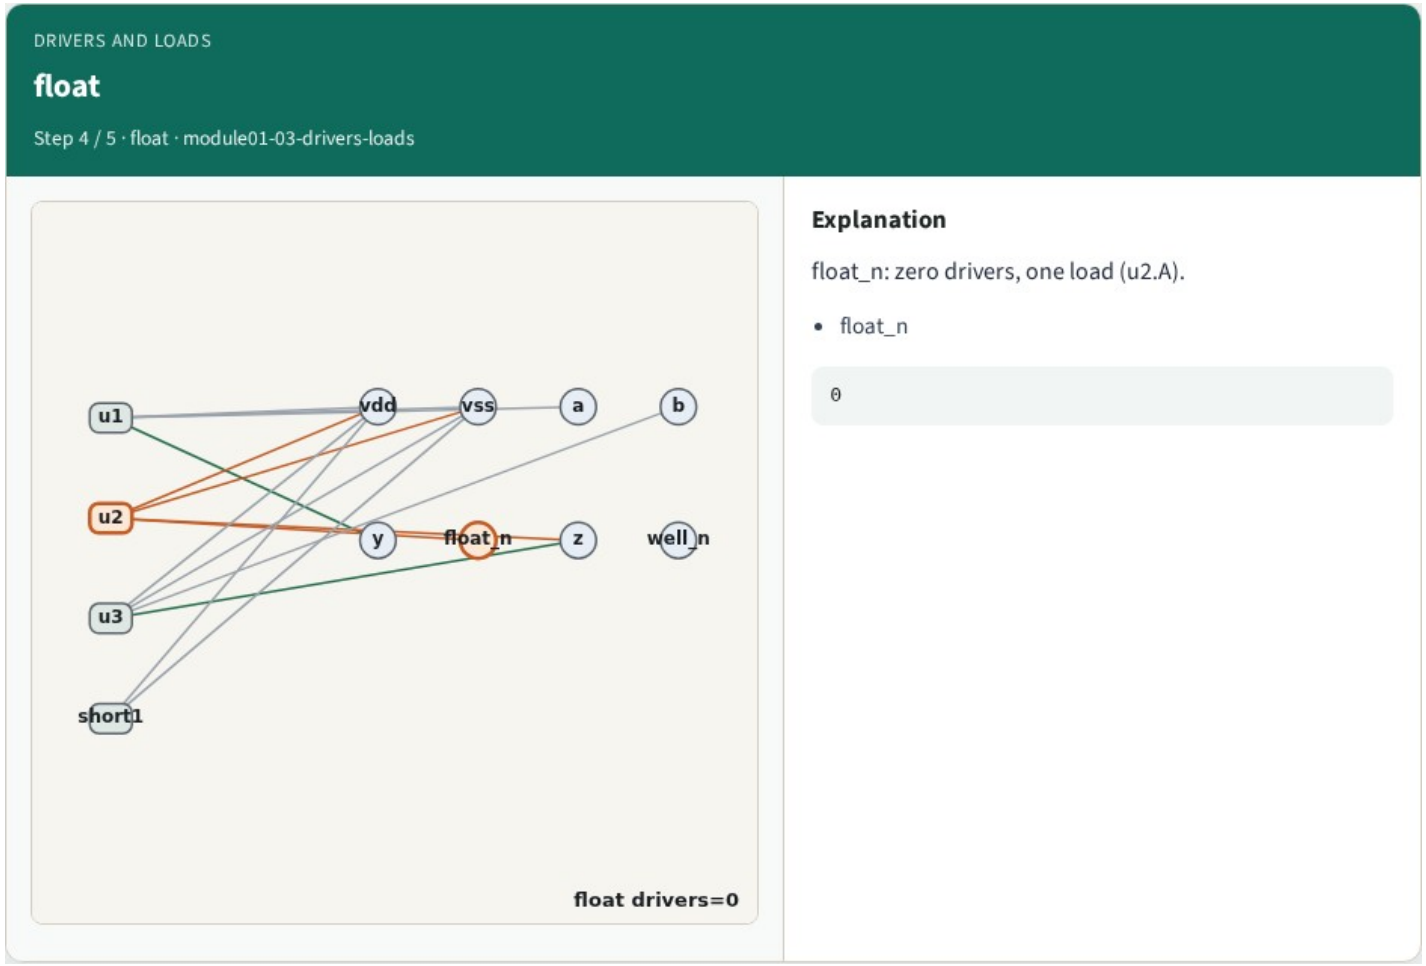
DRIVERS AND LOADS
float
Step 4 / 5 · float · module01-03-drivers-loads
u1
u2
u3
short1
vdd
vss
a
b
y
float_n
z
well_n
float drivers=0
Explanation
float_n: zero drivers, one load (u2.A).
float_n
0


float

Count

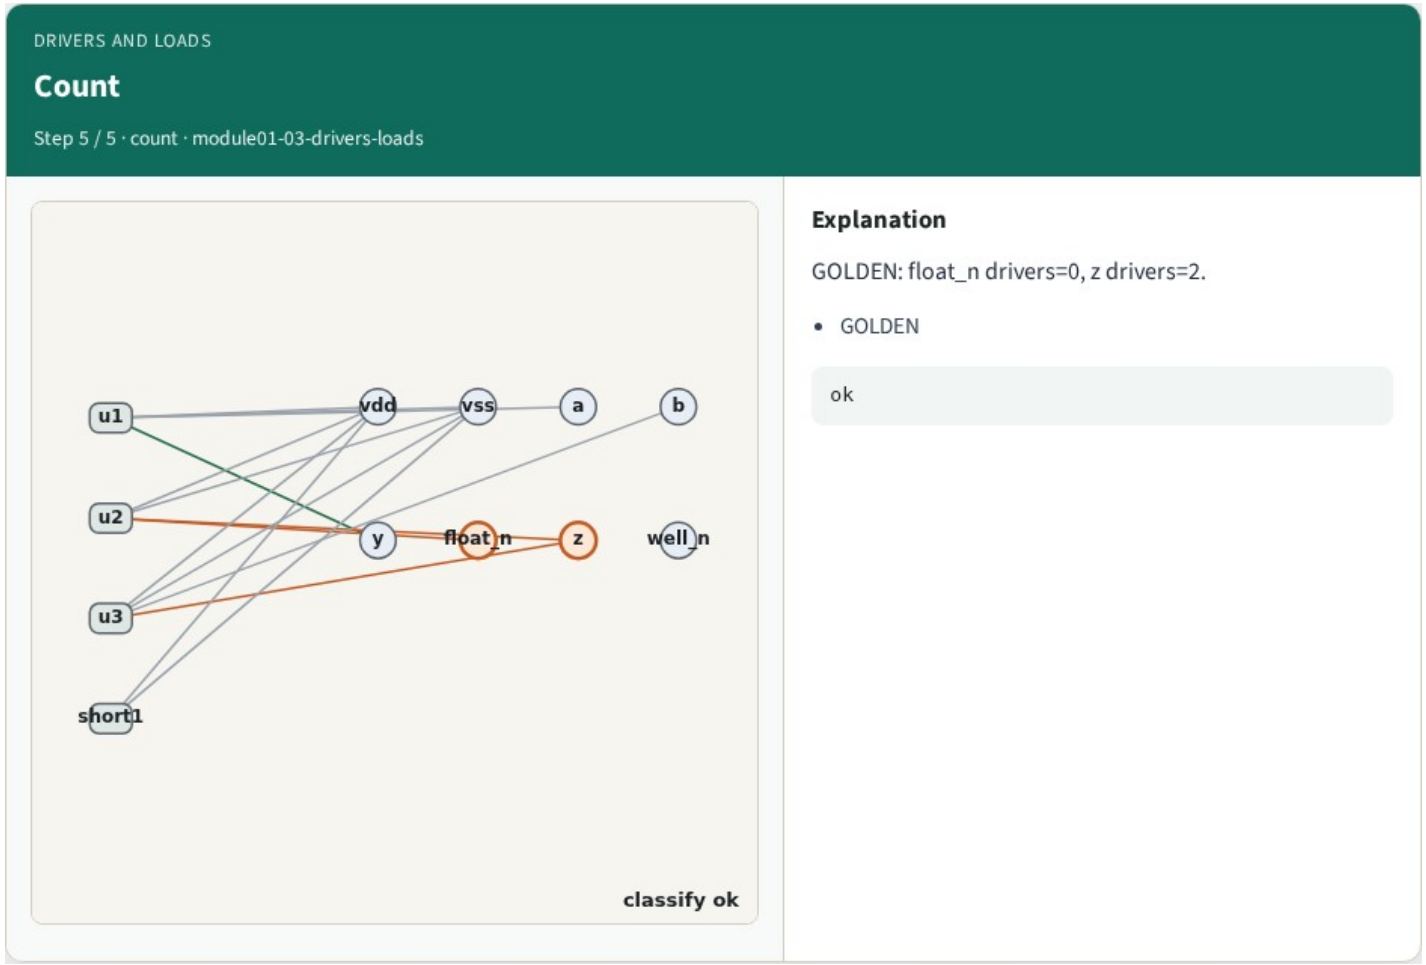
DRIVERS AND LOADS
Count
Step 5 / 5 · count · module01-03-drivers-loads
u1
u2
u3
short1
vdd
vss
a
b
y
float_n
z
well_n
classify ok
Explanation
GOLDEN: float_n drivers=0, z drivers=2.
GOLDEN
ok

Count

Browser lab track

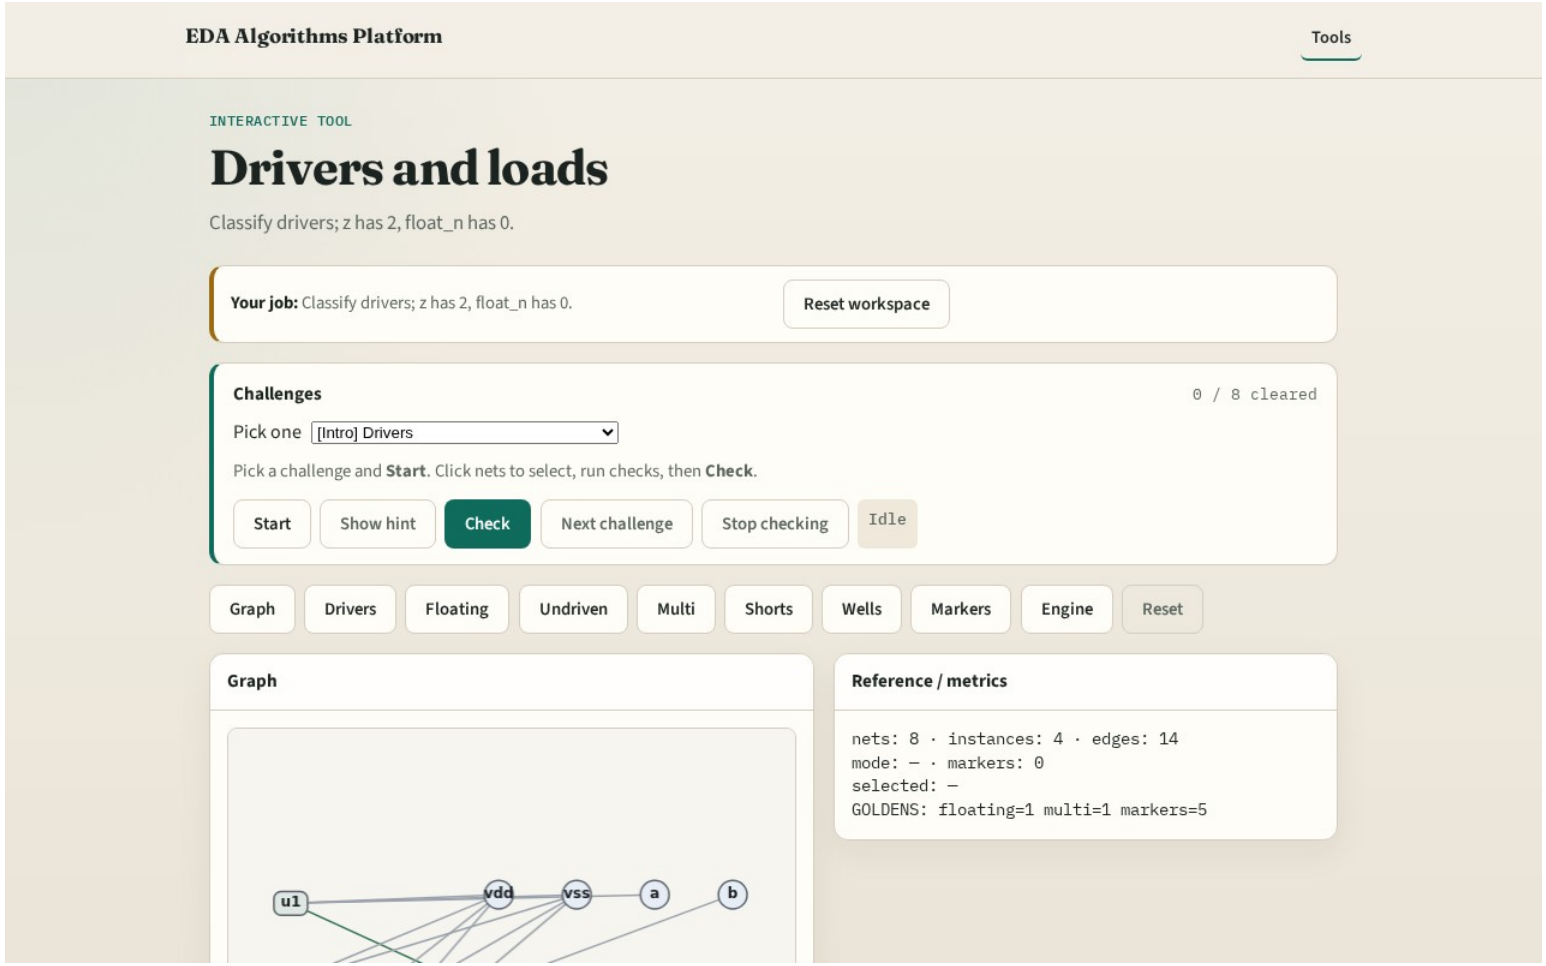

Browser lab starter

Implement track

- Call drivers_and_loads(); assert len(by_net['z']['drivers'])==2

Pitfalls

- Treating power pins as drivers
- Ignoring SHORT io pins

Your turn

- Next: floating nets