
Why undriven

Undriven inputs are the pin-level view of floating connectivity

The idea


- GOLDEN: one hit , u2.A on float_n

Scan loads

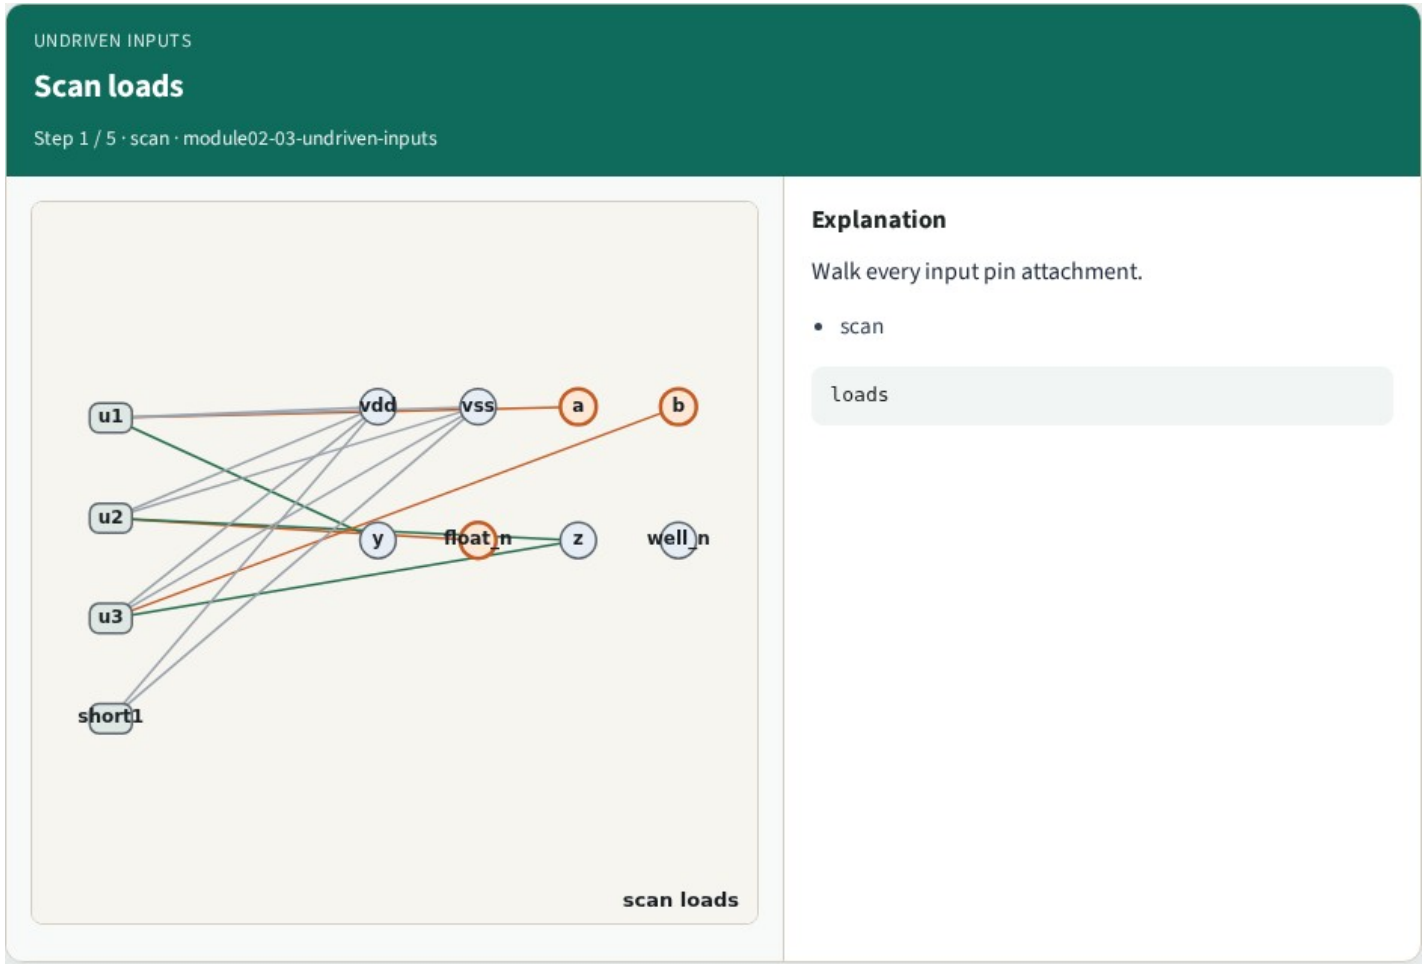


Scan loads

Driver?

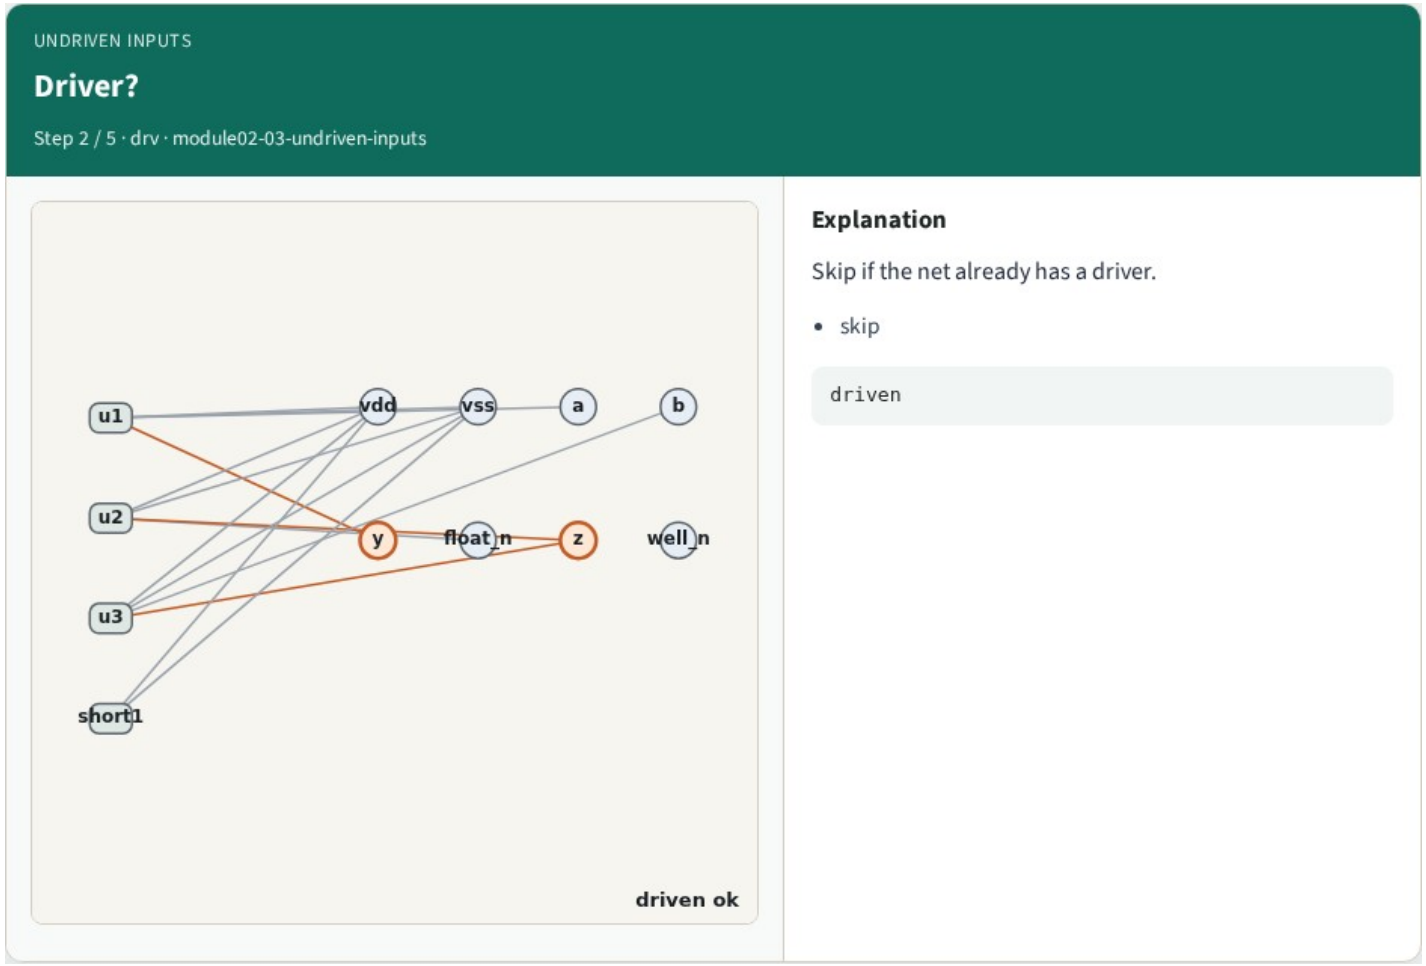

Driver?

Primary in

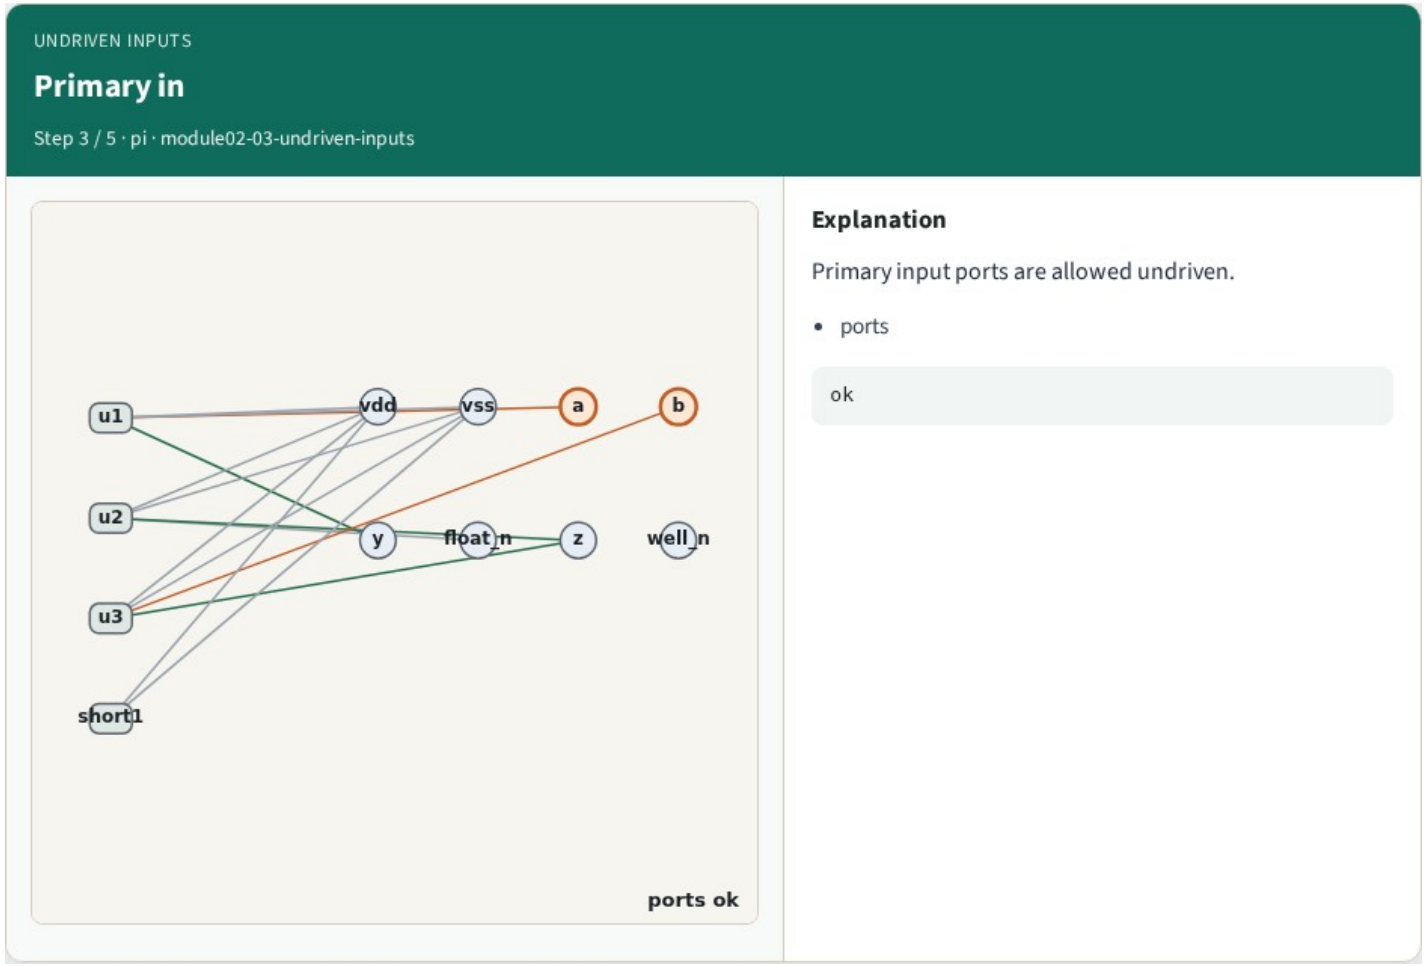


Primary in

Hit

UNDRIVEN INPUTS

Hit

Step 4 / 5 · hit · module02-03-undriven-inputs

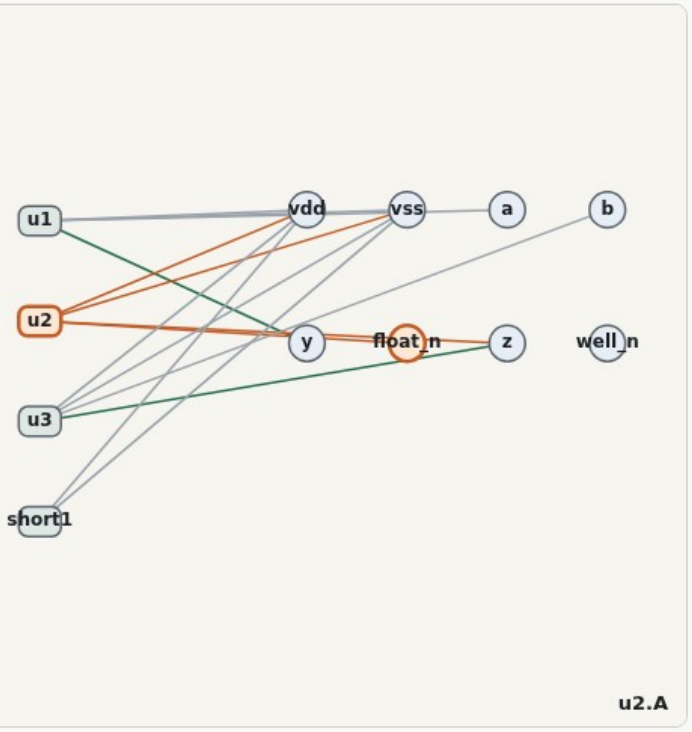

Explanation

u2.A on float_n is the golden hit.

- u2.A

```
float_n
```

Hit


Count

UNDRIVEN INPUTS

Count

Step 5 / 5 · count · module02-03-undriven-inputs

• undriven:float_n

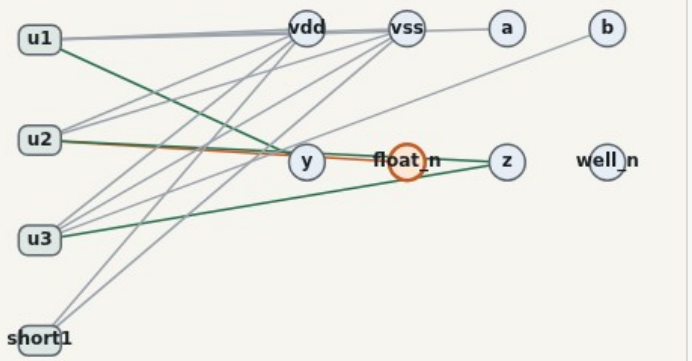

Explanation


GOLDEN: undriven_count=1.

- GOLDEN

```
1
```

Count

Browser lab track

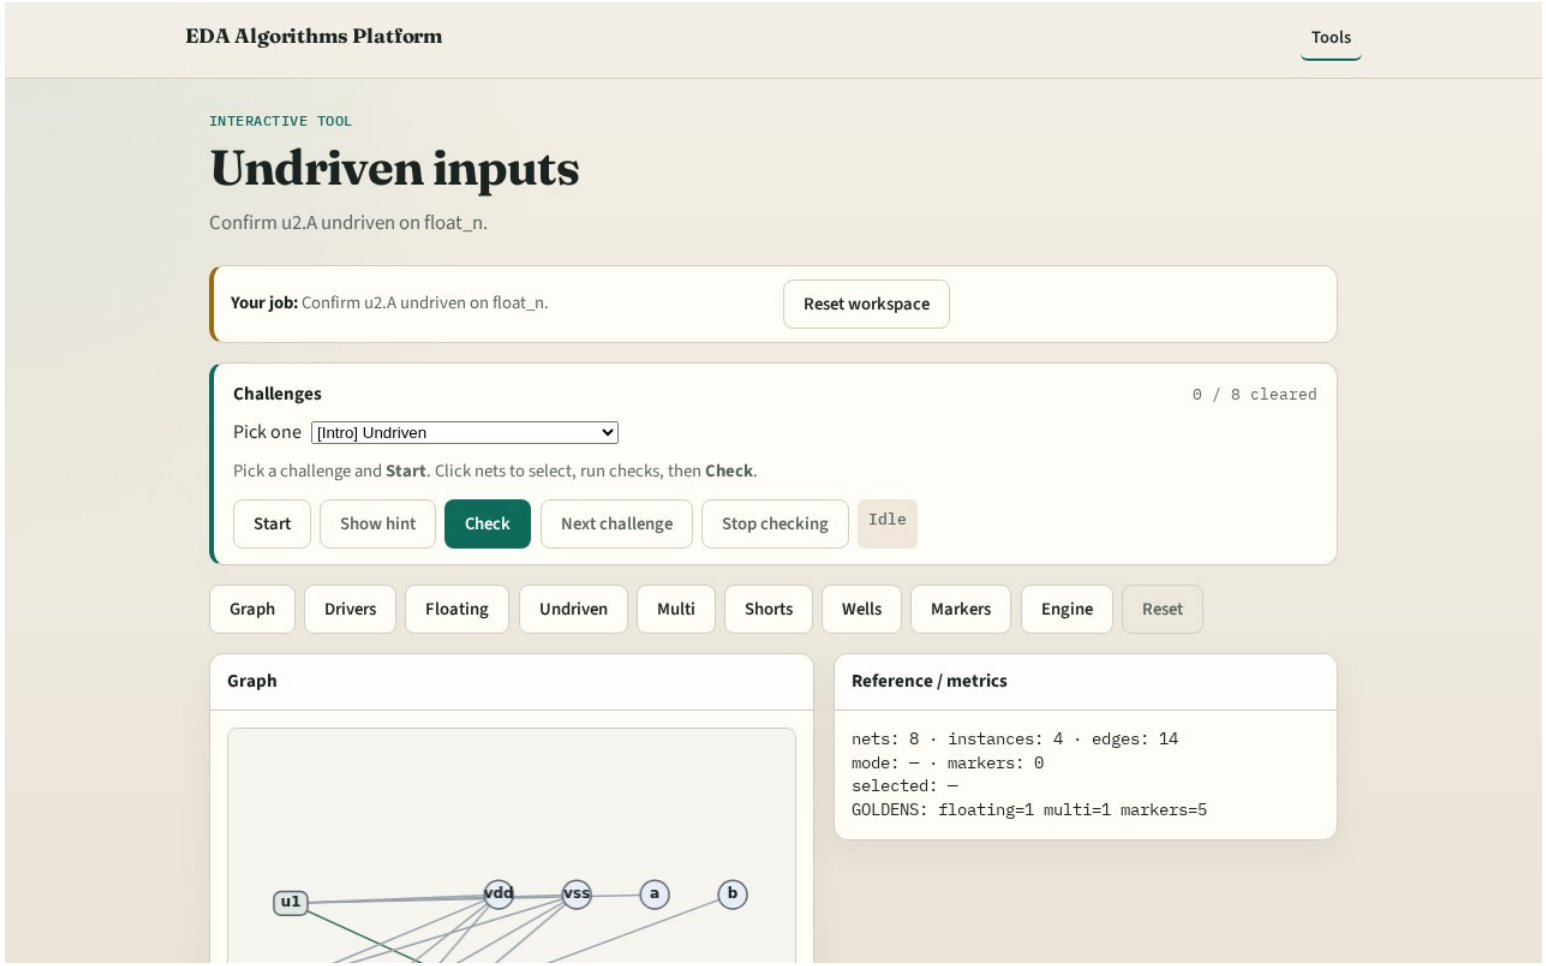

Browser lab starter

Implement track

- Call find_undriven_inputs(); assert count==1 and hits[0].net=='float_n'

Pitfalls

- Flagging port a as undriven
- Missing the float_n load

Your turn

- Next: multi-driven nets