

Chapter 1

- Abstractions
- What we will learn
- Eight great ideas
- Performance
- From Uniprocessors to multiprocessors

The Computer Revolution

- Progress in computer technology
 - Underpinned by Moore's Law
- Makes novel applications feasible
 - Computers in automobiles
 - Cell phones
 - Human genome project
 - World Wide Web
 - Search Engines

Classes of Computers

- Personal computers
 - General purpose, variety of software
 - Subject to cost/performance tradeoff
- Server computers
 - Network based
 - High capacity, performance, reliability
 - Range from small servers to building sized

Classes of Computers

- Supercomputers
 - High-end scientific and engineering calculations
 - Highest capability but represent a small fraction of the overall computer market
- Embedded computers
 - Hidden as components of systems
 - Stringent power/performance/cost constraints

What You Will Learn

- How the hardware executes machine code
- The hardware/software interface
- What determines program performance
 - And how it can be improved
- How hardware designers improve performance
- What is parallel processing

What are the prerequisites


- Logic design -- coen 21
- Assembly language – coen 20

Understanding Performance


- Algorithm
 - Determines number of operations executed
- Programming language, compiler, architecture
 - Determine number of machine instructions executed per operation
- Processor and memory system
 - Determine how fast instructions are executed
- I/O system (including OS)
 - Determines how fast I/O operations are executed

Eight Great Ideas

- Design for ***Moore's Law***
- Use ***abstraction*** to simplify design
- Make the ***common case fast***
- Performance via ***parallelism***
- Performance via ***pipelining***
- Performance via ***prediction***
- ***Hierarchy*** of memories
- ***Dependability*** via redundancy

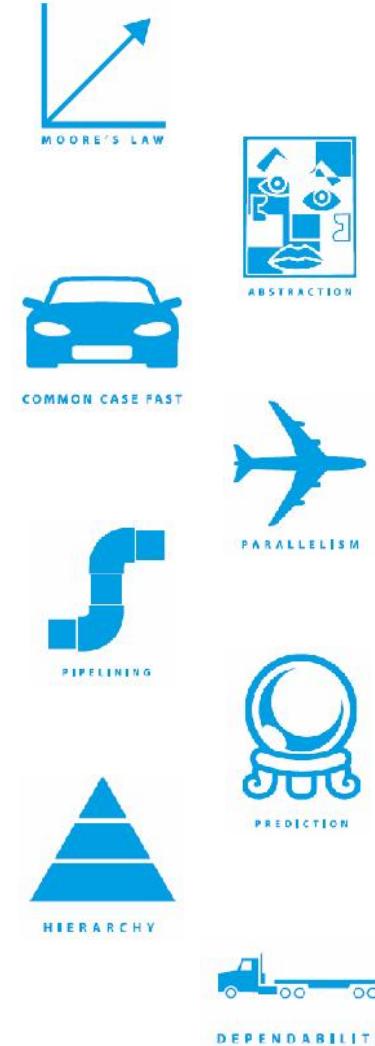


Below Your Program

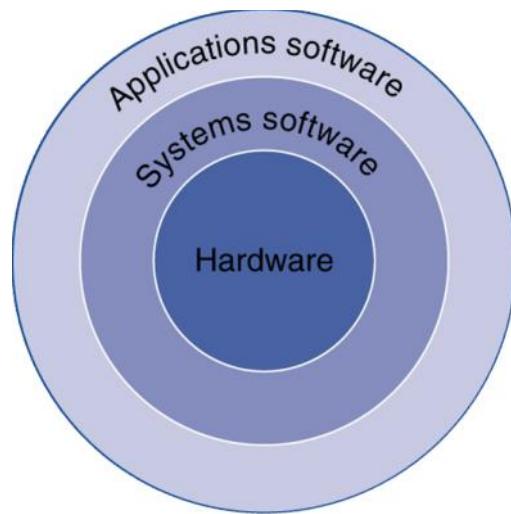

- Application software
 - Written in high-level language
- System software
 - Compiler: translates HLL code to machine code
 - Operating System: service code
 - Handling input/output
 - Managing memory and storage
 - Scheduling tasks & sharing resources
- Hardware
 - Processor, memory, I/O controllers


Levels of Program Code

- High-level language
 - Level of abstraction closer to problem domain
 - Provides for productivity and portability
 - Assembly language
 - Textual representation of instructions
 - Hardware representation
 - Binary digits (bits)
 - Encoded instructions and data

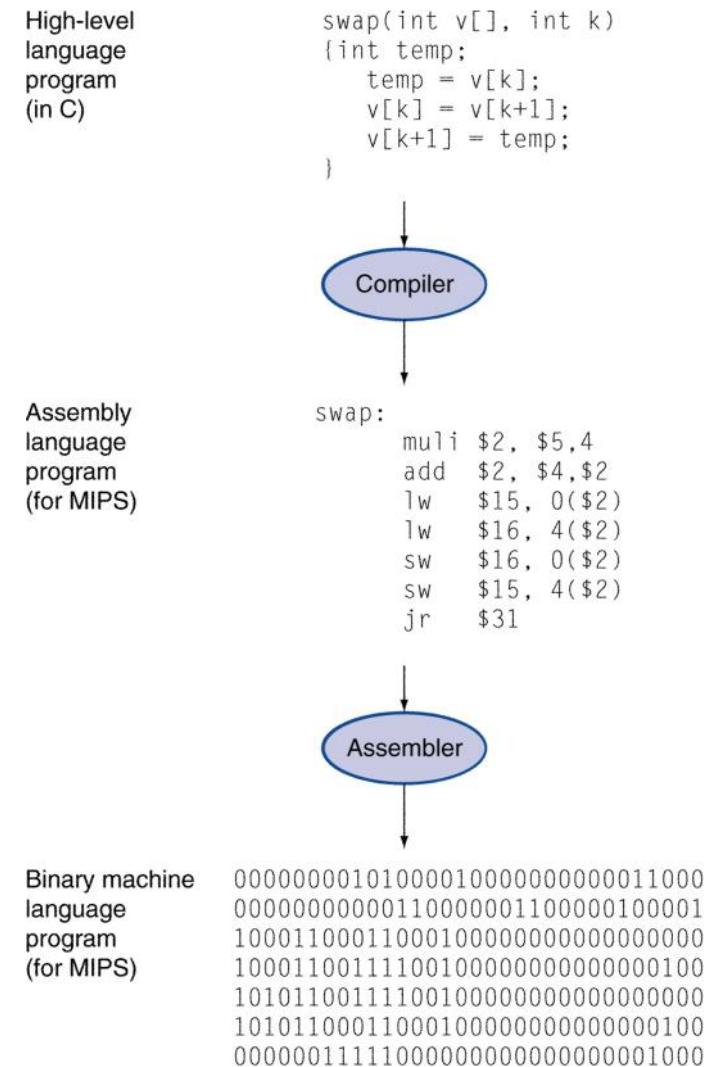

Components of a Computer

The BIG Picture

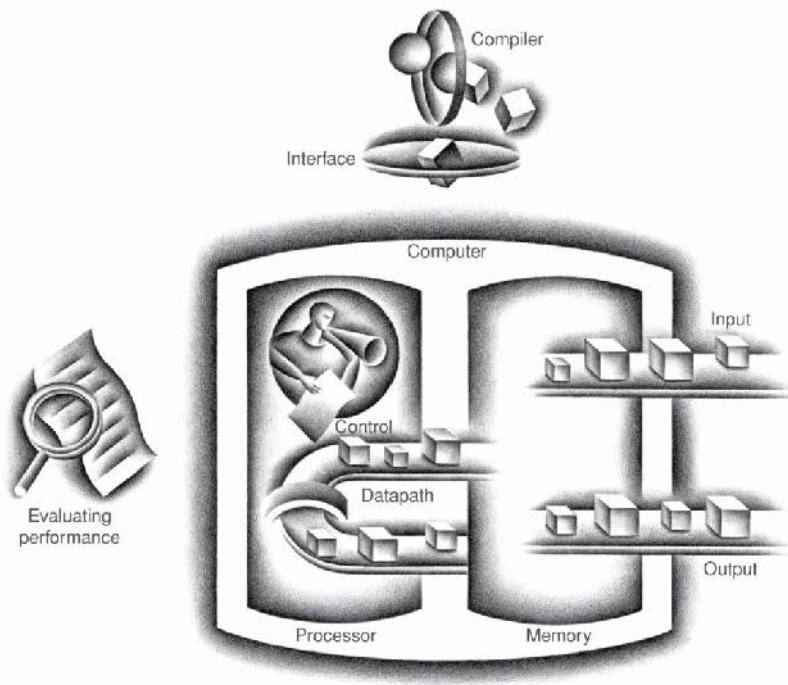

- Same components for all kinds of computer
 - Desktop, server, embedded
- Input/output includes
 - User-interface devices
 - Display, keyboard, mouse
 - Storage devices
 - Hard disk, CD/DVD, flash
 - Network adapters
 - For communicating with other computers

Inside the Processor (CPU)

- Datapath: performs operations on data
- Control: sequences datapath, memory, ...
- Cache memory
 - Small fast SRAM memory for immediate access to data

Abstractions

The BIG Picture

- Abstraction helps us deal with complexity
 - Hide lower-level detail
- One important abstraction--Instruction set architecture (ISA)
 - hardware/software interface
 - includes anything a programmer needs to know to make a binary machine language work-- #instructions, formats, addressing modes, ...
 - decides workload b/w software & hardware
- An implementation: hardware that obeys the architecture abstract
 - An architecture can have several different implementations
- Examples of instruction set architectures:
 - MIPS, SPARC, ARM, and others
- Computer architecture?



Power vs performance

- $\text{Power} = \text{Capacitive load} \times \text{Voltage}^2 \times \text{Frequency switched}$
- Power is a linear function of clock rate
- Performance is a linear function of clock rate
- Power issues: overheating and PMD
- Resolving power issues in past:
 - Decrease voltage → 5v → 1v in 20 years
 - Cooling – remove heat
- The power wall
 - We can't reduce voltage further
 - We can't remove more heat
- How else can we improve performance?
- One possible solution: multi cores
 - Power is a function of $\sqrt{\text{area}} = \sqrt{\#\text{cores}}$
 - After 2006, desktops and servers are with multi core

Multiprocessors

- Multicore microprocessors
 - More than one processor per chip
- Requires explicitly parallel programming
 - Compare with instruction level parallelism
 - Hardware executes multiple instructions at once
 - Hidden from the programmer
 - Hard to do
 - Programming for performance
 - Load balancing
 - Optimizing communication and synchronization

Response Time and Throughput

- Response time
 - How long it takes to do a task
- Throughput
 - Total work done per unit time
 - e.g., tasks/transactions/... per hour
- How are response time and throughput related?
- We'll focus on response time for now...

Measuring Execution Time

- Elapsed time
 - Total response time, including all aspects
 - Processing, I/O, OS overhead, idle time
 - Determines system performance
- CPU time
 - Time spent processing a given job
 - Discounts I/O time, other jobs' shares

Relative Performance


- Define Performance = $1/\text{Execution Time}$
- “X is n time faster than Y”

$$\begin{aligned}\text{Performance}_x / \text{Performance}_y \\ = \text{Execution time}_y / \text{Execution time}_x = n\end{aligned}$$

- Example: time taken to run a program
 - 10s on A, 15s on B

CPU Clocking

- Operation of digital hardware governed by a constant-rate clock

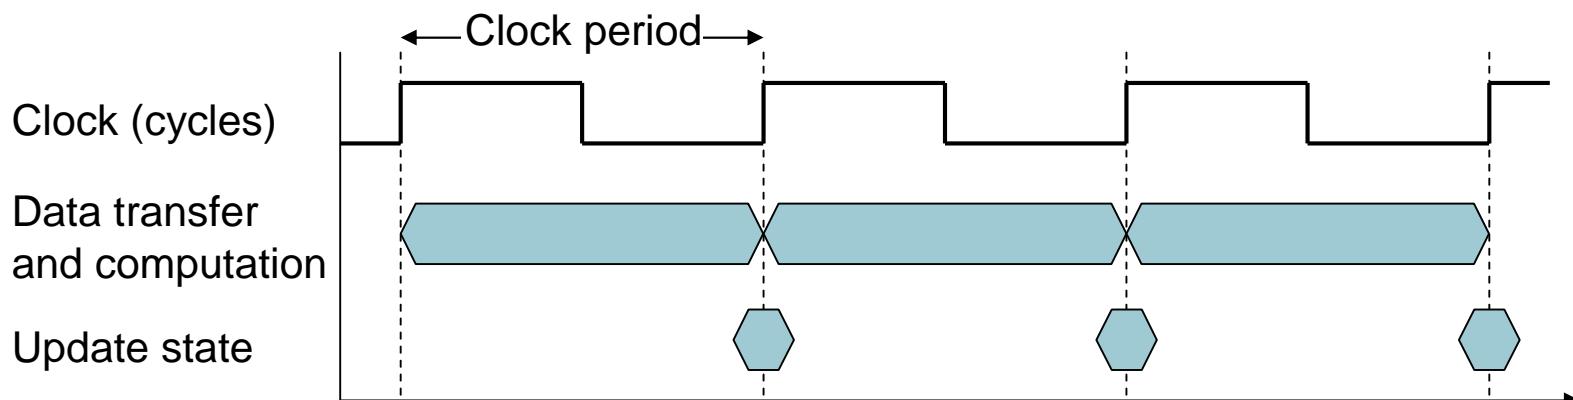

- Clock period: duration of a clock cycle
 - e.g.,
- Clock frequency (rate): cycles per second
 - e.g.,

Clock cycle vs. clock rate?

- Clock period = cycle time= cycle length
- Clock rate = clock frequency
- How they are related?
- Positive/negative edges

CPU Time

$\text{CPU Time} = \text{CPU Clock Cycles} \times \text{Clock Cycle Time}$

$$= \frac{\text{CPU Clock Cycles}}{\text{Clock Rate}}$$

- Performance improved by
 - Reducing number of clock cycles
 - Increasing clock rate
 - Hardware designer must often trade off clock rate against cycle count



CPU Time Example

- Computer A: 2GHz clock, 10s CPU time
- Designing Computer B
 - Aim for 6s CPU time
 - Can do faster clock, but causes $1.2 \times$ clock cycles
- How fast must Computer B clock be?

Instruction Count and CPI

- Instruction Count for a program
 - Determined by program, ISA and compiler
- Average cycles per instruction (CPI)=
 - Determined by CPU hardware
 - If different instructions have different CPI
 - Average CPI affected by instruction mix

Clock Cycles = Instruction Count \times Cycles per Instruction

CPU Time = Instruction Count \times CPI \times Clock Cycle Time

$$= \frac{\text{Instruction Count} \times \text{CPI}}{\text{Clock Rate}}$$

CPI in More Detail

- If different instruction classes take different numbers of cycles

$$\text{Clock Cycles} = \sum_{i=1}^n (\text{CPI}_i \times \text{Instruction Count}_i)$$

- Weighted average CPI

$$\text{CPI} = \frac{\text{Clock Cycles}}{\text{Instruction Count}} = \sum_{i=1}^n \left(\text{CPI}_i \times \frac{\text{Instruction Count}_i}{\text{Instruction Count}} \right)$$

Relative frequency

CPI Example

- Computer A: Cycle Time = 250ps, CPI = 2.0
- Computer B: Cycle Time = 500ps, CPI = 1.2
- Same ISA
- Which is faster, and by how much?

CPI Example

- Alternative compiled code sequences using instructions in classes A, B, C

Class	A	B	C
CPI for class	1	2	3
IC in sequence 1	2	1	2
IC in sequence 2	4	1	1

Performance Summary

The BIG Picture

$$\text{CPU Time} = \frac{\text{Instructions}}{\text{Program}} \times \frac{\text{Clock cycles}}{\text{Instruction}} \times \frac{\text{Seconds}}{\text{Clock cycle}}$$

- Performance depends on
 - Algorithm: affects IC, possibly CPI
 - Programming language: affects IC, CPI
 - Compiler: affects IC, CPI
 - Instruction set architecture: affects IC, CPI, T_c

One more example

- Use following instruction mix, find
 - percentage of all memory accesses that are for data (vs inst.)
 - percentage of all memory accesses that are reads (vs. writes)

Arithmetic	load	store	branch	
50%	30%	15%	5%	

SPEC CPU Benchmark

- Programs used to measure performance
 - Supposedly typical of actual workload
- Standard Performance Evaluation Corp (SPEC)
 - Develops benchmarks for CPU, I/O, Web, ...
- SPEC CPU2006
 - Elapsed time to execute a selection of programs
 - Negligible I/O, so focuses on CPU performance
 - Normalize relative to reference machine
 - Summarize as geometric mean of performance ratios
 - CINT2006 (integer) and CFP2006 (floating-point)

$$\sqrt[n]{\prod_{i=1}^n \text{Execution time ratio}_i}$$

CINT2006 for Intel Core i7 920

Description	Name	Instruction Count x 10 ⁹	CPI	Clock cycle time (seconds x 10 ⁻⁹)	Execution Time (seconds)	Reference Time (seconds)	SPECratio
Interpreted string processing	perl	2252	0.60	0.376	508	9770	19.2
Block-sorting compression	bzip2	2390	0.70	0.376	629	9650	15.4
GNU C compiler	gcc	794	1.20	0.376	358	8050	22.5
Combinatorial optimization	mcf	221	2.66	0.376	221	9120	41.2
Go game (AI)	go	1274	1.10	0.376	527	10490	19.9
Search gene sequence	hmmer	2616	0.60	0.376	590	9330	15.8
Chess game (AI)	sjeng	1948	0.80	0.376	586	12100	20.7
Quantum computer simulation	libquantum	659	0.44	0.376	109	20720	190.0
Video compression	h264avc	3793	0.50	0.376	713	22130	31.0
Discrete event simulation library	omnetpp	367	2.10	0.376	290	6250	21.5
Games/path finding	astar	1250	1.00	0.376	470	7020	14.9
XML parsing	xalancbmk	1045	0.70	0.376	275	6900	25.1
Geometric mean	—	—	—	—	—	—	25.7

Pitfall: Amdahl's Law

- Improving an aspect of a computer and expecting a proportional improvement in overall performance

$$T_{\text{improved}} = \frac{T_{\text{affected}}}{\text{improvement factor}} + T_{\text{unaffected}}$$

- Example: multiply accounts for 80s/100s
 - How much improvement in multiply performance to get 5x overall?

$$20 = \frac{80}{n} + 20 \quad \blacksquare \quad \text{Can't be done!}$$

- Corollary: make the common case fast

Pitfall: MIPS as a Performance Metric

- MIPS: Millions of Instructions Per Second
 - Doesn't account for
 - Differences in ISAs between computers
 - Differences in complexity between instructions

$$\begin{aligned} \text{MIPS} &= \frac{\text{Instruction count}}{\text{Execution time} \times 10^6} \\ &= \frac{\text{Instruction count}}{\frac{\text{Instruction count} \times \text{CPI}}{\text{Clock rate}} \times 10^6} = \frac{\text{Clock rate}}{\text{CPI} \times 10^6} \end{aligned}$$

example

- 2 machines

- A: floating-point (FP) hardware
 - B: without FP, all integer instructions takes 2 cycles

- program P with instructions mix :

Instruction type	%	CPI on A	#Integer inst. On B
FP multiplication	10%	6	30
FP add	15%	4	20
FP divide	5%	20	50
integer instruction	70%	2	1

- Both machines have a clock rate of 500 GHz.
- CPIs for both machines?
- MIPS rates of both machines? Which one is the higher?
- If A needs n instructions for program P, how many integer instructions does B require for the same program?
- CPU times of P on the A & B? Which one is faster?
- What conclusion can you get about the MIPS

Concluding Remarks

- Hierarchical layers of abstraction
 - In both hardware and software
- Instruction set architecture
 - The hardware/software interface
- Execution time: the best performance measure
- Power is a limiting factor
 - Use parallelism to improve performance