DNA extraction v9.0 (modified BOMB)

Huang MEGA Lab (NCKU)
Lab plain-PDF edition, rebuilt 2026-10-21

Source of record: Huang MEGA Lab (NCKU). Originally authored on protocols.io (dx.doi.org/10.17504/protocols.io.e6nvwdb created 2023-09-14, version 0. This PDF is the lab's self-hosted copy and supersedes the protocols.io export.

Abstract

DNA extraction using yttria-stabilized zirconia beads lysing and automated magnetic bead-based extraction.

Procedure

DNA PURIFICATION

0.21. (30 s) Add **100 µL** of **magnetic beads** (10 mg/ml) to the 1st well of 96 deep well plate



Note Vortex the bottle and pipetting before using magnetic beads; re-do vortex after adding to 3 samples to prevent set down of magnetic beads

SAMPLE COLLECTION


1. (30 s) Add **200 µL** of **0.5 mm beads** to a 2mL screw tube.



2. (30 s) Add **200 µL** of **1 mm beads** to a 2mL screw tube.



3. (30 s) Add **870 µL** Lysis master mix to 2mL screw tube. The final look:

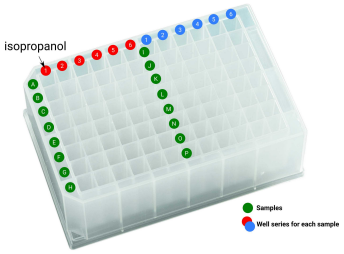

Note In 11F, 4°C fridge

Lysis master mix: **225 µL** of TE buffer + **375 µL** of lysis buffer + **270 µL** of 10M ammonium acetate

4. (1 min) Collect **20-50 mg** of **sample** to 2mL screw tube

Note You can collect up to 100 mg of sample if you can until you bump into the low DNA quality or PCR success rate; by then it means too many inhibitors in the sample and you have to lower the input.

SAMPLE LYSIS

5. Put the 2mL screw tube on vortex for sample lysis, at 3200 rpm **4 min**


Note Remember to balance if you have odd number of samples

CENTRIFUGATION


6. Put 2mL screw tube in centrifuge for centrifugation, at this condition: **10 × g, 25 °C, 3 min**

DNA EXTRACTION


7. (30 s) Add **350 µL** of **isopropanol** to the 1st well of 96 well plate

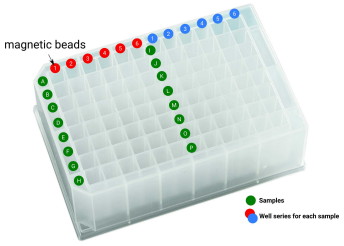


8. Add **50 µL** of **magnetic beads (10mg/ml)** to the 1st well of 96 deep well plate

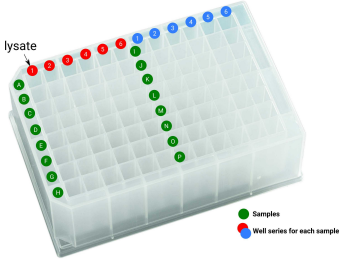


9. (30 s) Add **400 µL** of **isopropanol** to the 2nd well of 96 deep well plate

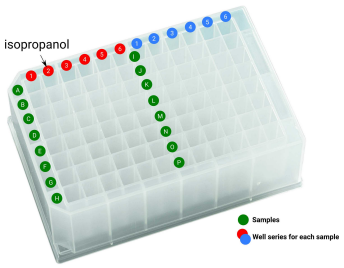


10. (30 s) Add **300 µL** of **80% ethanol** to the 3rd well of 96 deep well plate

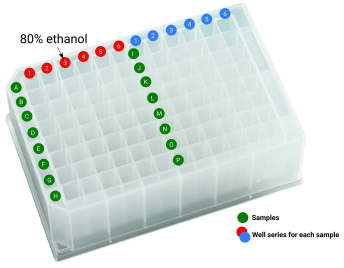


11. (30 s) Add **300 µL** of **95% ethanol** to the 4th well of 96 deep well plate

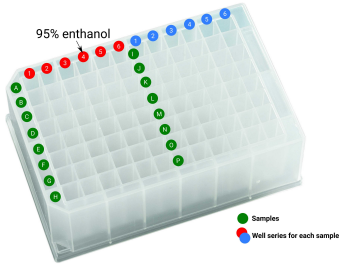


12. Add **300 µL** of **DDW** to the 5th well of 96 deep well plate

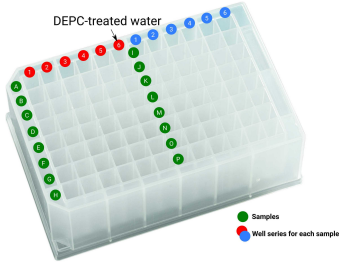

13. (30 s) Add **100 µL** of **DEPC-treated water** to the 6th well of 96 deep well plate

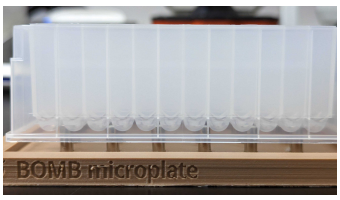

14. (30 s) Add **300-500 µL** of the **sample (lysate)** from the 1.5mL centrifuged tube to the 1st well of 96 deep well plate

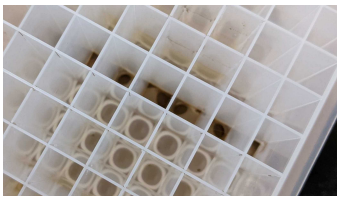

Note Pipetting **as many lysate as you can**, as long as it's free of any cell debris (no solids in your tip)

15. (34 min) Put the prepared 96-deep well plate in the automated DNA extraction machine (ZiXpress 32) and set up the settings as below.


PROGRAM SETTINGS

16. The automated extraction program settings for ZiXpress 32.

1	**0**	**10**	**1000**	**3**	**120**	**0**
2	0	2	400	3	60	0
3	0	2	300	3	60	0
4	15	0	0	0	0	0
4	0	2	300	3	60	0
5	0	1	300	3	0	0
6	0	5	100	3	120	55


GDNA COLLECTION

17. After the extraction is done, put on the 96 magnetic plate to pellet the magnetic bead residues.

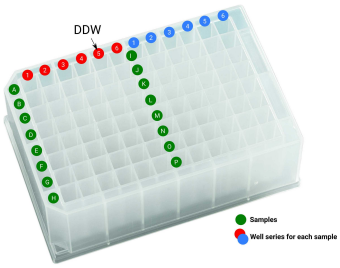



18. Collect **100 µL** of the **eluted sample** (avoid getting magnetic bead) as the DNA template for downstream experiments

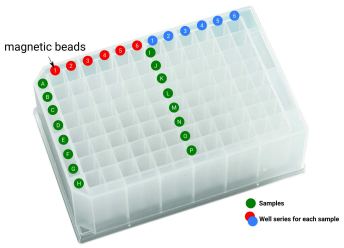

Materials

#	Material
1	Lysis master mix 870 ml (870 µl/sample)
2	TE buffer stocks 225 ml
3	Lysis buffer stocks 375 ml
4	**10M Ammonium acetate 270 ml**

TE buffer	**225 µl**
Lysis buffer	**375 µl**
10M Ammonium acetate	**270 µl**

1M Tris-HCl pH8.0	**2.25 ml**	**10mM**
1M EDTA	**0.225 ml**	1mM
ddH2O	adjust the volume with water to 225 ml	

Note Prepare 1M Tris-HCl and 1M EDTA first.

Tris-HCl	**7.88 g**	**50 ml**
EDTA	14.61	**50 ml**

Note adjust the pH of EDTA with solid NaOH or 1M NaOH to 8.0. The undissolved EDTA will be dissolved entirely when the pH reaches 8.0.

Guanidine thiocyanate (GITC)	**177.3 g**	**4M**
1M Tris HCl pH8.0	**18.75 ml**	50mM
Sodium Lauryl Sulfate	3.75 g	0.5 g
1M EDTA	**7.5 ml**	20mM
ddH2O	adjust the pH with HCl to 7.6–8.0 and the volume with water to 375 ml	

Ammonium acetate	**208.116 g**
ddH2O	adjust the volume with water to 270 ml

Note Ammonium acetate is hygroscopic. Do not add more than half of the water needed to dissolve it.