From specimen to sequence: Huang MEGA Lab Nanopore workflow

amplicon (two-step or one-pot PCR) or whole genome · scan or click a QR code to open the protocol · LIMS stages 1 → 2 → 3a → 3b → 4a

Stage 1 Specimen# / Culture#

Stage 2 isolate + culture · Culture#

Stage 3a extraction + Qubit · MolWork#

Stage 3b PCR + gel + Qubit · pcr_reaction

Stage 4a Nanopore experiment · Nanopore#

Specimen
soil / environmental / insect | fungal strain in culture

LIMS register `/lims-register` | Stage 1 → Specimen# (soil, environmental) or Culture# (strain)

isolate fungi (strains, Route B / C)

Isolation and culturing
primary plate on MEA (Stage 2a) → subculture one colony / hyphal tip on PDA
one Stage-2b row per isolate · preserve in vials
sequence from a pure culture only

Microbe isolation
environmental sample → vial

Culture media
MEA, PDA and other recipes

soil / environmental:
extract directly (no culture)

LIMS register `/lims-register` | Stage 2a plate → Stage 2b isolate → Culture# per strain

DNA extraction

DNA extraction
soil: SuperSoil, Zixpress 32 | fungal / HMW gDNA: BOMB v9
genome route: keep the DNA high-molecular-weight

Soil DNA extraction
SuperSoil · Zixpress 32

Fungal DNA extraction
modified BOMB v9.0

quantify

Qubit Flex
concentration of the extract (dsDNA HS)



LIMS register `/lims-register` | Stage 3a → MolWork# (minted only after quantification)


choose a route

Route A · amplicon, two-step PCR

1st PCR (gene regions)


2-step PCR protocol
mixtures + cycling

1st PCR products (per sample)

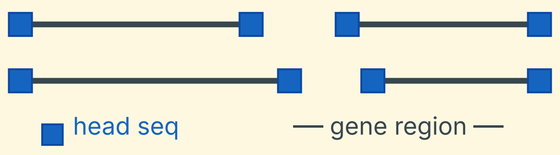

2nd PCR (barcoding)
gel check #1: good amplicons only

2nd PCR products: one tube per sample, one barcode per tube

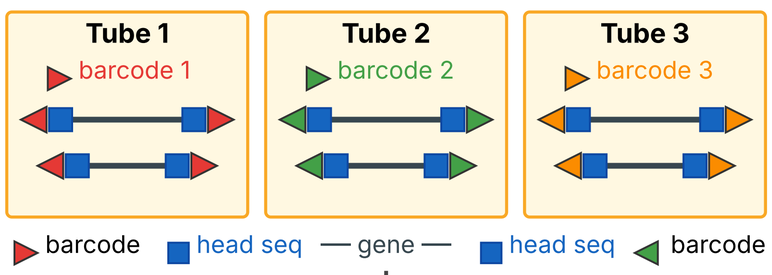

Route B · one-pot PCR: strains, single- or multi-locus

Set up one-pot PCR

One reaction tube (per strain × locus)

gene-region primers (head-tailed, 0.1 µM each) + **barcode primers** (barcode + head seq, 0.3 µM each)




50 µL: KAPA HiFi 2X + both primer sets + 3 µL template

One-pot PCR protocol
50 µL mix + 25/15 cycles

One-pot PCR
phase 1: 25 cycles, 60–66 °C
phase 2: 15 cycles, 65 °C

One-pot PCR products: one tube per sample, one barcode per tube

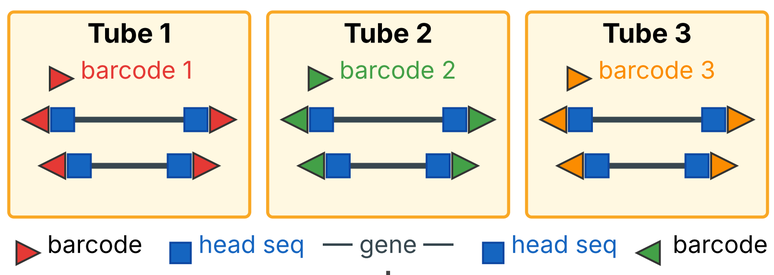

Route C · genome, no PCR (Stage 3a → 4a, no 3b)


Route C ↓

QC the gDNA

High-molecular-weight gDNA
integrity: gel / TapeStation
input per ONT table
(10 kb avg → 200 fmol ≈ 1.3 µg)

Library construction

same barcoded molecule from either route

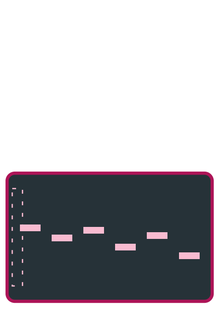

Gel check → Qubit Flex (dsDNA BR)
confirm the barcoded product, quantify → 10 ng/µL



LIMS register `/lims-register` | Stage 3b → pcr_reaction: method, conc., 2nd_pcr_ok, barcode

Pooling (equal molar)

Pool all barcoded samples
equal molar of every sample

KAPA EvoPrep + NBD114.96
end-prep → native barcode
ligation (NB01–96) → pool
→ adapter ligation
0.5X reagent · ~140 min

EvoPrep library prep
KAPA EvoPrep NBD114.96

Purification (bead clean-up)
PCR sample : bead = 1 : 1

Size selection 1X
bead purification protocol

Library construction

KAPA EvoPrep library
PCR-barcoded pool, ~200 fmol
end-prep → adapter ligation → clean-up
0.5X reagent · PromethION

EvoPrep library prep
KAPA EvoPrep NBD114.96

LIMS register `/lims-register` | Stage 4a → Nanopore#: experiment, samples (PCR barcode or NB), flow cell, NanoAmp

Load the flow cell and sequence
PromethION R10.4.1 (FLO-PRO114M)

after the run

Flow cell wash and reuse
EXP-WSH004

Flow cell wash
EXP-WSH004 PromethION

Legend

- Head seq: universal tail on the gene-region primers
- Barcode: sample-specific, on the barcode primers
- Gene region: target amplicon (colour = sample)

QR code: scan, or click on the website, to open that step's protocol PDF
Left bands = LIMS stages; /lims-register ends every stage; dashed = QC / info
Route C uses native barcodes (NBD114.96) in the library: no PCR, no Stage 3b