


Power



File: Power.kicad_sch

Interface




File: Interface.kicad_sch

SOM




File: SOM.kicad_sch

TX



File: TX.kicad_sch




RX




File: RX.kicad_sch

TODO:


- Set up power sequencing stuff
- Figure out power requirements (which banks, USB?, etc.)
- Link peripherals in K26 to components

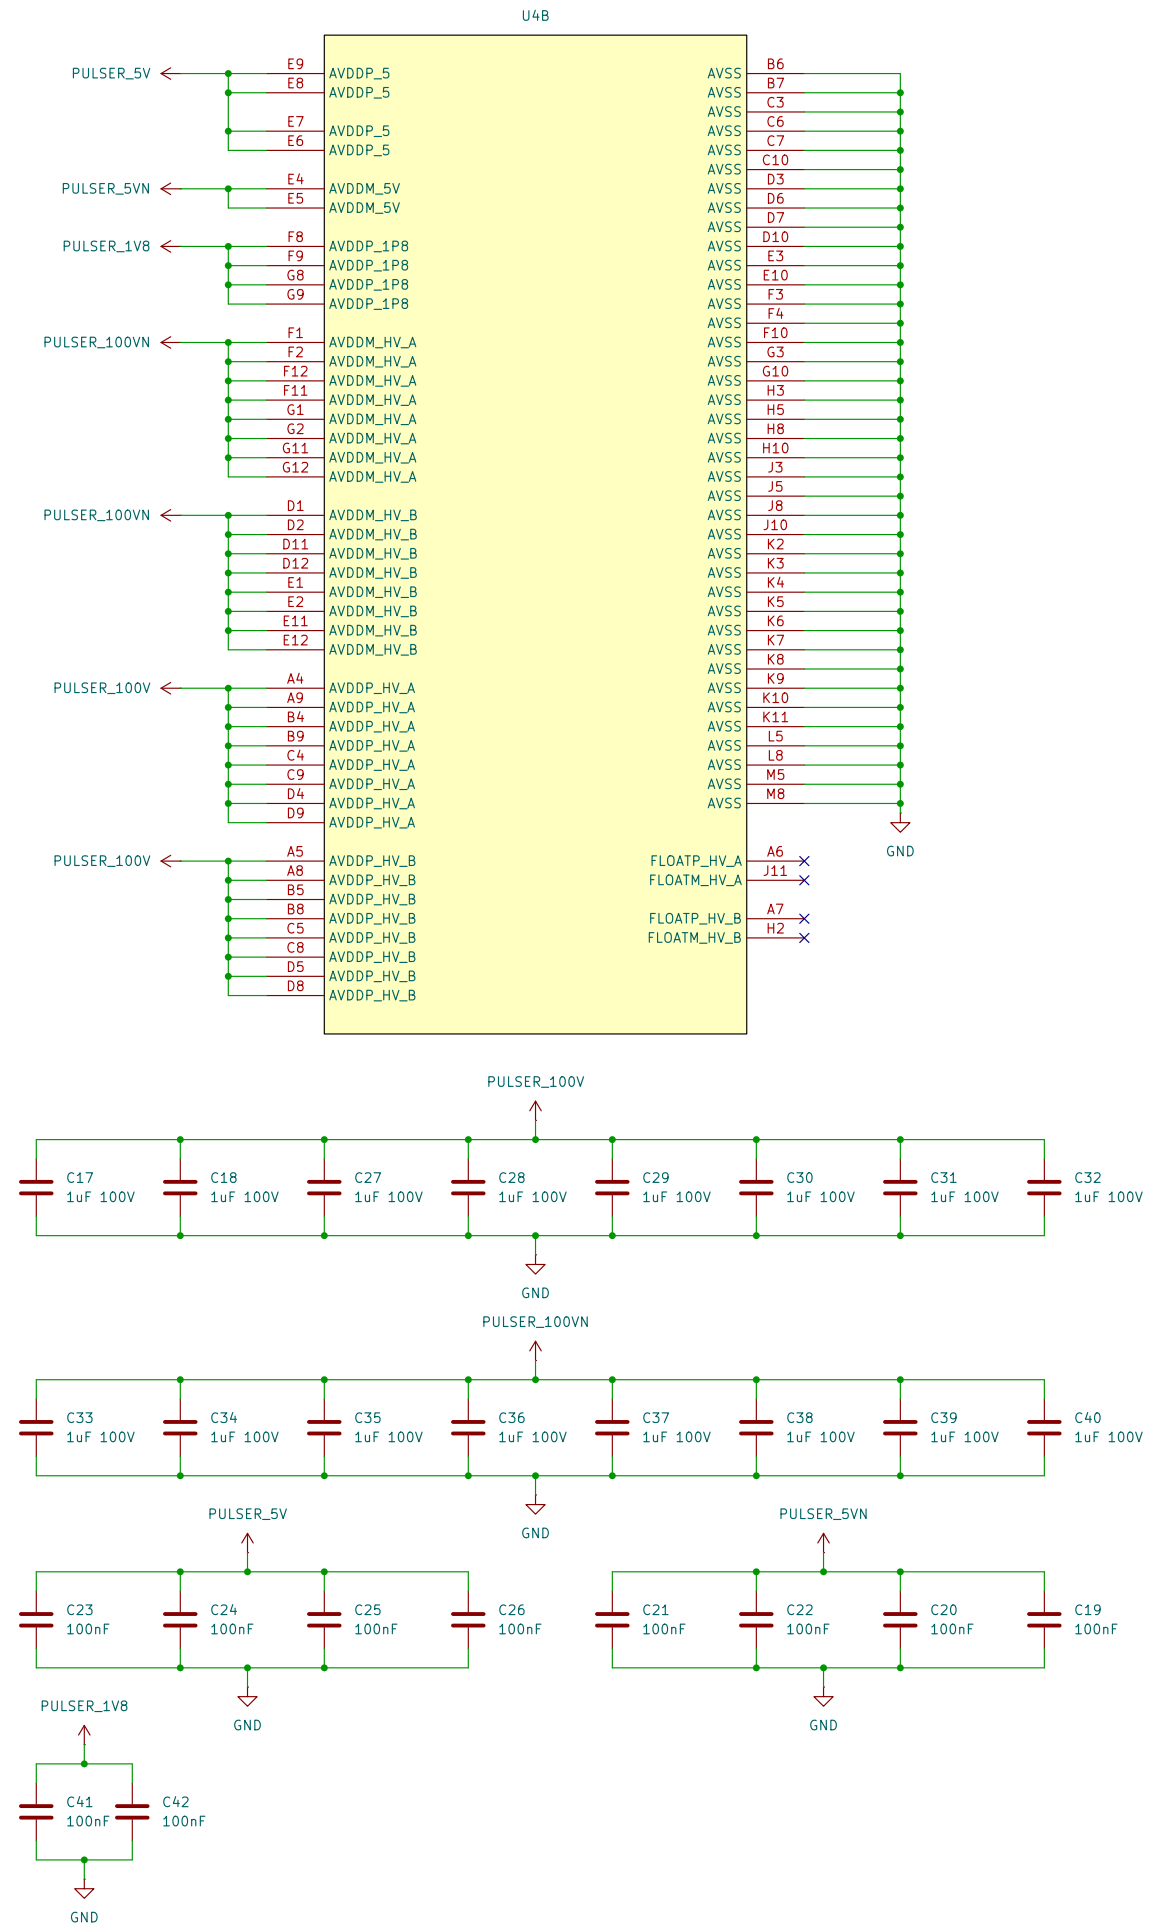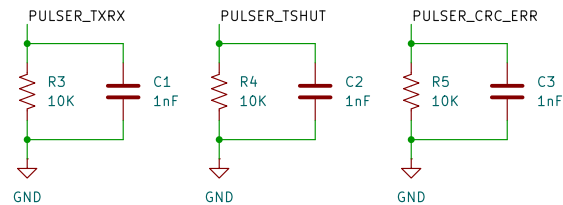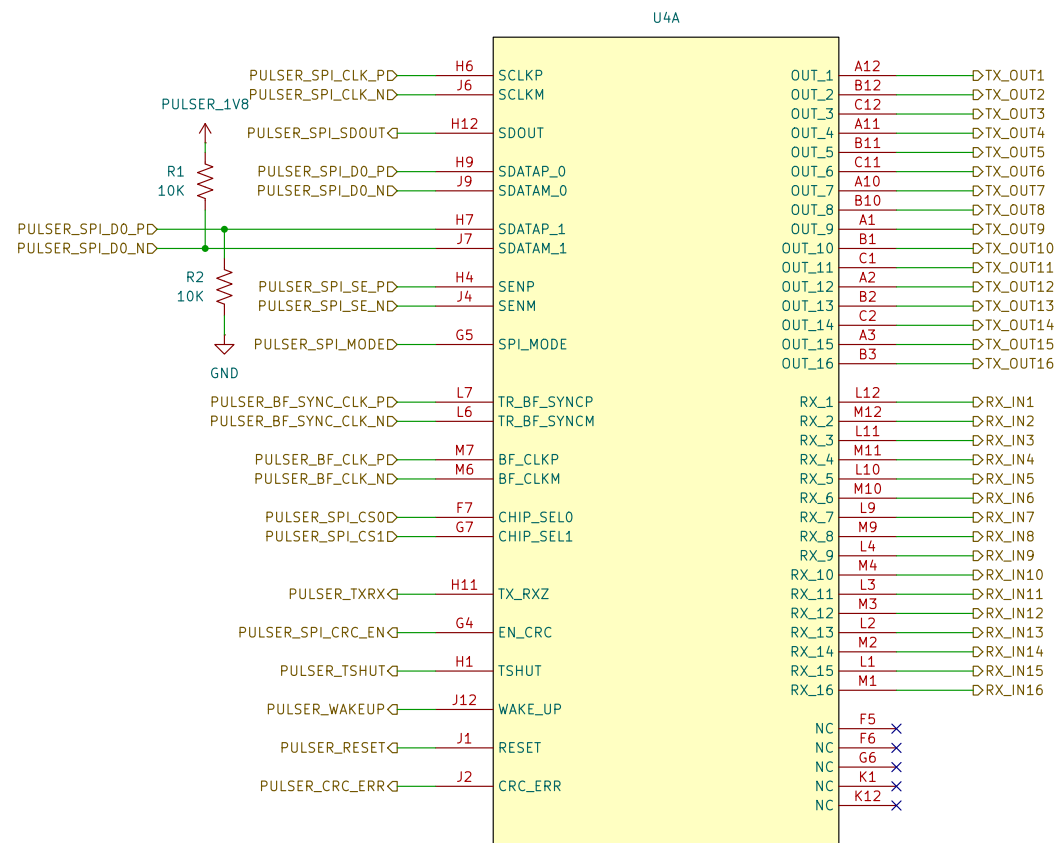

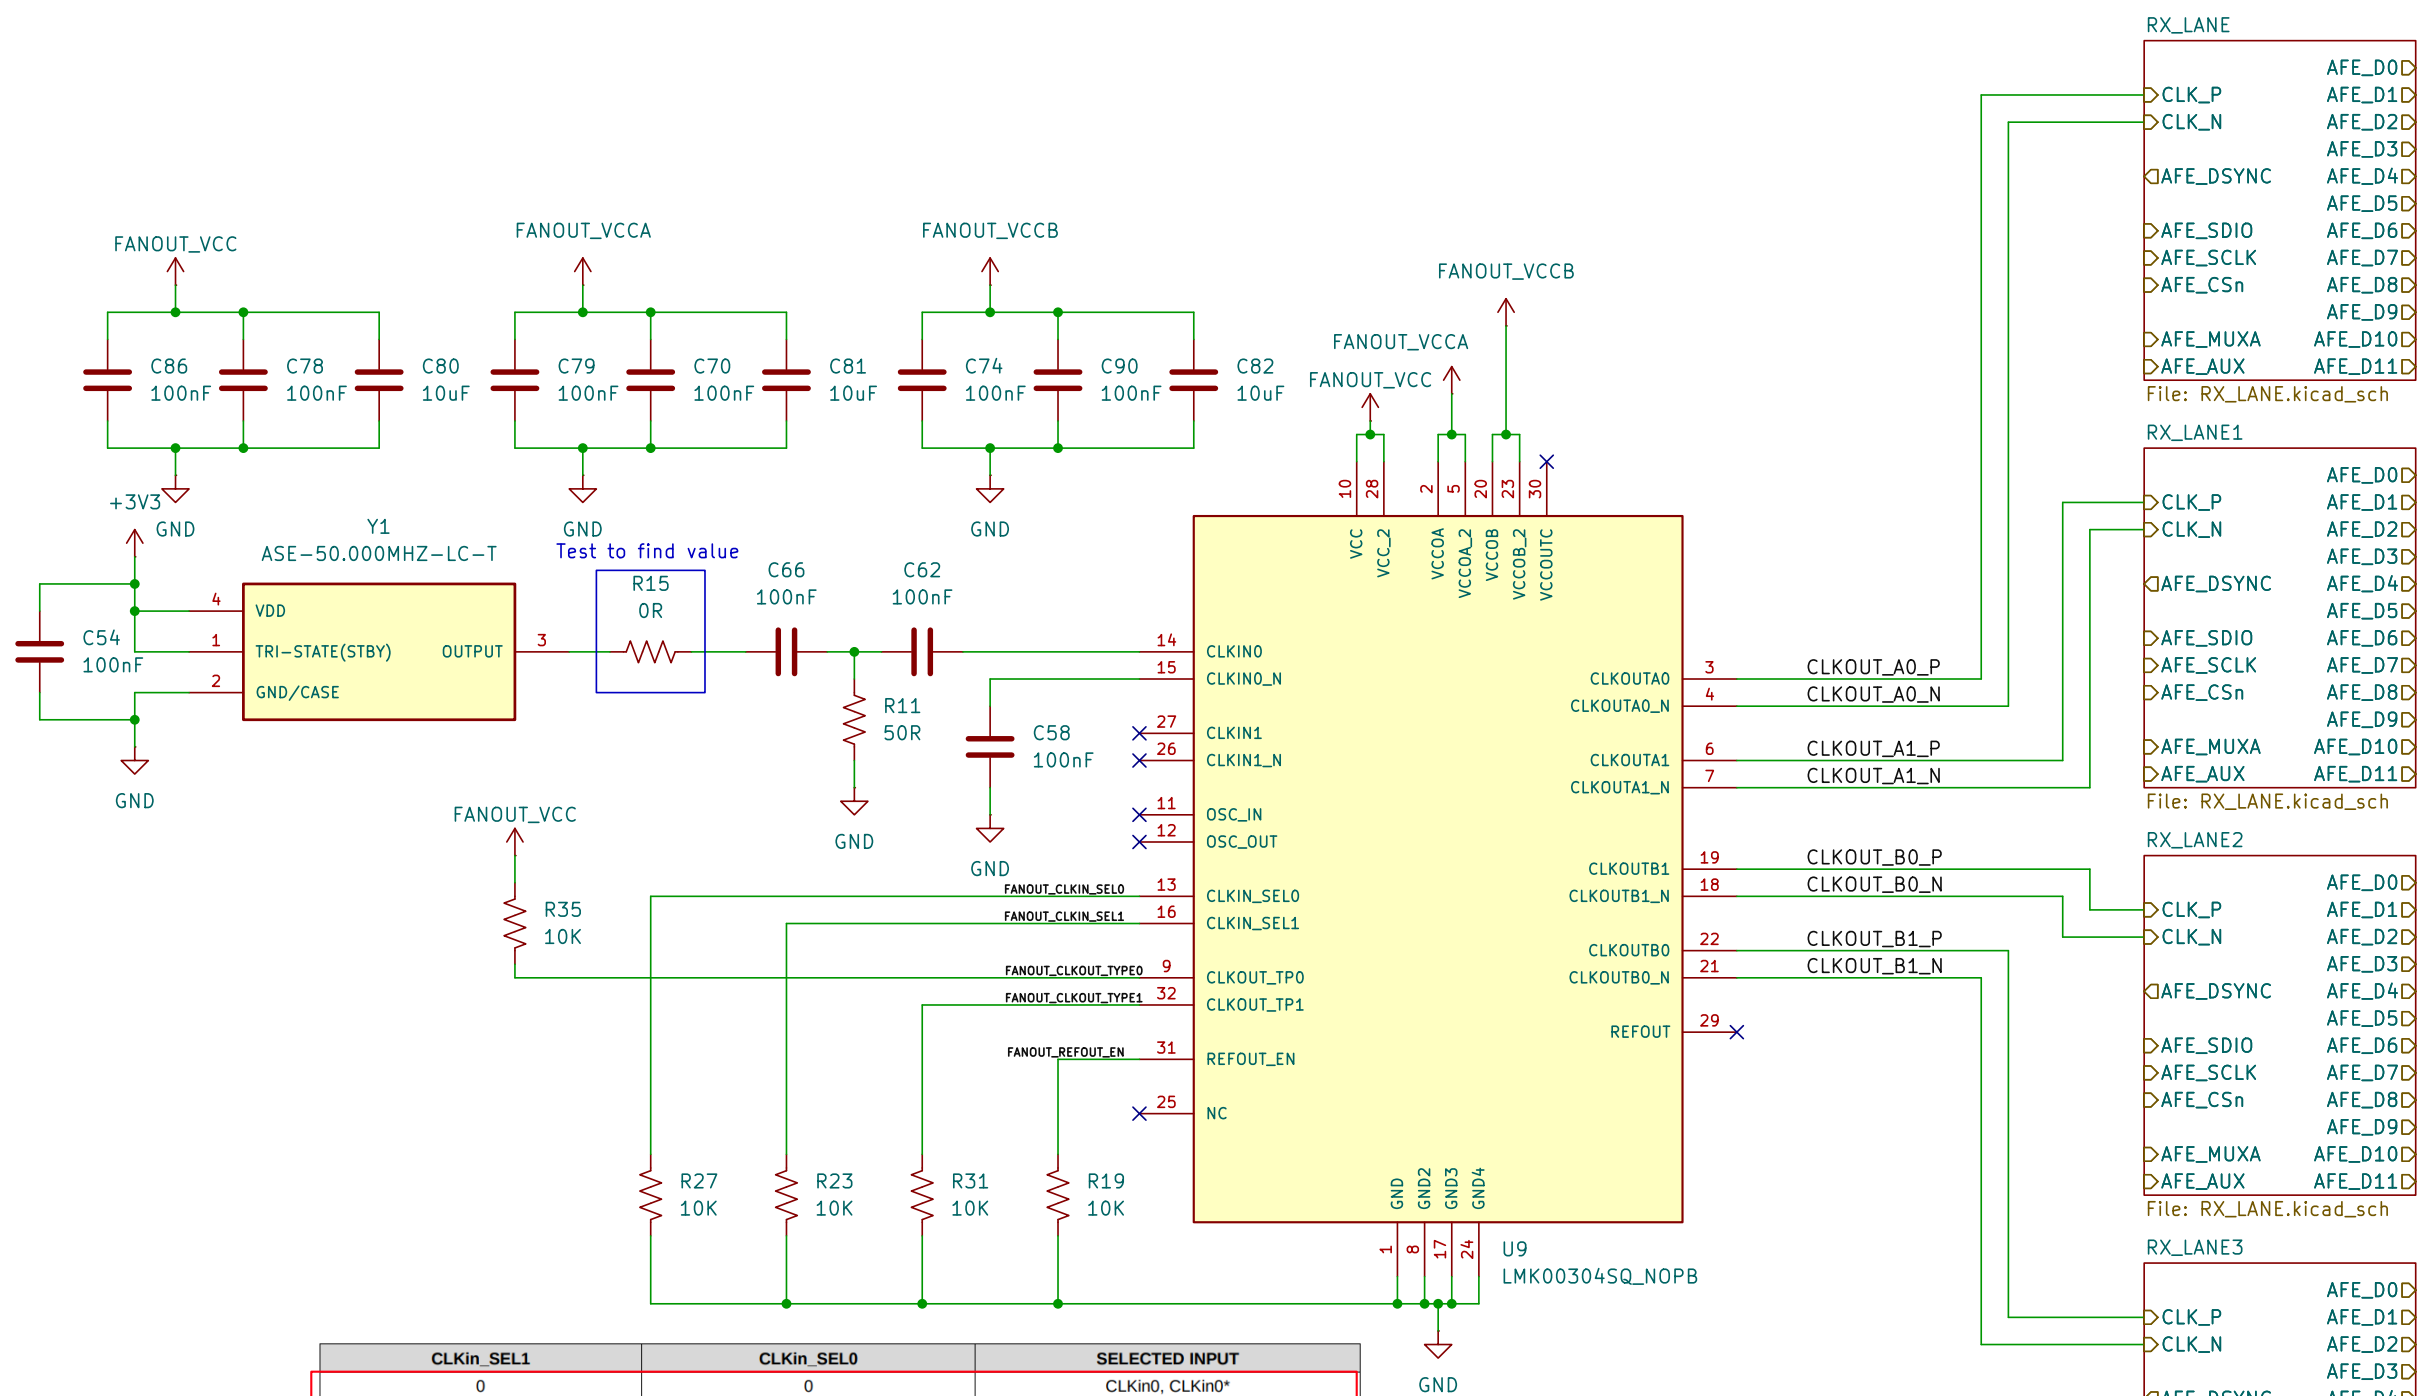


VCC_BATT PS BBRAM and real-time clock (RTC) supply voltage, requires external battery. Connect to GND when battery is not used.

e from the
carrier board
L domains
on carrier)

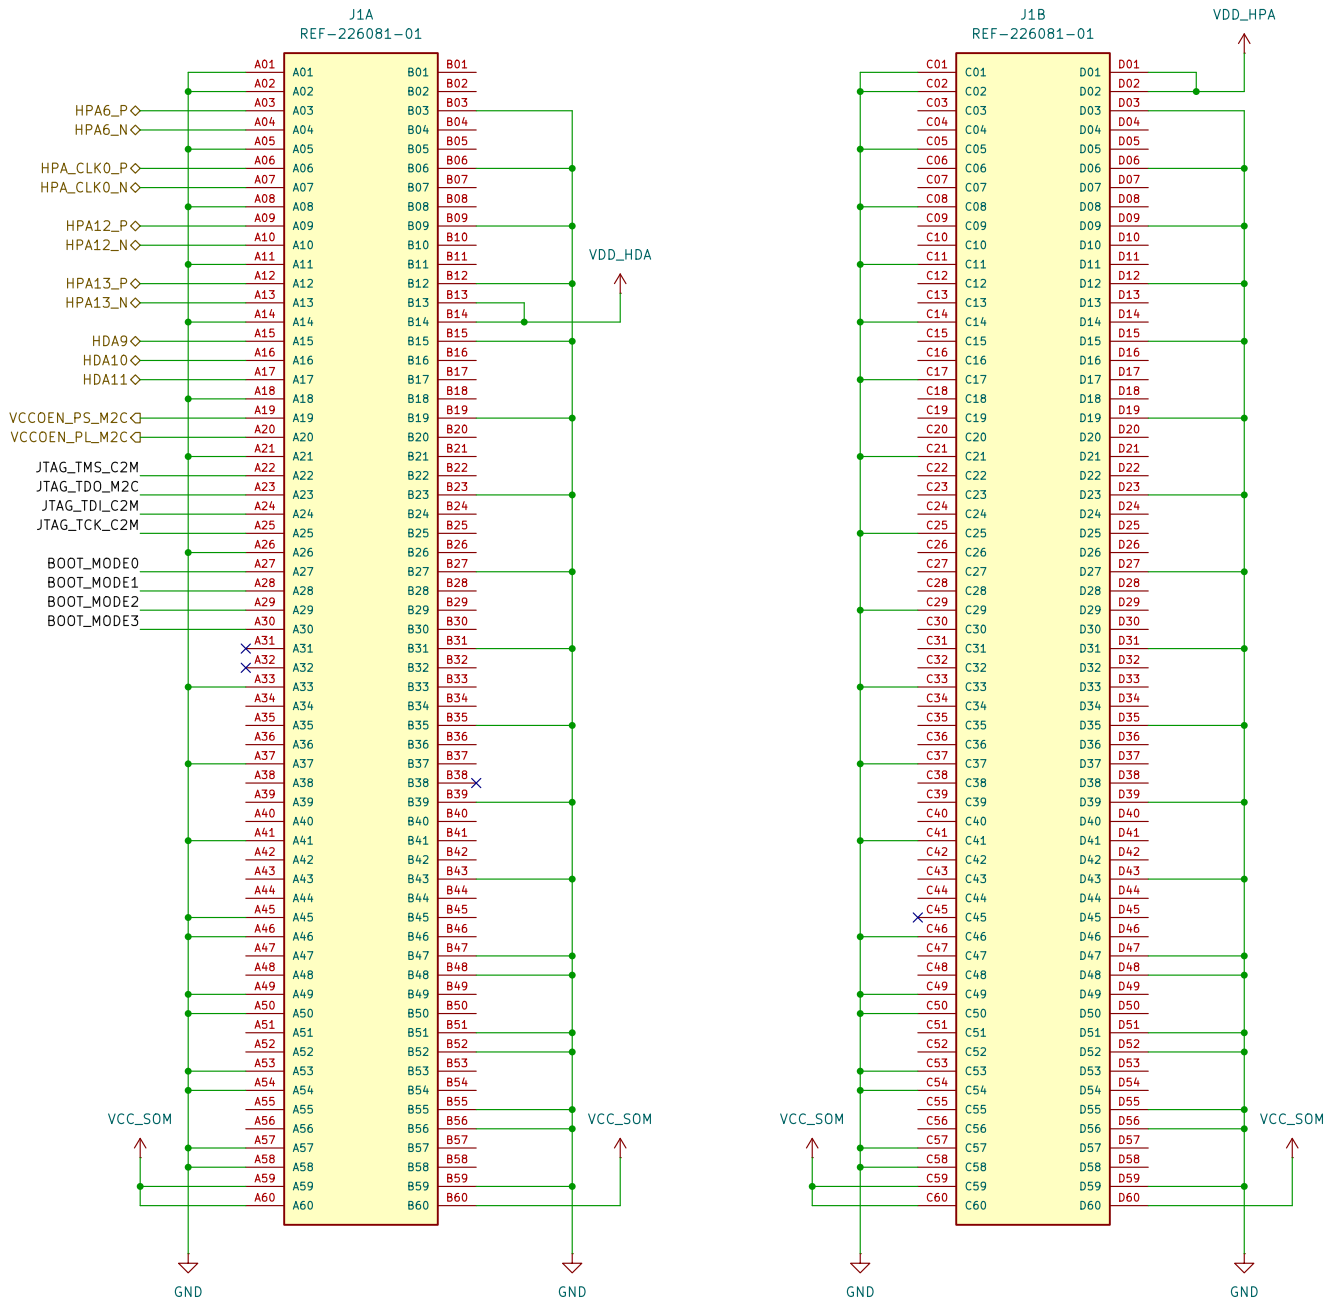



SOM240_1


SOM240_2

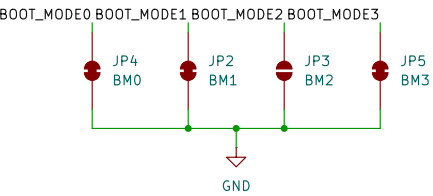


Boot Mode	PS Mode Pins[3:0]	Physical Pin Location
Quad SPI (32 bit)	0110	MIO[5:0]
eMMC	0110	MIO[22:13]

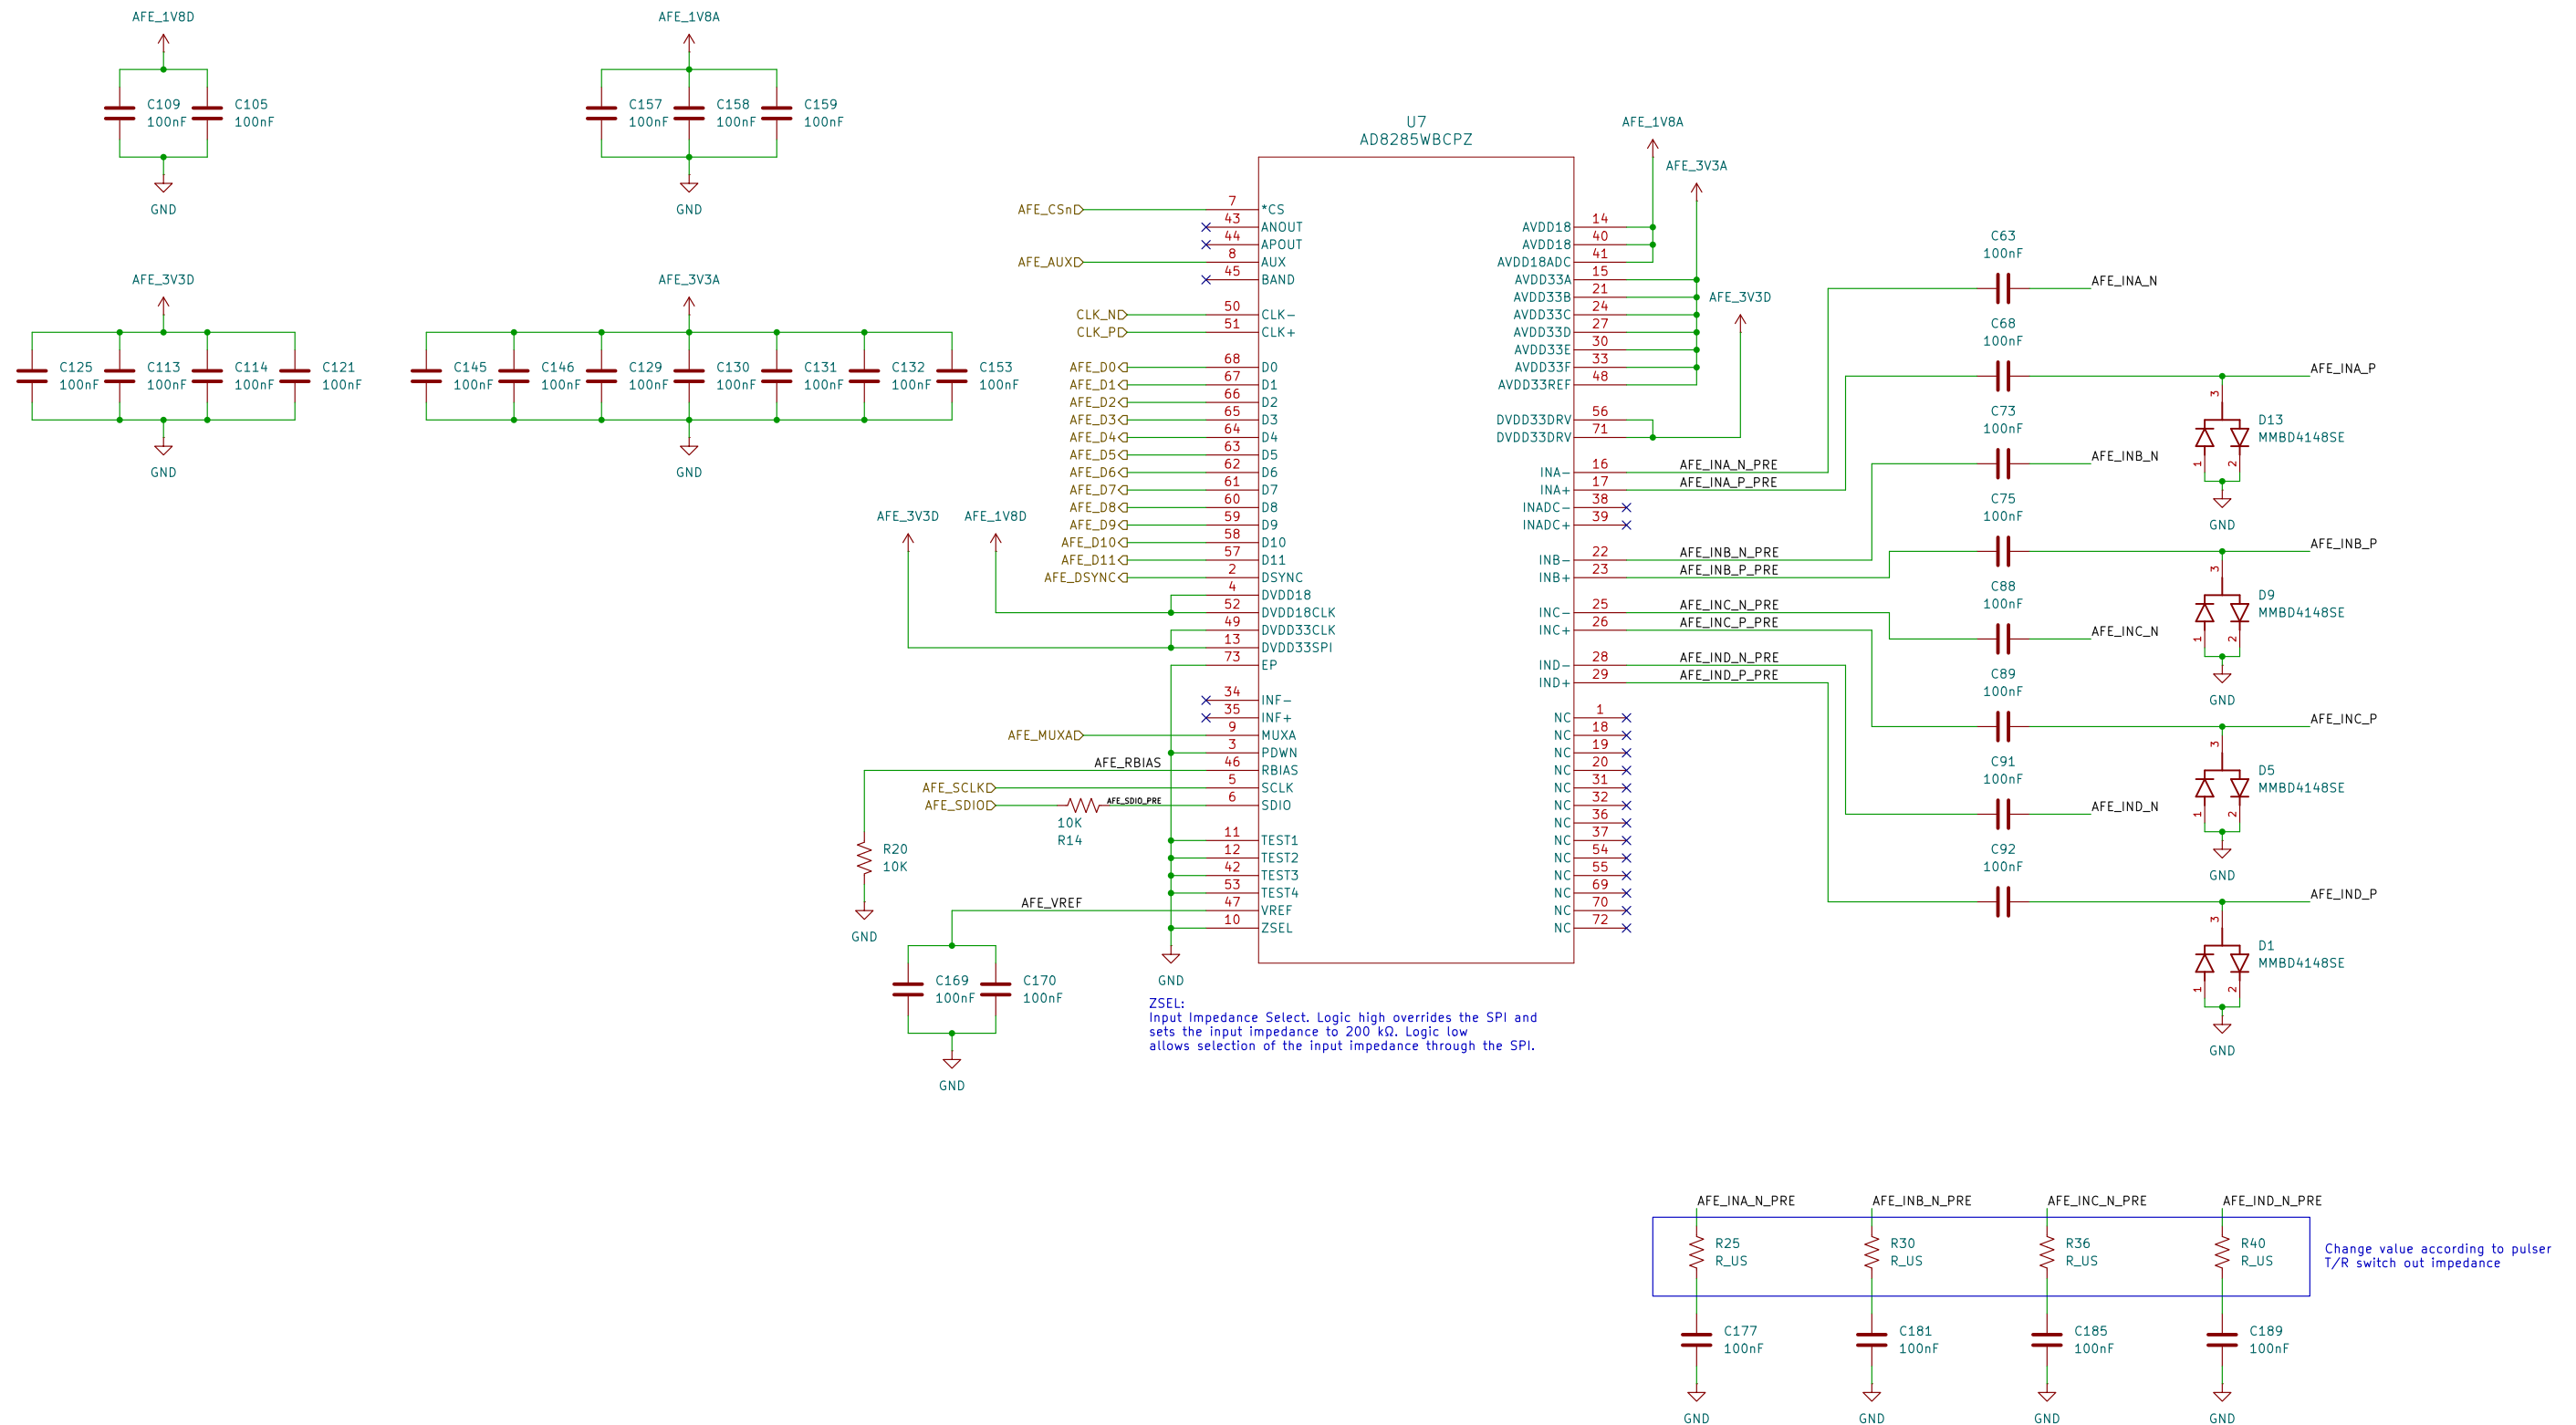

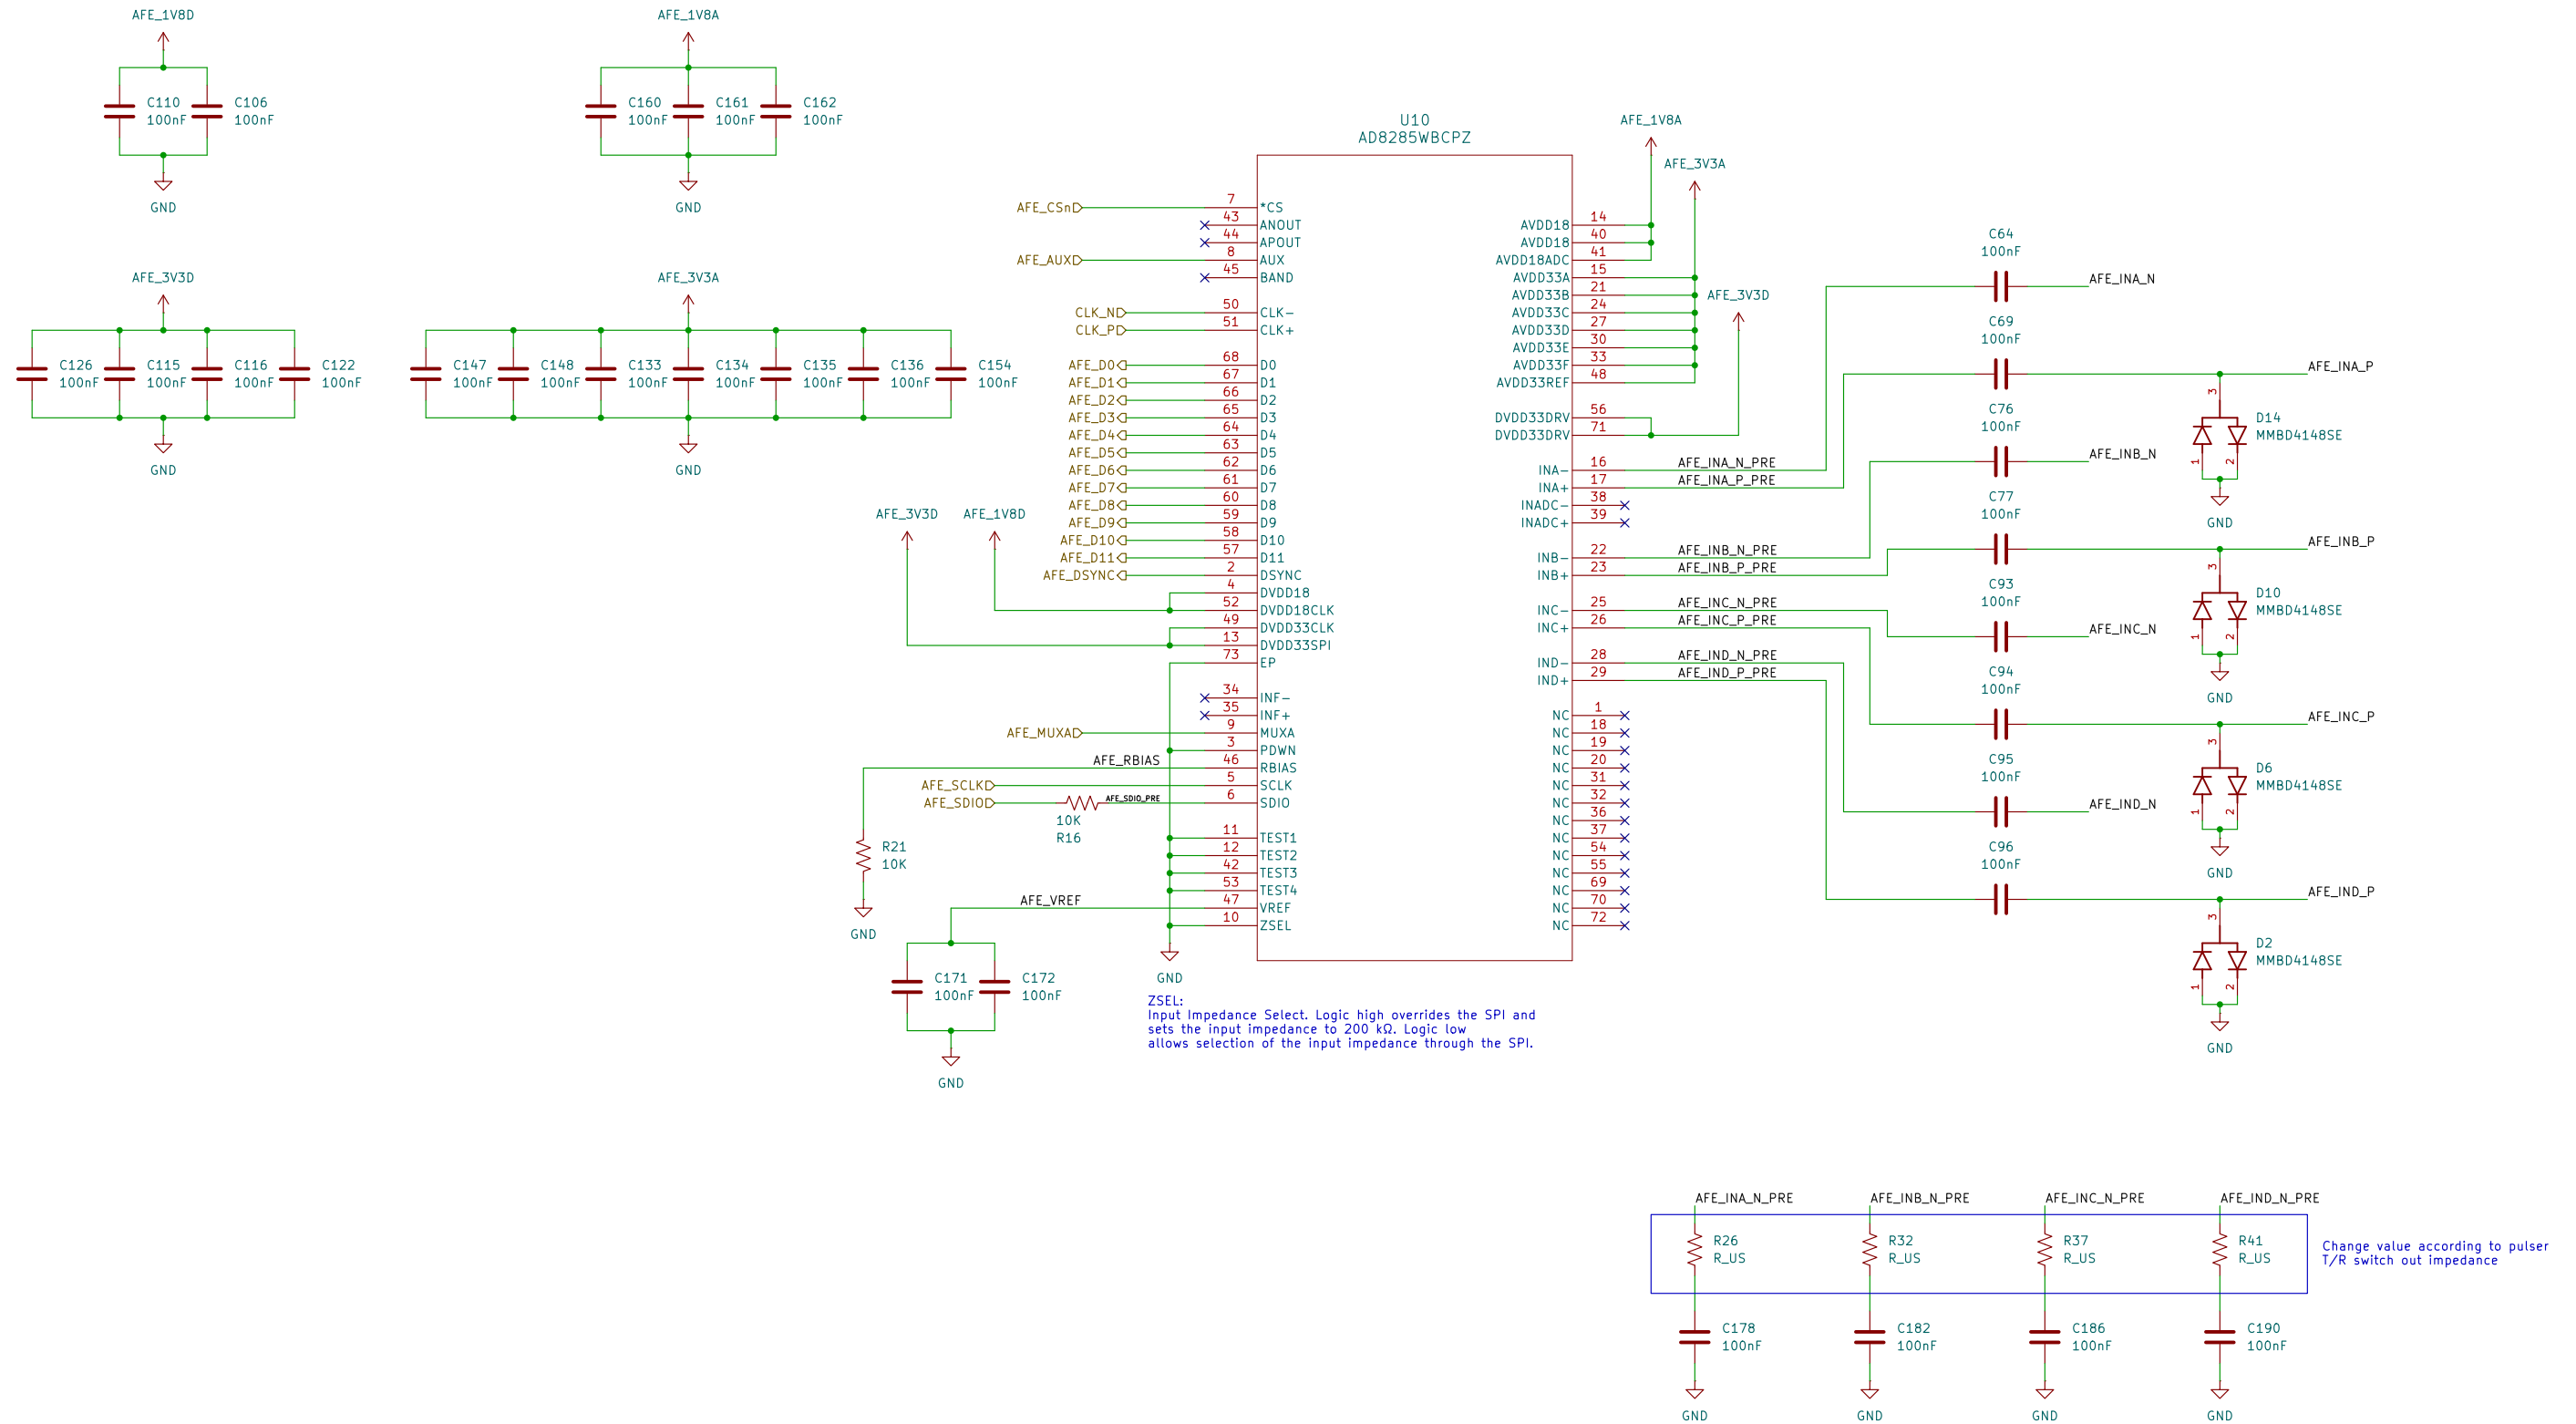

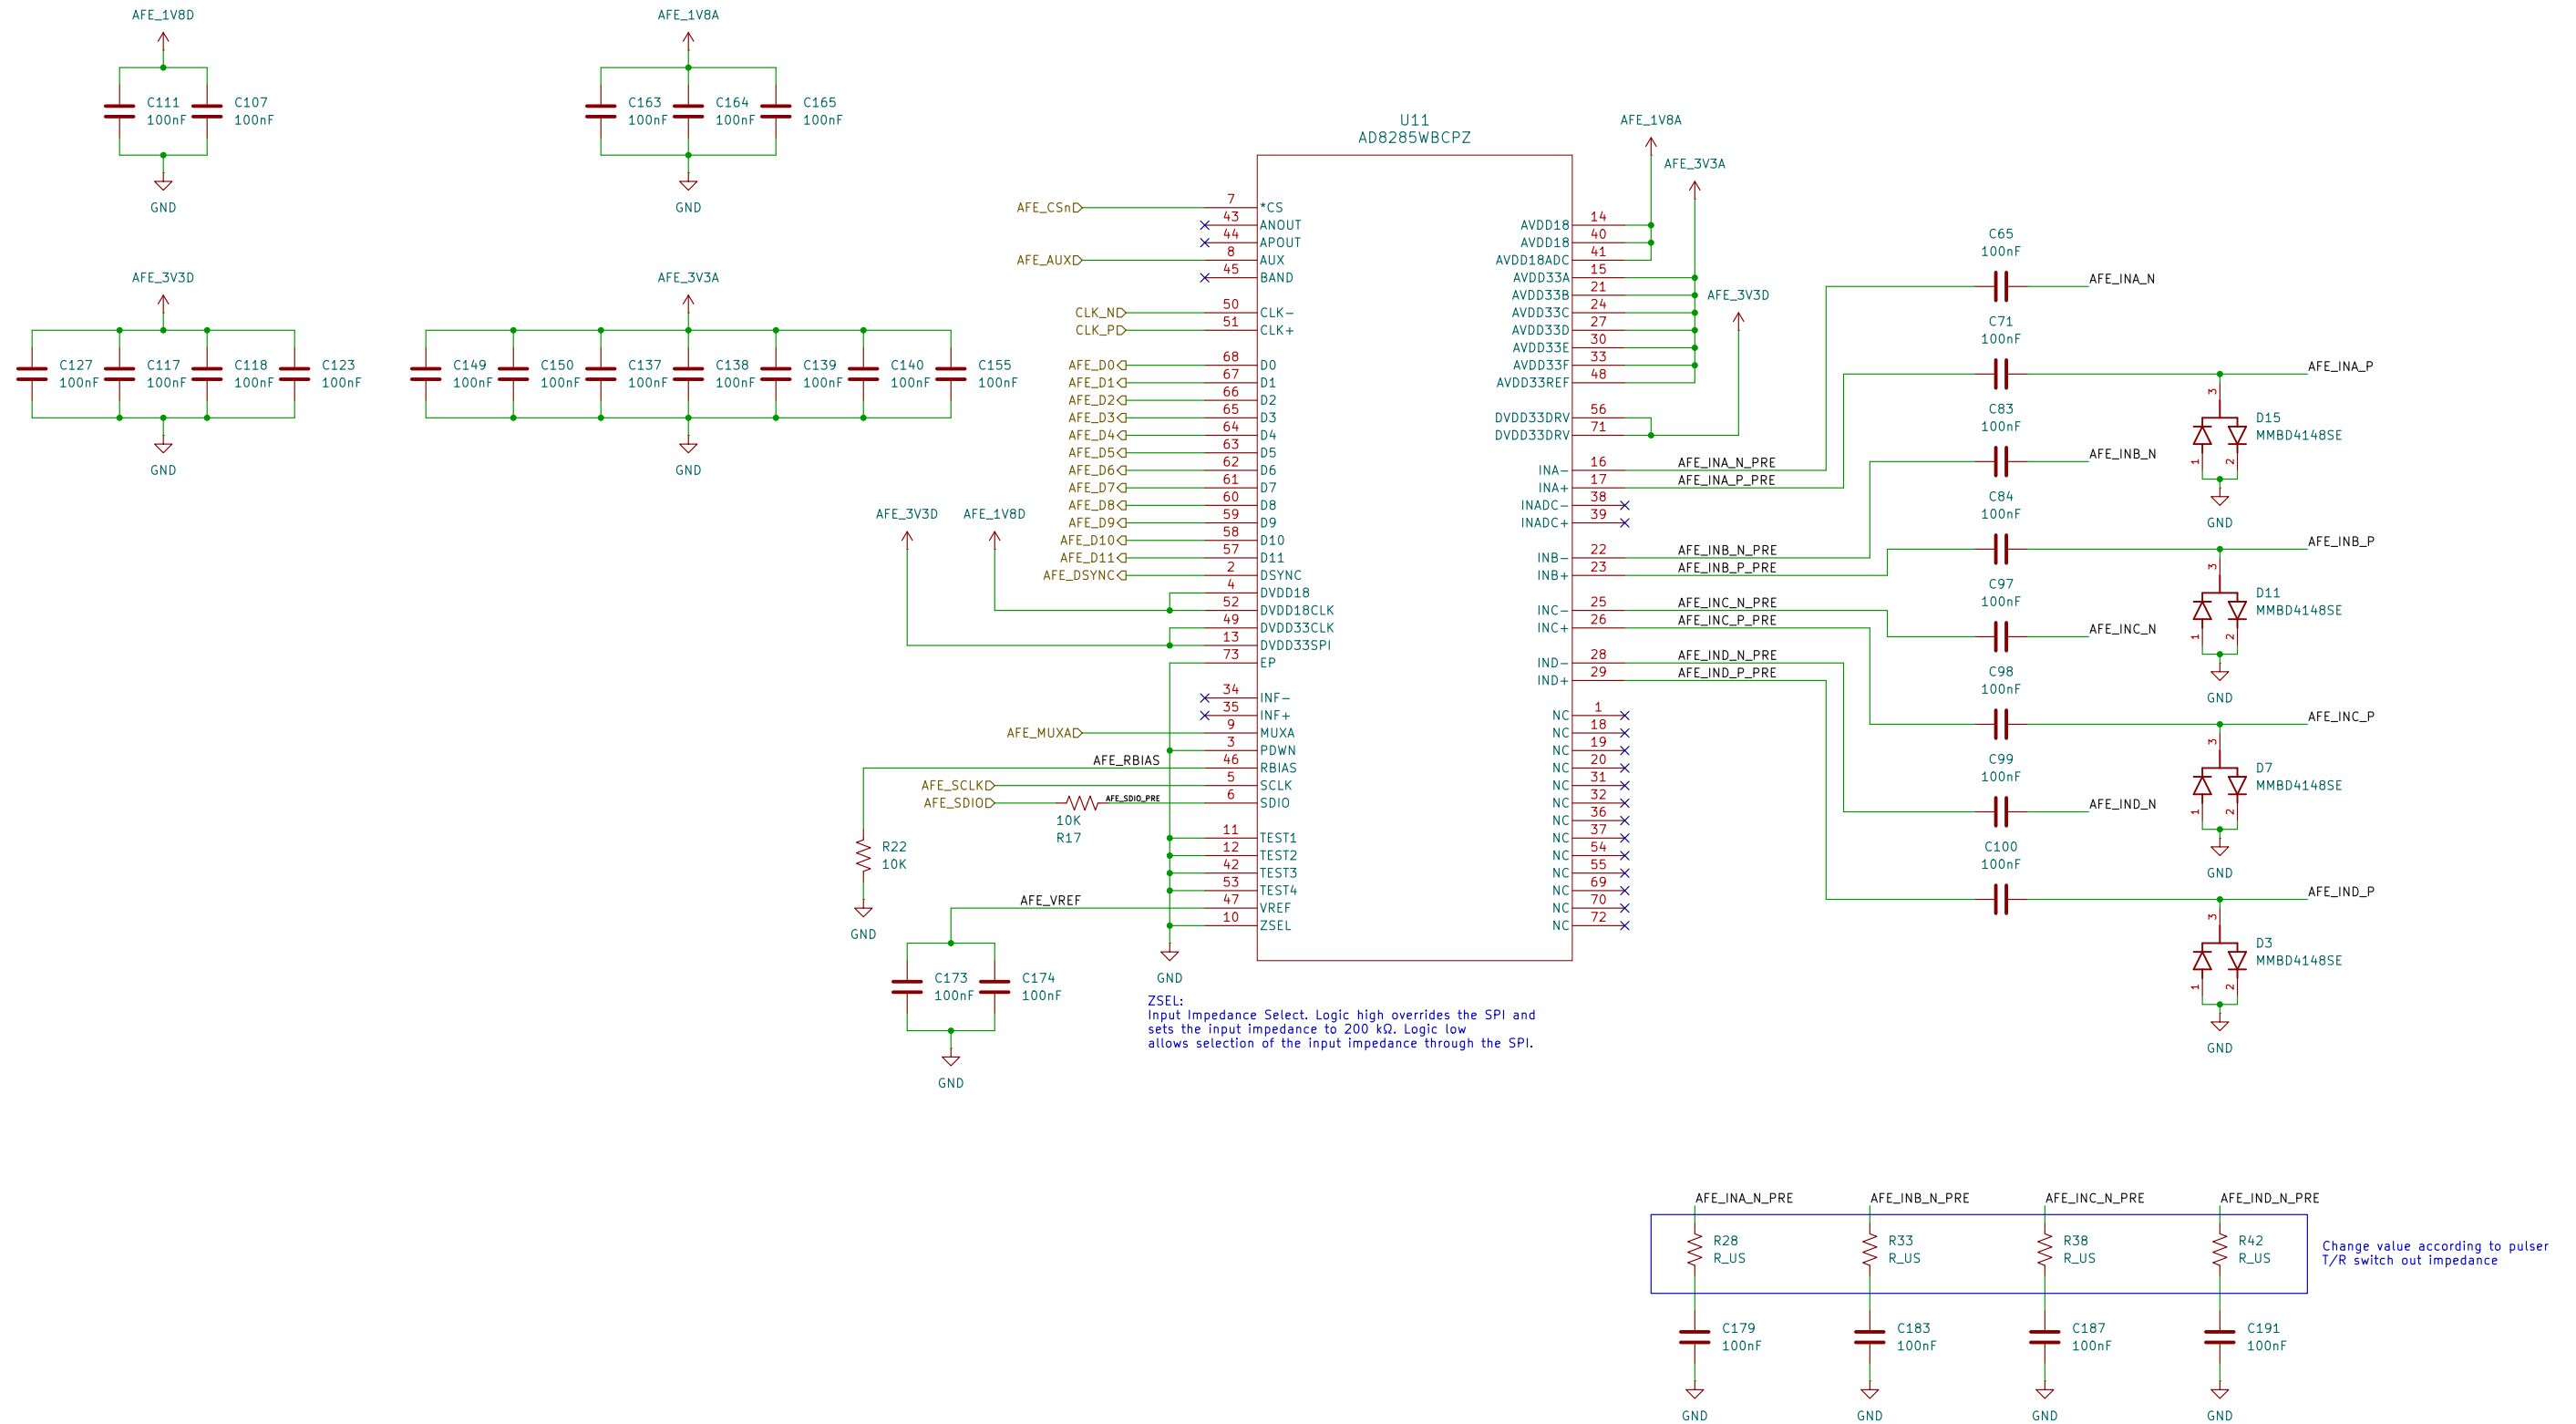

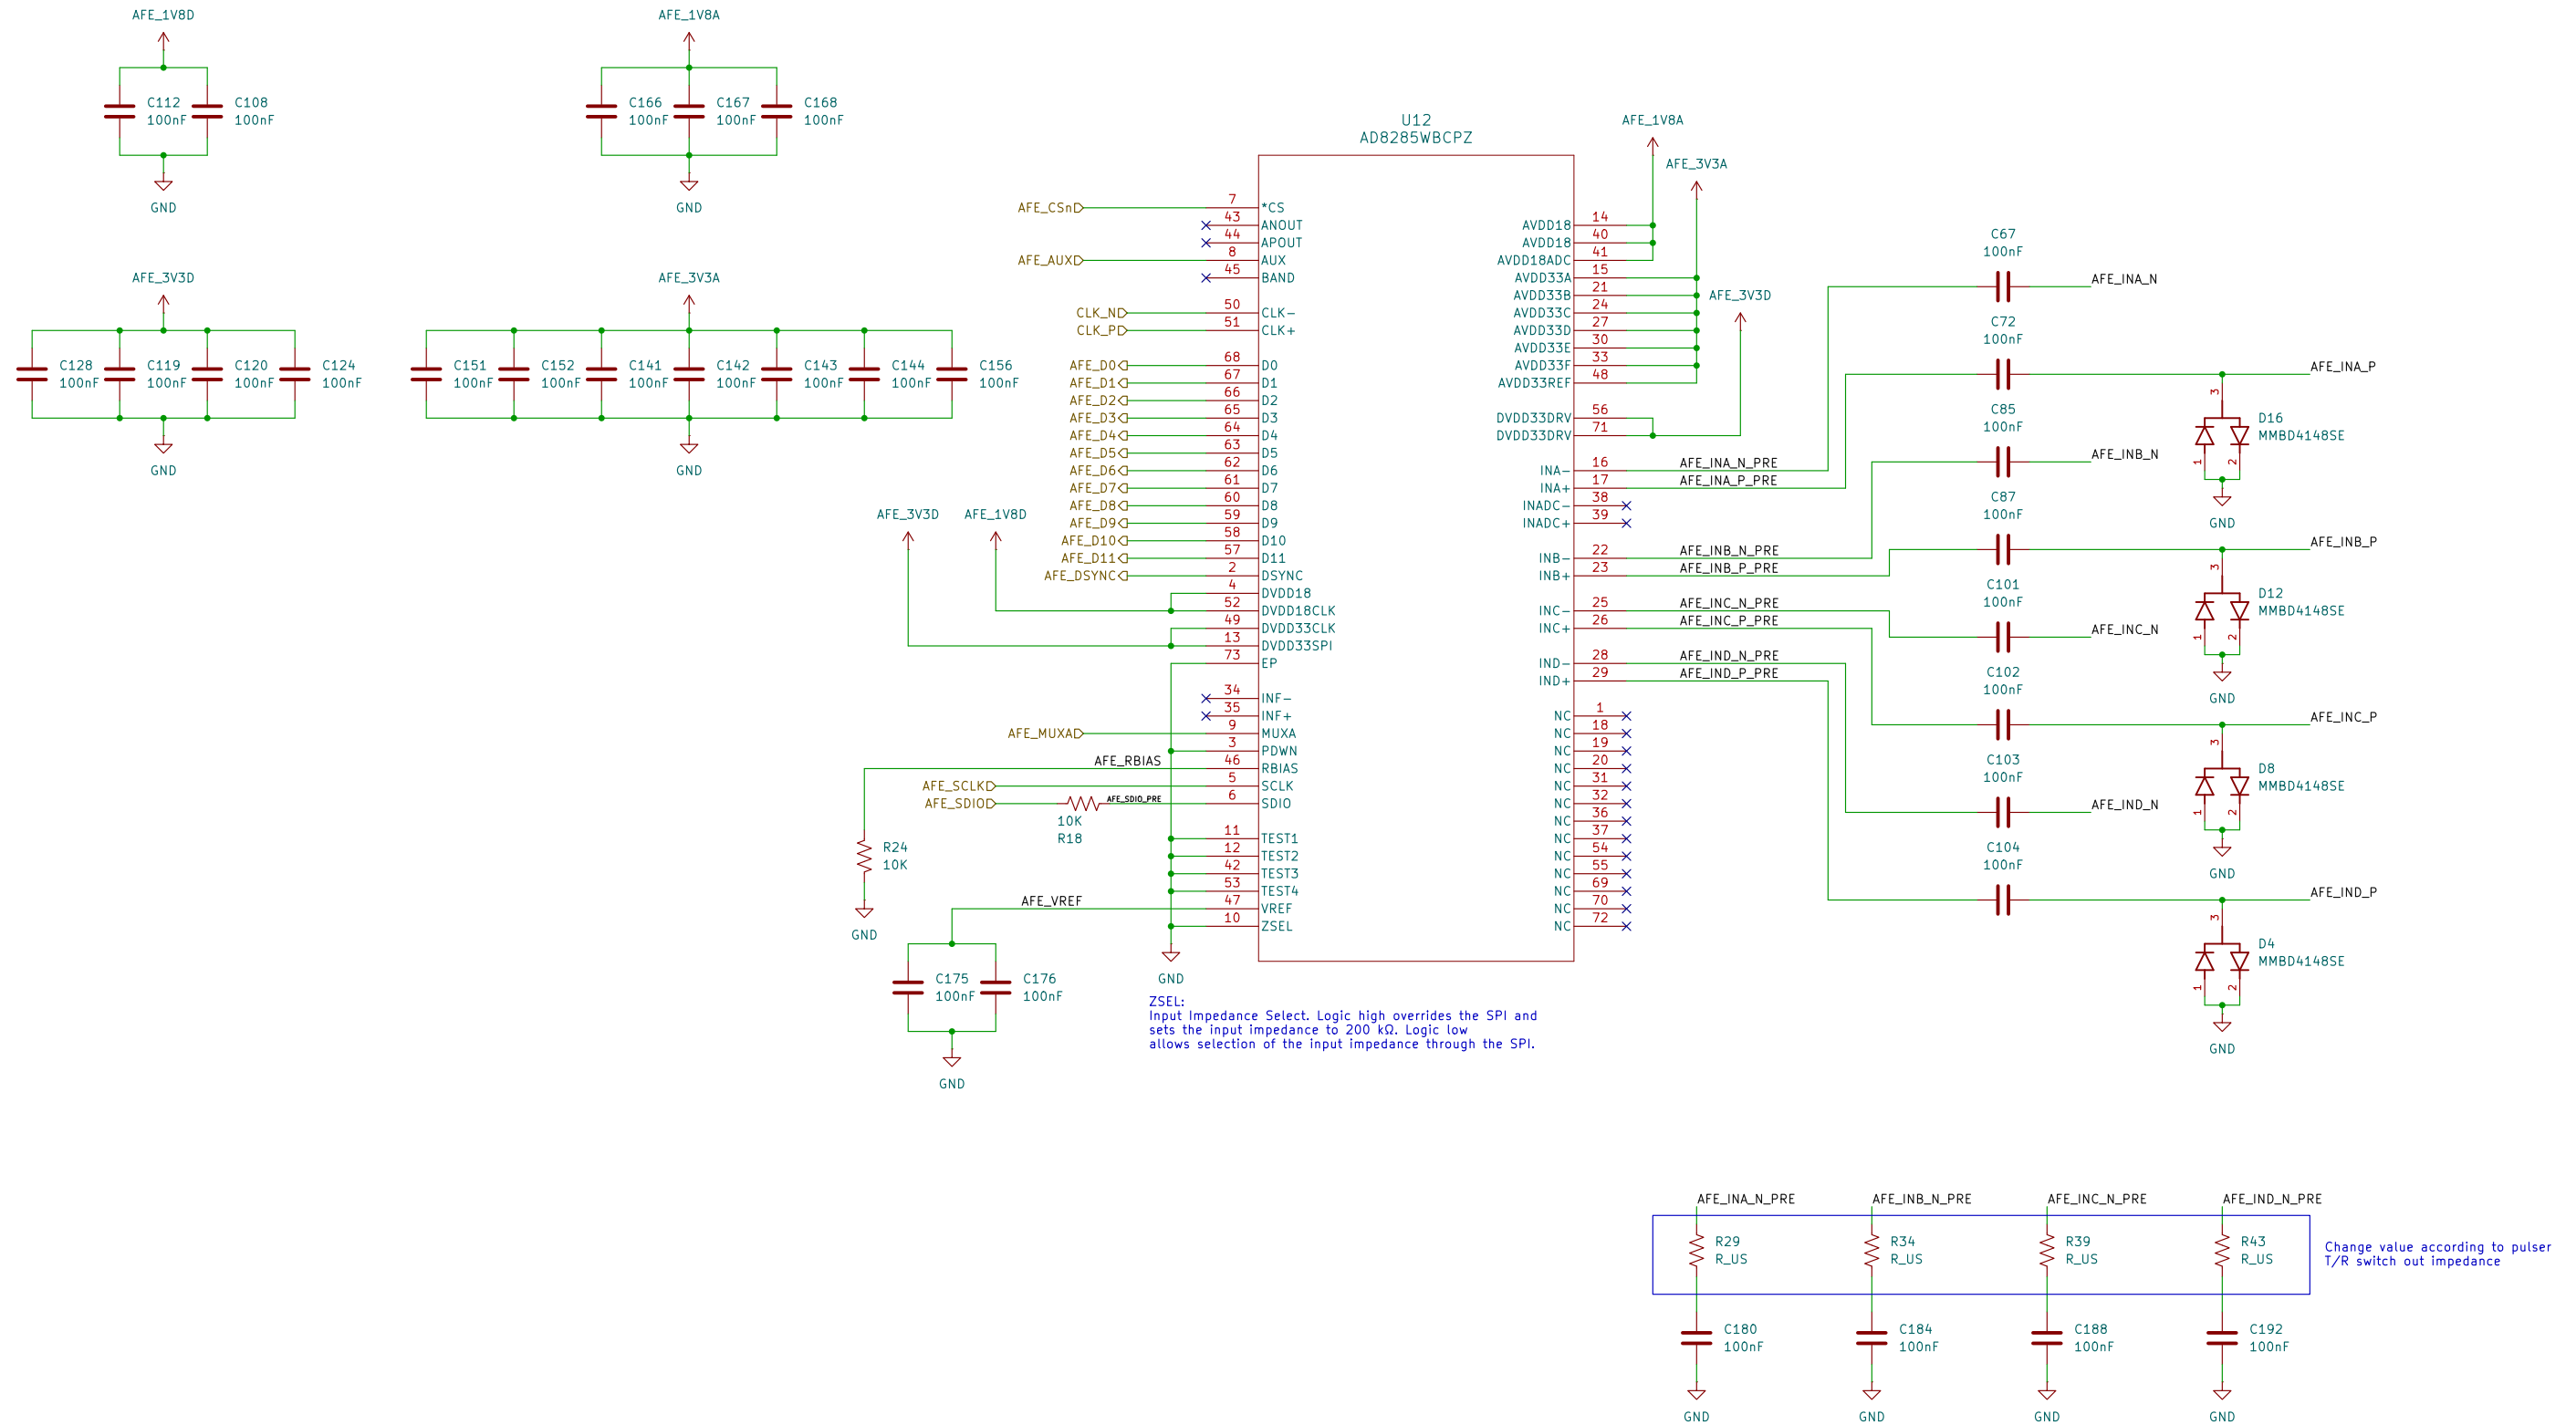

U3
USB3300-EZK-TR

28	XI	VDD1.8	26
10	EXTVBUS	VDD1.8-1	15
5	ID	VDD3.3	30
9	RESET	VDD3.3-1	25
13	STP	VDD3.3-2	16
		VDD3.3-3	6
		VDDA1.8	29
24	DATA[0]		
23	DATA[1]		
22	DATA[2]	DIR	12
21	DATA[3]	CLKOUT	14
20	DATA[4]	XO	27
19	DATA[5]	CPEN	3
18	DATA[6]	NXT	11
17	DATA[7]		
8	DM		
7	DP		
32	RBIAS	GND	2
4	VBUS	GND-1	1
31	REG_EN	EXP	33