



微處理機系統與介面技術


LAB5 - I2C





I2C - Inter-Integrated Circuit

- Multiple Master/Multiple Slave synchronous communication
- · Two wires: SDA/SCL
- I2CO
 - I2COSDA/GPA8 : pin 12
 - I2COSCL/GPA9 : pin 11
- I2C1
 - I2C1SDA/GPA10 : pin 10
 - I2C1SCL/GPA11 : pin 9

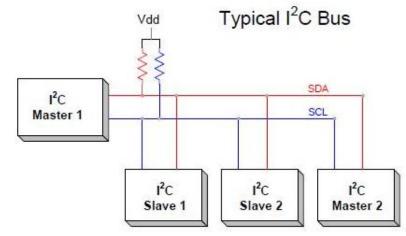

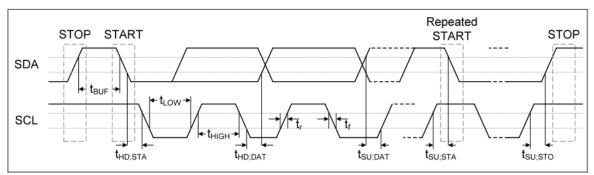


Figure 5-18 I²C Bus Timing

• https://learn.sparkfun.com/tutorials/i2c





I2C register configuration

- I2CON: I2C Control Register
 - EI
 - ENS1
 - · STA, STO, SI, AA
- I2CDAT: I2C Data Register
- I2CSTATUS: I2C Status Register

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | |
|----------|------|-----|-----|----|----|----------|----|--|
| Reserved | | | | | | | | |
| 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | |
| Reserved | | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | |
| Reserved | | | | | | | | |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| EI | ENS1 | STA | sто | SI | AA | Reserved | | |





I2C operation

- STA start bit
- STO stop bit
- SI I2C interrupt flag
 - SI flag is set by hardware if new I2C status present
 - Write 1 to clear this bit
- · AA Acknowledge


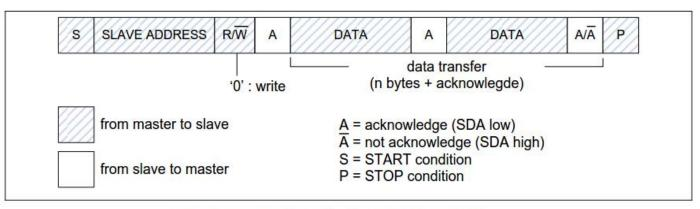


Figure 5-20 Master Transmits Data to Slave



SI flag is set by Hardware

[STA,STO,SI,AA]

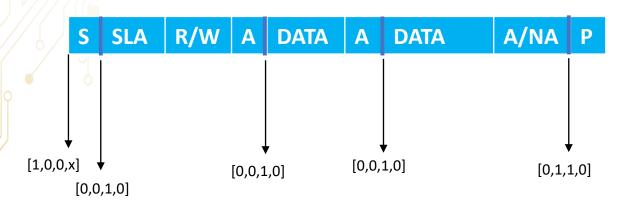



ADXL345 - 3 axis Digital Accelerometer

- Pin configuration
 - SDA ----- MO SDA(GPA8)
 - SCL ----- MO SCL(GPA9)



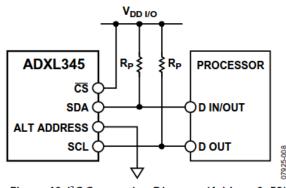


Figure 40. I²C Connection Diagram (Address 0x53)

- Don't care: VS, INT1, INT2
- · CS, SCL, SDA is already pull high for this module
- SDO is already pull low
- ·如果R4有被拆掉的話,要把SDO接地(要附圖)





ADXL345 register map

- ADXL slave address(0x53)
 - Write address: 0xA6
 - Read address: 0xA7
- Initial ADXL345
 - POWER_CTL(0x2D): 0x08
 - DATA_FORMAT(0x31): 0x0B
 - FIFO_CTL(0x38): 0x80
- ADXL data register
 - DATAX0(0x32), DATAX1(0x33)
 - DATAYO(0x34), DATAY1(0x35)
 - DATAZO(0x36), DATAZ1(0x37)

Table 19.

| Description |
|------------------------|
| Device ID |
| Reserved; do not acces |
| Tap threshold |
| X-axis offset |
| Y-axis offset |
| Z-axis offset |
| Tap duration |
| Tap latency |
| Tap window |
| Activity threshold |
| |

Register 0x31—DATA_FORMAT (Read/Write)

| D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 |
|-----------|-----|------------|----|----------|---------|-----|-----|
| SELF_TEST | SPI | INT_INVERT | 0 | FULL_RES | Justify | Rar | nge |

The DATA_FORMAT register controls the presentation of data to Register 0x32 through Register 0x37. All data, except that for the ± 16 g range, must be clipped to avoid rollover.

SELF_TEST Bit

A setting of 1 in the SELF_TEST bit applies a self-test force to the sensor, causing a shift in the output data. A value of 0 disables the self-test force.





Basic

- Read 3 axis accelerometer and print on putty
- Need to do calibration
 - Result = (Raw data ± offset)/(256 ± offset)

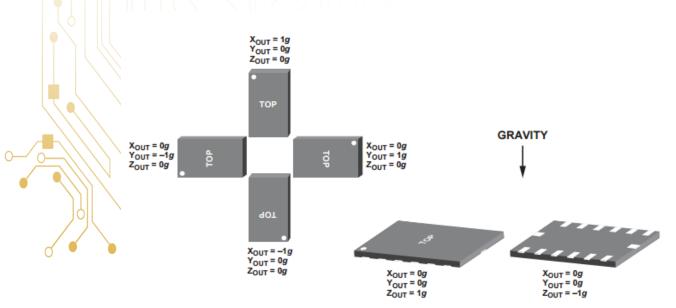


Figure 58. Output Response vs. Orientation to Gravity

```
COM8 - PuTTY
ADXL init...
Start
x: -0.08, y: -0.04, z: -0.12
x: -0.02, y: -0.01, z: 1.01
x: -0.02, y: -0.01, z: 1.01
x: -0.03, y: -0.01, z: 1.01
x: -0.02, y: -0.01, z: 0.93
x: -0.02, y: -0.02, z: 1.02
x: -0.02, y: -0.02, z: 1.01
x: -0.02, y: -0.02, z: 1.00
x: -0.02, y: -0.02, z: 1.01
x: -0.02, y: -0.02, z: 1.02
x: -0.02, y: -0.01, z: 1.01
x: -0.02, y: -0.02, z: 1.02
  -0.02, y: -0.02, z: 1.01
  -0.02, y: -0.01, z: 1.02
  -0.02, y: -0.01, z: 1.01
                                             CCU@Taiwan 中正大學
```

(געי) www.neatlab.tw



I2C Polling Architecture

- Polling the SI flag, do next step when SI flag is set
 - STA → polling SI → SLA+W → polling SI → data(register addr)
 → polling SI...
 - · Remember to clear the SI for each status

| SINGLE-BYTE WRITE | | | | | | | | | |
|-------------------|-----------------------------|-----|------------------|-----|------|-----|------|--|--|
| MASTER | START SLAVE ADDRESS + WRITE | | REGISTER ADDRESS | | DATA | | STOP | | |
| SLAVE | | ACK | | ACK | | ACK | | | |


- Data format Hint: xaxis = ((DataX1 << 8) | DataX0)
- Tips: You can reference the NuMicro_I2C.ppt p.17,18 to see I2C Read/Write
- Write Read/Write first, then you can implement adxl_init, adxl_readDataX...






I2C Interrupt Architecture

- · Doing the I2C step in IRQHandler
 - Status = 0x08(Start)
 next step → Write slave address + write bit
- Following the step with I2C flow chart
 - Master Transmitter/Receiver Mode
- I2C status flow chart is in the Technical Reference pdf p.216,217



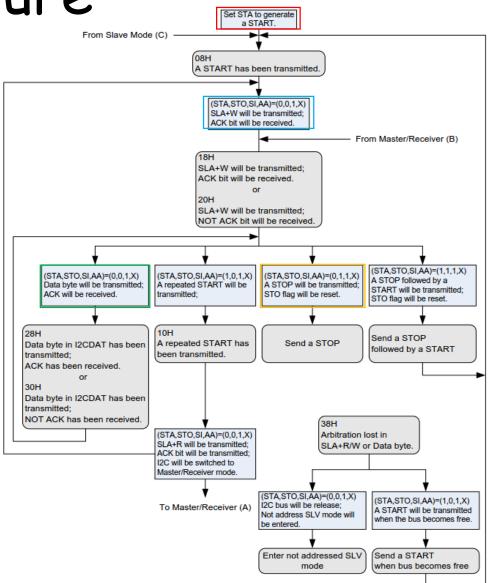



Tips



Write flow chart

Read flow chart

- 範例程式: I2C_Master
 - Function pointer
 - Just look at the status what we need, ex. 0x08 Start
- Easy test: you can read the adxl register 0x00 to test I2C communication is correct or not, it will return 0xE5 if your I2C is right
- · Be careful for the type cast uint8_t to the float
- Volatile for the waiting flag, maybe for the data
- ADXL Read need to go through two flow chart!!!





Demo

- Place: 創新大樓515 找助教 潘冠豪
- Demo Time: (二)(四)下午雨點~四點半
- Report deadline: 12/6(五)
- Report title format: LABx_ID_Name.pdf
- · Demo必須在Report deadline前完成
- · Demo前須先上傳程式碼(上傳main所在的.c檔即可)





Graded

• Basic: 80%

• Report & Code: 20%

