M7 Output

Mix up to three signals and send them to a real amp.

Draft: tagged steps may change

H1 BUS A · NC

You need

- R1, R2, R3 22 kΩ · R4 4.7 kΩ
- C1: 1 µF, no polarity (film or ceramic)
- Bare wire for 5 patch loops
- A 3.5 mm plug-to-clip lead
- A powered speaker or amp with a line input
- Copper tape, solder, 2-core cable

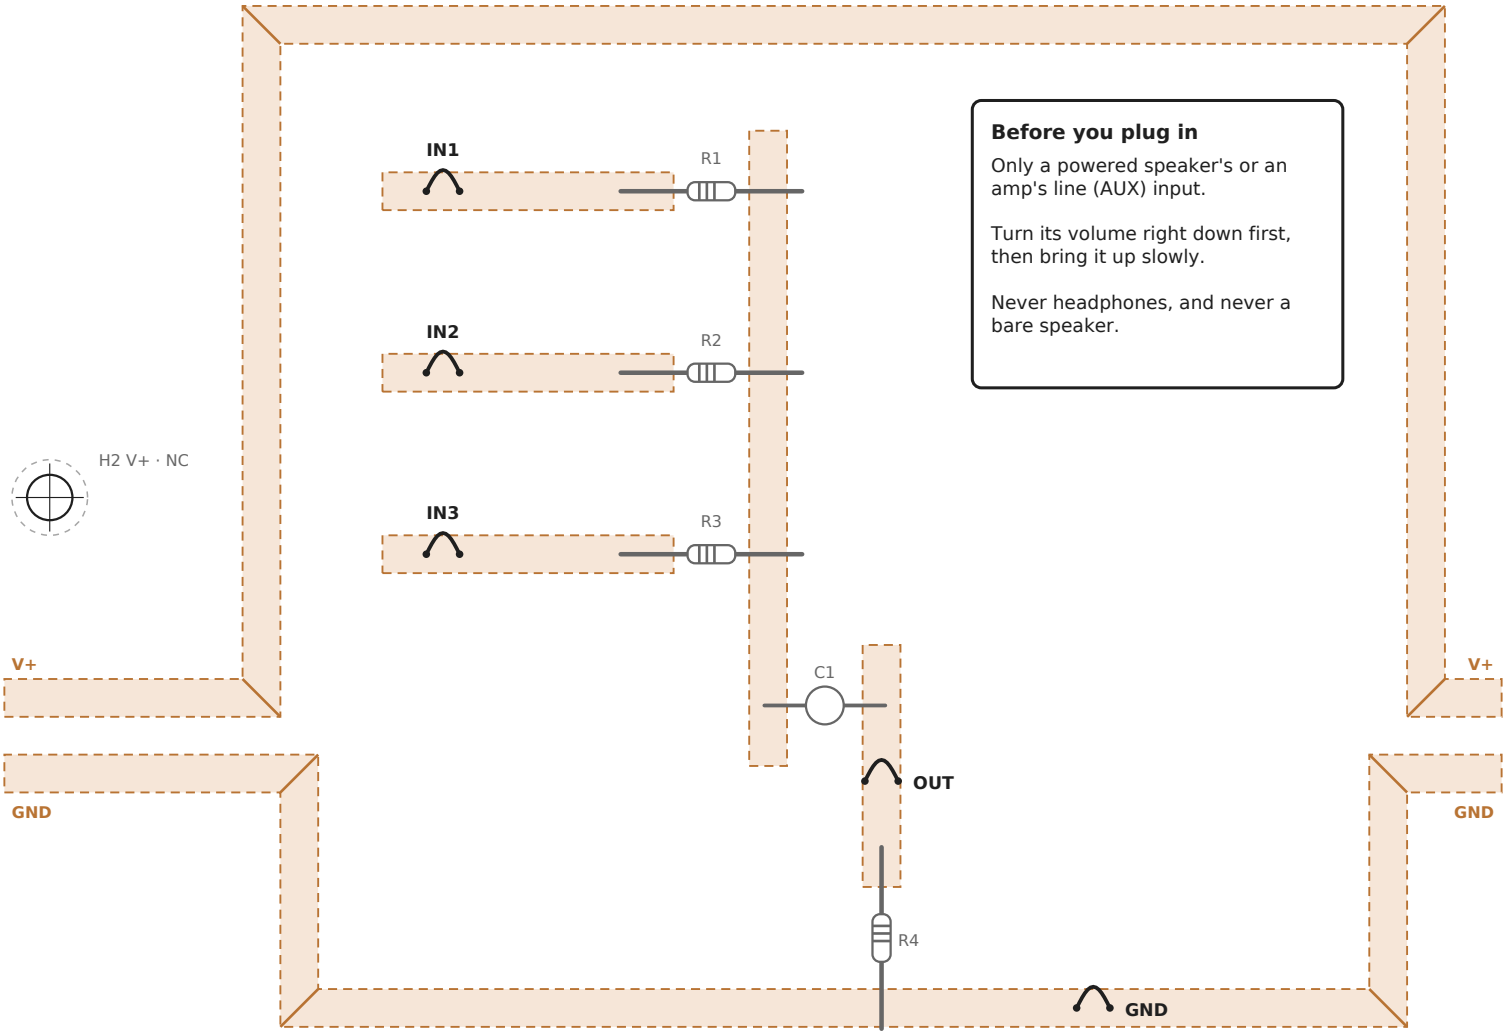

Before you plug in

Only a powered speaker's or an amp's line (AUX) input.

Turn its volume right down first, then bring it up slowly.

Never headphones, and never a bare speaker.

H2 V+ · NC

H3 GND · NC

Patch an oscillator's OUT to IN1. Clip OUT and GND to the 3.5 mm plug, then plug into the amp.

Schematic

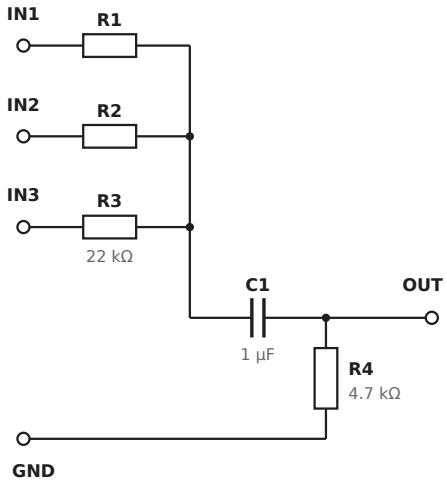

OUT and GND go to the plug: tip and ring to OUT.

H4 BUS B · NC

Build it

1. Lay the power ring and the five lanes inside it, one piece of tape each.
2. Place R1 to R3 from each IN lane to the MIX lane, C1 from MIX to OUT, and R4 from OUT down to the GND rail. All go either way round.
3. Solder every lead to its lane, or hold it flat with a small patch of copper tape. **[T0]**
4. Solder a patch loop upright on each loop mark: IN1 to IN3, OUT and GND. **[T0]**
5. Join the edge connectors to the pages either side with 2-core cable, or with red and black clip leads.

Play it

- Turn the amp's volume right down. Clip OUT to the plug's tip and ring, and GND to its sleeve. Plug into the amp's line or AUX input.
- Patch M1's OUT to IN1 and play a key, then bring the volume up slowly.
- A second oscillator on IN2 plays at the same time: the two notes mix.

[T0] and **[P]** mark choices that may change: **[T0]** after the contact tests, **[P]** once the power supply is settled.

Print at 100 %: this bar should measure 100 mm.