M2 Keyboard

Touch a key with the stylus lead from M1 to play a note.

Draft: tagged steps may change

H1 BUS A · NC

You need

- R1 13 kΩ · R2 1.6 kΩ · R3 3.6 kΩ
- R4 3.9 kΩ · R5 4.3 kΩ · R6 2.4 kΩ
- R7 5.1 kΩ · R8 6.2 kΩ
- A clip lead from M1's PITCH: the stylus
- Copper tape and solder
- 2-core cable to join the pages

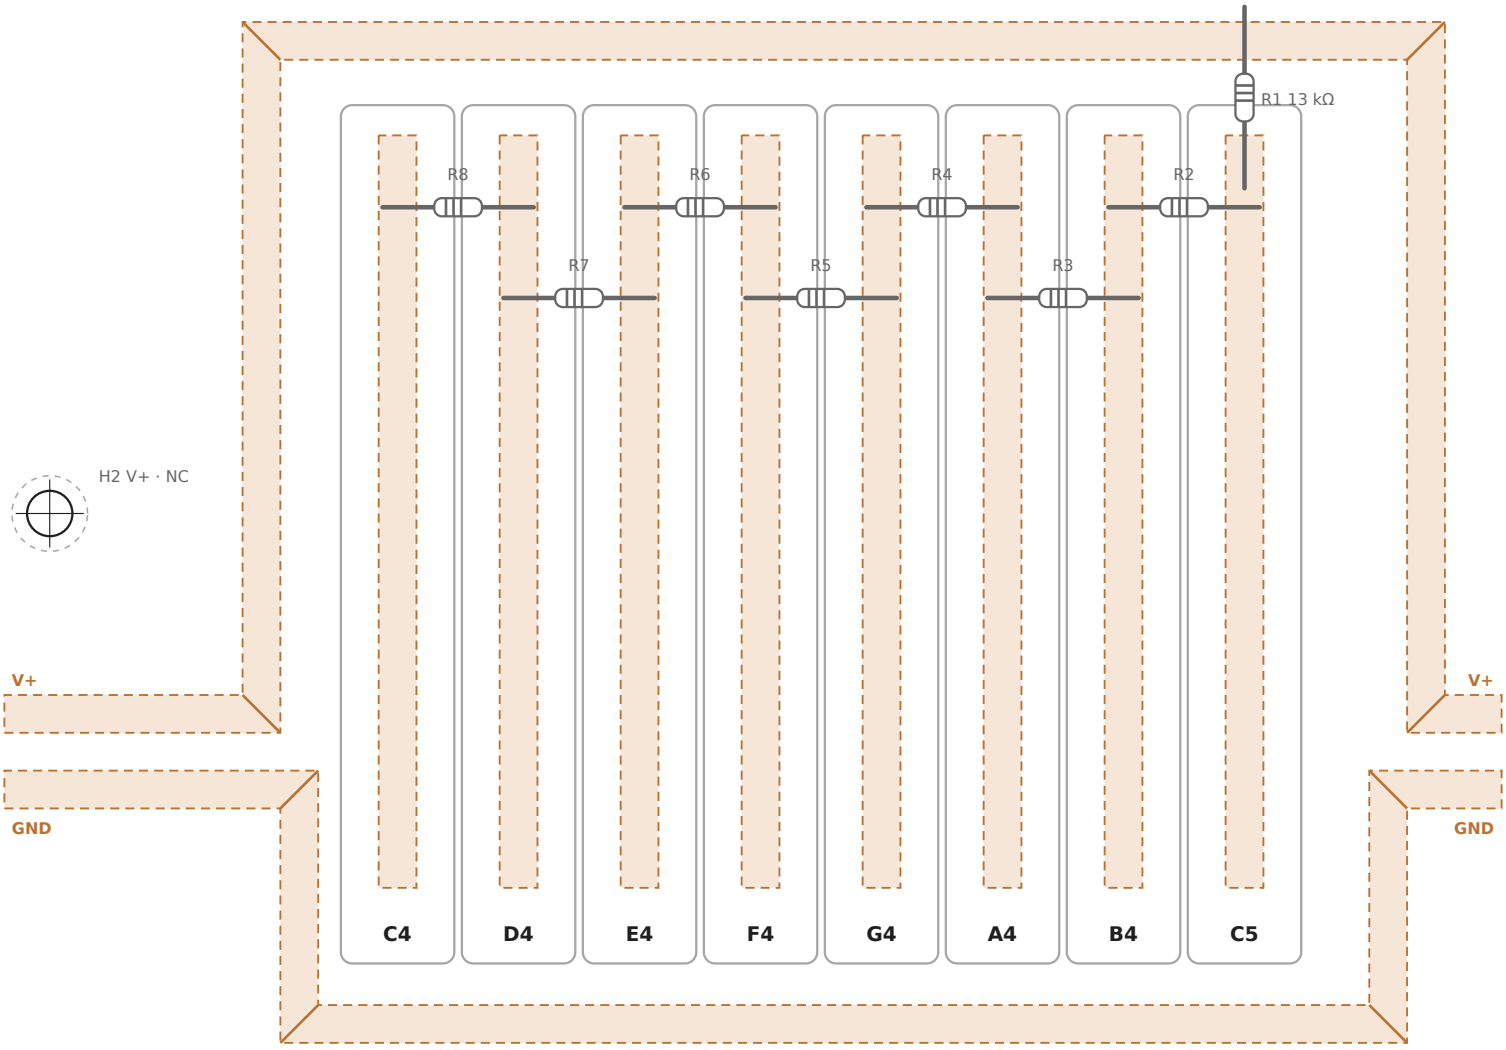

H2 V+ · NC

H3 GND · NC

Touch anywhere on a key. Low C on the left, high C on the right. Only V+ is used; GND passes through.

Schematic

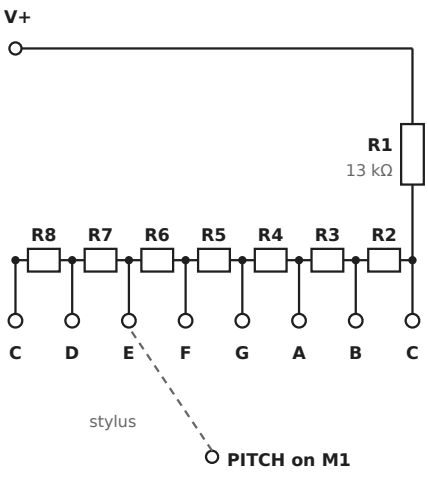

Each key further left adds a resistor: a lower note.

H4 BUS B · NC

Build it

1. Lay the power ring and the eight key lanes, one piece of tape each.
2. Place R1 from the top rail to the high C on the right. Place R2 to R8 between the keys, right to left, as labelled. Either way round.
3. Solder every lead to its lane, or hold it flat with a small patch of copper tape. **[T0]**
4. Join the edge connectors to the pages either side with 2-core cable, or with red and black clip leads.

Play it

- Clip one end of a lead to M1's PITCH loop. Hold the other clip by its cover and touch its jaws to a key.
- Check each note with a tuner app on a phone. Tune from the right, C5 first: swap the resistor to a key's right (R1 for C5) for the next value up or down. Each swap also moves every key to its left.

[T0] and **[P]** mark choices that may change: **[T0]** after the contact tests, **[P]** once the power supply is settled.

Print at 100 %: this bar should measure 100 mm.