
MIDI MAPPING

A LOOM layout for the Korg nanoKONTROL2

The nanoKONTROL2 has eight strips of a knob, a slider and S, M and R buttons, plus transport, TRACK and MARKER buttons. LOOM has nine tracks: five audio tracks and four instrument tracks. This layout gives eight of them a strip of their own and puts the macros of the focused track on the knobs.

THE LAYOUT

Eight strips

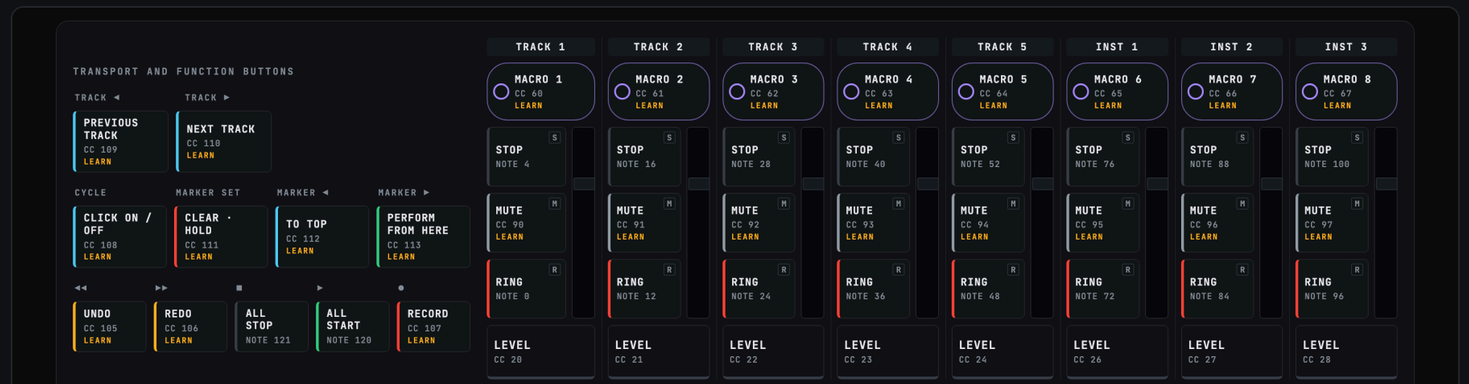

PAGE 2

SLIDERS
The level of TRACK 1 to 5 and INST 1 to 3, on LOOM's built-in numbers.

S, M AND R
Stop, mute and ring for that strip's track. Stop and ring are built in; mute is learned.

KNOBS
FOCUSED TRACK › MACRO 1 to 8: the macros of whichever track has the focus.

TRACK ◄ ►
Move the focus to the previous or next track.

TRANSPORT
Undo, redo, ALL STOP, ALL START and RECORD. CYCLE switches the click on and off.


MARKER
Clear, TO TOP and PERFORM FROM HERE.

Page 3 lists the settings in KORG KONTROL Editor and in LOOM that make the layout work.

THE LAYOUT

Eight strips

Each strip works one track: the slider sets its level, S stops it, M mutes it and R is its ring button. The knobs play the macros of the track that has the focus, and TRACK ◄ ► moves the focus.

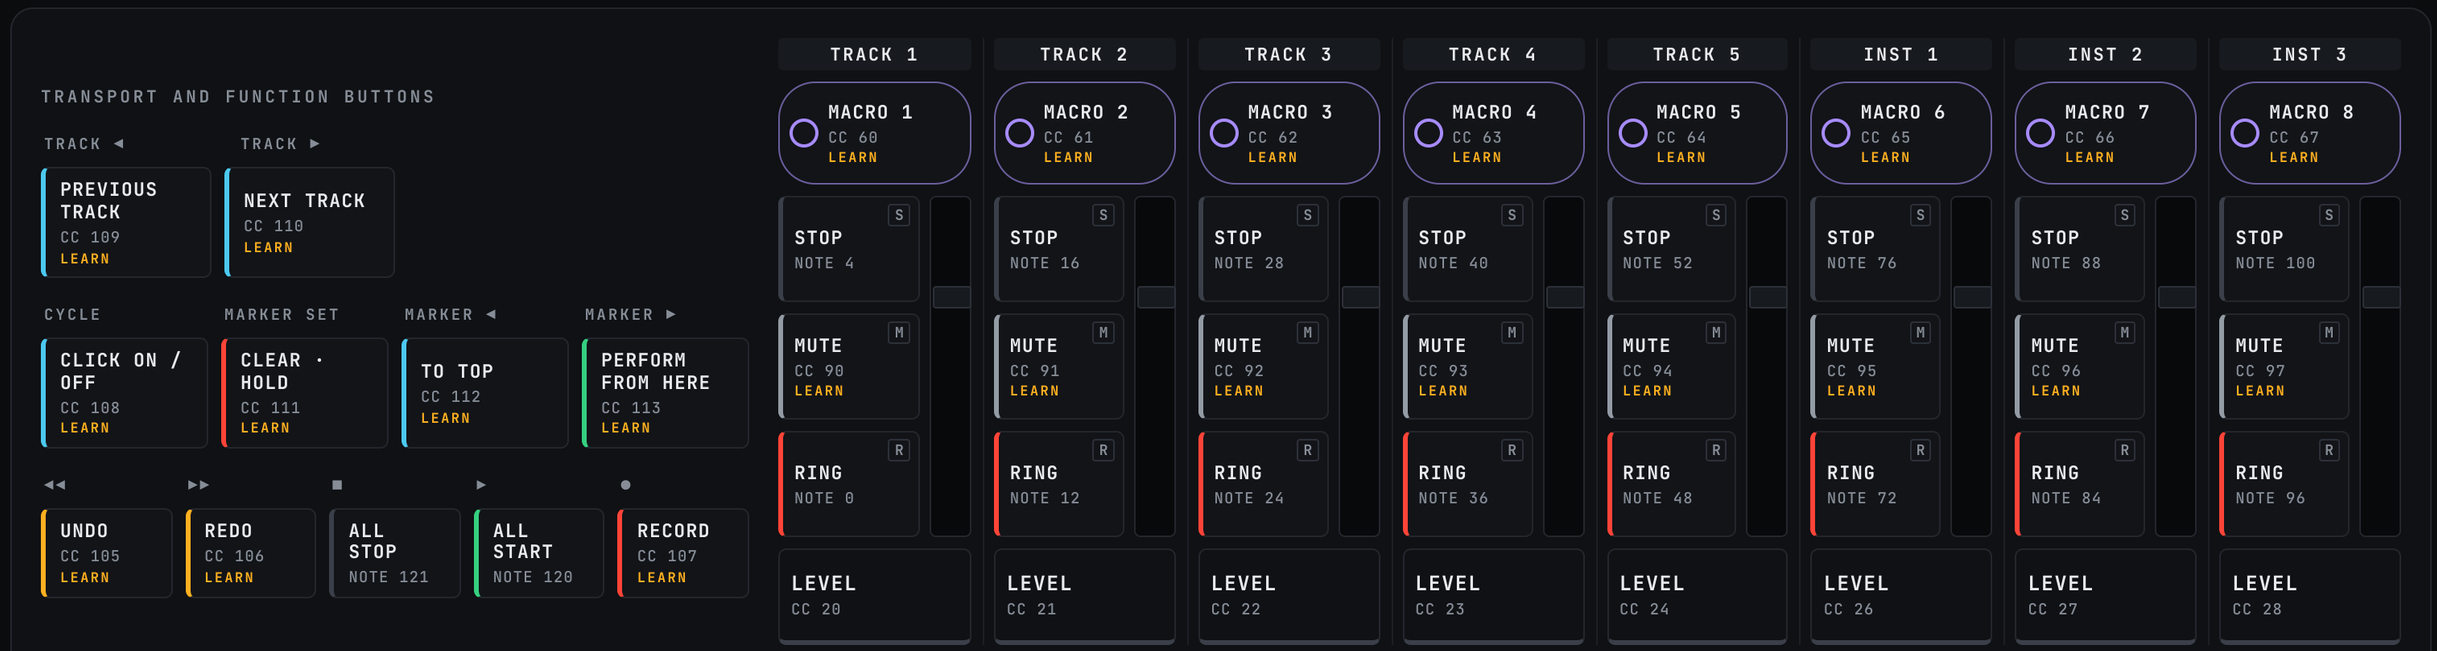

Channel 16 for everything. Every number on this page goes out on channel 16, LOOM's command channel. LEARN marks a number you learn in LOOM. The rest are LOOM's built-in numbers and need no learning.

Pan is set on screen. No knob sets pan in this layout, and a macro cannot point at LEVEL or PAN. Assign each track's macros to its instrument and effect controls.

INST 4 has no strip. Reach it through the focus: press TRACK ► in the LOOPER view until INST 4 has the focus, and the knobs, ◄◄, ►► and MARKER SET work it. In the ARRANGE and MIXER views, TRACK ◄ ► steps through the audio tracks only.

MARKER SET needs a hold. Hold it for one second to clear the focused track. A tap does nothing.

The knobs wait for pickup. The knobs have fixed ends, so after the focus moves, a macro does not follow its knob until you turn the knob past LOOM's value. The notice row says which way to turn.

The lights follow LOOM. S lights while its track is stopped and holds a loop. M lights while the track is muted. R lights whenever its track is not empty: recording, playing or holding a loop. ● lights while LOOM records the performance.

RING, RECORD, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TO TOP · MUTE · LEVEL AND STOP · MACROS · LEARN LEARNED IN LOOM. EVERY OTHER NUMBER IS BUILT IN

SETUP

Settings that make the layout work

IN KORG KONTROL EDITOR

01 **Choose CC mode.**
In KORG KONTROL Editor, set Control Mode to CC. The DAW modes send their own messages and ignore the numbers on page 2.

02 **Send on channel 16.**
Set Global MIDI Channel to 16, LOOM's command channel. Leave each control group's channel and the transport button channel on Global.

03 **Set the numbers on page 2.**
Sliders, knobs, M buttons and the CC buttons send Control Change. S, R, ■ and ▶ send Note, with an On Value of 127. The editor names notes from C-1, so note 0 is C-1, note 4 is E-1 and note 120 is C9. You do not need the factory numbers: replace every one.

04 **Set every button to Momentary.**
A Toggle button keeps its own on and off state, which can disagree with LOOM's. For the CC buttons, set On Value to 127 and Off Value to 0.

05 **Set LED Mode to External.**
Then the S, M and R lights, and the transport lights, show what LOOM sends back. TRACK and MARKER have no lights.

06 **Write Scene Data.**
This stores the settings on the nanoKONTROL2. Some users report that LED Mode does not stay on External, so check it after you next power the nanoKONTROL2 on.

IN LOOM

01 **Leave MIDI CH at 16 and MIDI MAP at 1.x layout.**
Both are in the side panel's GLOBAL tab, under MIDI. The sliders, S, R, ■ and ▶ then work with no learning.

02 **Set MIDI OUT to the nanoKONTROL2.**
It is under MIDI MAP. LOOM sends each track's state back, and the lights follow it.

03 **Learn the controls marked LEARN.**
Open View ▸ MIDI Mapping, press + ADD MAPPING, choose the target, then touch the control. Learn the knobs as CONTROLLER on FOCUSED TRACK › MACRO 1 to 8, and the buttons as BUTTON.

04 **Learn the M buttons as each track's MUTE.**
Choose TRACK 1 › MUTE to INST 3 › MUTE. LOOM's built-in mute numbers, CC 80 to 89, mute only while the value is 64 or more, so a momentary button would unmute the track when you let go.

05 **Learn the rest as BUTTON.**
CYCLE on CLICK › ON / OFF. ◀◀ and ▶▶ on FOCUSED TRACK › UNDO and REDO. ● on RECORD, and MARKER ◀ and ▶ on TO TOP and PERFORM FROM HERE, under COMMANDS › GLOBAL. TRACK ◀ ▶ on FOCUS › PREVIOUS TRACK and NEXT TRACK. MARKER SET on FOCUSED TRACK › CLEAR.

06 **Assign each track's macros.**
In the side panel's MACROS block, point MACRO 1 to MACRO 8 at the controls you want under the knobs. An empty macro does nothing.

Keep the mappings in RIG, the default, so they work in every song. ■ and ▶ stay dark: ALL STOP and ALL START have no state to show.