
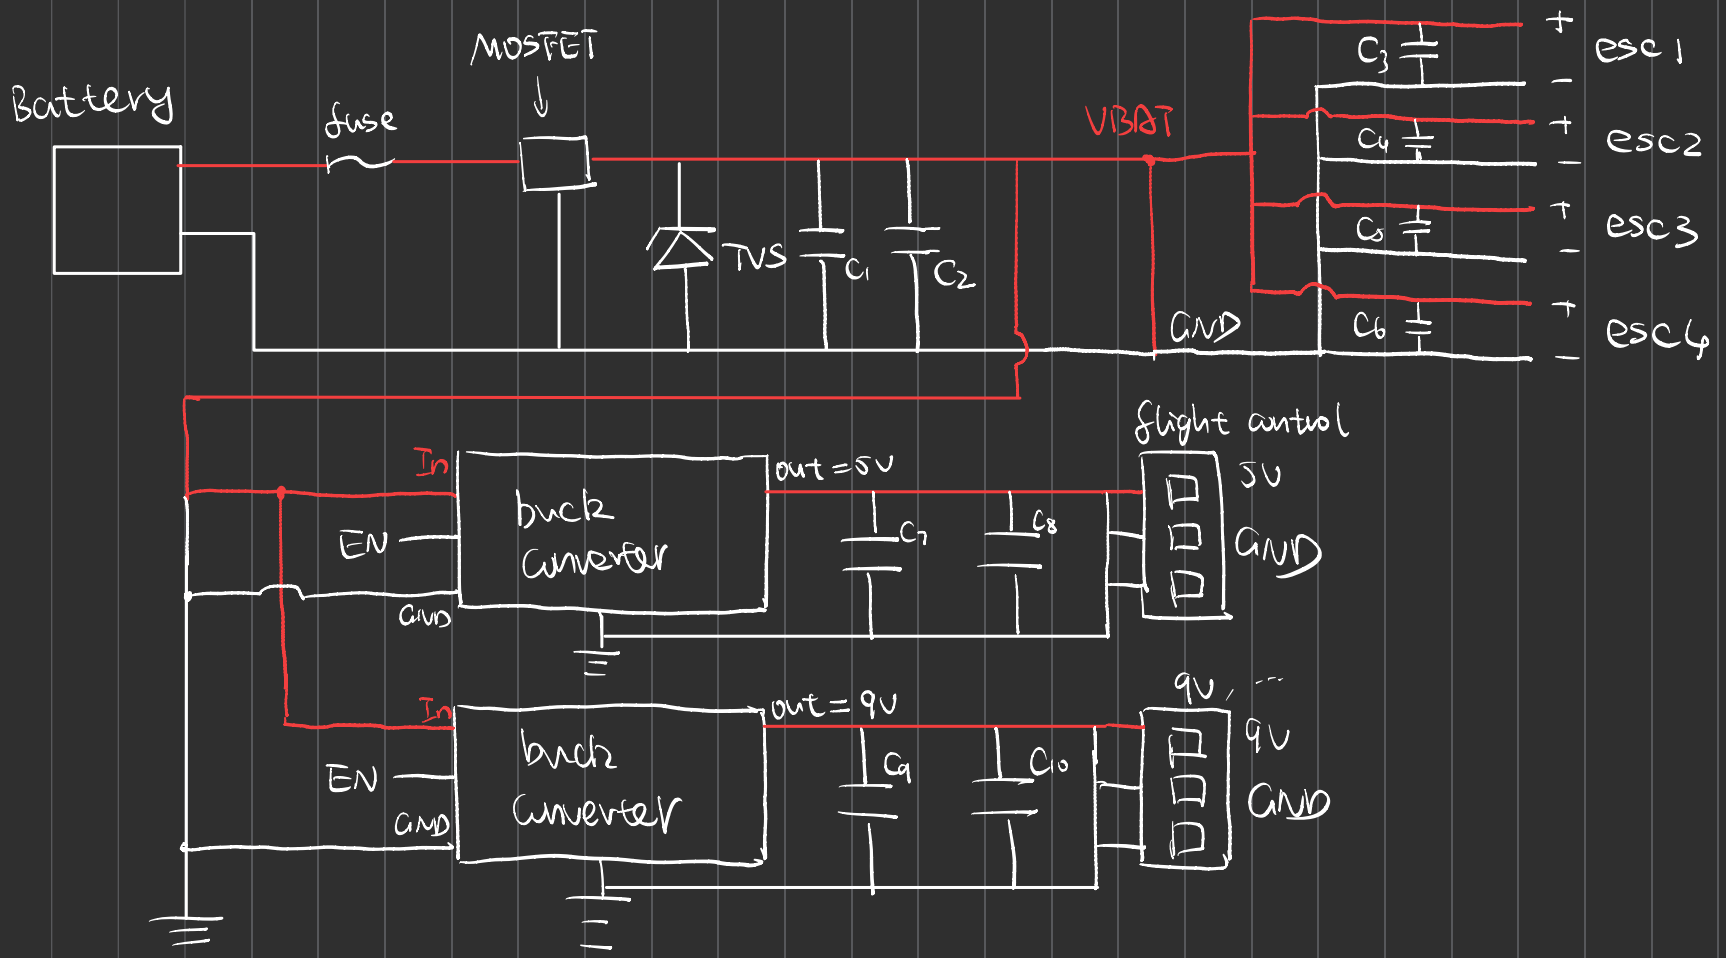


$C_3 \cdot C_4 \cdot C_5 \cdot C_6$

absorb voltage spikes

(when accelerate quick)

Voltage sensing

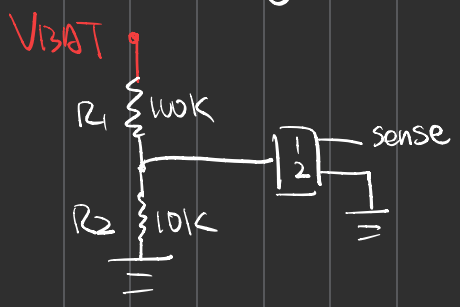

power indicator LED

