

**TS4871**

## OUTPUT RAIL TO RAIL 1W AUDIO POWER AMPLIFIER WITH STANDBY MODE

- OPERATING FROM  $V_{cc} = 2.5V$  to  $5.5V$
- 1W RAIL TO RAIL OUTPUT POWER @  $V_{cc}=5V$ , THD=1%,  $f=1\text{kHz}$ , with  $8\Omega$  Load
- ULTRA LOW CONSUMPTION IN STANDBY MODE (10nA)
- 75dB PSRR @ 217Hz from 5V to 2.6V
- ULTRA LOW POP & CLICK
- ULTRA LOW DISTORTION (0.1%)
- UNITY GAIN STABLE
- AVAILABLE IN SO8, MiniSO8 & DFN8 3x3mm

### DESCRIPTION

The TS4871 is an Audio Power Amplifier capable of delivering 1W of continuous RMS Output Power into  $8\Omega$  load @ 5V.

This Audio Amplifier is exhibiting 0.1% distortion level (THD) from a 5V supply for a  $P_{out} = 250\text{mW}$  RMS. An external standby mode control reduces the supply current to less than 10nA. An internal thermal shutdown protection is also provided.

The TS4871 has been designed for high quality audio applications such as mobile phones and to minimize the number of external components.

The unity-gain stable amplifier can be configured by external gain setting resistors.

### APPLICATIONS




- Mobile Phones (Cellular / Cordless)
- Laptop / Notebook Computers
- PDAs
- Portable Audio Devices

### ORDER CODE


Part Number	Temperature Range: I	Package			Marking
		D	S	Q	
TS4871	-40, +85°C	•			4871I
			•	•	4871

MinISO & DFN only available in Tape & Reel with T suffix(IST & IQT)  
D = Small Outline Package (SO) - also available in Tape & Reel (DT)

### PIN CONNECTIONS (Top View)

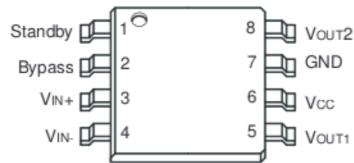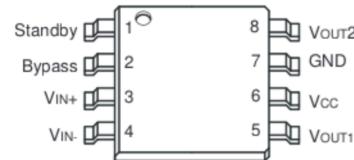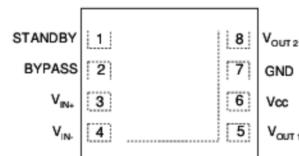**TS4871IST - MiniSO8****TS4871ID-TS4871IDT - SO8****TS4871IQT - DFN8**

### TYPICAL APPLICATION SCHEMATIC

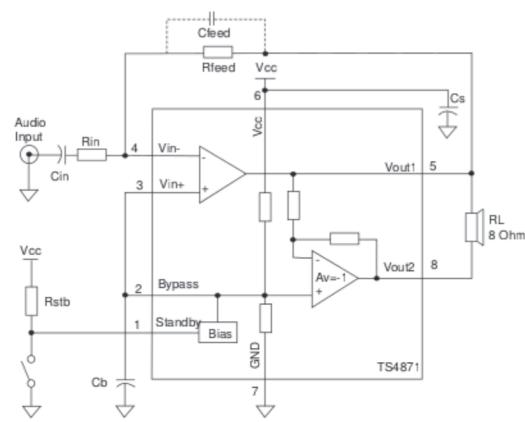

**ABSOLUTE MAXIMUM RATINGS**

Symbol	Parameter	Value	Unit
$V_{CC}$	Supply voltage <sup>1)</sup>	6	V
$V_i$	Input Voltage <sup>2)</sup>	$G_{ND}$ to $V_{CC}$	V
$T_{oper}$	Operating Free Air Temperature Range	-40 to +85	°C
$T_{stg}$	Storage Temperature	-65 to +150	°C
$T_j$	Maximum Junction Temperature	150	°C
$R_{thja}$	Thermal Resistance Junction to Ambient <sup>3)</sup> SO8 MiniSO8 QNF8	175 215 70	°C/W
$P_d$	Power Dissipation	Internally Limited <sup>4)</sup>	
ESD	Human Body Model	2	kV
ESD	Machine Model	200	V
Latch-up	Latch-up Immunity	Class A	
	Lead Temperature (soldering, 10sec)	260	°C

1. All voltages values are measured with respect to the ground pin.

2. The magnitude of input signal must never exceed  $V_{CC} + 0.3V / G_{ND} - 0.3V$

3. Device is protected in case of over temperature by a thermal shutdown active @ 150°C.

4. Exceeding the power derating curves during a long period, involves abnormal operating condition.

**OPERATING CONDITIONS**

Symbol	Parameter	Value	Unit
$V_{CC}$	Supply Voltage	2.5 to 5.5	V
$V_{ICM}$	Common Mode Input Voltage Range	$G_{ND}$ to $V_{CC} - 1.2V$	V
$V_{STB}$	Standby Voltage Input : Device ON Device OFF	$G_{ND} \leq V_{STB} \leq 0.5V$ $V_{CC} - 0.5V \leq V_{STB} \leq V_{CC}$	V
$R_L$	Load Resistor	4 - 32	Ω
$R_{thja}$	Thermal Resistance Junction to Ambient <sup>1)</sup> SO8 MiniSO8 DFN8 <sup>2)</sup>	150 190 41	°C/W

1. This thermal resistance can be reduced with a suitable PCB layout (see Power Derating Curves Fig. 20)

2. When mounted on a 4 layers PCB

**ELECTRICAL CHARACTERISTICS** $V_{CC} = +5V$ , GND = 0V,  $T_{amb} = 25^\circ C$  (unless otherwise specified)

Symbol	Parameter	Min.	Typ.	Max.	Unit
$I_{CC}$	Supply Current No input signal, no load		6	8	mA
$I_{STANDBY}$	Standby Current <sup>1)</sup> No input signal, $V_{stdby} = V_{CC}$ , $R_L = 8\Omega$		10	1000	nA
$V_{OO}$	Output Offset Voltage No input signal, $R_L = 8\Omega$		5	20	mV
$P_o$	Output Power $THD = 1\% \text{ Max}, f = 1\text{kHz}, R_L = 8\Omega$		1		W
THD + N	Total Harmonic Distortion + Noise $P_o = 250\text{mW rms}, G_v = 2, 20\text{Hz} < f < 20\text{kHz}, R_L = 8\Omega$		0.15		%
PSRR	Power Supply Rejection Ratio <sup>2)</sup> $f = 217\text{Hz}, R_L = 8\Omega, R_{Feed} = 22\text{K}\Omega, V_{ripple} = 200\text{mV rms}$		75		dB
$\Phi_M$	Phase Margin at Unity Gain $R_L = 8\Omega, C_L = 500\text{pF}$		70		Degrees
GM	Gain Margin $R_L = 8\Omega, C_L = 500\text{pF}$		20		dB
GBP	Gain Bandwidth Product $R_L = 8\Omega$		2		MHz

1. Standby mode is activated when  $V_{stdby}$  is tied to  $V_{CC}$ 2. Dynamic measurements -  $20 \cdot \log(\text{rms}(V_{out})/\text{rms}(V_{ripple}))$ .  $V_{ripple}$  is the superimposed sinus signal to  $V_{CC}$  @  $f = 217\text{Hz}$  $V_{CC} = +3.3V$ , GND = 0V,  $T_{amb} = 25^\circ C$  (unless otherwise specified)<sup>3)</sup>

Symbol	Parameter	Min.	Typ.	Max.	Unit
$I_{CC}$	Supply Current No input signal, no load		5.5	8	mA
$I_{STANDBY}$	Standby Current <sup>1)</sup> No input signal, $V_{stdby} = V_{CC}$ , $R_L = 8\Omega$		10	1000	nA
$V_{OO}$	Output Offset Voltage No input signal, $R_L = 8\Omega$		5	20	mV
$P_o$	Output Power $THD = 1\% \text{ Max}, f = 1\text{kHz}, R_L = 8\Omega$		450		mW
THD + N	Total Harmonic Distortion + Noise $P_o = 250\text{mW rms}, G_v = 2, 20\text{Hz} < f < 20\text{kHz}, R_L = 8\Omega$		0.15		%
PSRR	Power Supply Rejection Ratio <sup>2)</sup> $f = 217\text{Hz}, R_L = 8\Omega, R_{Feed} = 22\text{K}\Omega, V_{ripple} = 200\text{mV rms}$		75		dB
$\Phi_M$	Phase Margin at Unity Gain $R_L = 8\Omega, C_L = 500\text{pF}$		70		Degrees
GM	Gain Margin $R_L = 8\Omega, C_L = 500\text{pF}$		20		dB
GBP	Gain Bandwidth Product $R_L = 8\Omega$		2		MHz

1. Standby mode is activated when  $V_{stdby}$  is tied to  $V_{CC}$ 2. Dynamic measurements -  $20 \cdot \log(\text{rms}(V_{out})/\text{rms}(V_{ripple}))$ .  $V_{ripple}$  is the superimposed sinus signal to  $V_{CC}$  @  $f = 217\text{Hz}$ 

3. All electrical values are made by correlation between 2.6V and 5V measurements

**ELECTRICAL CHARACTERISTICS** $V_{CC} = 2.6V$ , GND = 0V,  $T_{amb} = 25^\circ C$  (unless otherwise specified)







Symbol	Parameter	Min.	Typ.	Max.	Unit
$I_{CC}$	Supply Current No input signal, no load		5.5	8	mA
$I_{STANDBY}$	Standby Current <sup>1)</sup> No input signal, $V_{stdby} = V_{cc}$ , $R_L = 8\Omega$		10	1000	nA
$V_{OO}$	Output Offset Voltage No input signal, $R_L = 8\Omega$		5	20	mV
$P_o$	Output Power $THD = 1\% \text{ Max}, f = 1\text{kHz}, R_L = 8\Omega$		260		mW
$THD + N$	Total Harmonic Distortion + Noise $P_o = 200\text{mW rms}, G_v = 2, 20\text{Hz} < f < 20\text{kHz}, R_L = 8\Omega$		0.15		%
PSRR	Power Supply Rejection Ratio <sup>2)</sup> $f = 217\text{Hz}, R_L = 8\Omega, R_{Feed} = 22\text{K}\Omega, V_{ripple} = 200\text{mV rms}$		75		dB
$\Phi_M$	Phase Margin at Unity Gain $R_L = 8\Omega, C_L = 500\text{pF}$		70		Degrees
GM	Gain Margin $R_L = 8\Omega, C_L = 500\text{pF}$		20		dB
GBP	Gain Bandwidth Product $R_L = 8\Omega$		2		MHz




1. Standby mode is activated when  $V_{stdby}$  is tied to  $V_{cc}$ 2. Dynamic measurements -  $20 \times \log(\text{rms}(V_{out})/\text{rms}(V_{ripple}))$ .  $V_{ripple}$  is the superimposed sinus signal to  $V_{cc}$  @  $f = 217\text{Hz}$ 

Components	Functional Description
$R_{in}$	Inverting input resistor which sets the closed loop gain in conjunction with $R_{feed}$ . This resistor also forms a high pass filter with $C_{in}$ ( $f_c = 1 / (2 \times \pi \times R_{in} \times C_{in})$ )
$C_{in}$	Input coupling capacitor which blocks the DC voltage at the amplifier input terminal
$R_{feed}$	Feed back resistor which sets the closed loop gain in conjunction with $R_{in}$
$C_s$	Supply Bypass capacitor which provides power supply filtering
$C_b$	Bypass pin capacitor which provides half supply filtering
$C_{feed}$	Low pass filter capacitor allowing to cut the high frequency (low pass filter cut-off frequency $1 / (2 \times \pi \times R_{feed} \times C_{feed})$ )
$R_{stb}$	Pull-up resistor which fixes the right supply level on the standby pin
$G_v$	Closed loop gain in BTL configuration = $2 \times (R_{feed} / R_{in})$


**REMARKS**

- All measurements, except PSRR measurements, are made with a supply bypass capacitor  $C_s = 100\mu\text{F}$ .
- External resistors are not needed for having better stability when supply @  $V_{cc}$  down to 3V. By the way, the quiescent current remains the same.
- The standby response time is about  $1\mu\text{s}$ .

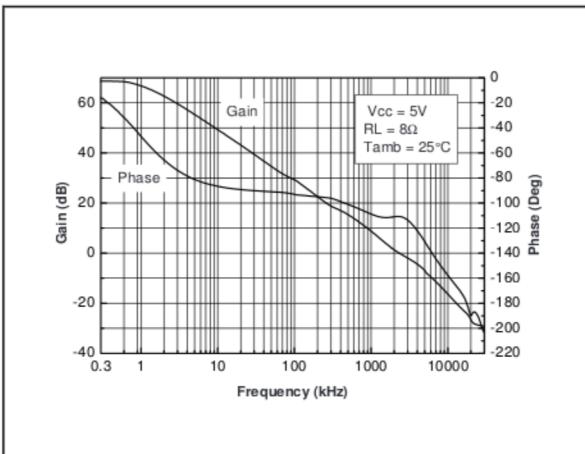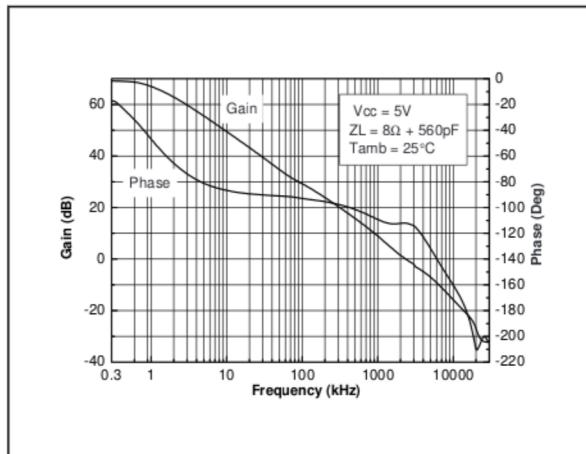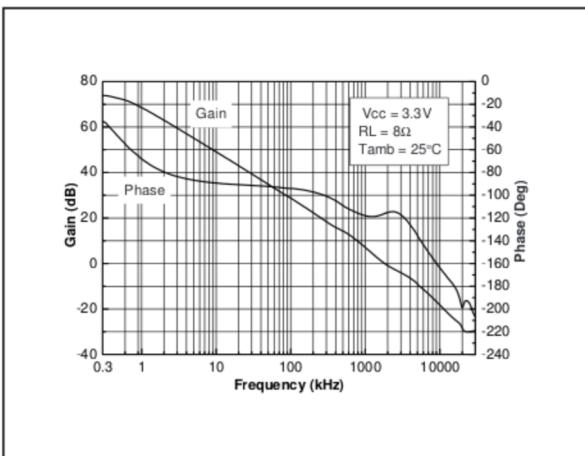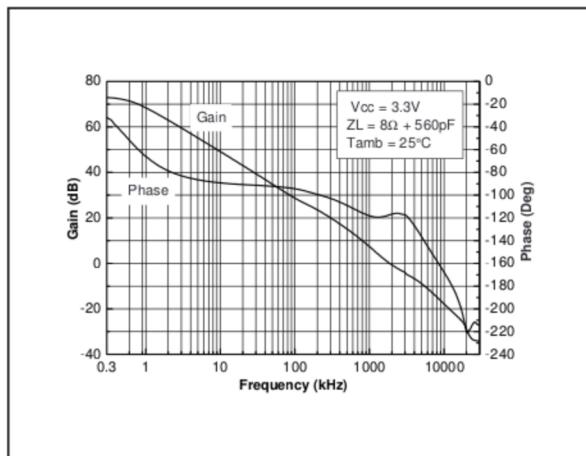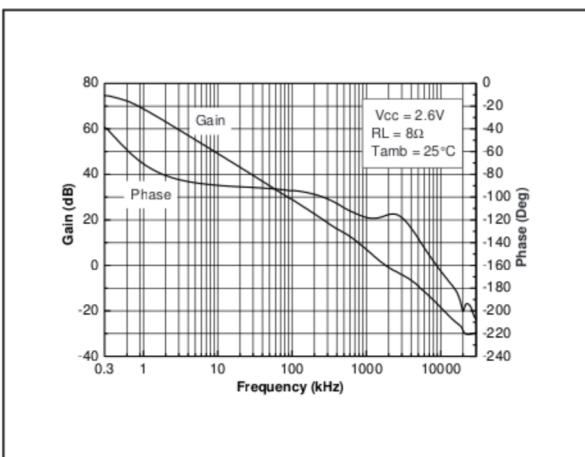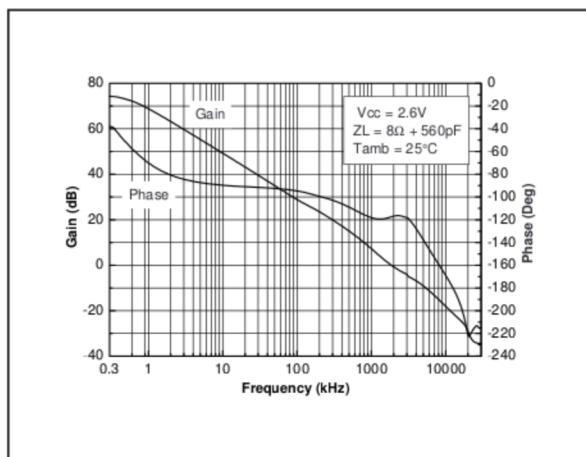
**Fig. 1 : Open Loop Frequency Response****Fig. 2 : Open Loop Frequency Response****Fig. 3 : Open Loop Frequency Response****Fig. 4 : Open Loop Frequency Response****Fig. 5 : Open Loop Frequency Response****Fig. 6 : Open Loop Frequency Response**

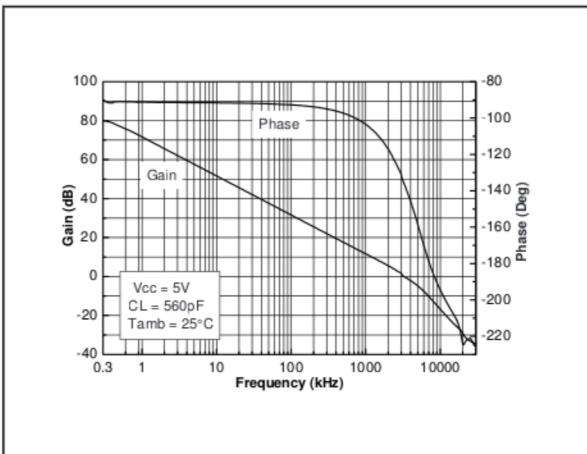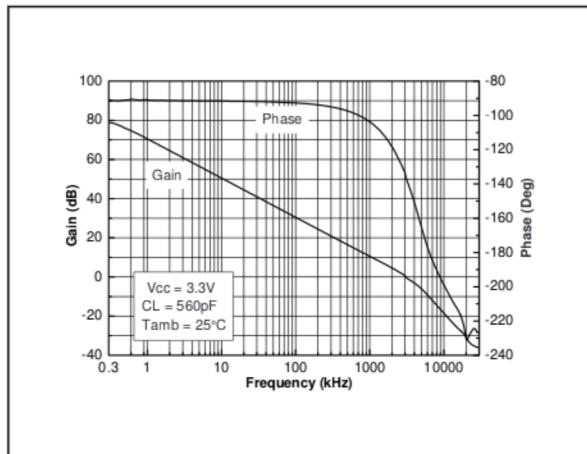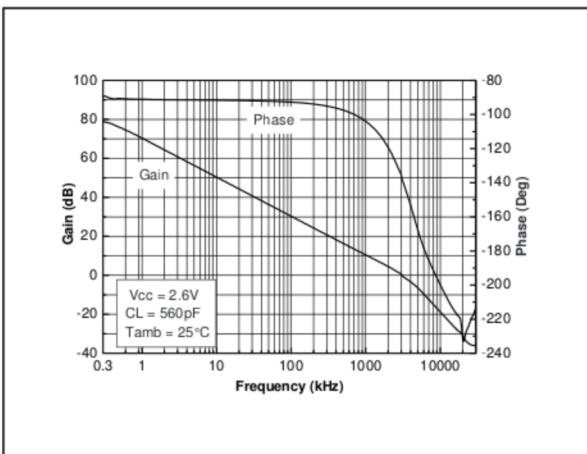**Fig. 7 : Open Loop Frequency Response****Fig. 8 : Open Loop Frequency Response****Fig. 9 : Open Loop Frequency Response**


**Fig. 10 : Power Supply Rejection Ratio (PSRR) vs Power supply**

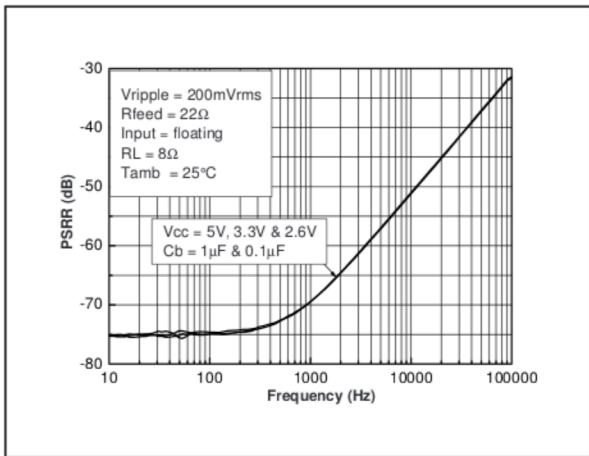


**Fig. 12 : Power Supply Rejection Ratio (PSRR) vs Bypass Capacitor**

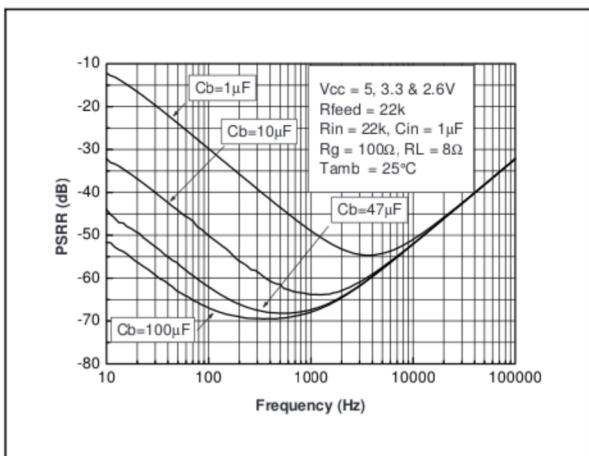


**Fig. 14 : Power Supply Rejection Ratio (PSRR) vs Feedback Resistor**

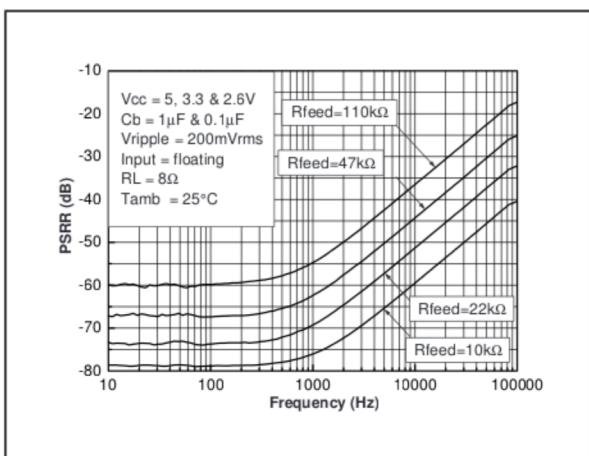


**Fig. 11 : Power Supply Rejection Ratio (PSRR) vs Feedback Capacitor**

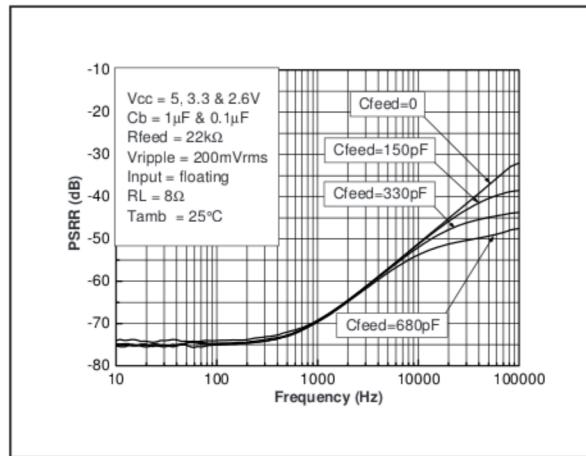


**Fig. 13 : Power Supply Rejection Ratio (PSRR) vs Input Capacitor**

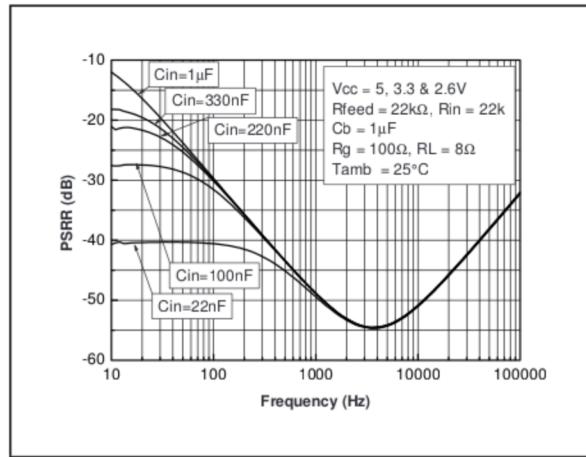


**Fig. 15 : Pout @ THD + N = 1% vs Supply Voltage vs RL**

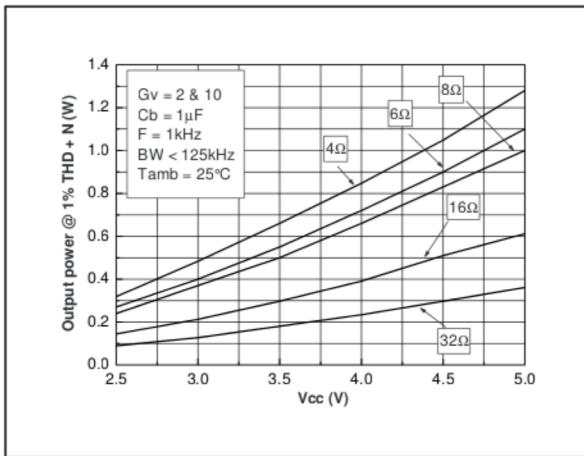


**Fig. 16 : Pout @ THD + N = 10% vs Supply Voltage vs RL**

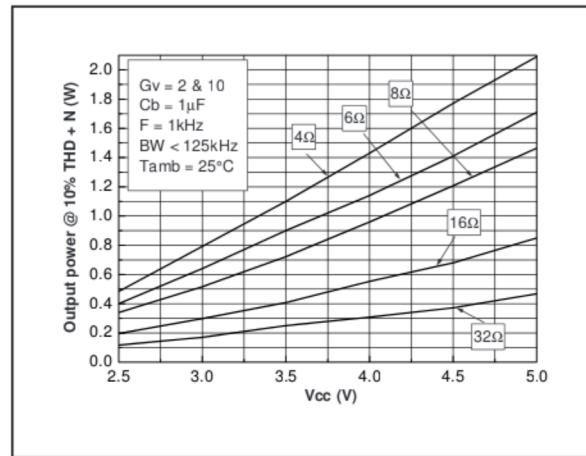


**Fig. 17 : Power Dissipation vs Pout**

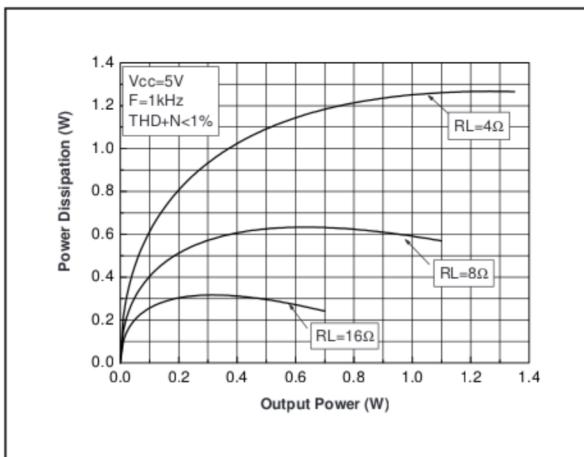


**Fig. 18 : Power Dissipation vs Pout**






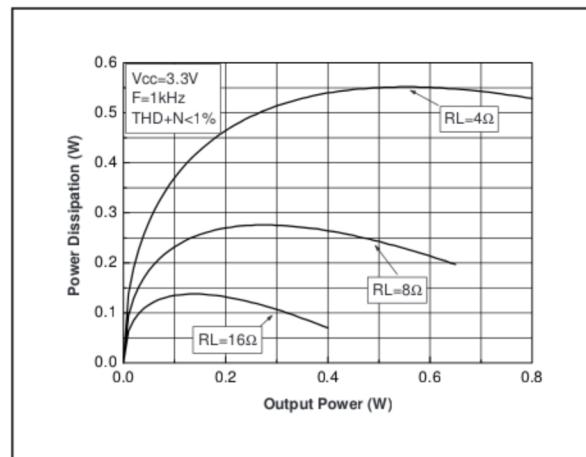


**Fig. 19 : Power Dissipation vs Pout**

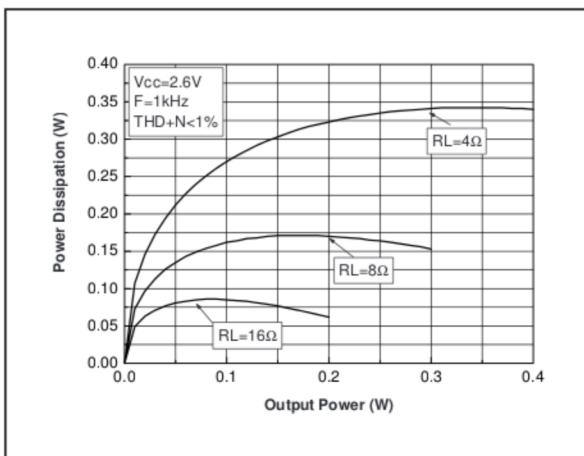


**Fig. 20 : Power Derating Curves**

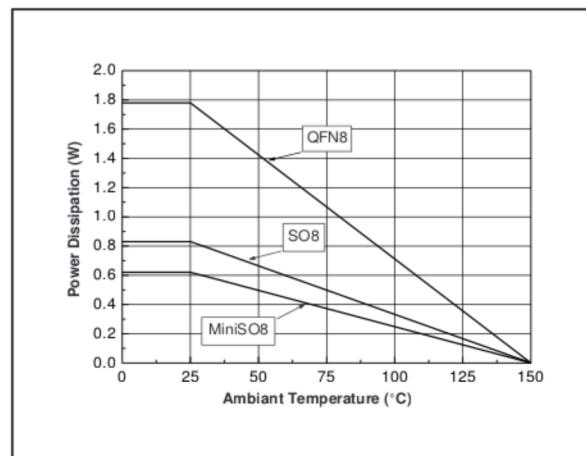


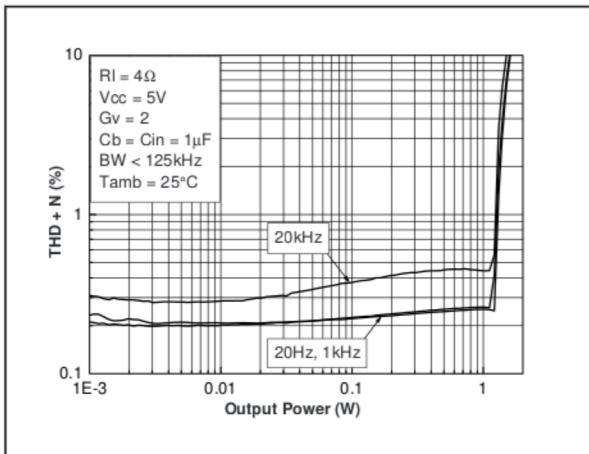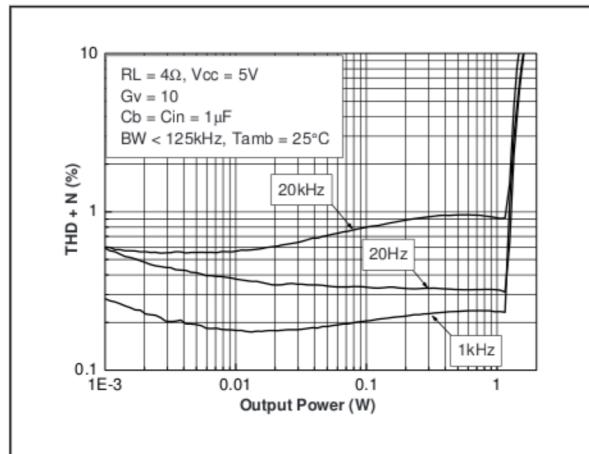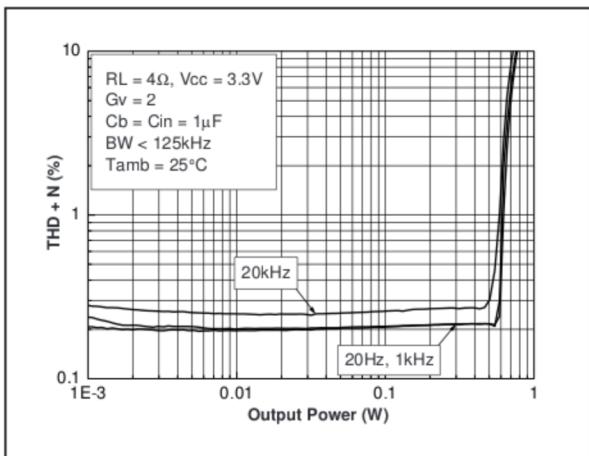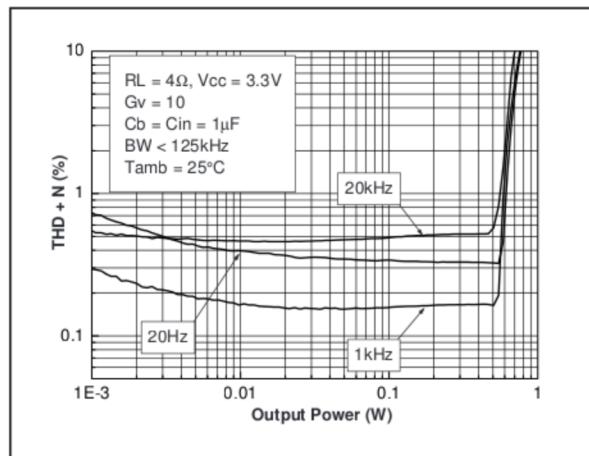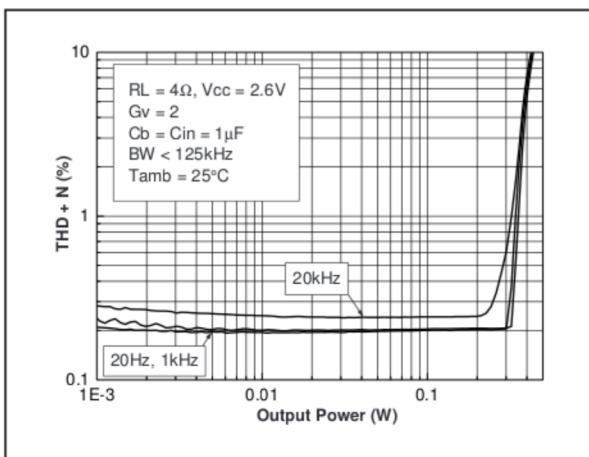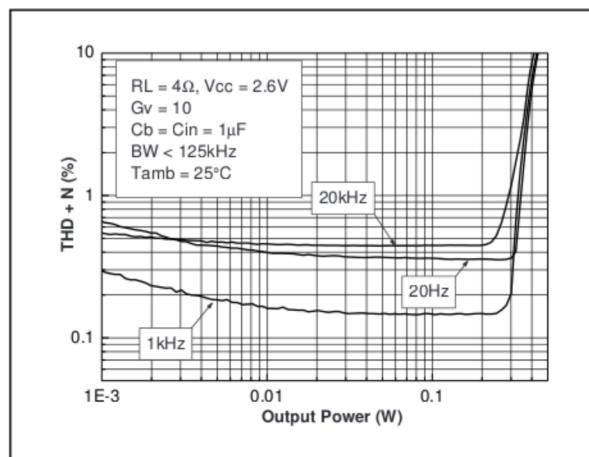**Fig. 21 : THD + N vs Output Power****Fig. 22 : THD + N vs Output Power****Fig. 23 : THD + N vs Output Power****Fig. 24 : THD + N vs Output Power****Fig. 25 : THD + N vs Output Power****Fig. 26 : THD + N vs Output Power**


**Fig. 27 : THD + N vs Output Power**

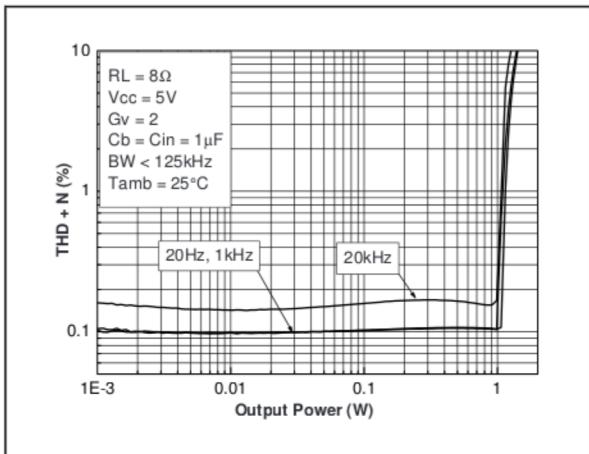


**Fig. 28 : THD + N vs Output Power**

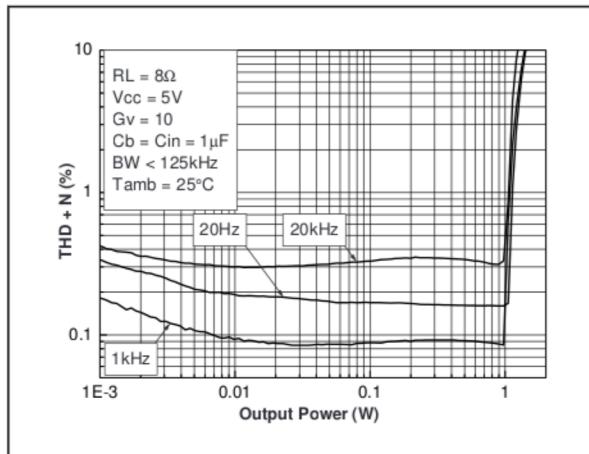


**Fig. 29 : THD + N vs Output Power**

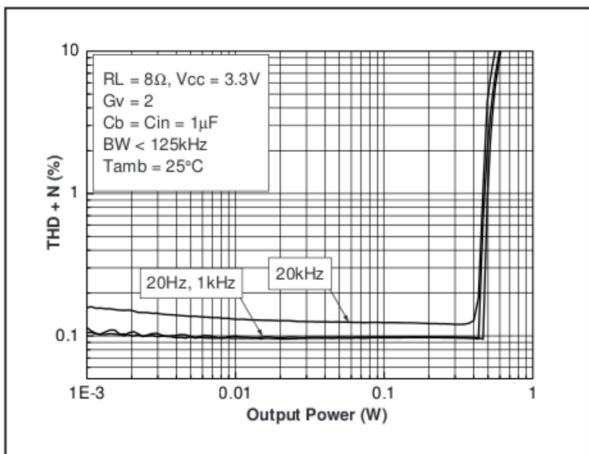


**Fig. 30 : THD + N vs Output Power**






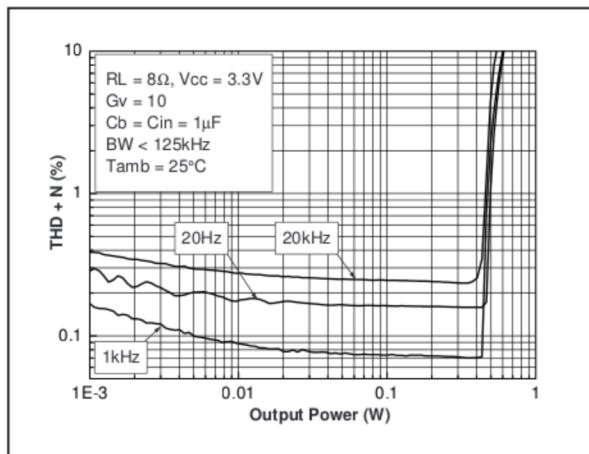


**Fig. 31 : THD + N vs Output Power**

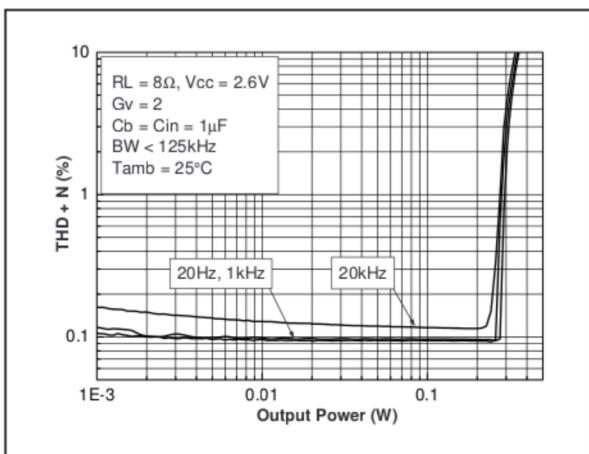


**Fig. 32 : THD + N vs Output Power**

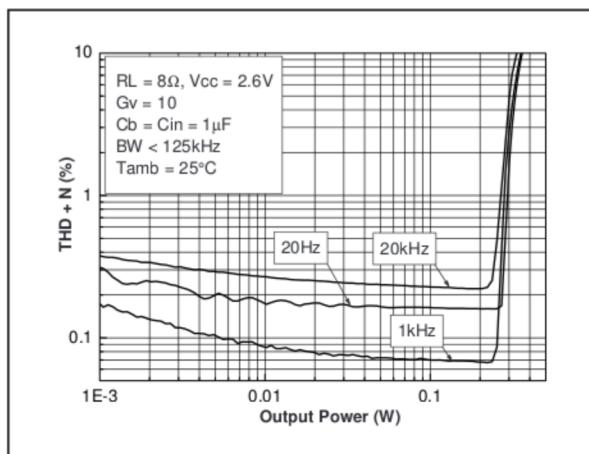


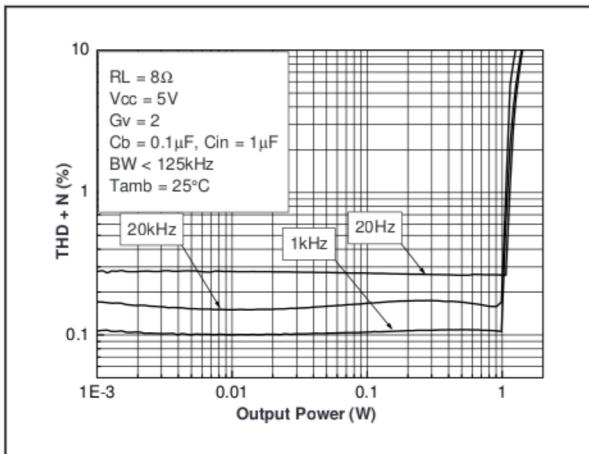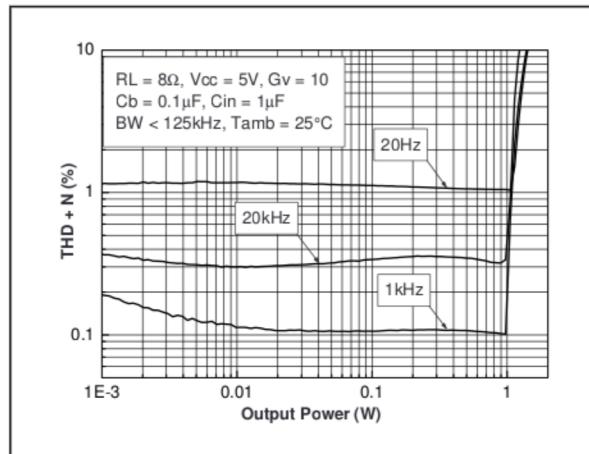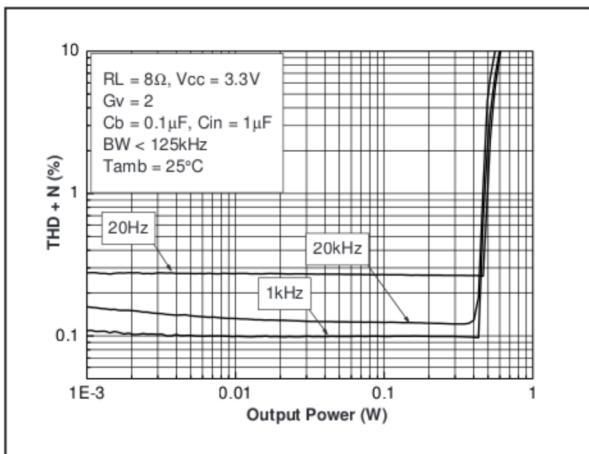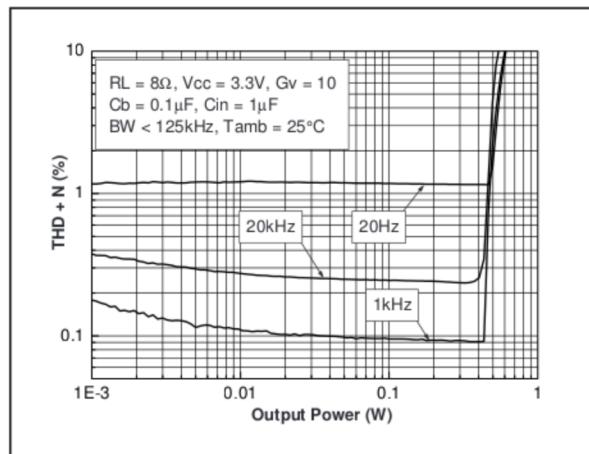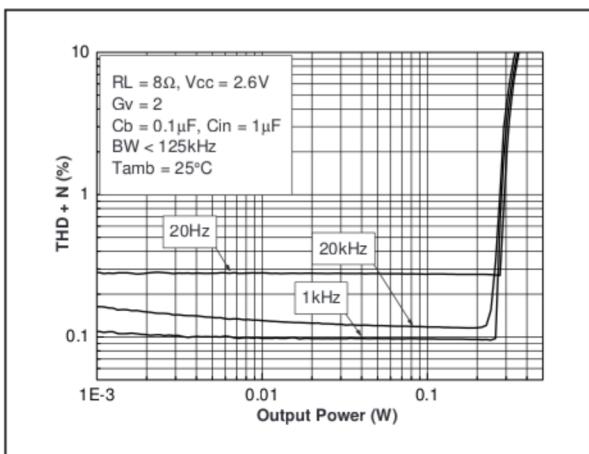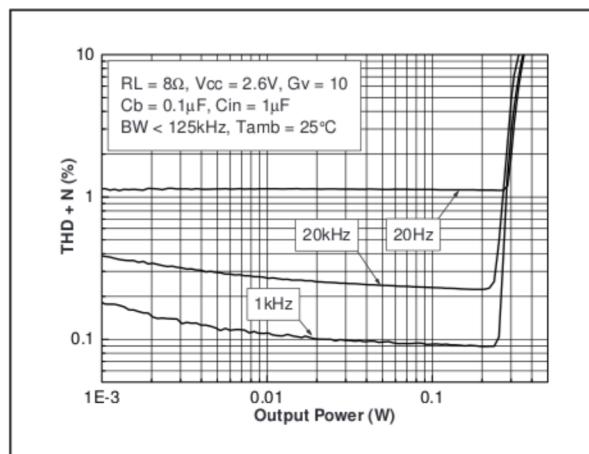**Fig. 33 : THD + N vs Output Power****Fig. 34 : THD + N vs Output Power****Fig. 35 : THD + N vs Output Power****Fig. 36 : THD + N vs Output Power****Fig. 37 : THD + N vs Output Power****Fig. 38 : THD + N vs Output Power**


**Fig. 39 : THD + N vs Output Power**

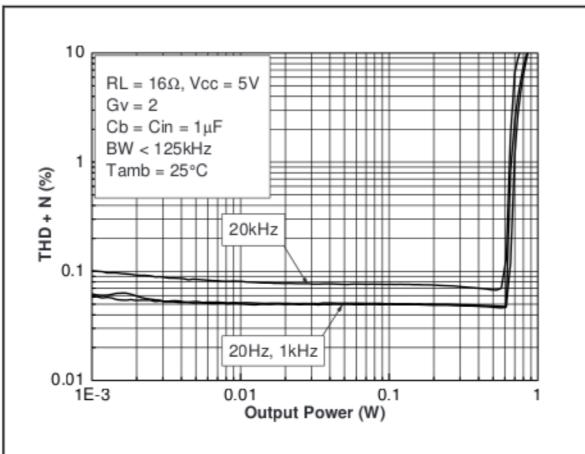


**Fig. 40 : THD + N vs Output Power**

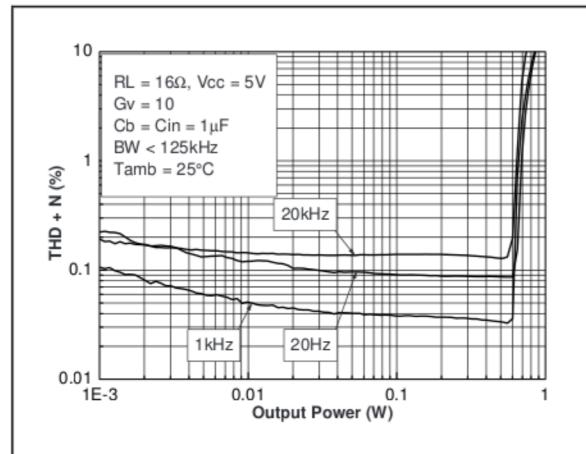


**Fig. 41 : THD + N vs Output Power**

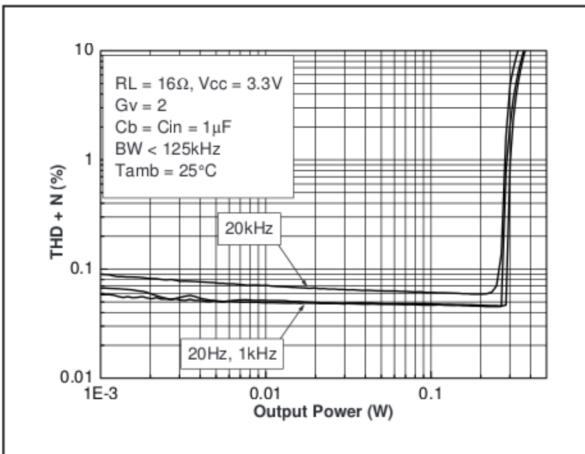


**Fig. 42 : THD + N vs Output Power**






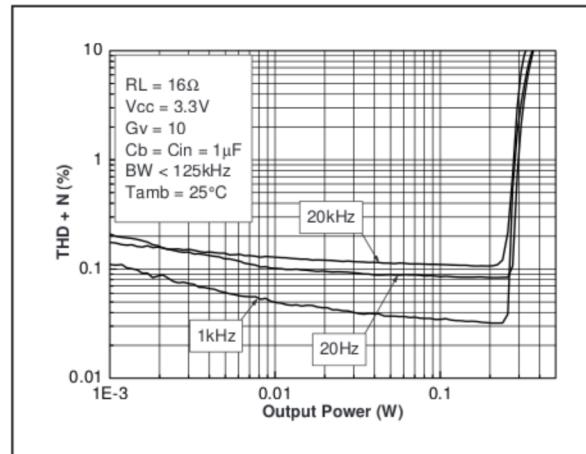


**Fig. 43 : THD + N vs Output Power**

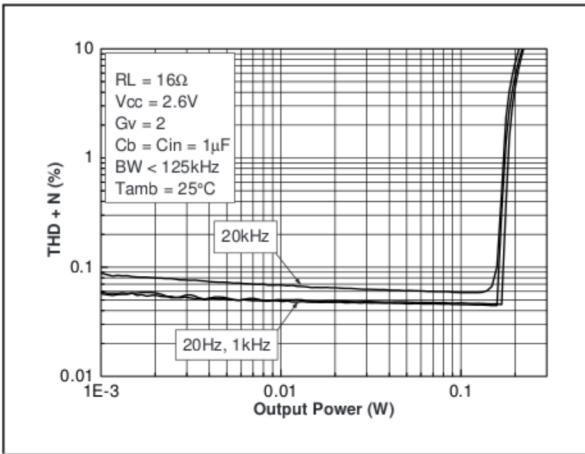


**Fig. 44 : THD + N vs Output Power**

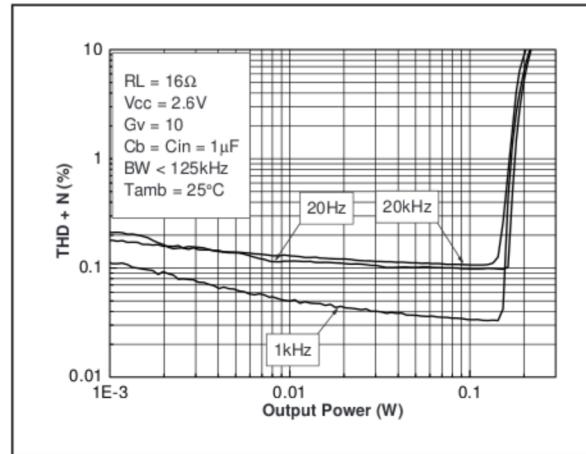


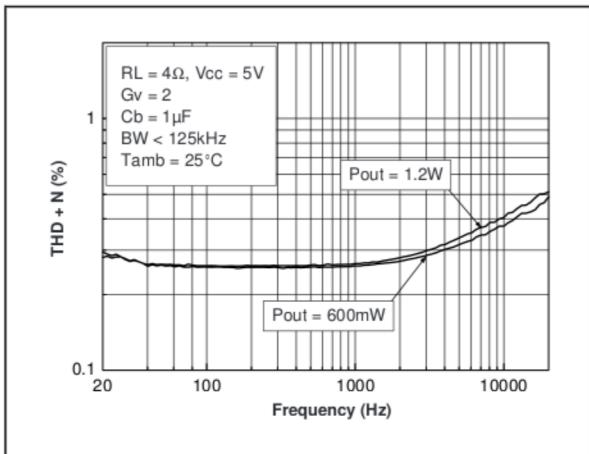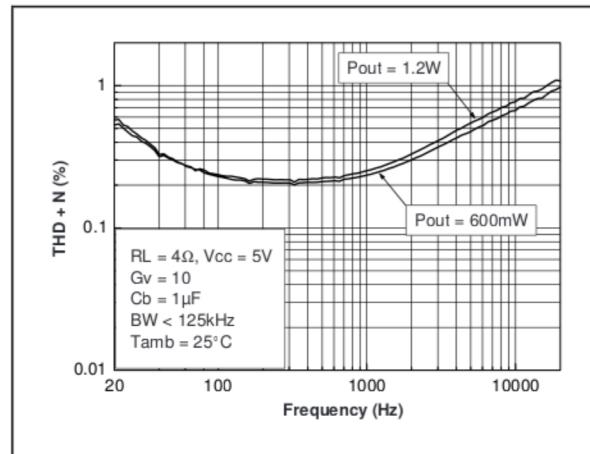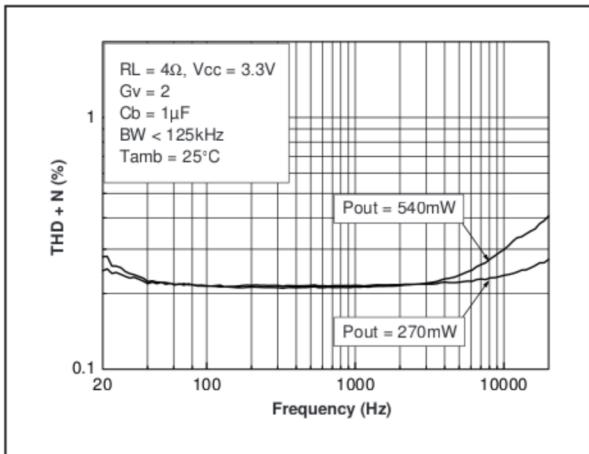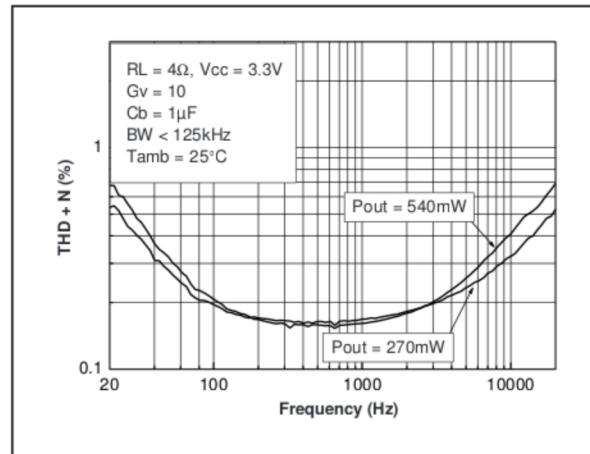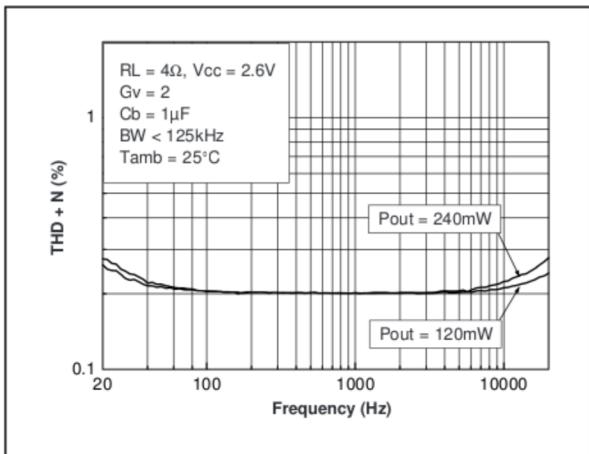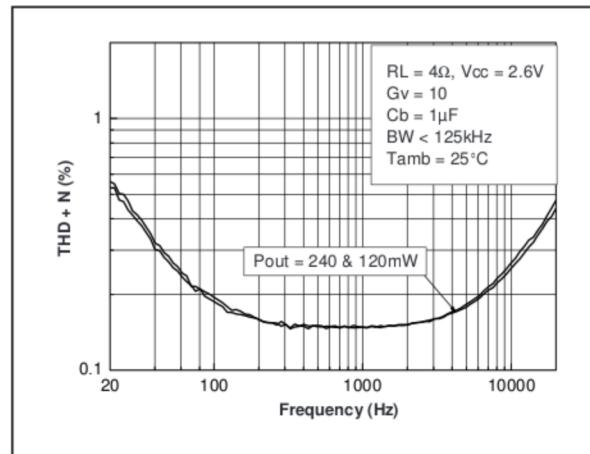**Fig. 45 : THD + N vs Frequency****Fig. 46 : THD + N vs Frequency****Fig. 47 : THD + N vs Frequency****Fig. 48 : THD + N vs Frequency****Fig. 49 : THD + N vs Frequency****Fig. 50 : THD + N vs Frequency**


**Fig. 51 : THD + N vs Frequency**

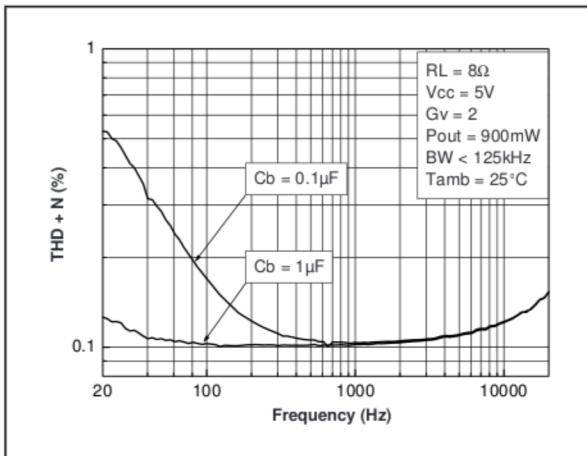


**Fig. 52 : THD + N vs Frequency**

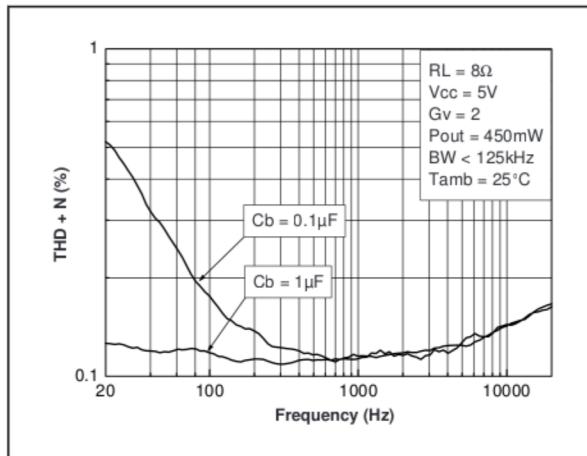


**Fig. 53 : THD + N vs Frequency**

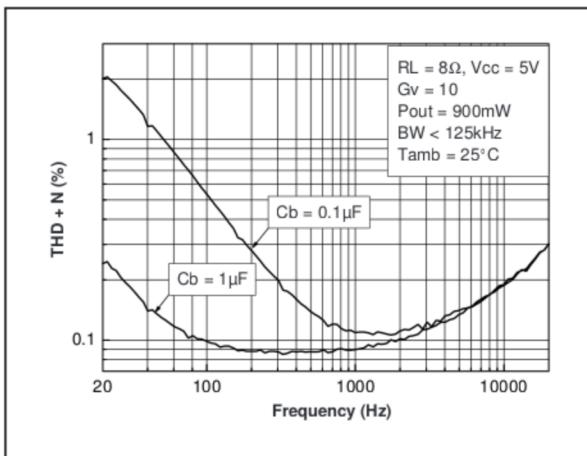


**Fig. 54 : THD + N vs Frequency**






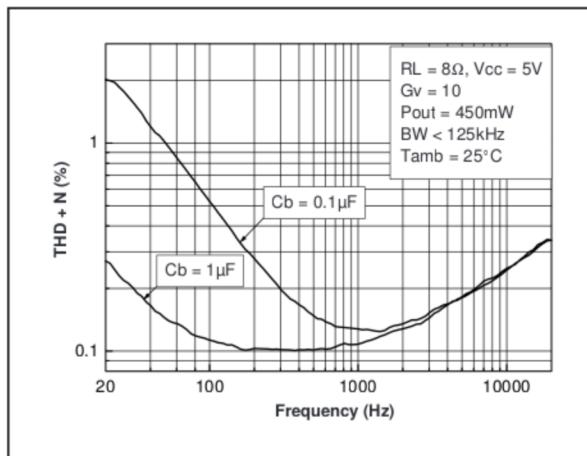


**Fig. 55 : THD + N vs Frequency**

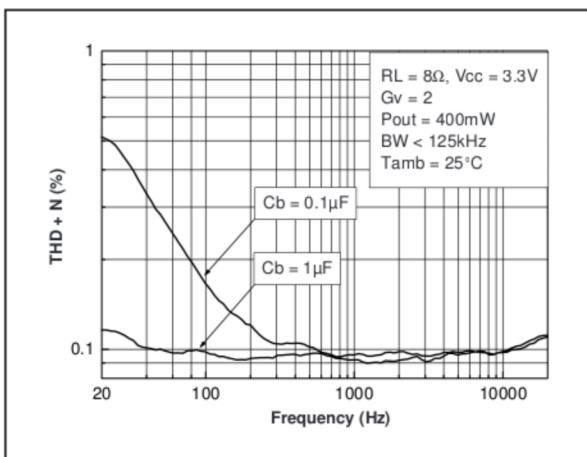


**Fig. 56 : THD + N vs Frequency**

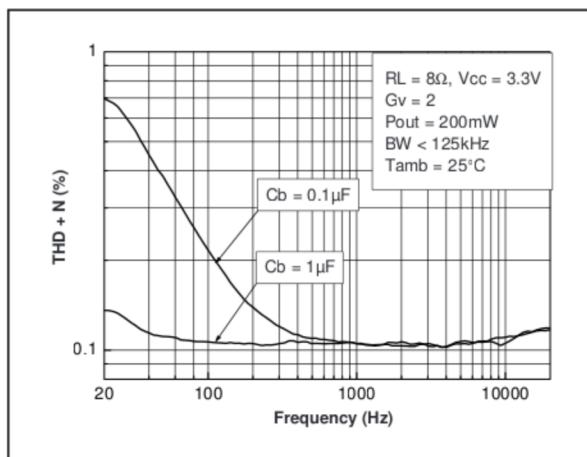


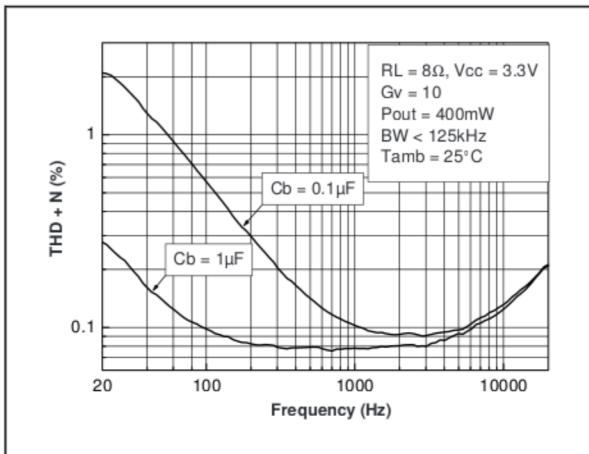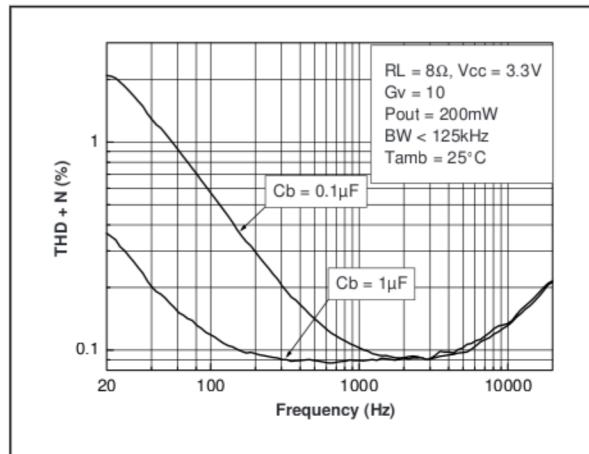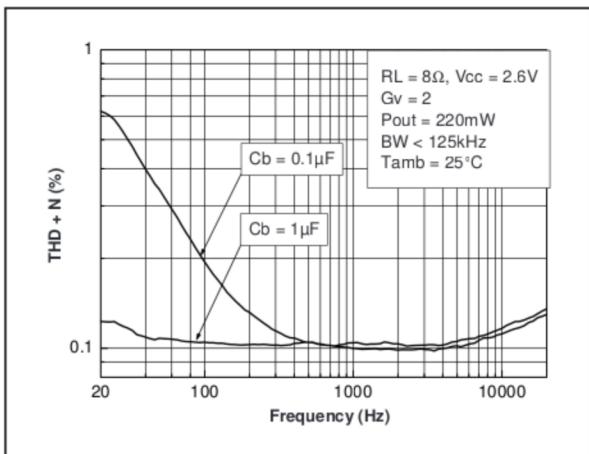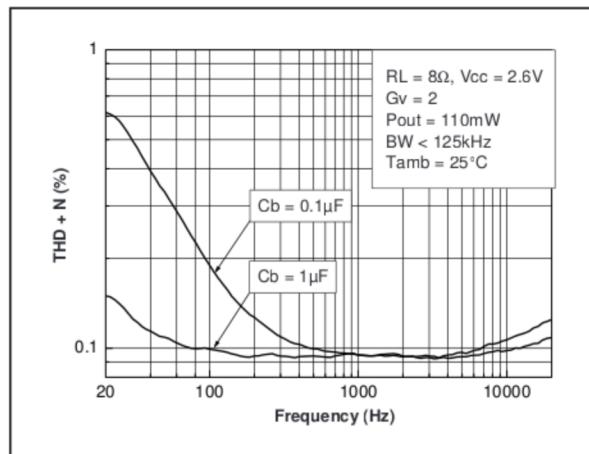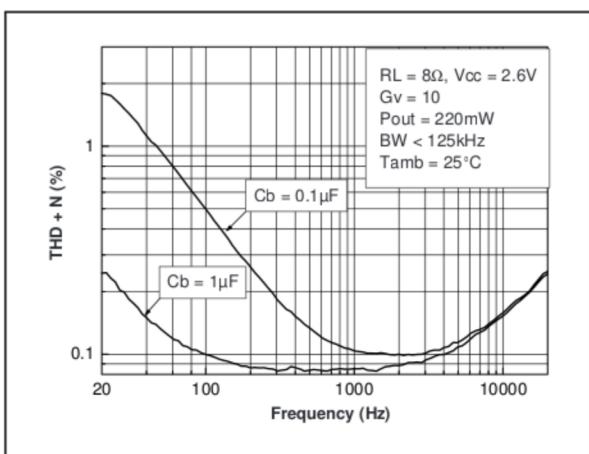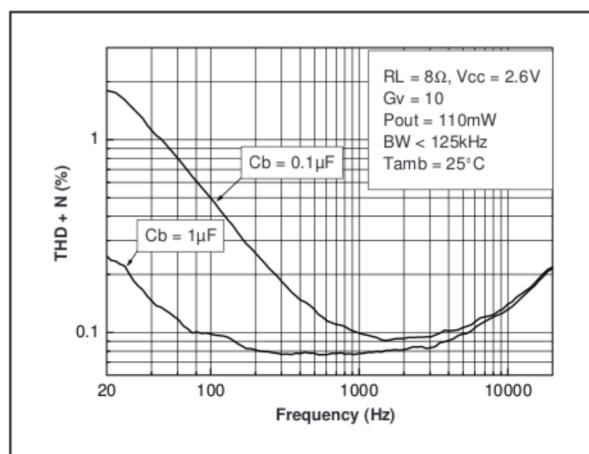**Fig. 57 : THD + N vs Frequency****Fig. 58 : THD + N vs Frequency****Fig. 59 : THD + N vs Frequency****Fig. 60 : THD + N vs Frequency****Fig. 61 : THD + N vs Frequency****Fig. 62 : THD + N vs Frequency**


**Fig. 63 : THD + N vs Frequency**

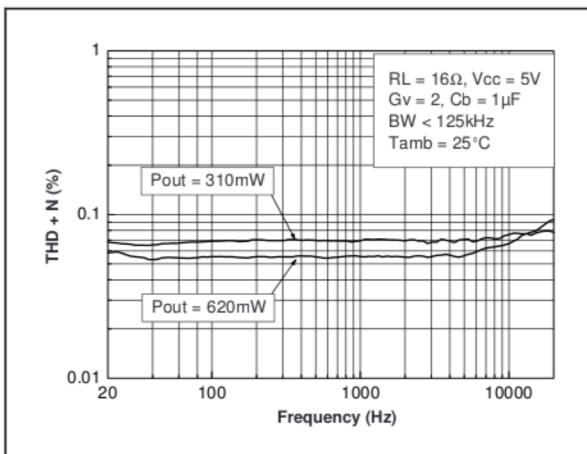


**Fig. 64 : THD + N vs Frequency**

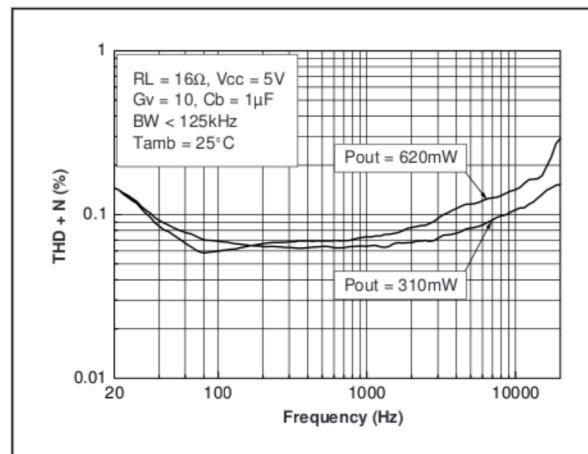


**Fig. 65 : THD + N vs Frequency**

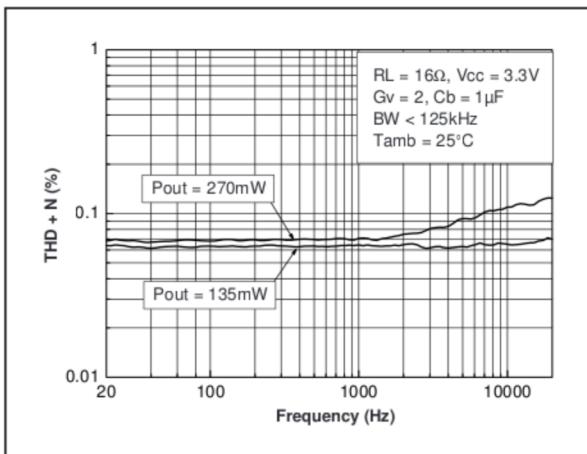


**Fig. 66 : THD + N vs Frequency**

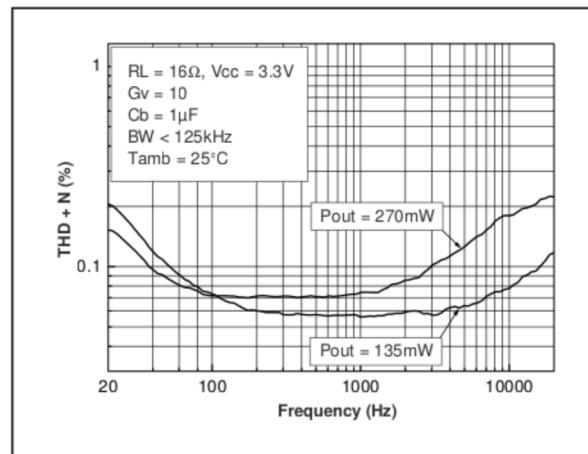


**Fig. 67 : THD + N vs Frequency**

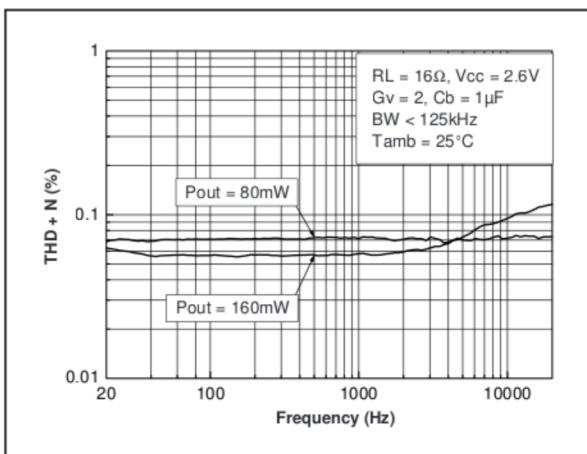


**Fig. 68 : THD + N vs Frequency**

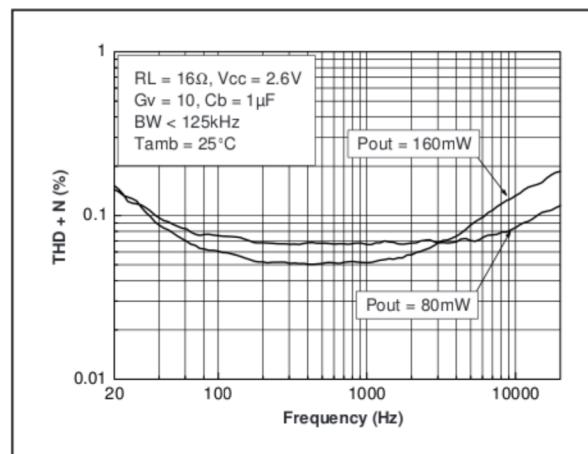


**Fig. 69 : Signal to Noise Ratio vs Power Supply with Unweighted Filter (20Hz to 20kHz)**

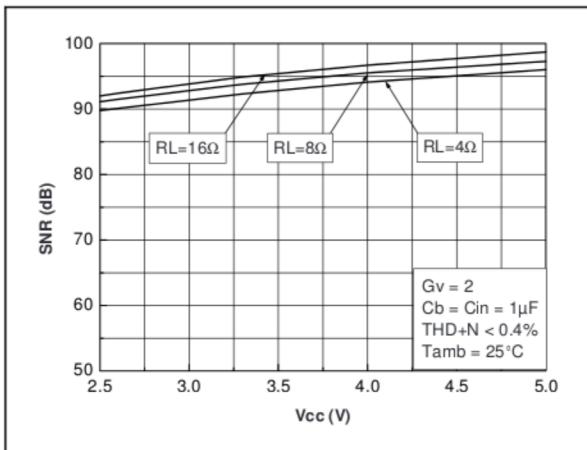


**Fig. 70 : Signal to Noise Ratio vs Power Supply with Weighted Filter Type A**

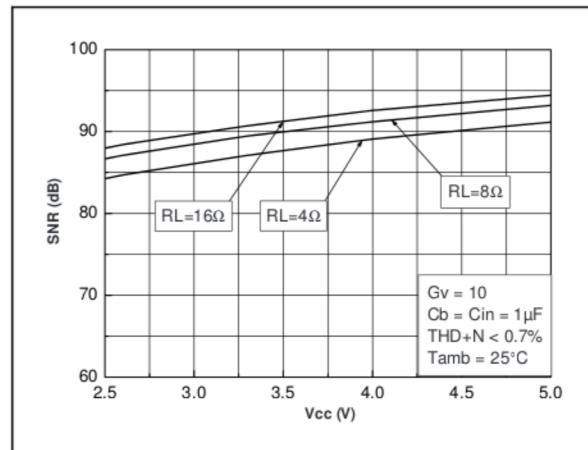


**Fig. 71 : Signal to Noise Ratio vs Power Supply with Weighted Filter type A**

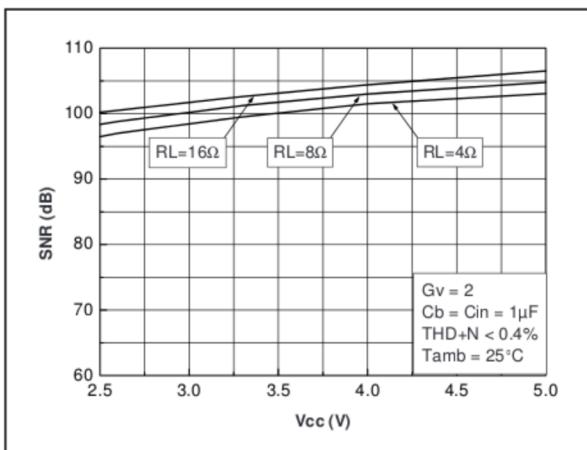


**Fig. 72 : Current Consumption vs Power Supply Voltage**

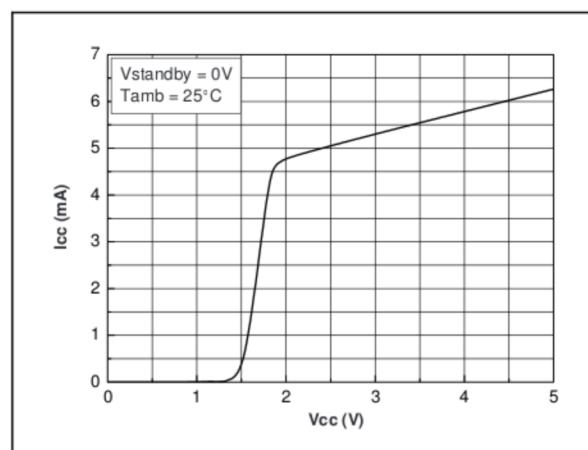


**Fig. 73 : Signal to Noise Ratio Vs Power Supply with Unweighted Filter (20Hz to 20kHz)**

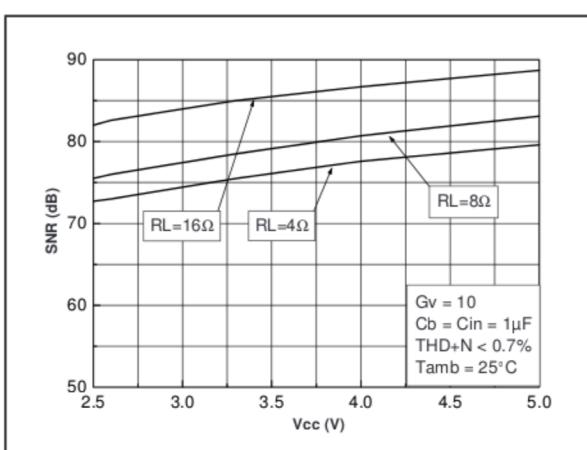


**Fig. 74 : Current Consumption vs Standby Voltage @ Vcc = 5V**

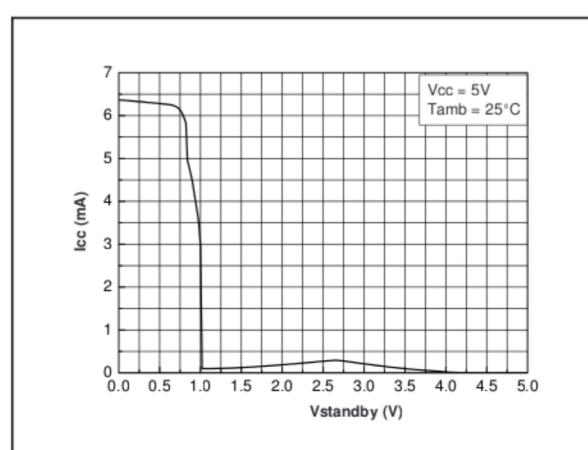


**Fig. 75 : Current Consumption vs Standby Voltage @ Vcc = 2.6V**

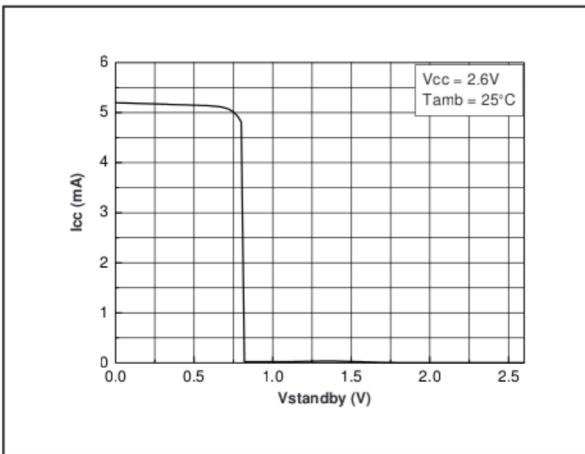


**Fig. 76 : Current Consumption vs Standby Voltage @ Vcc = 3.3V**

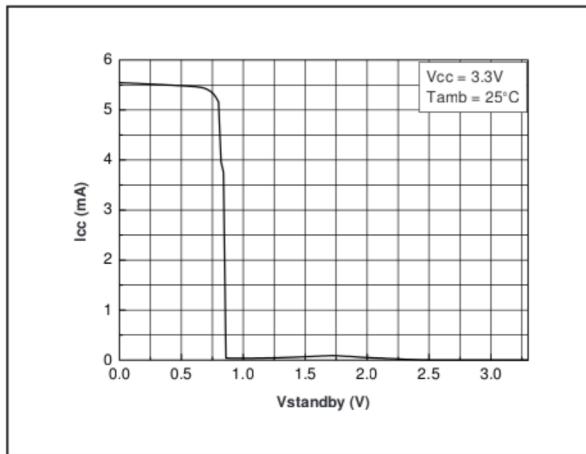


**Fig. 77 : Clipping Voltage vs Power Supply Voltage and Load Resistor**

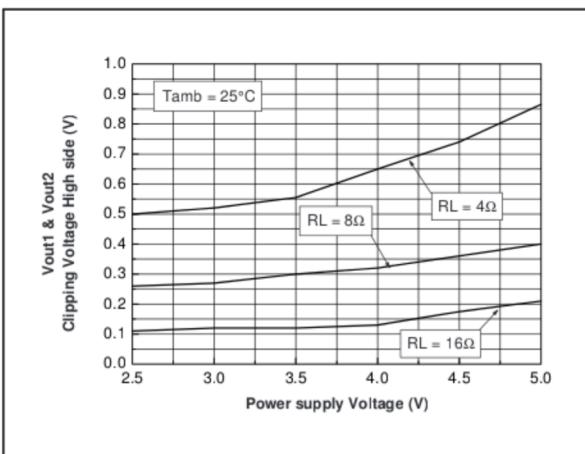


**Fig. 78 : Clipping Voltage vs Power Supply Voltage and Load Resistor**

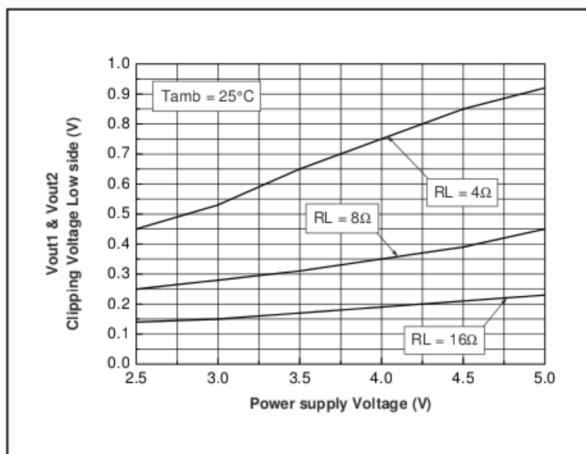

**Fig. 79 : Vout1+Vout2 Unweighted Noise Floor**

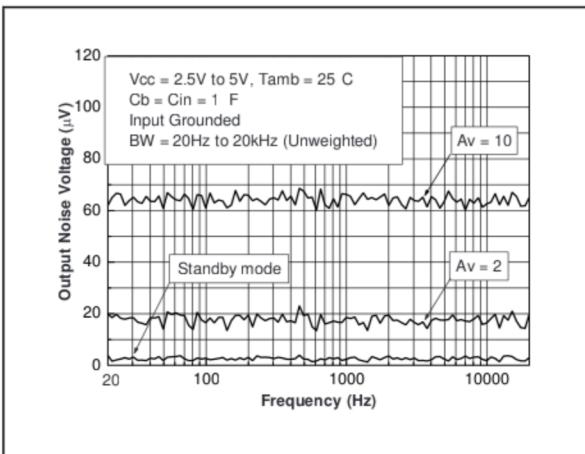


**Fig. 80 : Vout1+Vout2 A-weighted Noise Floor**

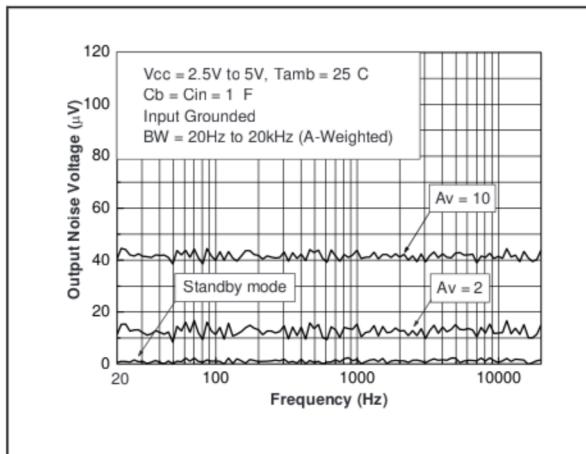


## **APPLICATION INFORMATION**


**Fig. 81 : Demoboard Schematic**

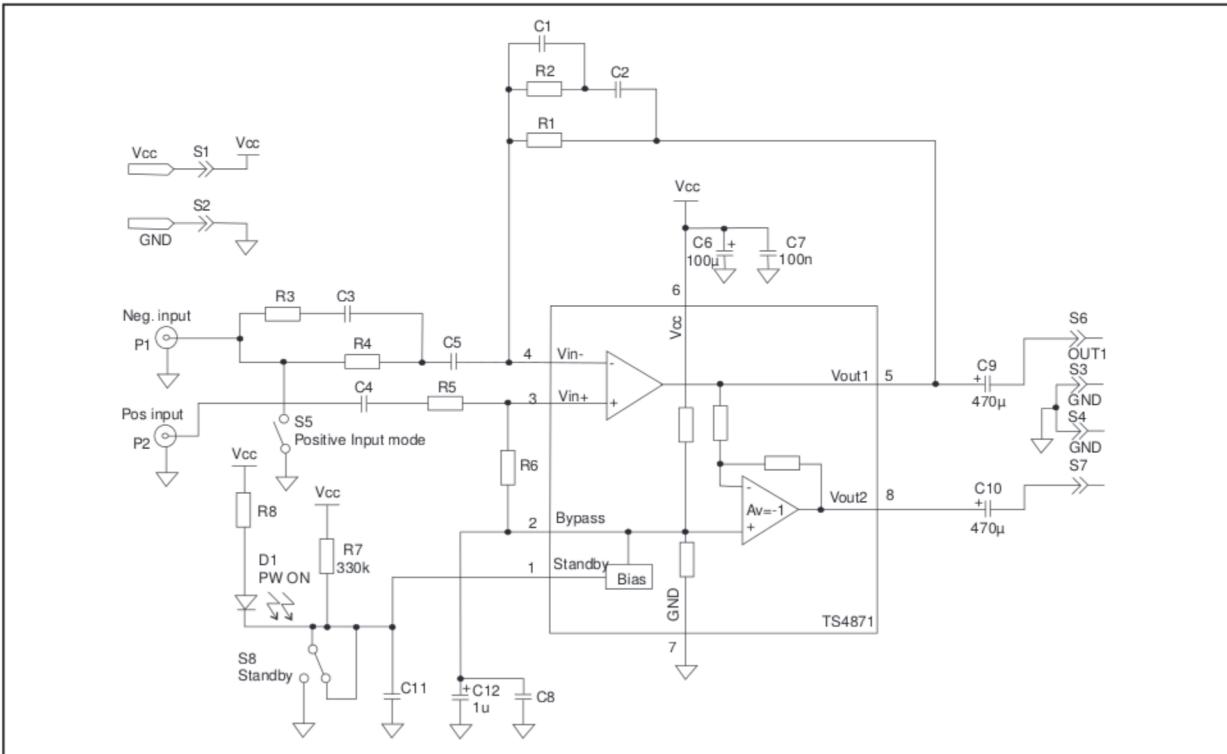


**Fig. 82 : SO8 & MiniSO8 Demoboard Components Side**

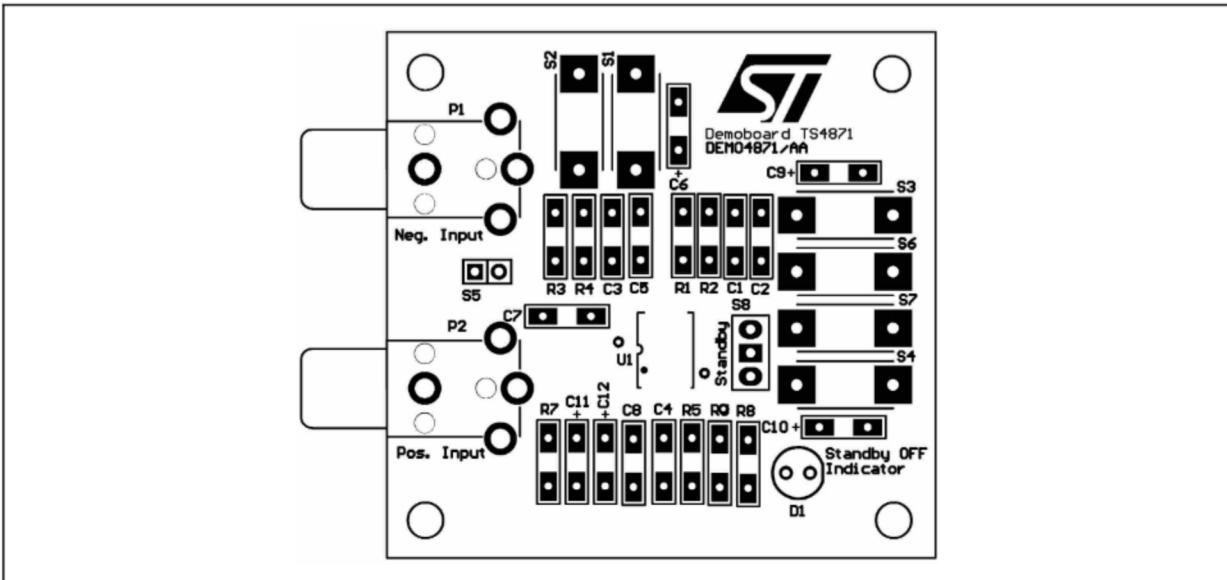

**Fig. 83 : SO8 & MiniSO8 Demoboard Top Solder Layer**

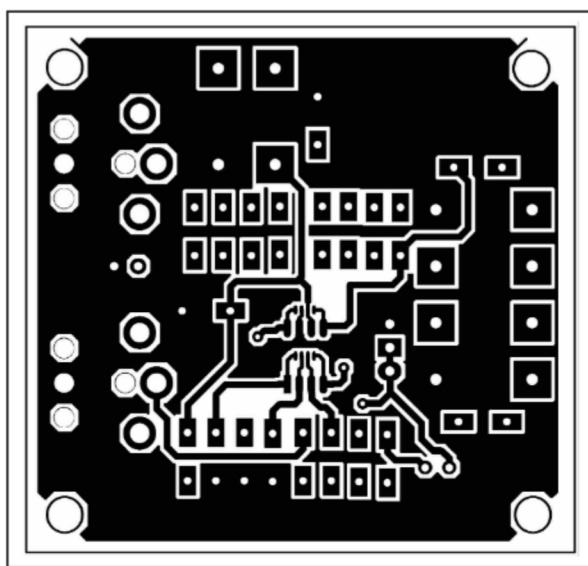

**Fig. 84 : SO8 & MiniSO8 Demoboard Bottom Solder Layer**

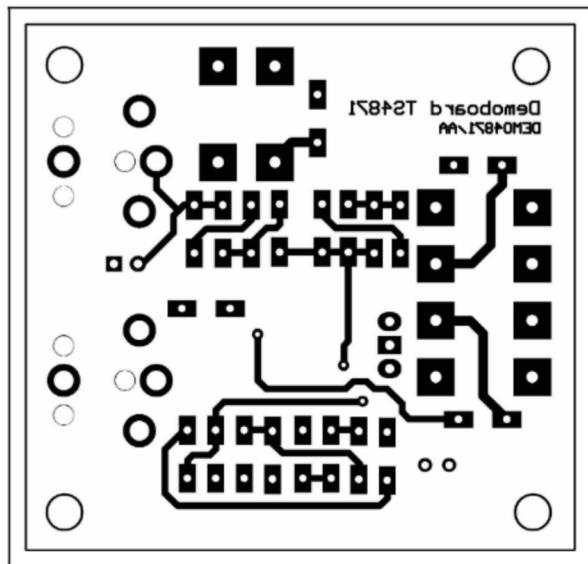

#### ■ BTL Configuration Principle

The TS4871 is a monolithic power amplifier with a BTL output type. BTL (Bridge Tied Load) means that each end of the load is connected to two single ended output amplifiers. Thus, we have :

Single ended output 1 = Vout1 = Vout (V)  
Single ended output 2 = Vout2 = -Vout (V)

And Vout1 - Vout2 = 2Vout (V)

The output power is:

$$P_{\text{out}} = \frac{(2 V_{\text{out RMS}})^2}{R_L} (\text{W})$$

For the same power supply voltage, the output power in BTL configuration is four times higher than the output power in single ended configuration.

#### ■ Gain In Typical Application Schematic (see page 1)

In flat region (no effect of Cin), the output voltage of the first stage is:

$$V_{\text{out1}} = -V_{\text{in}} \frac{R_{\text{feed}}}{R_{\text{in}}} (\text{V})$$

For the second stage :  $V_{\text{out2}} = -V_{\text{out1}}$  (V)

The differential output voltage is:

$$V_{\text{out2}} - V_{\text{out1}} = 2V_{\text{in}} \frac{R_{\text{feed}}}{R_{\text{in}}} (\text{V})$$

The differential gain named gain (Gv) for more convenient usage is:

$$G_v = \frac{V_{\text{out2}} - V_{\text{out1}}}{V_{\text{in}}} = 2 \frac{R_{\text{feed}}}{R_{\text{in}}}$$

Remark :  $V_{\text{out2}}$  is in phase with  $V_{\text{in}}$  and  $V_{\text{out1}}$  is 180 phased with  $V_{\text{in}}$ . It means that the positive terminal of the loudspeaker should be connected to  $V_{\text{out2}}$  and the negative to  $V_{\text{out1}}$ .

#### ■ Low and high frequency response

In low frequency region, the effect of  $C_{\text{in}}$  starts.  $C_{\text{in}}$  with  $R_{\text{in}}$  forms a high pass filter with a -3dB cut off frequency.

$$F_{\text{CL}} = \frac{1}{2\pi R_{\text{in}} C_{\text{in}}} (\text{Hz})$$

In high frequency region, you can limit the bandwidth by adding a capacitor ( $C_{\text{feed}}$ ) in parallel on  $R_{\text{feed}}$ . Its form a low pass filter with a -3dB cut off frequency.

$$F_{\text{CH}} = \frac{1}{2\pi R_{\text{feed}} C_{\text{feed}}} (\text{Hz})$$

## ■ Power dissipation and efficiency

Hypothesis :

- Voltage and current in the load are sinusoidal ( $V_{out}$  and  $I_{out}$ )
- Supply voltage is a pure DC source ( $V_{cc}$ )

Regarding the load we have:

$$V_{out} = V_{PEAK} \sin\omega t \text{ (V)}$$

and

$$I_{out} = \frac{V_{out}}{R_L} \text{ (A)}$$

and

$$P_{out} = \frac{V_{PEAK}^2}{2R_L} \text{ (W)}$$

Then, the average current delivered by the supply voltage is:

$$I_{cc\ AVG} = 2 \frac{V_{PEAK}}{\pi R_L} \text{ (A)}$$

The power delivered by the supply voltage is  
 $P_{supply} = V_{cc} I_{cc\ AVG} \text{ (W)}$

Then, the **power dissipated by the amplifier** is  
 $P_{diss} = P_{supply} - P_{out} \text{ (W)}$

$$P_{diss} = \frac{2\sqrt{2}V_{cc}}{\pi\sqrt{R_L}} \sqrt{P_{out}} - P_{out} \text{ (W)}$$

and the maximum value is obtained when:

$$\frac{\partial P_{diss}}{\partial P_{out}} = 0$$

and its value is:

$$P_{diss\ max} = \frac{2V_{cc}^2}{\pi^2 R_L} \text{ (W)}$$

Remark : This maximum value is only depending on power supply voltage and load values.

The **efficiency** is the ratio between the output power and the power supply

$$\eta = \frac{P_{out}}{P_{supply}} = \frac{\pi V_{PEAK}}{4V_{cc}}$$

The maximum theoretical value is reached when  $V_{peak} = V_{cc}$ , so

$$\frac{\pi}{4} = 78.5\%$$

## ■ Decoupling of the circuit

Two capacitors are needed to bypass properly the TS4871, a power supply bypass capacitor  $C_s$  and a bias voltage bypass capacitor  $C_b$ .

**$C_s$**  has especially an influence on the THD+N in high frequency (above 7kHz) and indirectly on the power supply disturbances.

With 100μF, you can expect similar THD+N performances like shown in the datasheet.

If  $C_s$  is lower than 100μF, in high frequency increases, THD+N and disturbances on the power supply rail are less filtered.

To the contrary, if  $C_s$  is higher than 100μF, those disturbances on the power supply rail are more filtered.

**$C_b$**  has an influence on THD+N in lower frequency, but its function is critical on the final result of PSRR with input grounded in lower frequency.

If  $C_b$  is lower than 1μF, THD+N increase in lower frequency (see THD+N vs frequency curves) and the PSRR worsens up

If  $C_b$  is higher than 1μF, the benefit on THD+N in lower frequency is small but the benefit on PSRR is substantial (see PSRR vs.  $C_b$  curve : fig.12).

Note that  $C_{in}$  has a non-negligible effect on PSRR in lower frequency. Lower is its value, higher is the PSRR (see fig. 13).

## ■ Pop and Click performance

Pop and Click performance is intimately linked with the size of the input capacitor  $C_{in}$  and the bias voltage bypass capacitor  $C_b$ .

Size of  $C_{in}$  is due to the lower cut-off frequency and PSRR value requested. Size of  $C_b$  is due to THD+N and PSRR requested always in lower frequency.

Moreover,  $C_b$  determines the speed that the amplifier turns ON. The slower the speed is, the softer the turn ON noise is.

The charge time of  $C_b$  is directly proportional to

the internal generator resistance  $50\text{k}\Omega$ .

Then, the charge time constant for  $C_b$  is  
 $\tau_b = 50\text{k}\Omega \times C_b$  (s)

As  $C_b$  is directly connected to the non-inverting input (pin 2 & 3) and if we want to minimize, in amplitude and duration, the output spike on  $V_{out1}$  (pin 5),  $C_{in}$  must be charged faster than  $C_b$ . The charge time constant of  $C_{in}$  is  
 $\tau_{in} = (R_{in} + R_{feed}) \times C_{in}$  (s)

Thus we have the relation

$$\tau_{in} \ll \tau_b \text{ (s)}$$

The respect of this relation permits to minimize the pop and click noise.

Remark : Minimize  $C_{in}$  and  $C_b$  has a benefit on pop and click phenomena but also on cost and size of the application.

Example : your target for the -3dB cut off frequency is 100 Hz. With  $R_{in} = R_{feed} = 22\text{k}\Omega$ ,  $C_{in} = 72\text{nF}$  (in fact 82nF or 100nF).

With  $C_b = 1\mu\text{F}$ , if you choose the one of the latest two values of  $C_{in}$ , the pop and click phenomena at power supply ON or standby function ON/OFF will be very small

$$50\text{k}\Omega \times 1\mu\text{F} \gg 44\text{k}\Omega \times 100\text{nF} \quad (50\text{ms} \gg 4.4\text{ms}).$$

Increasing  $C_{in}$  value increases the pop and click phenomena to an unpleasant sound at power supply ON and standby function ON/OFF.

Why  $C_s$  is not important in pop and click consideration ?

Hypothesis :

- $C_s = 100\mu\text{F}$
- Supply voltage = 5V
- Supply voltage internal resistor =  $0.1\Omega$
- Supply current of the amplifier  $I_{cc} = 6\text{mA}$

At power ON of the supply, the supply capacitor is charged through the internal power supply resistor. So, to reach 5V you need about five to ten times the charging time constant of  $C_s$  ( $\tau_s = 0.1 \times C_s$  (s)).

Then, this time equal  $50\mu\text{s}$  to  $100\mu\text{s} \ll \tau_b$  in the majority of application.

At power OFF of the supply,  $C_s$  is discharged by a constant current  $I_{cc}$ . The discharge time from 5V to 0V of  $C_s$  is:

$$t_{DischCs} = \frac{5C_s}{I_{cc}} = 83 \text{ ms}$$

Now, we must consider the discharge time of  $C_b$ . At power OFF or standby ON,  $C_b$  is discharged by a  $100\text{k}\Omega$  resistor. So the discharge time is about  $\tau_b_{Disch} \approx 3 \times C_b \times 100\text{k}\Omega$  (s).

In the majority of application,  $C_b = 1\mu\text{F}$ , then  $\tau_b_{Disch} \approx 300\text{ms} \gg t_{dischCs}$ .

## ■ Power amplifier design examples

Given :

- Load impedance :  $8\Omega$
- Output power @ 1% THD+N : 0.5W
- Input impedance :  $10\text{k}\Omega$  min.
- Input voltage peak to peak : 1Vpp
- Bandwidth frequency : 20Hz to 20kHz (0, -3dB)
- Ambient temperature max =  $50^\circ\text{C}$
- SO8 package

First of all, we must calculate the minimum power supply voltage to obtain 0.5W into  $8\Omega$ . With curves in fig. 15, we can read 3.5V. Thus, the power supply voltage value min. will be 3.5V.

Following the maximum power dissipation equation

$$P_{diss\ max} = \frac{2V_{cc}^2}{\pi^2 R_L} \text{ (W)}$$

with 3.5V we have  $P_{diss\ max} = 0.31\text{W}$ .

Refer to power derating curves (fig. 20), with 0.31W the maximum ambient temperature will be  $100^\circ\text{C}$ . This last value could be higher if you follow the example layout shown on the demoboard (better dissipation).

The gain of the amplifier in flat region will be:

$$G_v = \frac{V_{out\ pp}}{V_{in\ pp}} = \frac{2\sqrt{2} R_L P_{out}}{V_{in\ pp}} = 5.65$$

We have  $R_{in} > 10\text{k}\Omega$ . Let's take  $R_{in} = 10\text{k}\Omega$ , then  $R_{feed} = 28.25\text{k}\Omega$ . We could use for  $R_{feed} = 30\text{k}\Omega$  in normalized value and the gain will be  $G_v = 6$ .

In lower frequency we want 20 Hz (-3dB cut off frequency). Then:

So, we could use for  $C_{in}$  a  $1\mu\text{F}$  capacitor value

$$C_{IN} = \frac{1}{2\pi R_{in} F_{CL}} = 795nF$$

which gives 16Hz.

In Higher frequency we want 20kHz (-3dB cut off frequency). The Gain Bandwidth Product of the TS4871 is 2MHz typical and doesn't change when the amplifier delivers power into the load.

The first amplifier has a gain of:

$$\frac{R_{feed}}{R_{in}} = 3$$

and the theoretical value of the -3dB cut-off higher frequency is  $2MHz/3 = 660kHz$ .

We can keep this value or limit the bandwidth by adding a capacitor Cfeed, in parallel on Rfeed. Then:

$$C_{FEED} = \frac{1}{2\pi R_{FEED} F_{CH}} = 265pF$$

So, we could use for Cfeed a 220pF capacitor value that gives 24kHz.

Now, we can calculate the value of Cb with the formula  $\tau_b = 50k\Omega \times C_b \gg \tau_{in} = (R_{in} + R_{feed}) \times C_{in}$  which permits to reduce the pop and click effects. Then  $C_b \gg 0.8\mu F$ .

We can choose for Cb a normalized value of  $2.2\mu F$  that gives good results in THD+N and PSRR.

In the following tables, you could find three another examples with values required for the demoboard.

Remark : components with (\*) marking are optional.

### Application n°1 : 20Hz to 20kHz bandwidth and 6dB gain BTL power amplifier.

#### Components :

Designator	Part Type
R1	22k / 0.125W
R4	22k / 0.125W
R6	Short Circuit
R7	330k / 0.125W
R8*	(Vcc-Vf_led)/If_led
C5	470nF
C6	100μF
C7	100nF
C9	Short Circuit
C10	Short Circuit
C12	1μF
S1, S2, S6, S7	2mm insulated Plug 10.16mm pitch
S8	3 pts connector 2.54mm pitch
P1	PCB Phono Jack
D1*	Led 3mm
U1	TS4871ID or TS4871IS

### Application n°2 : 20Hz to 20kHz bandwidth and 20dB gain BTL power amplifier.

#### Components :

Designator	Part Type
R1	110k / 0.125W
R4	22k / 0.125W
R6	Short Circuit
R7	330k / 0.125W
R8*	(Vcc-Vf_led)/If_led
C5	470nF
C6	100μF
C7	100nF

Designator	Part Type
C9	Short Circuit
C10	Short Circuit
C12	1µF
S1, S2, S6, S7	2mm insulated Plug 10.16mm pitch
S8	3 pts connector 2.54mm pitch
P1	PCB Phono Jack
D1*	Led 3mm
U1	TS4871ID or TS4871IS

**Application n°3 : 50Hz to 10kHz bandwidth and 10dB gain BTL power amplifier.**

**Components :**

Designator	Part Type
R1	33k / 0.125W
R2	Short Circuit
R4	22k / 0.125W
R6	Short Circuit
R7	330k / 0.125W
R8*	(Vcc-Vf_led)/If_led
C2	470pF
C5	150nF
C6	100µF
C7	100nF
C9	Short Circuit
C10	Short Circuit
C12	1µF
S1, S2, S6, S7	2mm insulated Plug 10.16mm pitch
S8	3 pts connector 2.54mm pitch
P1	PCB Phono Jack
D1*	Led 3mm
U1	TS4871ID or TS4871IS

**Application n°4 : Differential inputs BTL power amplifier.**

In this configuration, we need to place these components : R1, R4, R5, R6, R7, C4, C5, C12.

We have also : R4 = R5, R1 = R6, C4 = C5.

The gain of the amplifier is:

$$G_{VDIFF} = 2 \frac{R_1}{R_4}$$

For Vcc=5V, a 20Hz to 20kHz bandwidth and 20dB gain BTL power amplifier you could follow the bill of material below.

**Components :**

Designator	Part Type
R1	110k / 0.125W
R4	22k / 0.125W
R5	22k / 0.125W
R6	110k / 0.125W
R7	330k / 0.125W
R8*	(Vcc-Vf_led)/If_led
C4	470nF
C5	470nF
C6	100µF
C7	100nF
C9	Short Circuit
C10	Short Circuit
C12	1µF
D1*	Led 3mm
S1, S2, S6, S7	2mm insulated Plug 10.16mm pitch
S8	3 pts connector 2.54mm pitch
P1, P2	PCB Phono Jack
U1	TS4871ID or TS4871IS

### ■ Note on how to use the PSRR curves (page 7)

We have finished a design and we have chosen the components values :

- $R_{in} = R_{feed} = 22k\Omega$
- $C_{in} = 100nF$
- $C_b = 1\mu F$


Now, on fig. 13, we can see the PSRR (input grounded) vs frequency curves. At 217Hz we have a PSRR value of -36dB.

In reality we want a value about -70dB. So, we need a gain of 34dB !

Now, on fig. 12 we can see the effect of  $C_b$  on the PSRR (input grounded) vs. frequency. With  $C_b = 100\mu F$ , we can reach the -70dB value.

The process to obtain the final curve ( $C_b = 100\mu F$ ,  $C_{in} = 100nF$ ,  $R_{in} = R_{feed} = 22k\Omega$ ) is a simple transfer point by point on each frequency of the curve on fig. 13 to the curve on fig. 12. The measurement result is shown on the next figure.

**Fig. 85 : PSRR changes with  $C_b$**

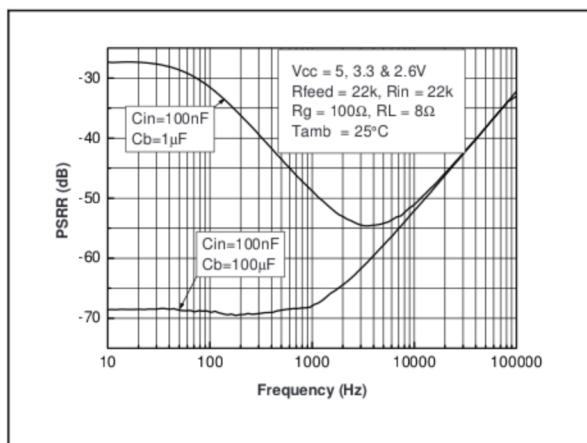


What is the PSRR ?

The PSRR is the Power Supply Rejection Ratio. It's a kind of SVR in a determined frequency range. The PSRR of a device, is the ratio between a power supply disturbance and the result on the output. We can say that the PSRR is the ability of a device to minimize the impact of power supply disturbances to the output.

How do we measure the PSRR ?

**Fig. 86 : PSRR measurement schematic**

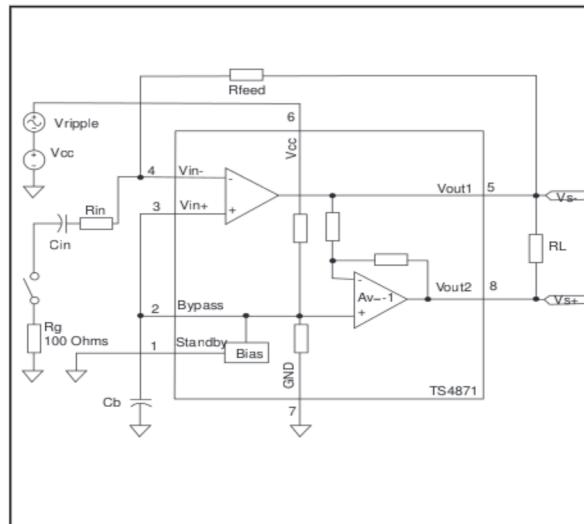

### ■ Principle of operation

- We fixed the DC voltage supply ( $V_{cc}$ ), the AC sinusoidal ripple voltage ( $V_{ripple}$ ) and no supply capacitor  $C_s$  is used


The PSRR value for each frequency is:

$$\text{PSRR(dB)} = 20 \times \log_{10} \left[ \frac{\text{Rms}(V_{ripple})}{\text{Rms}(V_{s+} - V_{s-})} \right]$$

Remark : The measure of the Rms voltage is not a Rms selective measure but a full range (2 Hz to 125 kHz) Rms measure. It means that we measure the effective Rms signal + the noise.

### ■ High/low cut-off frequencies


For their calculation, please check this "Frequency Response Gain vs  $C_{in}$ , &  $C_{feed}$ " graph:

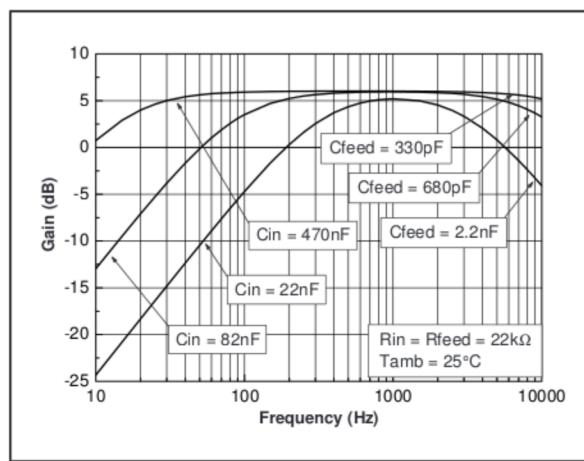

## PACKAGE MECHANICAL DATA

## SO-8 MECHANICAL DATA


DIM.	mm.			inch		
	MIN.	TYP.	MAX.	MIN.	TYP.	MAX.
A	1.35		1.75	0.053		0.069
A1	0.10		0.25	0.04		0.010
A2	1.10		1.65	0.043		0.065
B	0.33		0.51	0.013		0.020
C	0.19		0.25	0.007		0.010
D	4.80		5.00	0.189		0.197
E	3.80		4.00	0.150		0.157
e		1.27			0.050	
H	5.80		6.20	0.228		0.244
h	0.25		0.50	0.010		0.020
L	0.40		1.27	0.016		0.050
k	8° (max.)					
ddd			0.1			0.04

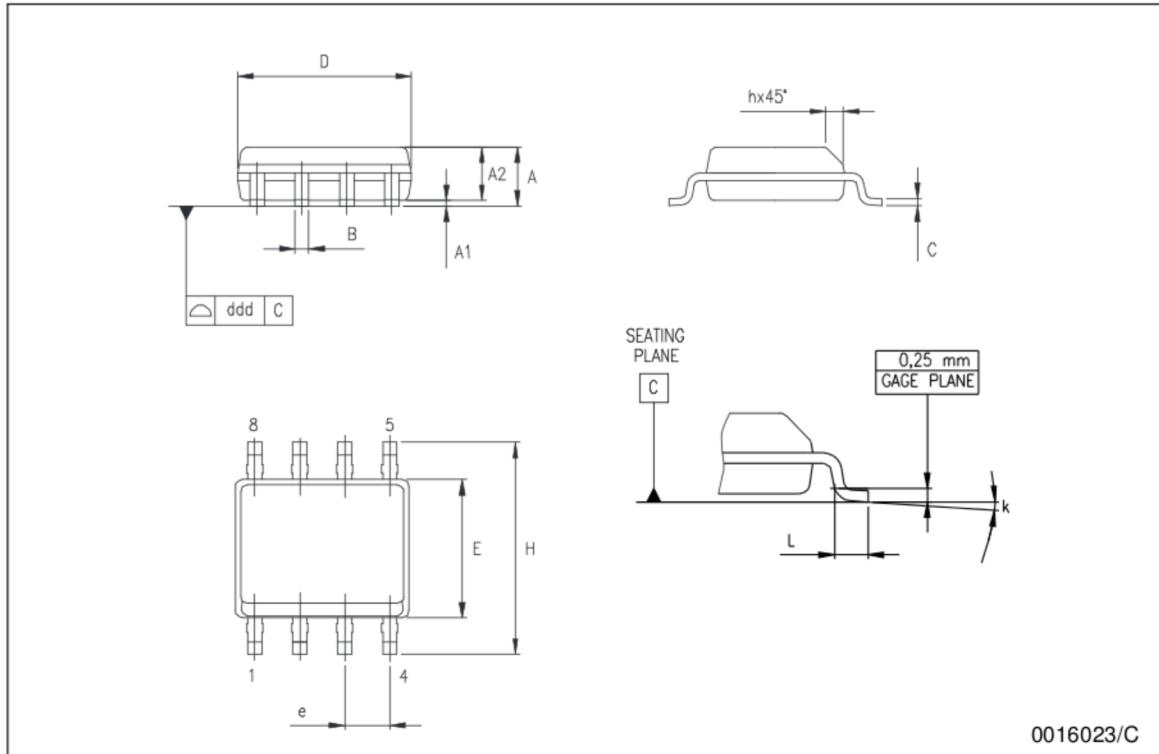

## PACKAGE MECHANICAL DATA


## miniSO-8 MECHANICAL DATA

DIM.	mm.			inch		
	MIN.	TYP.	MAX.	MIN.	TYP.	MAX.
A			1.1			0.043
A1	0.05	0.10	0.15	0.002	0.004	0.006
A2	0.78	0.86	0.94	0.031	0.031	0.037
b	0.25	0.33	0.40	0.010	0.13	0.013
c	0.13	0.18	0.23	0.005	0.007	0.009
D	2.90	3.00	3.10	0.114	0.118	0.122
E	4.75	4.90	5.05	0.187	0.193	0.199
E1	2.90	3.00	3.10	.0114	0.118	0.122
e		0.65			0.026	
K	0°		6°	0°		6°
L	0.40	0.55	0.70	0.016	0.022	0.028
L1			0.10			0.004

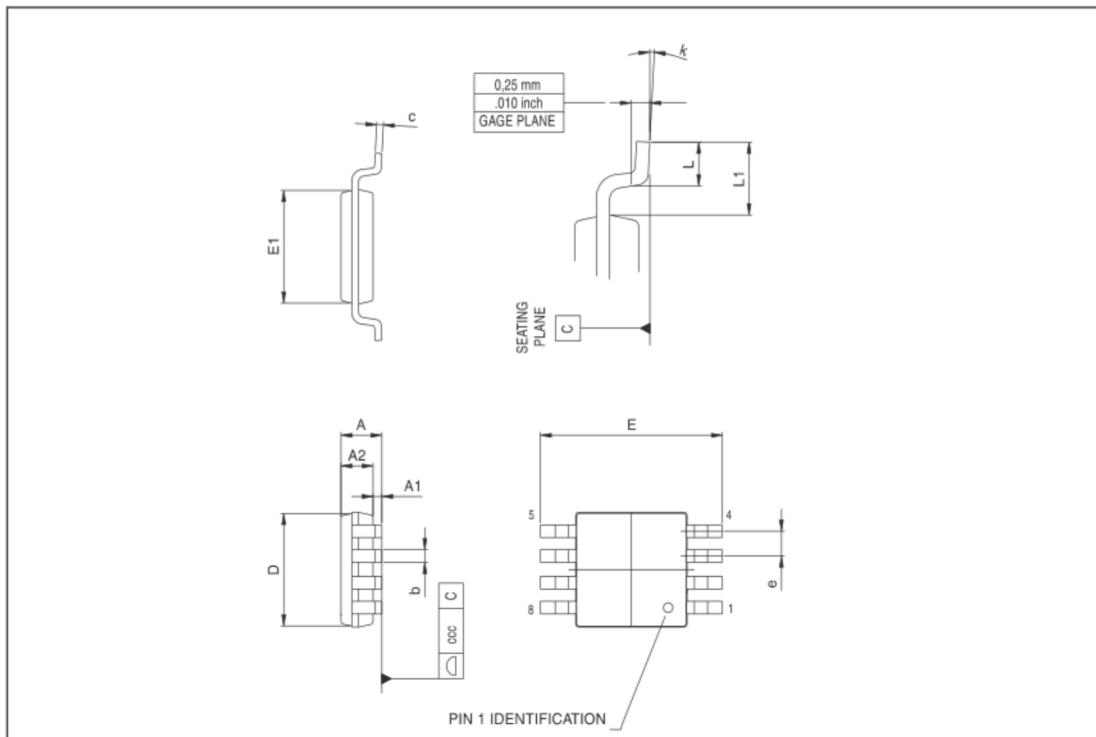

## PACKAGE MECHANICAL DATA

DFN8 (3x3) MECHANICAL DATA						
DIM.	mm.			inch		
	MIN.	TYP.	MAX.	MIN.	TYP.	MAX.
A	0.80	0.90	1.00	31.5	35.4	39.4
A1		0.02	0.05		0.8	2.0
A2		0.70			27.6	
A3		0.20			7.9	
b	0.18	0.23	0.30	7.1	9.1	11.8
D		3.00			118.1	
D2	2.23	2.38	2.48	87.8	93.7	97.7
E		3.00			118.1	
E2	1.49	1.64	1.74	58.7	64.6	68.5
e		0.50			19.7	
L	0.30	0.40	0.50	11.8	15.7	19.7

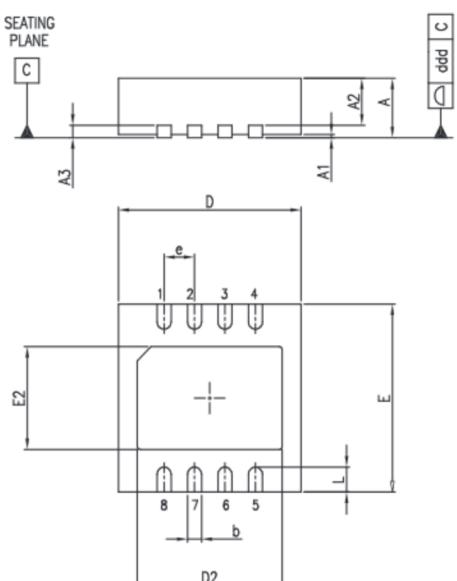The diagram illustrates the physical dimensions of the DFN8 package. It shows a top-down view with various dimensions labeled: A (total height), A1 (lead thickness), A2 (lead pitch), A3 (lead height), b (lead width), C (lead thickness), D (total width), D2 (bottom lead width), E (total length), E2 (bottom lead length), and e (lead thickness). The seating plane is indicated by a horizontal line with arrows at the top and bottom. Lead numbers 1 through 8 are also marked.

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without express written approval of STMicroelectronics.

© The ST logo is a registered trademark of STMicroelectronics

© 2003 STMicroelectronics - Printed in Italy - All Rights Reserved  
STMicroelectronics GROUP OF COMPANIES

Australia - Brazil - Canada - China - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia  
Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States

© <http://www.st.com>