




VULCAN-VUL-K5709A

INSTALLATION MANUAL

VULCAN Commercial Seated Leg Extension & Curl Combo

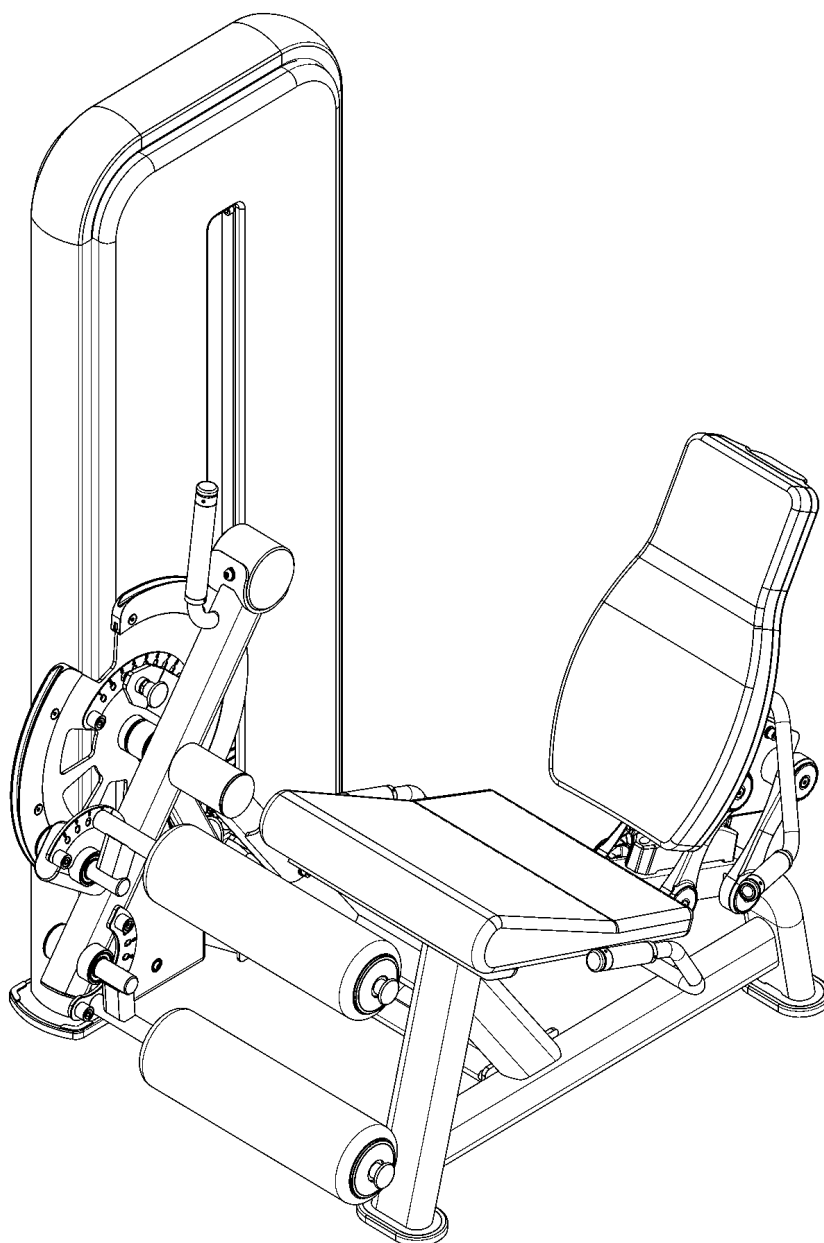

Installation Manual



Table of Contents

Introduction-----03

Frame Installation-----04

Side Frame Installation-----05

Seat Installation-----06

Weight Stack Installation-----07

Cover Installation-----08

Important Notice-----09

Full Exploded View-----10

Parts List-----11

Installation Manual



Introduction

Please take the time to read these instructions carefully before installation. Refer to the parts list in this manual to confirm that all parts are present and correct. If any parts are missing or damaged in transit, please contact us immediately for after-sales assistance. When installing the equipment, follow the instructions for correct assembly.

This equipment is designed to provide the smoothest and most effective exercise possible. After installation, make sure you understand all of its functions so that you can use it correctly. If a problem occurs during use, stop immediately to avoid injury and damage to the equipment, then refer to the relevant instructions to identify the cause. If you cannot resolve it, please contact our after-sales team. Once you have read all the instructions carefully, you may proceed.

Two people are required for assembly

Tools required:

- Rubber mallet
- Spirit level
- Allen key set (M5、M6、M8、M10)
- Circlip pliers
- Adjustable spanner


Installation Manual



Frame Installation

Assemble parts as shown below:

1. Use eight sets of bolts (93# + 87# + 82#) to secure Part #2 connecting frame, Part #6 connecting frame to Part #10 side frame.
2. Use 2 sets of hardware (93# + 87# + 82#) and 2 sets of screws (93# + 87# + 82# + 105#) respectively to connect Part #8 connecting frame and Part #6 connecting frame, Part #10 side frame together.
3. Use 4 sets of screws (93# + 87# + 82#) to connect armrest frame Part #11 and Part #10 side frame together.

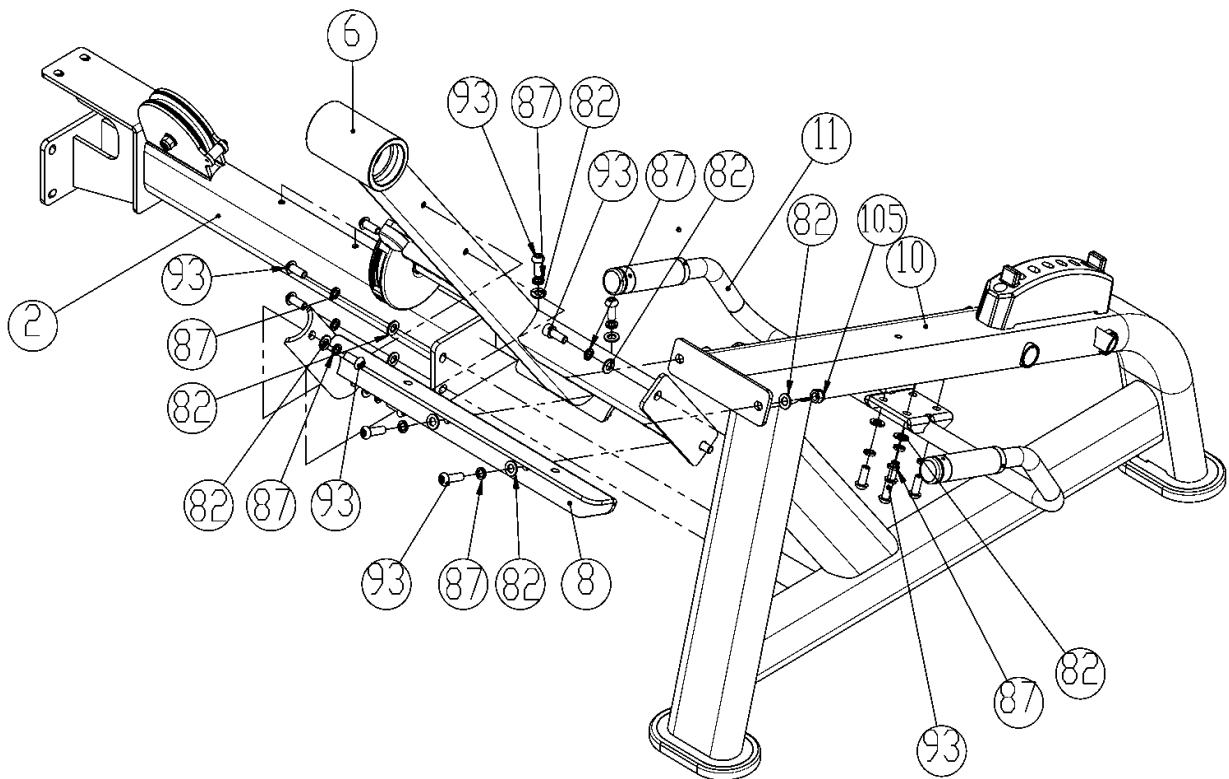


Installation Manual



Side Frame Installation

Assemble parts as shown below:

1. Connect Assembly B using Part #78 and side frame and use hardware (79# + 83# + 87# + 92#) to secure it, Install Part #40 cover.
2. Connect Assembly A using (79# + 79# + 39# + 103#) and Assembly B to (total two).
3. Assembly D both sides install two Part #7 units9 units and Assembly B connected, then in sequence add Part #23 + Part #79 + C + Part #79 + Part #39 + Part #103 and Assembly B connected, (note, steel cable and Assembly C connected as one full).

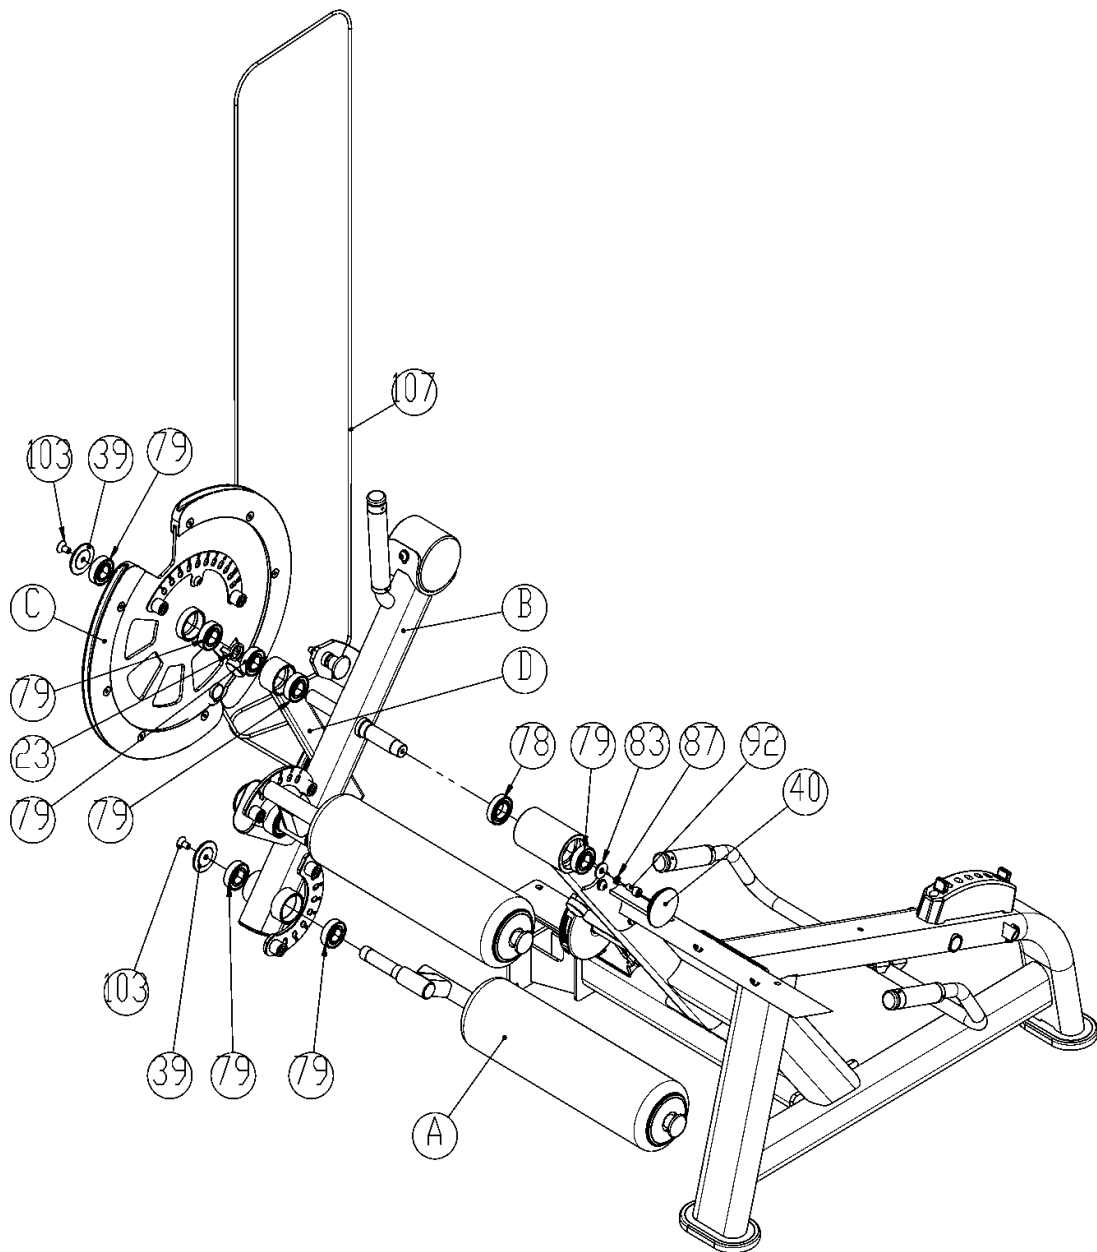


Installation Manual



Seat Installation

Assemble parts as shown below:

1. Use 3 sets of screws (89# + 86# + 81#) to secure Seat Cushion Part #24 to side frame.
2. Use 3 sets of screws (84# + 86# + 90# + 37#) to secure Seat Cushion Part #25 to backrest frame Part #12.
3. Secure the assembled backrest using (102# + 35# + 31# + 36# + 29# + 36# + 31# + 35# + 102#) to side frame, (note, rear movable lever arm into install Part #33 coil spring).

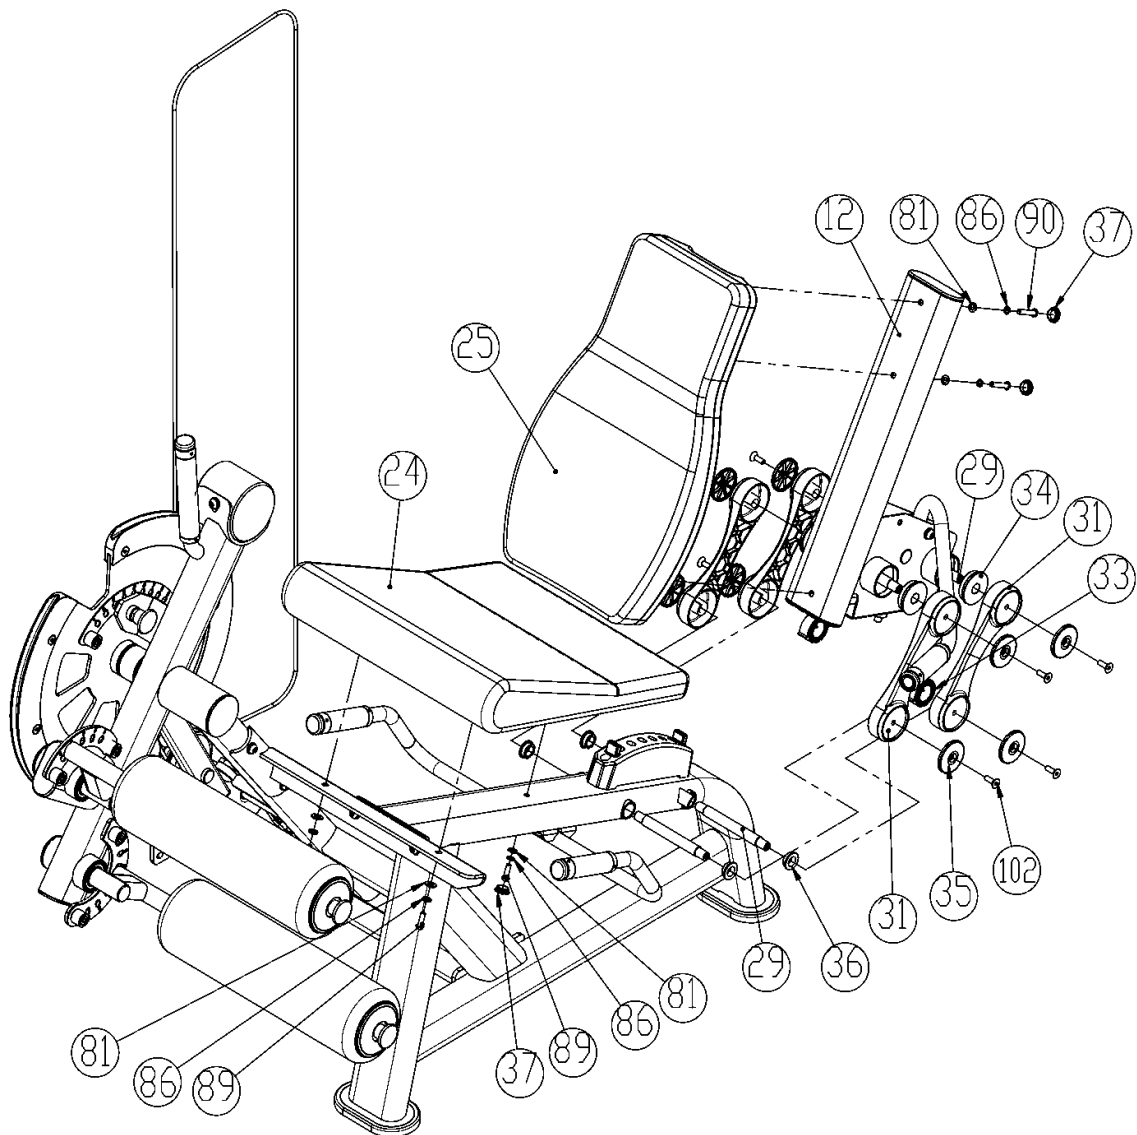


Installation Manual



Weight Stack Installation

Assemble parts as shown below:

1. Insert a pair of Part #61 through Part #59.
2. Install a pair of Part #60 at the very top of Part #61 separately.
3. Insert Assembly F, weight plate, weight separator plate, Part #68, Part #67 through Part #61 in the order shown from bottom to top.
4. Secure the bolted end of Part #15 into the threaded hole of Assembly F.
5. Use a pair of screws (#97) to secure weight stack to the top of Assembly A from bottom to top.
6. After weight stack is installed, secure the bottom screw of Steel Cable Part #3 to Assembly Fonspacer faces upwards.

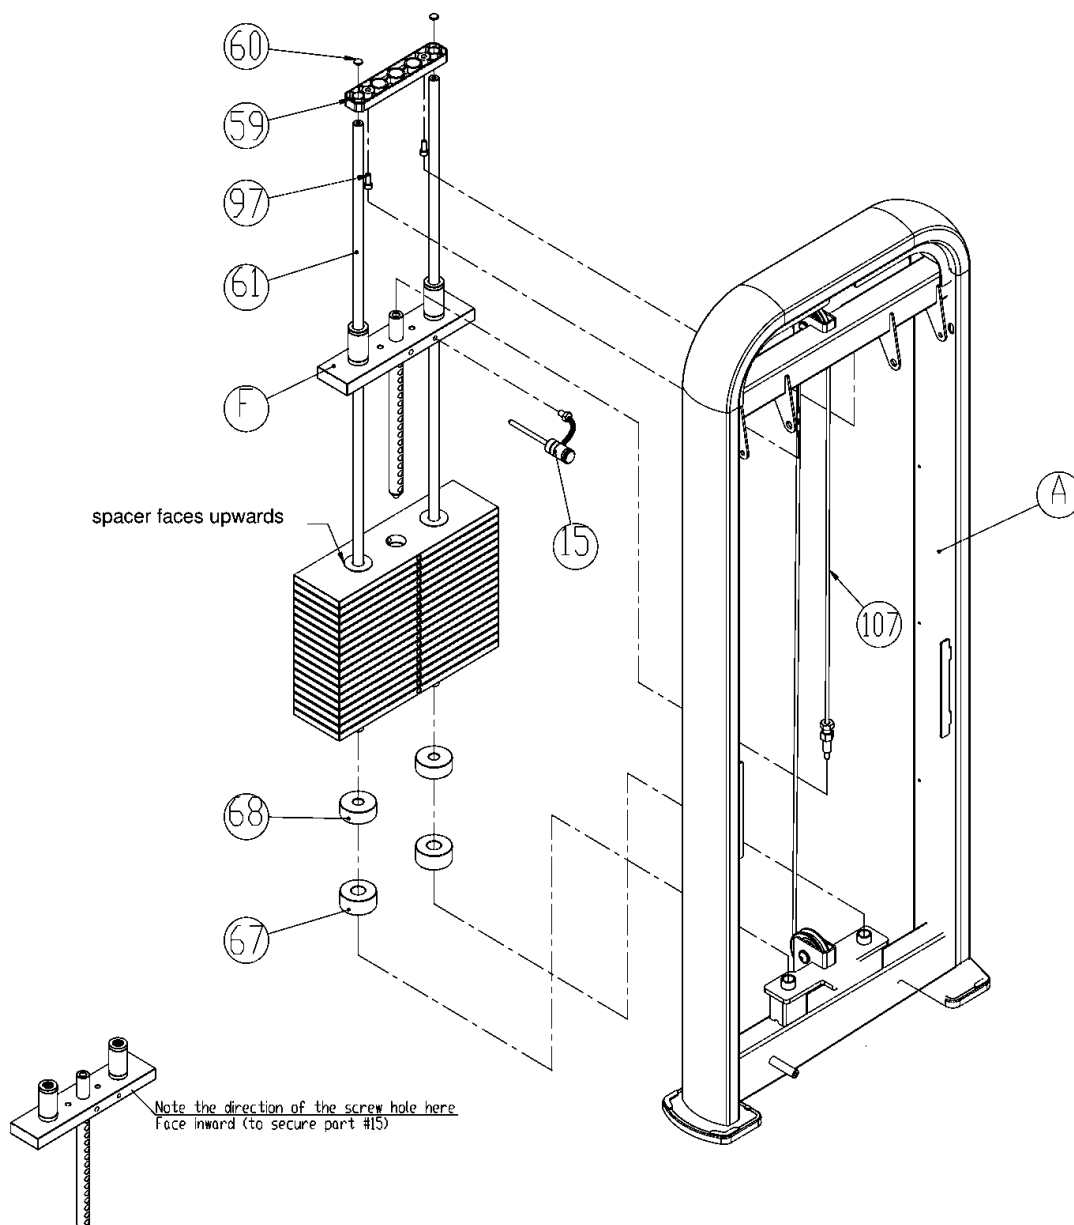


Installation Manual



Cover Installation

Assemble parts as shown below:

1. Use nine sets of screws (#95 + #85 + #80) and four sets of screws (#96 + #86 + #81) to secure Part #16 + Part #17 to Assembly A at the positions shown.

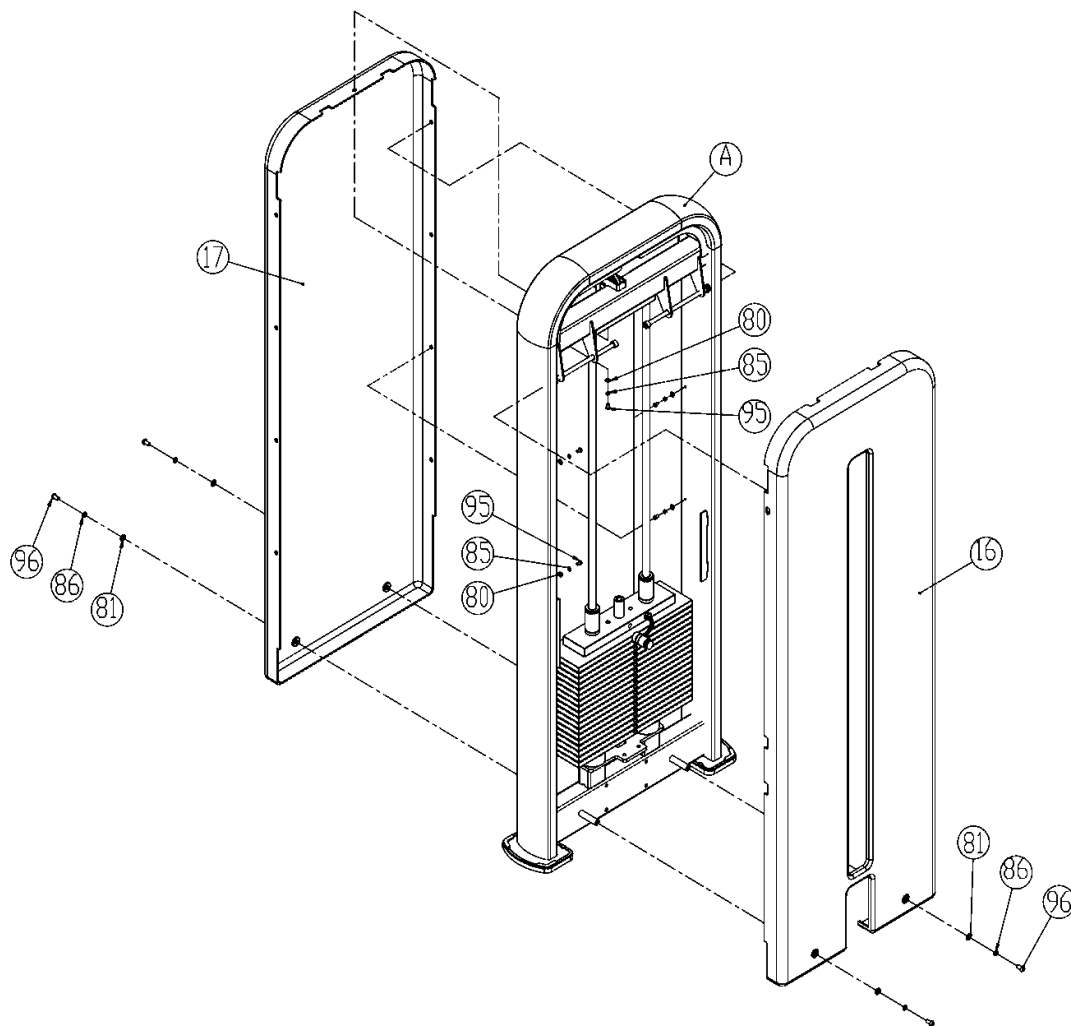


Installation Manual



Important Notice


K5709A is now fully assembled. Take a moment to check that the unit is level and vertical: use a spirit level to check that the guide rods are vertical in both directions. If they are not vertical, loosen the frame hardware, then reassemble and tighten the bolts.

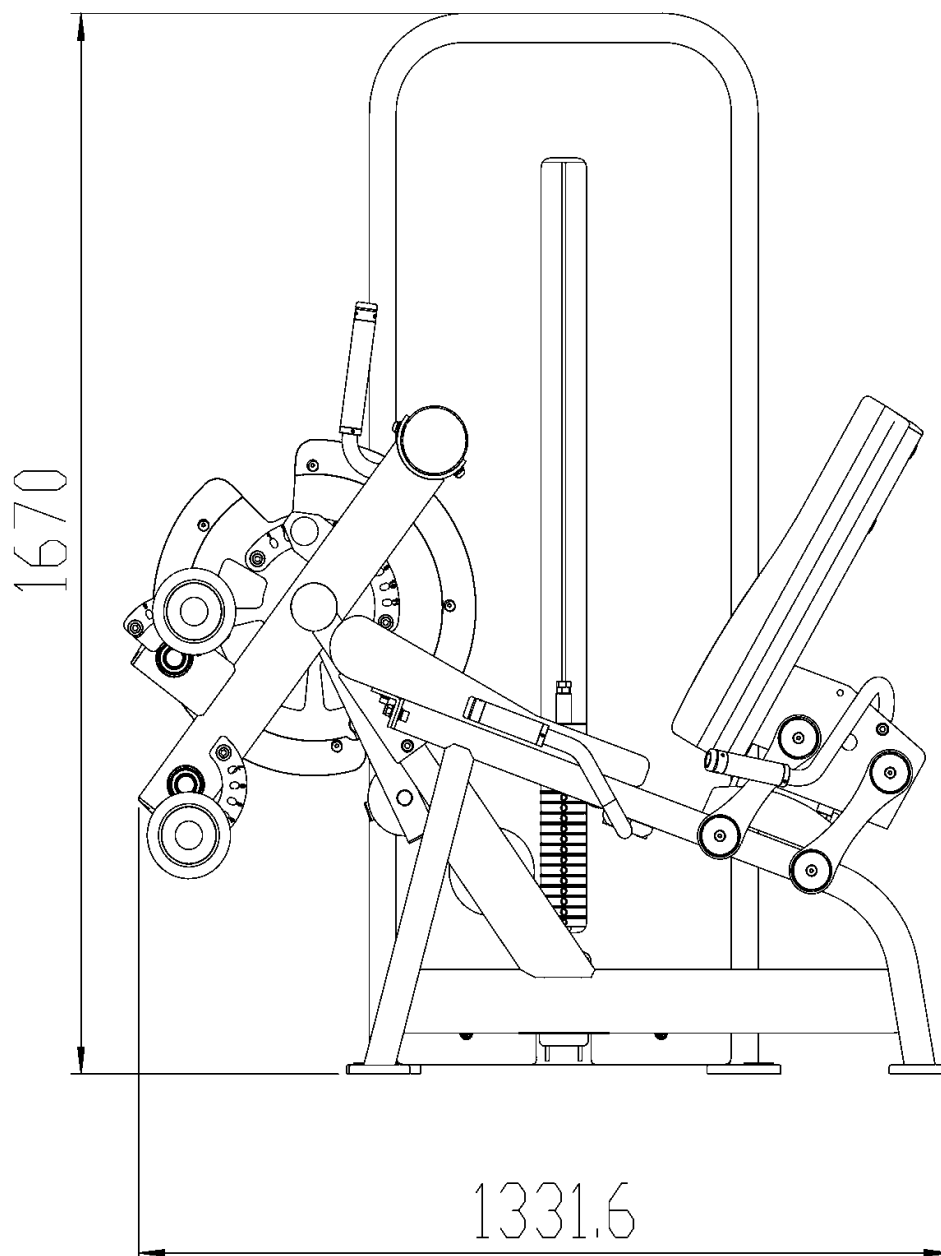

Installation Manual



Full Exploded View

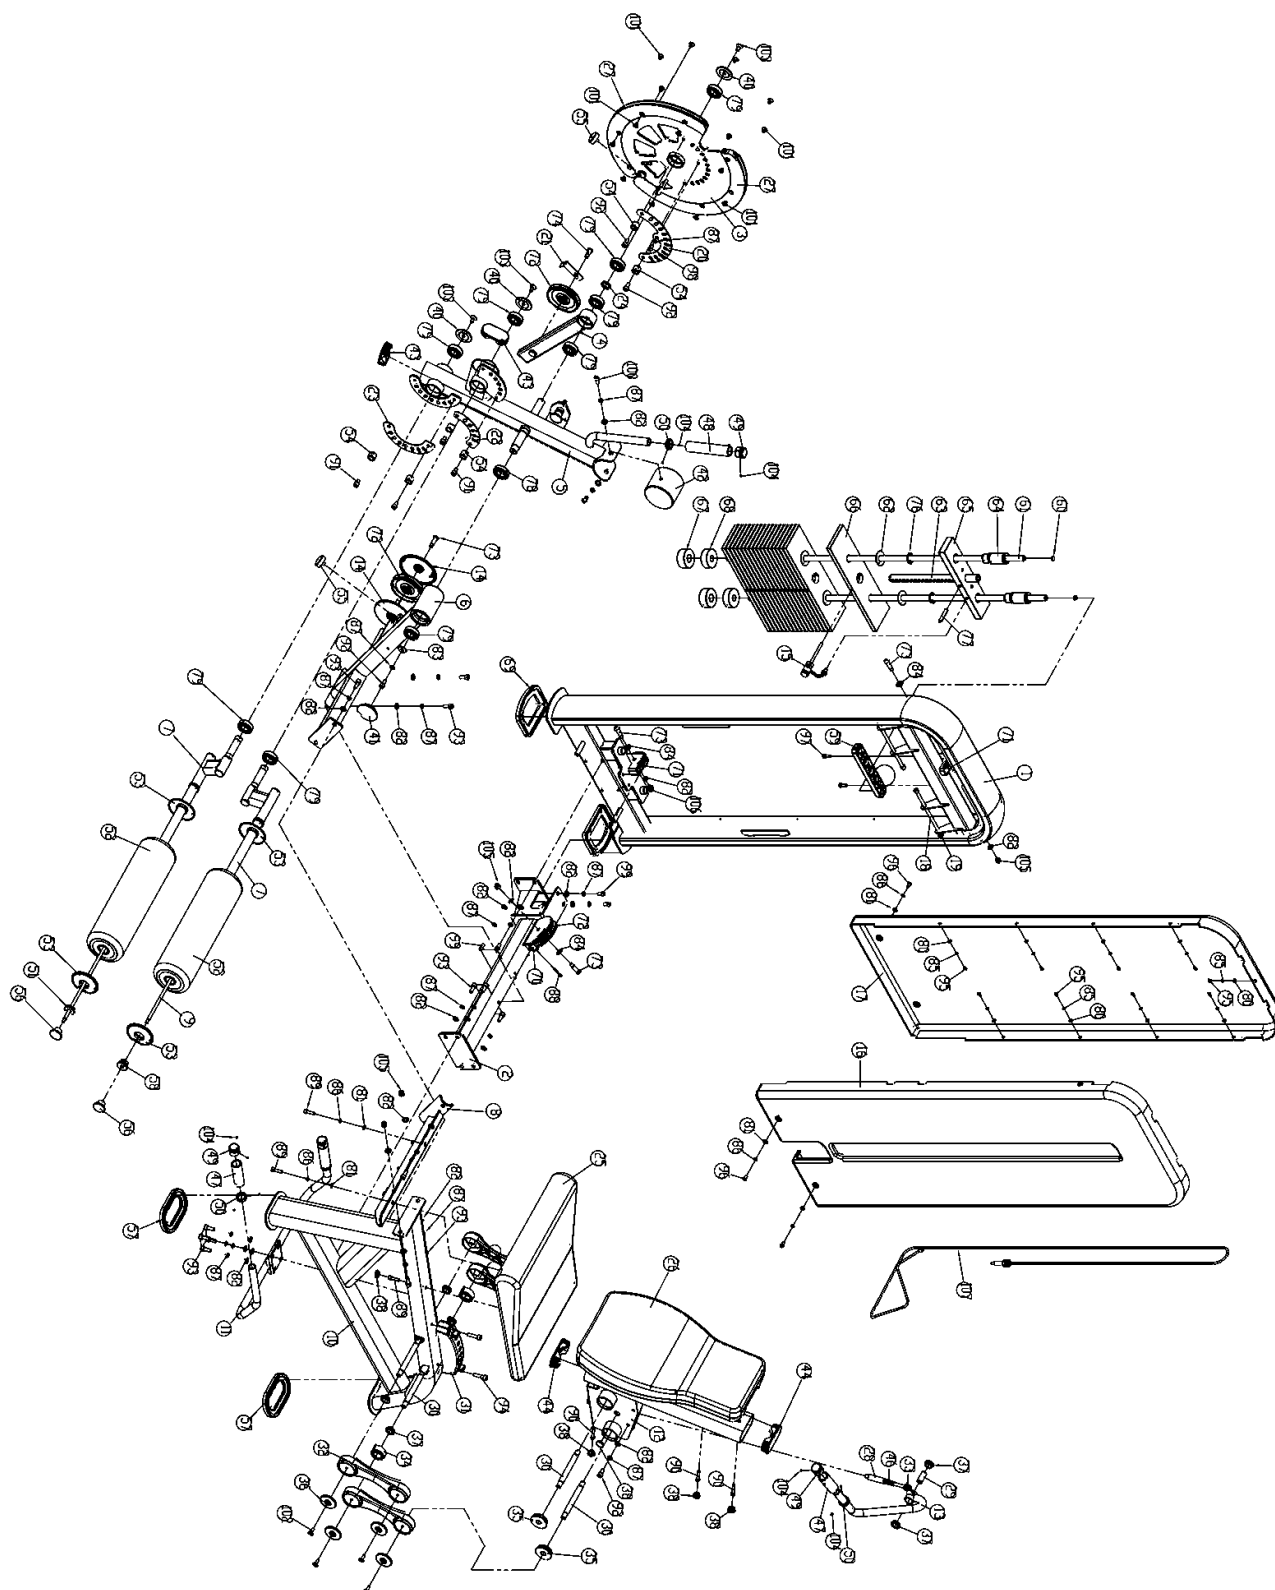

Installation Manual



Parts List

No.	Name and specification	QTY
1	K57 Universal Weight Rack	1
2	K57 A09A Quad Connecting Frame	1
3	55A09 Hamstring/Quad Connecting Disc Assembly (TOORX-DZ1)	1
4	55A09 Idler Pulley Bracket Assembly (TOORX-DZ1)	1
5	55A09 Quadriceps Extension Arm (TOORX-DZ1)	1
6	55A09 Quadriceps Extension Connecting Frame 2(TOORX-DZ1)	1
7	55A09 Quad Leg Press Rod (TOORX-DZ1)	2
8	55A09 A Main Frame Fixing Bracket (TOORX-DZ2)	1
9	Hamstring/Quad Leg Press Pull Pin (TOORX-DZ2)	2
10	Hamstring/Quadriceps Side Frame	1
11	Hamstring/Quadriceps Armrest	1
12	Hamstring/Quadriceps Backrest	1
13	Hamstring/Quadriceps Adjustment Handle	1
14	120 Pulley Cover	2
15	Weight Pin	1
16	K57 Front Cover	1
17	K57 Rear Cover	1
18	K57 Cover Fixing Screw	2
19	K57 Cover Fixing Washer	2
20	55A09 Stainless Steel Adjustment Plate (TOORX-DZ1)	1
21	55A09 L-Plate (TOORX-DZ1)	1
22	55A09 Stainless Steel Adjustment Plate -2(TOORX-DZ1)	1
23	55A09 Spacer (TOORX--DZ1)	1
24	55A09 A Seat Cushion (TOORX-DZ2)	1
25	61 Back Pad	1
26	Hamstring/Quadriceps Cable Reel	2
27	Quad Backrest Adjustment Pull Pin	1
28	Multi-angle Adjustable Seat Shaft 3	1
29	Seat Shaft 18x171	4
30	Seat Adjustment Block	1
31	Seat Rocker Handle	4
32	Seat Pull Pin Retaining Chain	1
33	Coil Spring	2
34	Seat Adjustment Bushing -60x18	4
35	Seat Rocker Handle Cover	8
36	Seat Adjustment Bushing	6
37	Φ20 Plug	6
38	J25x50 Tube Plug	1
39	60 Cap	3
40	76- Shaft Sleeve End Cap	1
41	55A09 A Weight Plate (TOORX-DZ1)	1
42	Back Tube End Cap -50x100	2
43	Back Tube End Cap -50x120	2
44	Seat Pull Pin	1
45	Universal Pull Pin Spring	1
46	Universal Grip Sleeve -Φ25x5x100	3
47	Universal Grip Sleeve -Φ25x5x170(TOORX-DZ1)	1
48	Handle End Cap -35	4
49	Grip Limit Ring -35	4
50	Rubber Sleeve End Cap Limit Pad	1
51	Rubber Sleeve -φ135x480	2
52	Rubber Sleeve Plastic End Cap	4
53	Universal Stop Sleeve	6
54	Semi-circular Stop Ball	2
55	Universal Handle	2

Installation Manual



No.	Name and specification	QTY
56	Universal Foot Pad -50x120	2
57	Arm Pull Pin Bolt	1
58	Guide Rod Fixing Plate A	1
59	Guide Rod Top Silicone Washer	2
60	Weight Guide Rod	2
61	Weight Separator Plate	36
62	Weight Center Rod VI	1
63	Universal Guide Sleeve	2
64	Universal Guide Block	1
65	Universal Weight Plate	18
66	Universal Weight Rubber Block	2
67	62 series Weight Rubber Pad	2
68	61 series Weight Foot Pad	2
69	Cable Anti-slip Sleeve	1
70	85 Pulley	2
71	120 Pulley	3
72	Pulley Shaft -32	4
73	Pulley Shaft -22	1
74	55A09 Stainless Steel Adjustment Plate (TOORX-DZ1)	1
75	GB893.1-86 Retaining Ring for Holes Type A 22	1
76	GB894.1-86 Retaining Ring for Shaft Type A 32x1.2	2
77	GB/T879.2-2000 Spring Type Straight Pin Light Duty 10x60	1
78	GB/T276-94 Deep Groove Ball Bearing 6006-2RZ	1
79	GB/T276-94 Deep Groove Ball Bearing 6205-2RZ	9
80	GB/T95-2002 Flat Washer Grade C 6x1.6	9
81	GB/T95-2002 Flat Washer Grade C 8x1.6	6
82	GB/T95-2002 Flat Washer Grade C 10x2	30
83	GB/T96.2-2002 Large Washer Grade C 10x2.5	1
84	GB/T95-2002 Flat Washer Grade C 12x2.5	3
85	GB/T93-1987 Standard Spring Washer (Assembly) 6x1.6	9
86	GB/T93-1987 Standard Spring Washer (Assembly) 8x2.1	6
87	GB/T93-1987 Standard Spring Washer (Assembly) 10x2.6	26
88	GB/T70.1-2000 Hex Socket Cap Head Screw M5x32	1
89	GB/T70.1-2000 Hex Socket Cap Head Screw M8x30	3
90	GB/T70.1-2000 Hex Socket Cap Head Screw M8x45	3
91	GB/T70.1-2000 Hex Socket Cap Head Screw M10x16	4
92	GB/T70.1-2000 Hex Socket Cap Head Screw M10x20	5
93	GB/T70.1-2000 Hex Socket Cap Head Screw M10x25	16
94	GB/T70.1-2000 Hex Socket Cap Head Screw M10x40	2
95	GB/T70.2-2000 Hex Socket Button Head Screw M6x10	9
96	GB/T70.2-2000 Hex Socket Button Head Screw M8x16	4
97	GB/T70.1-2000 Hex Socket Cap Head Screw M8x20	2
98	GB/T70.2-2000 Hex Socket Button Head Screw M10x16	1
99	GB/T70.2-2000 Hex Socket Button Head Screw M10x20	6
100	GB/T70.2-2000 Hex Socket Button Head Screw M10x25	2
101	GB/T70.3-2000 Hex Socket Countersunk Head Screw M8x12	16
102	GB/T70.3-2000 Hex Socket Countersunk Head Screw M8x25	8
103	GB/T70.3-2000 Hex Socket Countersunk Head Screw M10x20	3
104	GB/T78-2000 Hex Socket Cone Point Set Screw M5x5	16
105	GB/T889.1-20001 Type Hexagon Lock Nut with Non-metallic Insert M10	5
106	GB/T889.1-20001 Type Hexagon Lock Nut with Non-metallic Insert M12	1
107	K5709 A Steel Cable Assembly	1