

BUILDING PLANS

SCRAP & PLYWOOD STORAGE CART



WOODSHOPDIARIES.COM

ABOUT THIS PLAN...



**PLANS PRODUCED BY
WOODSHOPDIARIES.COM.**

FOR DETAILS AND TUTORIALS, SEE:
[HTTPS://WWW.WOODSHOPDIARIES.COM/DIY-SCRAP-WOOD-PLYWOOD-CART/](https://www.woodshopdiaries.com/diy-scrap-wood-plywood-cart/)

Before beginning any project, make sure you read and understand all manufacturer instructions for the tools you will be using. Read and understand entire plans before beginning. Woodshop Diaries is not responsible for any injuries or damages. See www.woodshopdiaries.com/policies. Plans created by Woodshop Diaries (www.woodshopdiaries.com). Do not resale. Not for professional use. Personal use only.

Helpful tutorials to use with this build:


- [How to cut plywood sheets: https://www.woodshopdiaries.com/cut-down-plywood-sheets-with-circular-saw/](https://www.woodshopdiaries.com/cut-down-plywood-sheets-with-circular-saw/)
- [How to use a pocket hole jig: https://www.woodshopdiaries.com/how-to-use-pocket-hole-jig/](https://www.woodshopdiaries.com/how-to-use-pocket-hole-jig/)

PROJECT DIMENSIONS:

Overall project dimensions are approximately:

24" deep x 49 1/2" tall x 72" wide

**Note that height doesn't include caster wheels.*

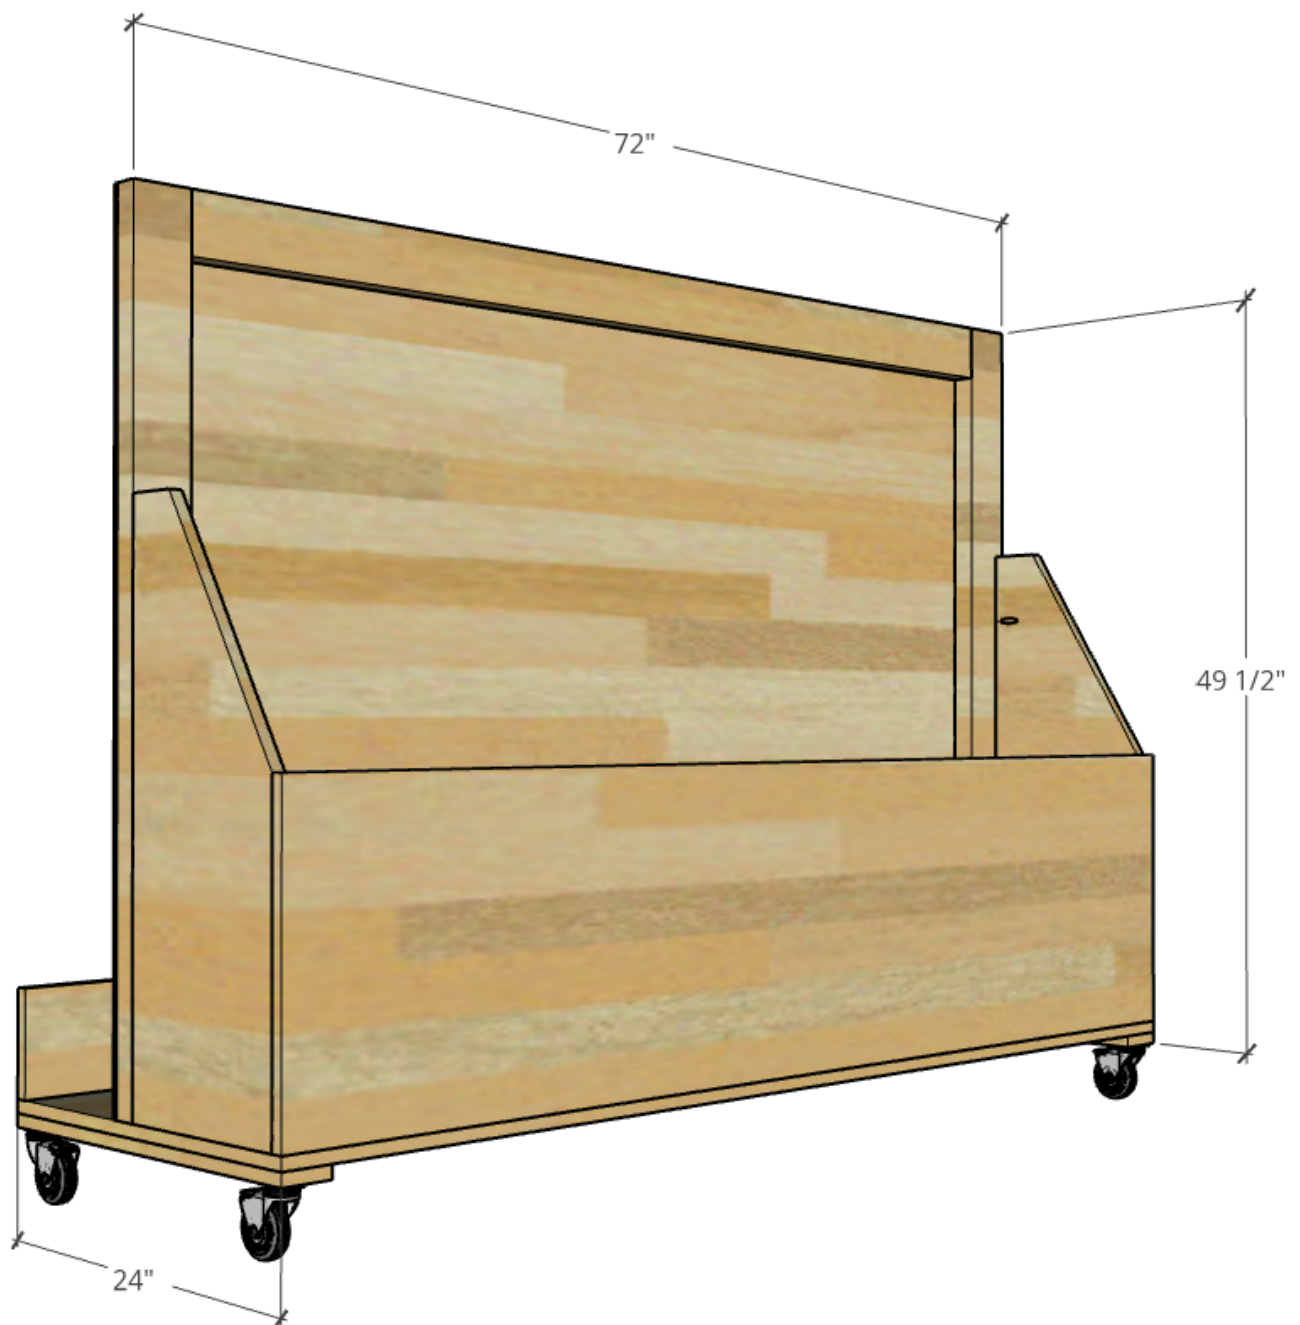

TOOLS NEEDED:

- Drill/Driver
- Circular Saw and cutting guides
- Pocket Hole Jig

MATERIALS NEEDED:

**Links to tools and materials used here can be found in blog post linked on page 1

- 1 sheet $\frac{3}{4}$ " plywood
- 1 sheet $\frac{1}{4}$ " plywood
- (3) 2x4x8 boards
- 4 casters
- 1 $\frac{1}{4}$ " wood screws
- 1 $\frac{1}{4}$ " pocket hole screws
- 2" wood screws
- 2 $\frac{1}{2}$ " pocket hole screws
- Wood Glue


CUT LIST

*NOTE: I DO NOT RECOMMEND cutting all parts at once. I recommend cutting pieces as you need them in the build. These measurements are a good guide, but things work much better if you cut to fit as you build.

MATERIAL	QTY & SIZE	PART
3/4" PLYWOOD	(1) 24" X 72"	BOTTOM PANEL
	(2) 3" X 24"	BOTTOM CASTER WHEEL BRACES
	(1) 18" X 72"	SCRAP BIN FRONT PANEL
	(2) 12" X 32"	SCRAP BIN SIDES
	(1) 6" X 72"	PLYWOOD BOTTOM "LIP"
2X4 BOARDS	(2) 48" LONG	DIVIDER FRAME SIDES
	(2) 65" LONG	DIVIDER FRAME TOP/BOTTOM
1/4" PLYWOOD	(1) 48" X 72"	DIVIDER PANEL

PLYWOOD CUTS:

This project can be made from a 4x8 sheet of 3/4" plywood. Below shows one way to make the cuts.

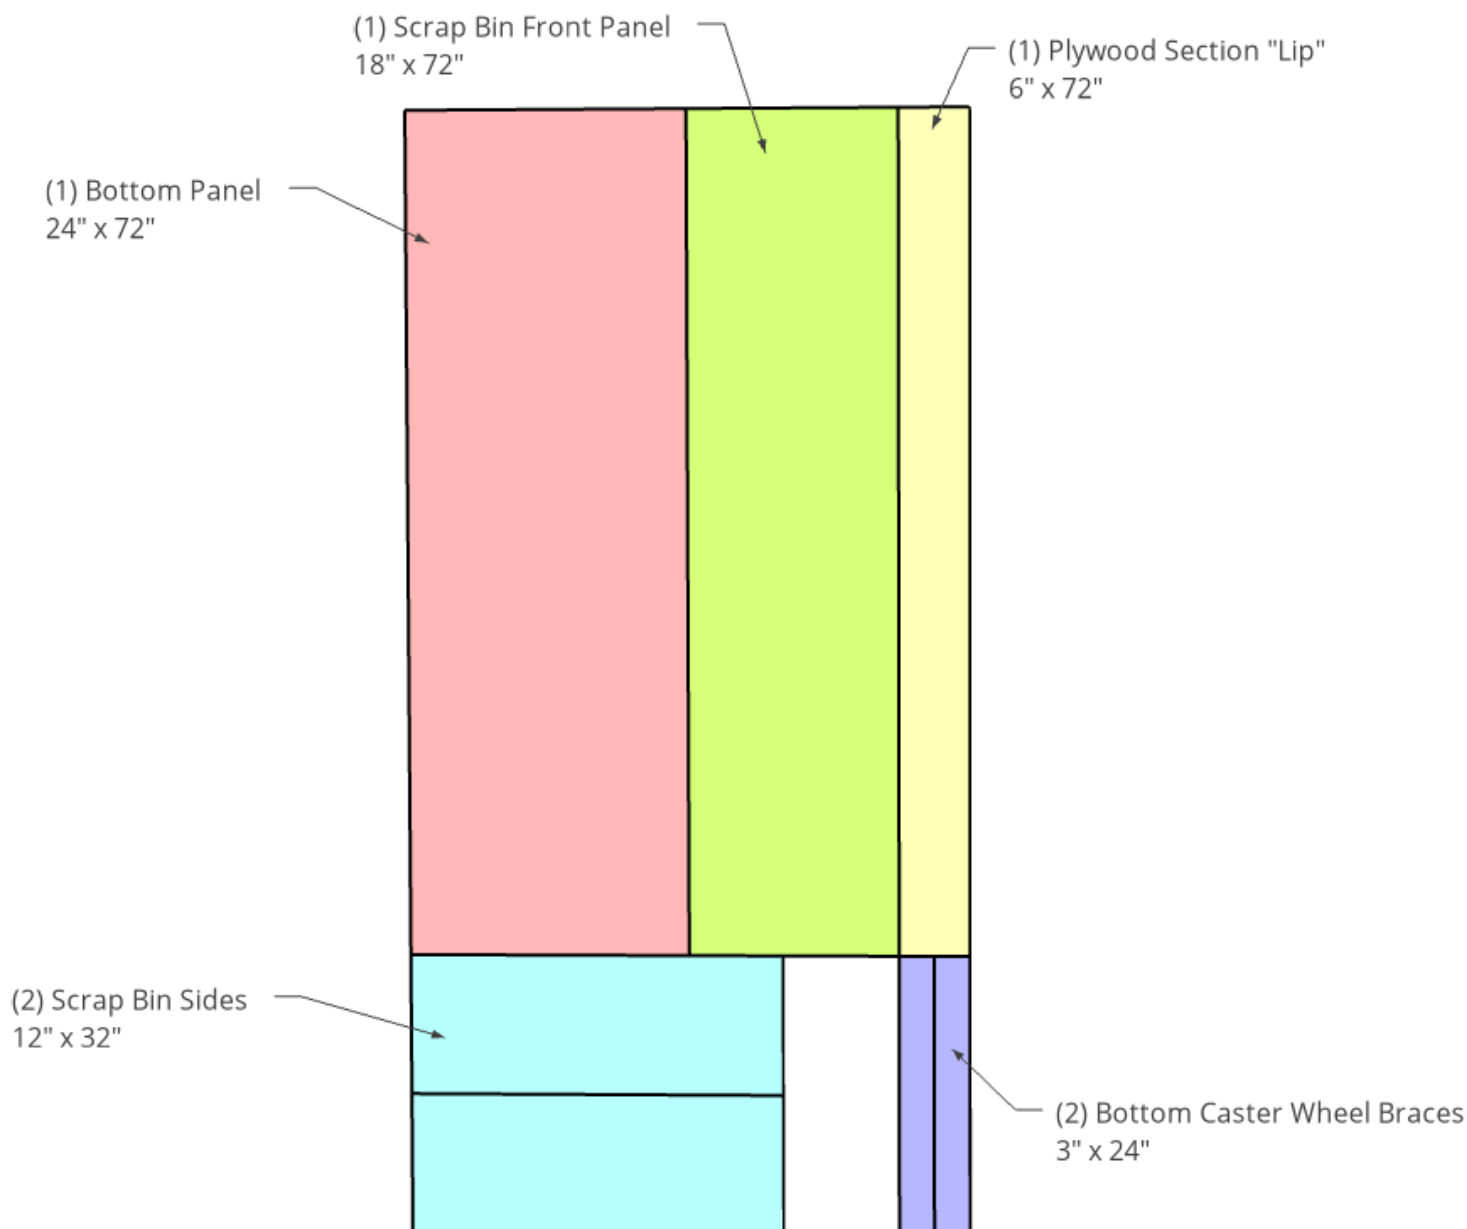

SOME NOTES ABOUT THE BUILD:

CASTER WHEELS

This cart is intended for storing wood scraps and plywood sheets. This means, it'll likely be holding a significant amount of weight.

You can use whatever style, color, size caster wheels you'd like, but make sure they are rated for the weight you plan to put on them--at least a few hundred pounds.

I recommend using caster wheels that have a plate for installation vs a threaded rod. These plates can mount directly to the bottom panel of this cart.

PLYWOOD PANEL STORAGE

One side of this cart is a "bin" used to contain scrap pieces of various sizes and lengths.

The other side is left open to slide in full size plywood sheets. This is capable of holding several sheets. These sheets are stored upright, so they can potentially lean over toward the outside and fall out since there is nothing on the front edge to hold them in place except a small lip at the bottom.


If you load this up with several large, heavy plywood panels, I recommend using a clamp at the top in the middle to simply clamp the panels to the 2x4 frame. This will keep them from shifting as you roll and/or move the cart around.

01

STEP 1: ASSEMBLE BOTTOM PANEL

Cut a piece of 3/4" plywood to 24" x 72". Cut two 3" wide strips of 3/4" plywood to 24" long.

Use wood glue and 1 1/4" screws to secure these pieces to the bottom side flush to the outside edges.

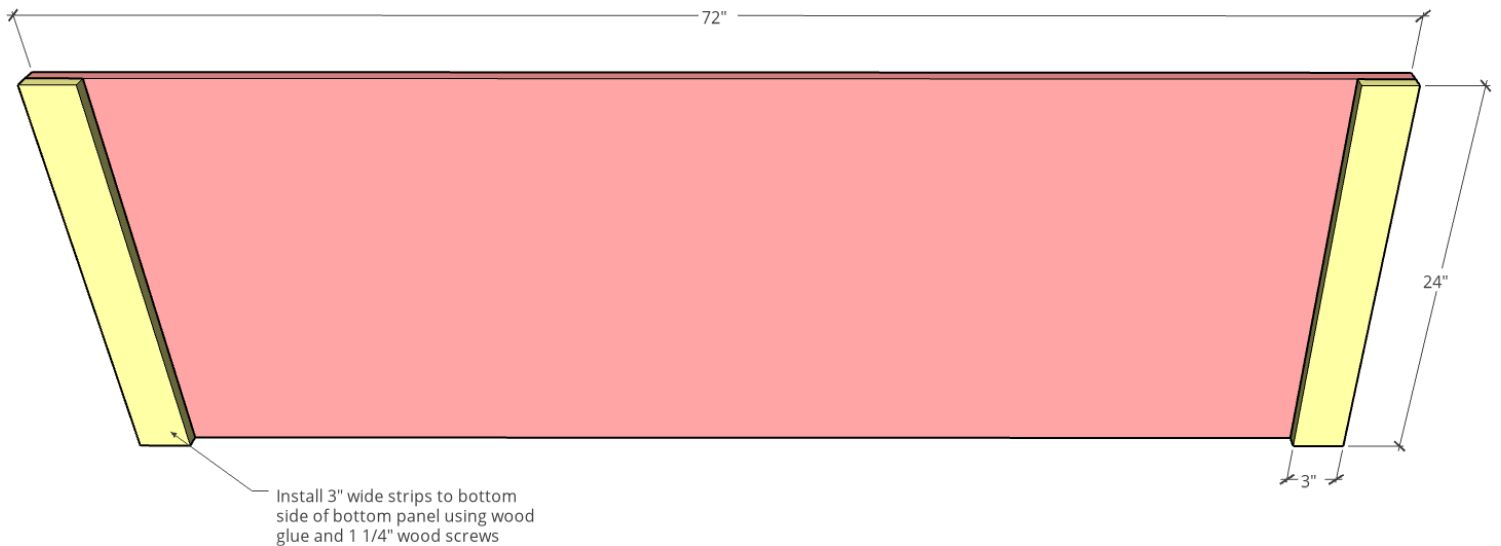

02


STEP 2: ADD CASTER WHEELS

Install caster wheels onto the strips from step 1 at each corner using the hardware included with them OR 1 1/4" wood screws.

You can use any size caster wheels you'd like, but make sure to get heavy duty ones that will hold several hundred pounds since this cart will be quite heavy once loaded down.

I recommend using caster wheels with mounting plates.

Secure caster wheels to the corners on the underside

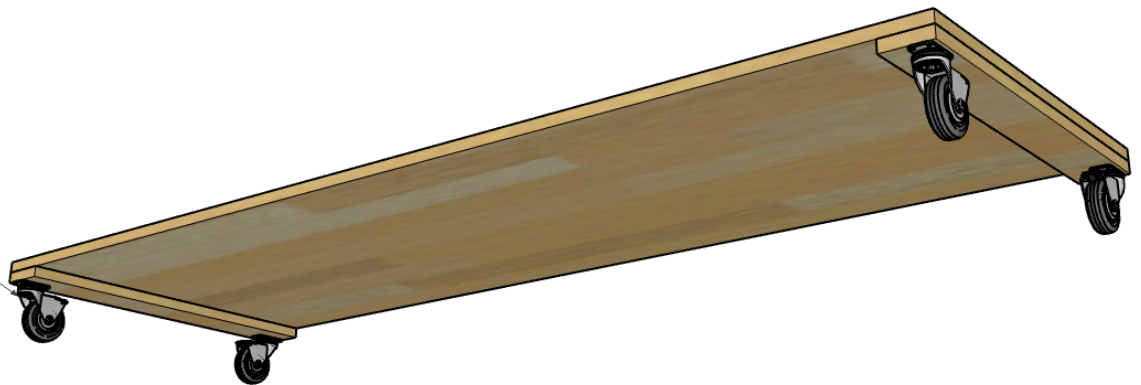

03


STEP 3: BUILD DIVIDER FRAME

Cut (2) 2x4 pieces to 48" long and (2) 2x4 pieces to 65" long.

Drill 1 1/2" pocket holes into both ends of the 65" long pieces and into ONE end of the 48" long pieces.

Assemble a frame like shown using 2 1/2" pocket hole screws through the 65" long pieces.

NOTE: The pocket holes drilled on the 48" long side pieces should be at the bottom on both sides. These will be used to secure the frame to the cart bottom in the next step.

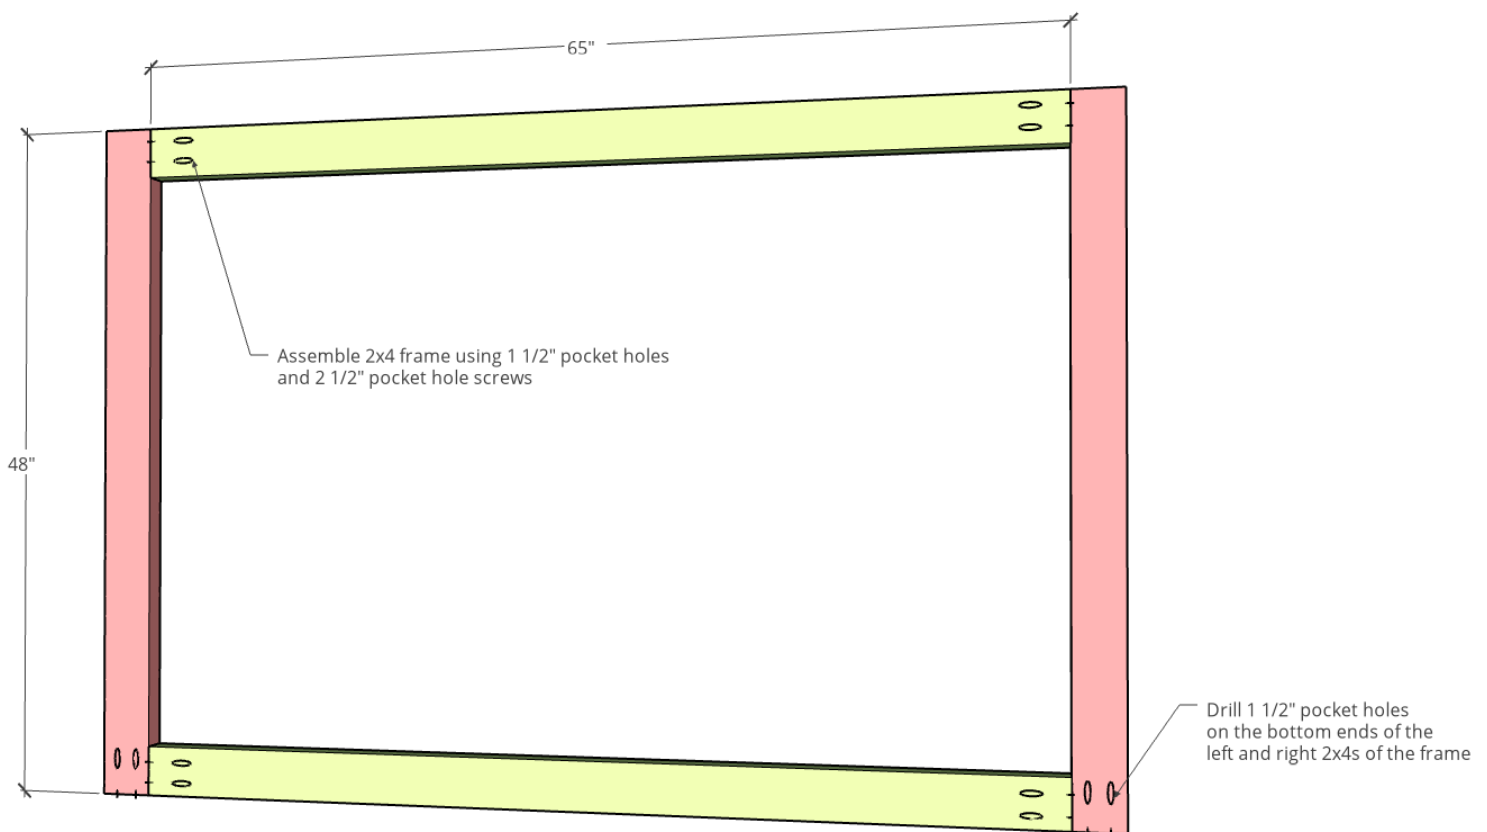


04

STEP 4: INSTALL DIVIDER FRAME

Set the frame from step 3 onto the bottom of the cart from step 2 so that there is approximately $12\frac{3}{4}$ " on one side and $9\frac{3}{4}$ " on the other.

Face the pocket holes toward the $9\frac{3}{4}$ " side and use $2\frac{1}{2}$ " pocket holes screws through the bottom of the side pieces to secure it in place.

Once the pocket hole screws are in, flip the cart on its side and drive 2" wood screws through the bottom plywood panel up into the bottom 2x4 in 3-4 places along its length.

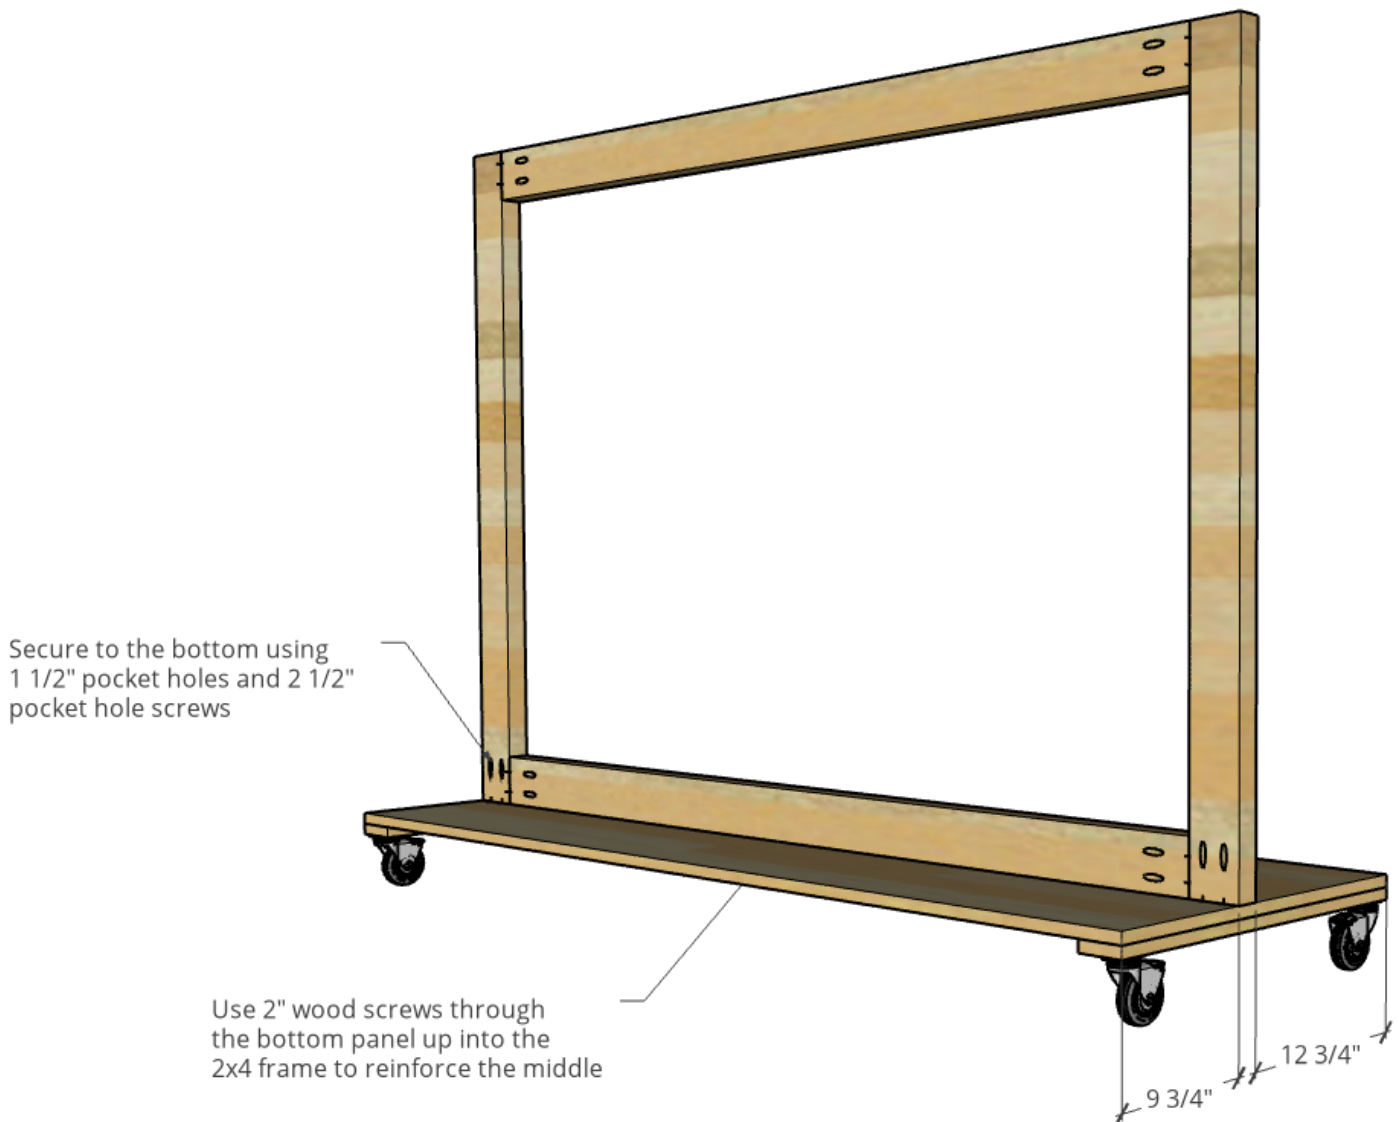


05

STEP 5: ADD DIVIDER PANEL

Cut a piece of 1/4" plywood to 48" x 72" and cover the side of the frame where the pocket holes are (the 9 3/4" side).

Use wood glue and 1 1/4" wood screws (or staples) to secure this to the 2x4 frame.

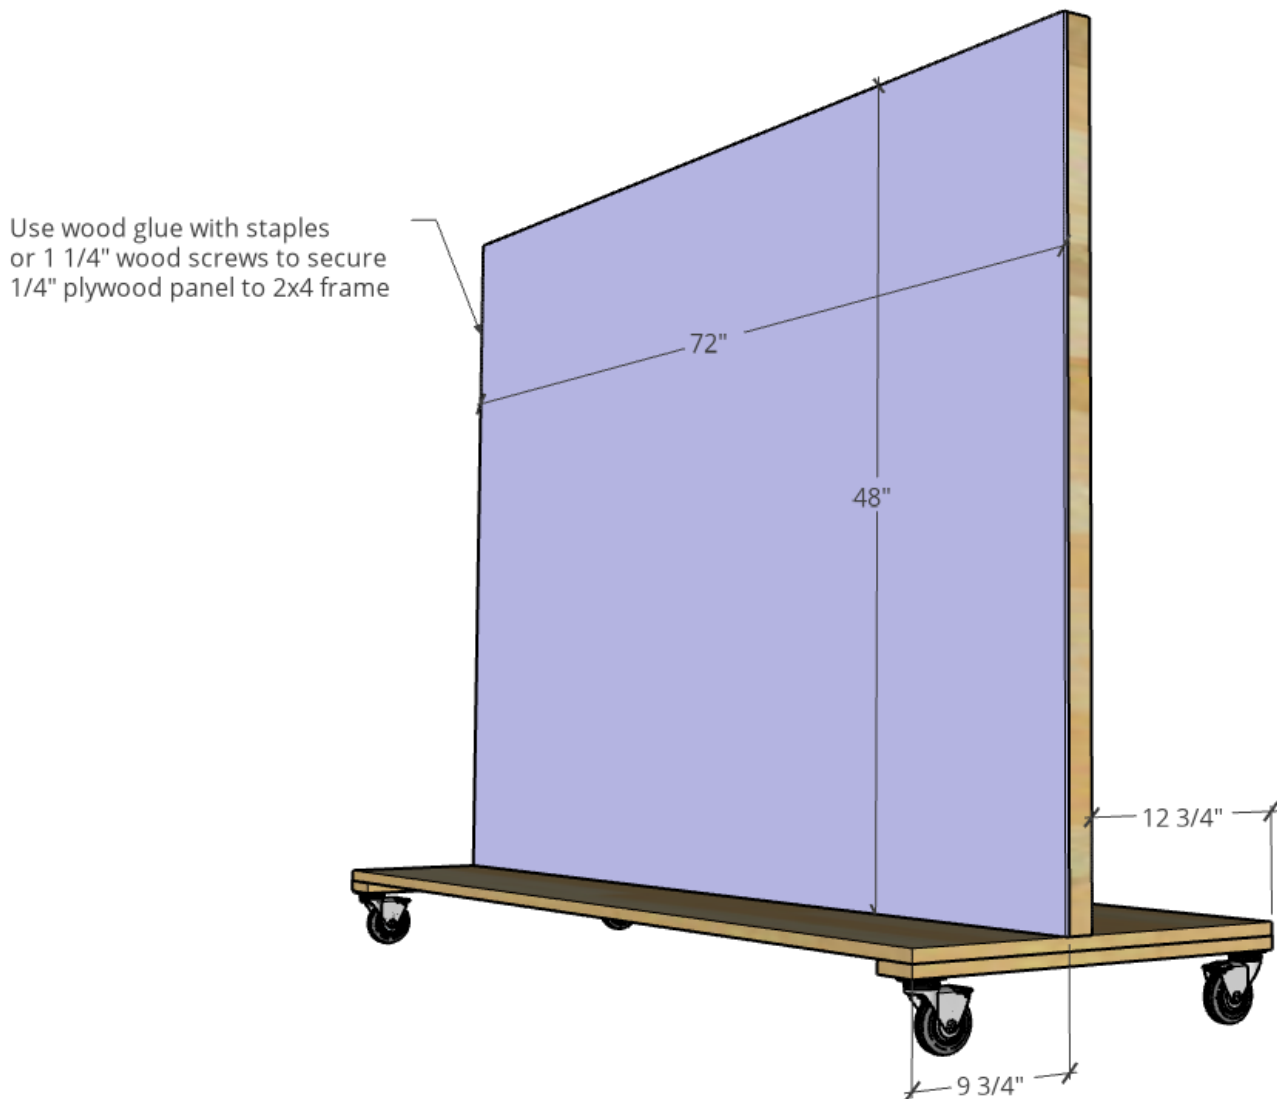


06

STEP 6: ADD SCRAP BIN FRONT PANEL

Cut a piece of $\frac{3}{4}$ " plywood to 18" x 72" and drill $\frac{3}{4}$ " pocket holes along one 72" edge.

Install using wood glue and $1\frac{1}{4}$ " pocket holes to the bottom panel along the front edge of the 12 $\frac{3}{4}$ " side.

Face the pocket holes toward the inside so they are hidden.

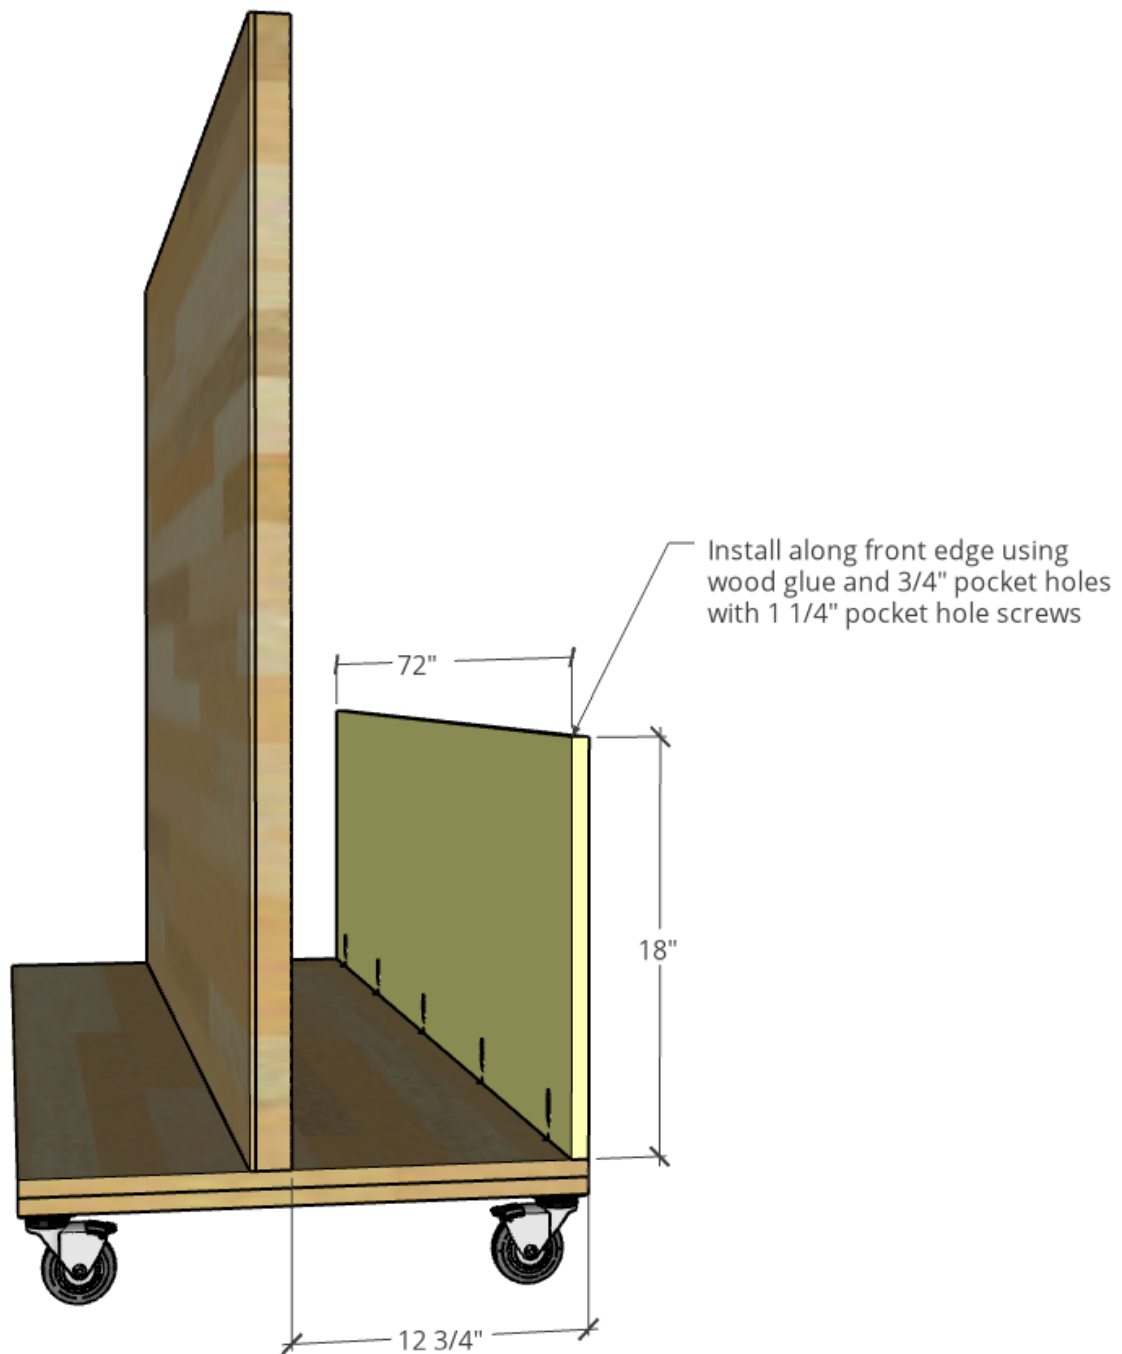


07

STEP 7: ADD SCRAP BIN SIDE PANELS

Cut (2) pieces of 3/4" plywood to 12" x 32". If desired, mark and cut a "slope" on these pieces from the top edge to 18" up from the bottom. This is optional. You can leave as a full rectangle if you'd like.

Drill 3/4" pocket holes into the long end of the pieces so that they are mirrored like shown below.

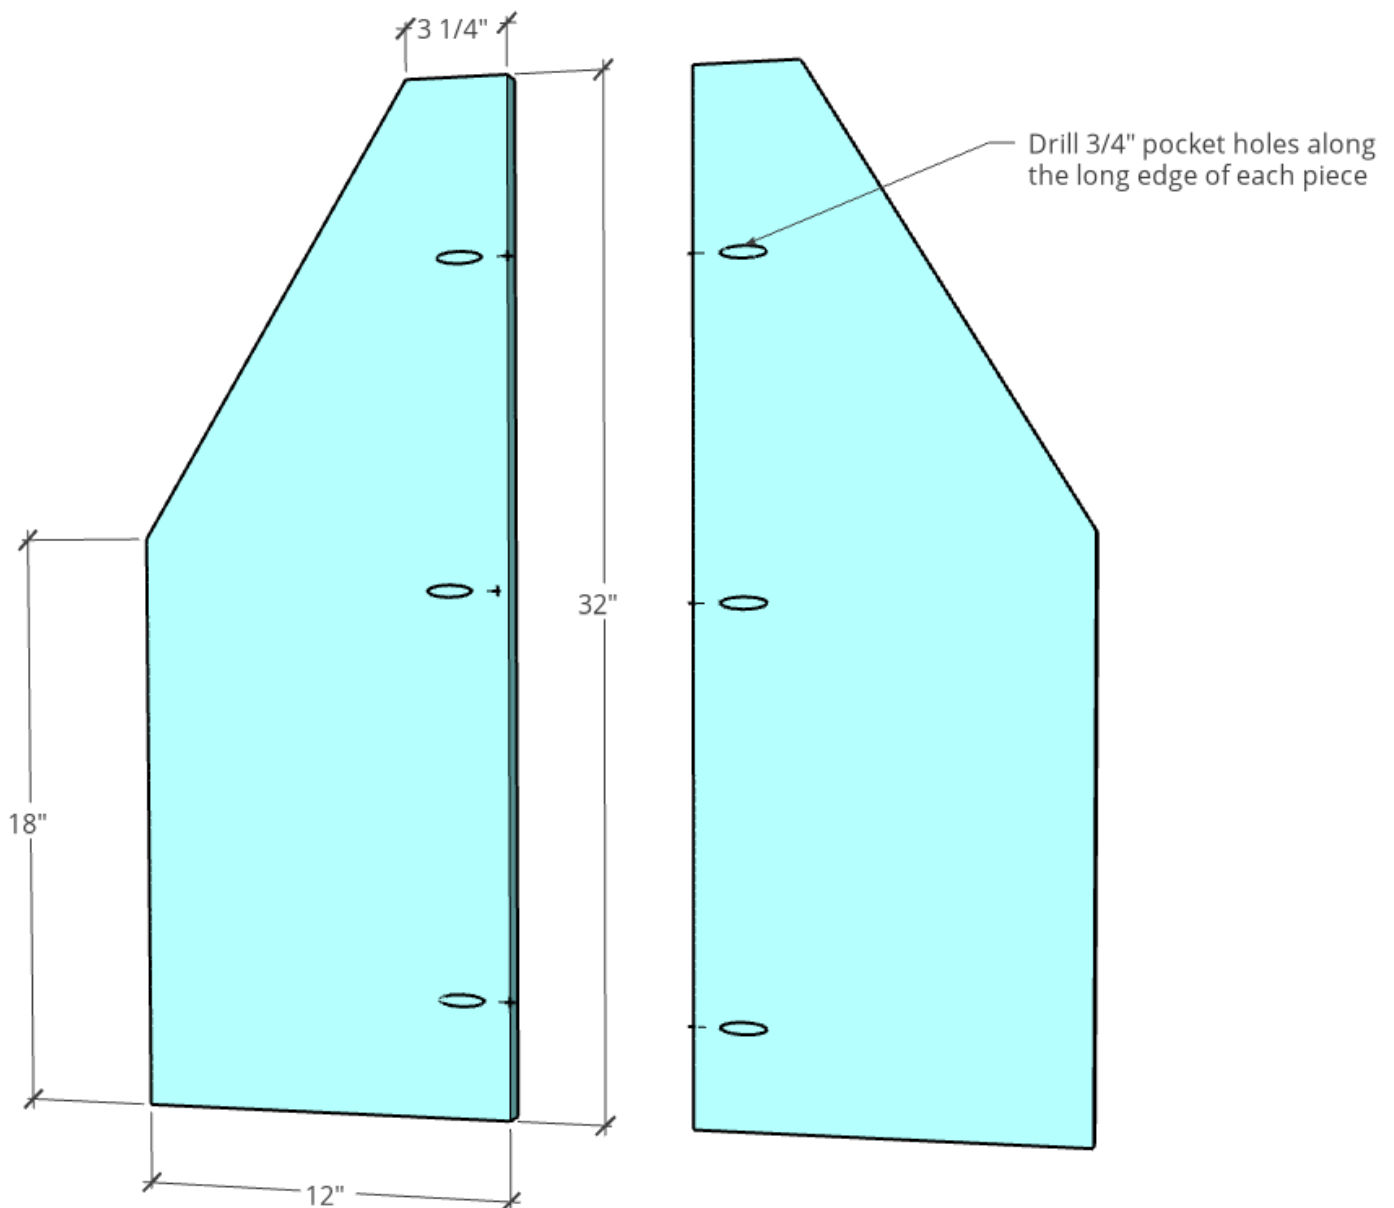

07

STEP 7: ADD SCRAP BIN SIDE PANELS CONTINUED

Install these panels between the 2x4 frame and the front panel from step 6. Use 1 1/4" pocket holes to secure these pieces to the 2x4 frame at the back.

Use 1 1/4" wood screws through the front panel to secure the front edge of these sides.

NOTE: Face the pocket holes toward the inside so they're hidden.



08

STEP 8: INSTALL PLYWOOD BOTTOM "LIP"

Cut a piece of 3/4" plywood to 6" x 72". Drill 3/4" pocket holes along one of the 72" edges.

Use wood glue and 1 1/4" pocket hole screws to secure this piece to the edge of the other side of the cart like shown. Face the pocket holes toward the inside.

This "lip" will help hold the plywood sheets on the cart and keep them from slipping off the front edge.

Install along front edge of bottom panel using wood glue and 3/4" pocket holes with 1 1/4" pocket hole screws

