www.joyoaudio.com

JAM BUDDY III

Versatile 3-in-1 Desktop Smart Amp

Owner's Manual

JOYO

I .Detailed safety instructions

- Use the attached power adapter only. It has passed strict tests and has safety certificates. If use other power adapters, it will increase noise, damage the internal circuits or the built-in battery.
- Do not expose it to any damp areas such as bathtub, toilet, washing-tub, sink, swimming pool. Avoid spill liquid substance into the product,otherwise it will lead to malfunction or electric shock.
- Don't use this product in places where is full of flammable and explosive gas, such as gas station or dusty areas.
- Use JAM BUDDY III's attached AC power adapter only! If you choose other adapters, they might not compatible with JAM BUDDY III's input voltage damage the unit or worse.
- JAM BUDDY III's attached adapter has passed the related electromagnetic compatibility tests and has safety certificates. If you use other power adapters, we're not sure whether they meet your country or region's compulsory safety certification standards.
- If the attached power adapter is broken, and you need to buy a new one, please make sure its polarity of power source and maximum power are the same as the attached power adapter.
- In order to save energy, please turn off the power switch after use.
- Do not use alcohol or other cleaning fluids to clean this product, otherwise it will damage the surface, use a clean dry cloth when necessary.
- Do not open the case for any reason, please contact professional maintenance men if it malfunctions. or contact your local retailer for maintenance.
- Do not pull the power cord or other parts of this product, so as not to damage the power cord and plugs.
- Use the knobs, buttons, plugs and ports carefully. Do not apply excessive force to use this unit, as this may result in damage of it.
- Please turn off this product and unplug it during a thunderstorm, lightning or not in use for a long time.
- Do not collide, throw or vibrate this equipment.
- To protect the built-in battery, please have a full charge if it is not in use for a long time and ensure charge it for every 2 months.
- If it indicates low battery,please charge it in time, as over discharge and low battery will cause irreversible loss to the battery capacity, and damage the battery.
- Please use the original packaging or shock-proof materials as you possibly can for transportation. Improper packaging could result in scratch or damage, or even malfunction.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

II .Description

JAM BUDDY III is a versatile 3-in-1 desktop smart amp, it adopts stereo design. 40W, delivering fabulous tone and dynamic for both music playing and jamming.

In PANEL mode, JAM BUDDY III features 8 simulation tones of different genres, including the common electric/acoustic guitars and bass tones such as CLEAN, OVERDRIVE, DISTORTION and more. All the 8 simulation tones have GAIN, 3-band EQ, independent VOLUME Control respectively, with independent TAP button for controlling DELAY and drum machine' s BPM.

In PRESET mode, there are 40 tone presets of different genres in all. Besides, if you use the special APP, hundreds of amps, pedals' simulation tones are available, so you can literally combine those and save them as you like unlimitedly.

JAM BUDDY III not only boasts multiple high-end tones, but also it' s more versatile! It has built-in wireless audio receiver, just plug the attached transmitter to the guitar, you can jam anywhere at home.

Moreover, it features tuner, drum machine, LOOPER, OTG recording, MIC IN, JAM BUDDY III will surely become your beloved gadget!

III.Features

1、40W stereo smart amplifier, compatible for electric guitar/electric bass/acoustic guitar/mic.
2、Features 52 built-in guitar heads and 25 cab digital models, ranging from vintage to modern tones.
3、49 built-in digital effects models, catering to your unique needs for tone.
4、40 preset tones facilitate your guitar practice, can be adjusted as you like.
5、40 drum patterns are available, catering to multiple genres such as pop, metal, jazz, etc.
6、Features 80secs LOOPER, and it can sync the drum machine, enriching your practice.
7、With special app for comprehensive operations, tone control, LOOPER function, etc are available via smart phone.
8、Supports USB recording&live streaming, perfect for video recording and live streaming.

IV.Package contents

JAM BUDDY III×1
Wireless transmitter×1
Power adapter×1
Power cable×1
4-Pin 3.5mm audio cable×1
Type-C to Lightning Adapter×1
Type-C to Type-C USB cable×1
Owner' s manual×1

V .Panel' s functions

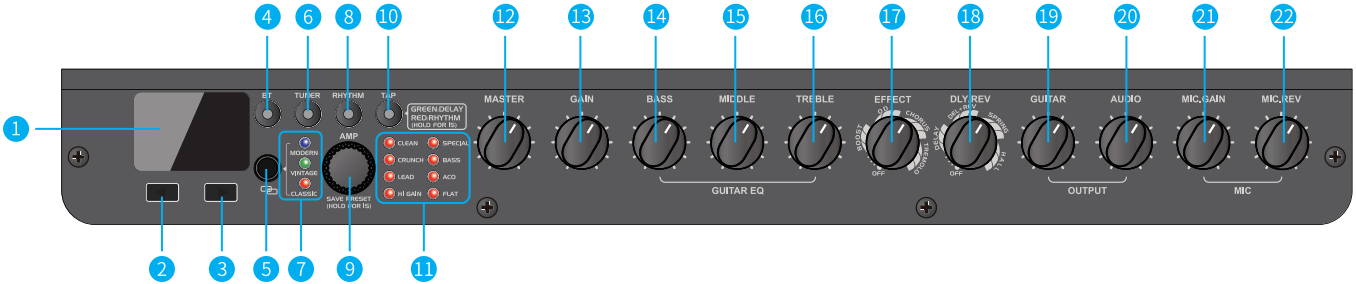

1、**LCD screen:** displaying PRESET, drum machine, tuner and wireless pairing, etc.

2、" ◄ ": Selecting PRESET and the tone' s sequence number of drum machine' s REWIND.

3、" ► ": Selecting PRESET and the tone' s sequence number of drum machine' s FORWARD.

4、**BT button:** turn on/off the Bluetooth, long press it for 1 second to turn on the Bluetooth, now the indicator is flickering in blue, then turn on your smart phone' s Bluetooth and search for " JOYO-JAM BUDDY 3 AUDIO" to connect, when they' re connected successfully, the indicator is in blue, long press it for 1 second again to turn it off.

5、**Global EQ mode/wireless pairing button:** tap it to choose the amp' s Global EQ mode: "MODERN' "VINTAGE" "CLASSIC". Long press it for 1 second to turn on the pairing interface of wireless connection function, now turn on the wireless transmitter first, and then double click the pairing button, as it enables the wireless transmitter enter to pairing mode(Now the wireless transmitter button LED indicator will be flickering quickly). Wait for 3-5 seconds, if they' re paired successfully, the screen will display CONNECTED first, and then exit pairing mode automatically, and the wireless transmitter LED indicator will be flickering in blue.*** No need to pair again, as we' ve paired them successfully!**

6、**TUNER button:** tap it to enter/exit TUNER function.

7、**Global EQ mode indicator:** indicating the current Global EQ working mode, this indicator is related to No.5' s function.

8、**RHYTHM button:** tap it to turn on/off the drum machine, while long press it to enter drum machine type selection mode, now tap " ◀ " " ▶ "to switch the RHYTHM, if you need to change the drum machine' s BPM, pls refer to No. 10 for details.

9、**AMP knob:** selects the type of the AMP by adjusting this knob, long press it for 1 second to save AMP' s VOLUME, GAIN and EQ' s parameters.

10、**TAP button:** you can adjust DELAY and the drum machine' s BPM via tap it at even space for 2-4 times, green LED indicates DELAY control mode, long press it for 1 second, the LED changes into red, indicating drum machine control mode.

11、**AMP indicator:** indicates the current type of the AMP that you' ve chosen, pls refer to No.9 for details.

12、**MASTER knob:** controls the whole amp' s MASTER VOLUME.

13、**GAIN knob:** controls the amp' s GAIN, the parameters can be saved, pls refer to No.9 for details.

14、**BASS knob:** controls the amp' s BASS, the parameters can be saved, pls refer to No.9 for details.

15、**MIDDLE knob:** controls the amp' s MIDS, the parameters can be saved, pls refer to No.9 for details.

16、**TREBLE knob:** controls the amp' s TREBLE, the parameters can be saved, pls refer to No.9 for details.

17、**EFFECT knob:** Selects effects types and MIX ratio, including BOOST/OD/CHORUS/TREMOLO.

18、**DLY/REV knob:** Selects effects types and MIX ratio, including DELAY/DELAY+REV/SPRING/HALL.

19、**GUITAR knob:** controls the amp' s VOLUME, the parameters can be saved, pls refer to No.9 for details.

20、**AUDIO knob:** Controls the VOLUME of Bluetooth/AUX IN/DRUM MACHINE/USB.

21、**MIC.GAIN knob:** Controls the MIC' s GAIN.

22、**MIC.REV.:** Controls the MIC' s REVERB MIX ratio.

VI.Rear Panel’s Functions

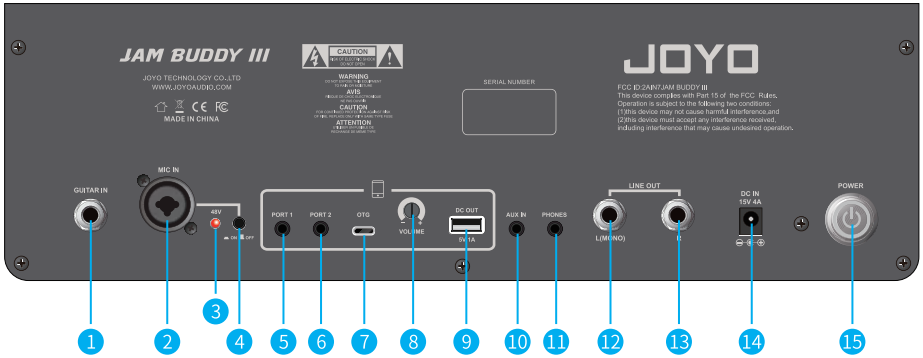

1、**GUITAR IN:** use a 6.35mm mono audio cable to connect the guitar/bass, etc, no need to use the cable if you use wireless devices.

2、**MIC.IN:** connects to the mic, supports XLR and 6.35mm plugs.

3、**48V Power Indicator:** indicates whether the 48V phantom power has been turned on or not, the 48V phantom power has been turned on when the red LED is on, while it’s been turned off when the LED extinguished.

4、**48V power switch:** tap it to turn on/off the 48V phantom power, the indicator indicates the working status, pls refer to No. 3 for details.

***Note: don’t turn on the 48V phantom power when you use the moving coil mic, so as not to damage it!**

5、**PORT 1:** for recording or live streaming via the smart phone’s headphone Jack, pls use 3.5mm 4-Pin audio cable.

6、**PORT 2:** for recording or live streaming via the smart phone’s headphone Jack, pls use 3.5mm 4-Pin audio cable.

7、**OTG port:** for recording or live streaming via the smart phone or PC, pls use the attached USB cable and adapter.

8、**VOLUME Knob:** for controlling the VOLUME of PORT1/2 and OTG recording, or live streaming Out, we suggest that you adjust to a suitable VOLUME first, and then start to record and live stream.

9、**DC OUT USB port:** for charging smart phone and other smart devices, DC OUT: “5V 1A”.

10、**AUX IN:** for connecting to external devices for playing backing tracks, pls use 3.5mm 3-Pin audio cable.

11、**PHONES JACK:** connects to the headphones.
12、**LINE OUT L(MONO) JACK:** The Left Channel' s LINE OUT JACK, for connecting to the mixer, etc, pls use 6.35mm mono cable.
13、**LINE OUT R Jack:** The Right Channel' s LINE OUT JACK, for connecting to the mixer, etc, pls use 6.35mm mono cable.
14、**DC IN Jack:** charging/power Jack, DC IN: "15V 4A", pls use the attached power adapter to charge/supply power.
15、**POWER switch:** long press it for 2 seconds to turn the unit on/turn the unit off, the yellow LED indicator will be on when you' re charging the amp, the LED indicator will be extinguished automatically once fully charged.

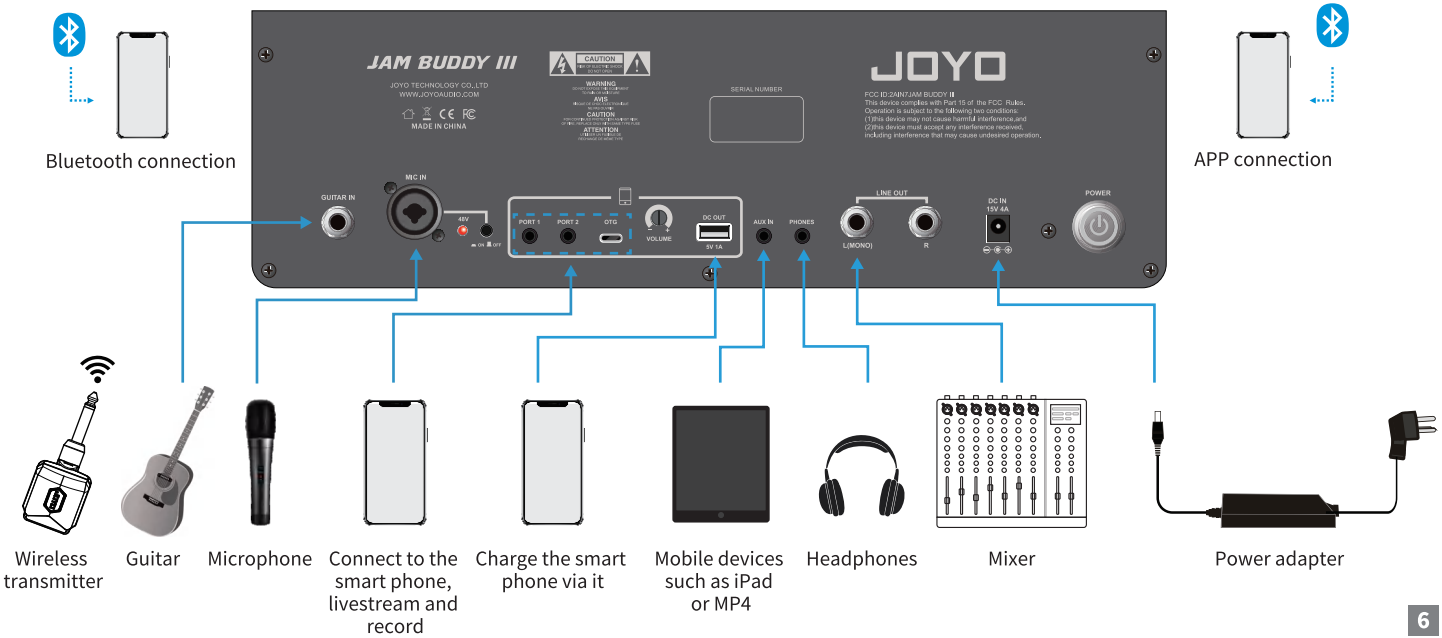

Ⅶ.Operation mode instructions

JAM BUDDY III features 2 tone adjustment modes: PANEL(What you see is the exact parameter) and PRESET(The parameter can be stored as preset) modes.

①PANEL mode(It' s similar to the ordinary amp' s operations)

JAM BUDDY III has 8 built-in simulation amp as below:

CLEAN: Amp simulation that is based on"Fender 65 Deluxe reverb"

CRUNCH: Amp simulation that is based on "Marshall Plexi 100"

LEAD: Amp simulation that is based on "Blackstar HT Stage 100"' s DISTORTION CHANNEL

HI GAIN: Amp simulation that is based on "ENGL E650 Blackmore"' s DISTORTION CHANNEL

SPECIAL: Amp simulation that is based on "ENGL E645 "' s DISTORTION CHANNEL

BASS: Amp simulation that is based on 1×15 BASS AMP

ACOUSTIC: Acoustic guitar IR amp simulation

FLAT: Direct tone with flat EQ

In PANEL mode, all of the 8 amp simulations feature GAIN, 3-band EQ, VOLUME Control respectively, with independent TAP button for control DELAY and drum machine' s TEMPO, you can adjust the modulation effects and REVERB, DELAY effects via the amp panel' s knobs.

②PRESET mode (As for this mode, we suggest that you choose the special app)

You can enter the tone pool of the PRESET mode via the" ◄" " ►" ,There are 40 tone presets of different genres in all. In this mode, if you use the APP, you can also DIY(edit) any tone, including replace/combine AMP, CAB, OD, MOD, DELAY, REVERB(Pls refer to the following lists for details) and more. If you want to use the adjusted tone next time, don' t forget to replace and save it in the tone pool. You' ll be amazed at this fabulous tone pool via the APP!

Ⅷ.Tone modulation list

DYN		
Number	Name	Explanation
1	NG	Based on JOYO NOISE KILLER
2	COMP	Based on JOYO DYNA COMPRESSOR
3	TOUCH WAH	Based on JOYO WOW WAH
4	AUTO WAH	Based on JOYO DUAL MODULATION

OD		
Number	Name	Explanation
1	PURE BOOST	Based on JOYO RATED BOOST
2	FLEX BOOST	Based on JOYO WILD BOOST
3	TUBE DR	Based on B.K. Butler Tube Driver Overdrive Effect
4	808	Based on IBANEZ TS808 Overdrive Effect
5	GOLD CLON	Based on Klon Centaur gold Overdrive Effect
6	D-DRIVE	Based on BARBER Direct Drive Overdrive Effect
7	JIMMY OD	Based on Paul Cochrane Timmy OD Overdrive Effect
8	FULL DR	Based on Fulltone Fulldrive 2 Overdrive Effect
9	BeeBee PRE	Based on Xotic BB Preamp Overdrive Boost Effect
10	BeeBee+	Based on Xotic BB Plus Overdrive Distortion Effect
11	BLACK RAT	Based on ProCo Rat Distortion Effect
12	GREY FAZE	Based on Dunlop Fuzz Face Fuzz Effect
13	MUFFY	Based on EH Big Muff Fuzz Effect

14	FULL DS	Based on Fulltone GT-500 Distortion Effect
15	SHRED	Based on Marshall Shredmaster Distortion Effect
16	RIET	Based on Suhr Riot Distortion Effect
17	MTL ZONE	Based on BOSS METAL ZONE Effect
18	MTL MASTER	Based on Digitech METAL MASTER Effect
19	OBSESSIVE DIST	Based on Fulltone OCD Distortion Effect

AMP

CLEAN

Number	Name	Explanation
1	65 US DLX	Based on Fender® 65 Deluxe reverb Preamp Module
2	65 US TW	Based on Fender® 65 Twin Reverb Preamp Module
3	59 US BASS	Based on Fender® 59 Bassman Preamp Module
4	US SONIC	Based on Fender® Super Sonic Preamp Module
5	US BLUES CL	Based on Fender® Blues Deluxe Clean Channel
6	E650 CL	Based on ENGL®E650 Clean Channel
7	POWERBELL CL	Based on ENGL® E645 Clean Channel
8	BLACKNIGHT CL	Based on ENGL® E650 Blackmore Clean Channel
9	MARK III CL	Based on MESA/Boogie® MARK III Clean Channel
10	MARK V CL	Based on MESA/Boogie® MARK V Clean Channel
11	TRI REC CL	Based on MESA/Boogie® Triple Rectifier Clean Channel
12	ROCKVRB CL	Based on Orange® Rockerverb Clean Channel
13	DR.ZEE 18 JR	Based on DR.Z® Maz18 Jr Preamp Module
14	DR.ZEE RECK	Based on DR.Z® Z-Wreck Preamp Module

15	JET 100H CL	Based on Jet City® JCA100H' s Clean Channel
16	JAZZ 120	Based on Roland® JC-120' s Preamp Module
17	UK30 CL	Based on Vox® AC30' s Clean setup
18	HWT 103	Based on Hiwatt® DR-103' s Preamp Module
19	PV5050 CL	Based on Peavey® 5150' s Clean Channel
20	REGAL TONE CL	Based on Tone King® Falcon amp's Rhythm Channel
21	CAROL CL	Based on Two Rock® Coral' s Clean Channel
22	CARDEFF	Based on Two Rock® Cardiff ' s Preamp Module
23	HT CLUB CL	Based on Blackstar® HT Stage 100' s Clean Channel
24	HUGEN CL	Based on Diezel® Hagen' s Clean Channel
CRUNCH		
Number	Name	Explanation
1	US BLUES OD	Based on Fender® Blues Deluxe' s Overdrive Channel
2	UK 30 OD	Based on Vox® AC30' s Overdrive setup
3	REGAL TONE OD	Based on Tone King® Falcon amp's Tweed Channel
4	EV 5050 CL	Based on EVH® 5150' s Clean Channel
5	KOCHE OD	Based on Koch® Powertone' s Overdrive Channel
6	J800	Based on Marshall® JCM800' s Preamp Module
7	J900	Based on Marshall® JCM900' s Preamp Module
8	PLX 100	Based on Marshall® Plexi 100' s Preamp Module
9	SLOW 100 CR	Based on Soldano® SLO-100 amp's Crunch Channel
10	CAROL OD	Based on Two Rock® Coral' s Overdrive Channel
11	HUGEN OD	Based on Diezel® Hagen' s Overdrive Channel

LEAD		
Number	Name	Explanation
1	MARK V DS	Based on MESA/Boogie® MARK V' s Distortion Channel
2	ROCKVRB DS	Based on Orange® Rockerverb' s Distortion Channel
3	EV 5050 DS	Based on EVH® 5150' s Distortion Channel
4	HT CLUB DS	Based on Blackstar® HT Stage 100' s Distortion Channel
5	HUGEN DS	Based on Diezel® Hagen' s Distortion Channel
6	TRI REC DS	Based on MESA/Boogie® Triple Rectifier' s Distortion Channel

HI GAIN		
Number	Name	Explanation
1	BLACKNIGHE DS	Based on ENGL® E650 Blackmore' s Distortion Channel
2	MARK III DS	Based on MESA/Boogie® MARK III' s Distortion Channel
3	CITRUS 30	Based on Orange® AD 30' s Preamp Module
4	SLOW 100 DS	Based on Soldano® SLO-100' s Distortion Channel
5	PV 5050 DS	Based on Peavey® 5150' s Distortion Channel

SPECIAL		
Number	Name	Explanation
1	CITRUS 50	Based on Orange® OR 50' s Preamp Module
2	JET 100 H	Based on Jet City® JCA100H' s Overdrive Channel
3	REGAL TONE OD2	Based on Tone King® Falcon' s Lead Channel
4	KOCHE DS	Based on Koch® Powertone' s Distortion Channel
5	POWERBELL DS	Based on ENGL® E645' s Distortion Channel
6	E650 DS	Based on ENGL® E650' s Distortion Channel

BASS/ACOUSTIC/FLAT		
Number	Name	Explanation
1	BASS	A tone simulation that is based on 1×15 BASS AMP
2	ACOUSTIC	Acoustic guitar IR tone simulation
3	FLAT	Direct tone with flat EQ

CAB		
Number	Name	Explanation
1	REGAL TONE 110	Based on Tone King Falcon 110 Cabinet
2	US DLX 112	Based on Fender Deluxe reverb 112 Cabinet
3	SONIC 112	Based on Fender Super Sonic 112 Cabinet
4	BLUES 112	Based on Fender Blues deluxe 112 Cabinet
5	MARK 112	Based on Mesa Boogie Mark 112 Cabinet
6	DR.ZEE 112	Based on DR.Z Maz 112 Cabinet
7	CARDEFF 112	Based on Two Rock 112 Cabinet
8	US TW 212	Based on Fender Twin reverb 112 Cabinet
9	CITRUS 212	Based on Orange PC212 Cabinet
10	DR.ZEE 212	Based on DR.Z Z-Wreck 212 Cabinet
11	JAZZ 212	Based on Roland JC120 212 Cabinet
12	UK 212	Based on Vox AC30 212 Cabinet
13	TWO STONES 212	Based on Two Rock 212 Cabinet
14	US BASS 410	Based on Fender Bassman 410 Cabinet
15	1960 412	Based on Marshall 1960A 412 Cabinet
16	EAGLE P412	Based on Engl Pro XXL 412 Cabinet

17	EAGLE S412	Based on Engl Vintage XXL 412 Cabinet
18	REC 412	Based on Mesa Boogie Rectifier 412 Cabinet
19	CITRUS 412	Based on Orange PC412 Cabinet
20	SLOW 412	Based on Soldano SLO 412 Cabinet
21	HWT 412	Based on Hiwatt AP412 Cabinet
22	PV 5050 412	Based on Peavey 5150 412 Cabinet
23	EV 5050 412	Based on EVH 5150 412 Cabinet
24	HT 412	Based on Blackstar HTV 412 Cabinet
25	DIESEL 412	Based on Diezel Hagen 412 Cabinet

MOD

Number	Name	Explanation
1	PHASER	Liquid like phaser effect
2	STEP PHASER	Based on square wave phaser effect
3	FLANGER	Classic flanger effect
4	JET FLANGER	A much fiercer flanger effect
5	TREMOLO	Tremolo effect with periodically changing volume level
6	STUTTER	Stutter effect with periodically changing volume level
7	VIBRATO	Vibrato effect with periodically changing volume level
8	PITCH SHIFT	Effect for changing the pitch, you can control the pitch via the expression pedal
9	ROTARY	Rotary effect
10	ANA CHORUS	Warm analog such as the chorus effect
11	TRI CHORUS	Modern multi chorus effect
12	RING	It can produce the tone similar to the ring

13	Q-FILTER	Static notch filter(like a half cocked wah pedal)
14	LOFI	Low rate sampling filter
15	SLOW GEAR	Auto volume swell
DELAY		
Number	Name	Explanation
1	DIGITAL	Recreates the crystal-clear repeats of the 80’ s delay units
2	ANALOG	Modelled after classic stompbox delays with BB chips
3	REAL ECHO	Realistic and natural echo
4	TAPE	Recreates swirly 70’ s tape echo
5	MOD	Digital delay with modulated repeats
6	REVERSE	Delay with reversed signals
REVERB		
Number	Name	Explanation
1	ROOM	Small room Reverb
2	HALL	Concert Hall Reverb
3	PLATE	Studio style plate Reverb
4	SPRING	Vintage spring Reverb tank
5	MOD	Reverb with Modulation effect

DRUM				RHYTHM	
Number	Name	Number	Name	Number	Name
1	8 Beat 1	22	Funk Rock	1	Metro
2	8 Beat 2	23	Electric Funk	2	Metro 2/4
3	8 Beat 3	24	Soul	3	Metro 3/4
4	8 Beat 4	25	R & B	4	Metro 4/4
5	8 Beat 5	26	Jazz	5	Metro 5/4
6	16 Beat 1	27	Big Band	6	Metro 6/4
7	16 Beat 2	28	Fusion	7	Metro 7/4
8	16 Beat 3	29	Swing	8	Metro 6/8
9	16 Beat 4	30	Dixieland	9	Metro 7/8
10	16 Beat 5	31	Blues	10	Metro 9/8
11	Rock Roll	32	Country		
12	Classic Rock	33	Country Folk		
13	Pop Rock	34	Rockabilly		
14	Slow Rock	35	Blue Grass		
15	Rock Shuffle	36	Bossanova		
16	Rock Ballad	37	Rumba		
17	Punk	38	Samba		
18	New Wave	39	Cha Cha		
19	Hard Rock	40	Tango		
20	Metal				
21	Classic Funk				

IX.Instructions for the APP

JAM BUDDY III has its own APP named “JAM BUDDY ”, which allows you to edit PRESET, metronome, drum machine, LOOPER and more easily. As for Android devices, pls download the APP “JAM BUDDY ” from our official website (www.joyoaudio.com) , while as for iOS devices, pls download the APP “JAM BUDDY ” from App Store.

1、APP connection: Firstly, long press the “BT” button on the panel to turn on Bluetooth(pls refer to Chapter 4, No. 4 for details). Secondly, tap on “JAM BUDDY III” APP to open it from your smart phone, and then tap the Bluetooth icon on the upper right to start Bluetooth connection, pls refer to the pics as below:

Step 1

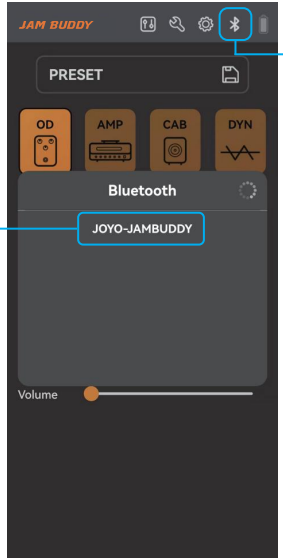

① Tap the Bluetooth to open the connection menu

② Tap connection

Step 2

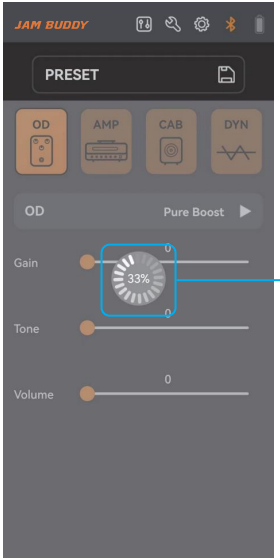

Wait for the connection

2、APP' s functions/instructions:

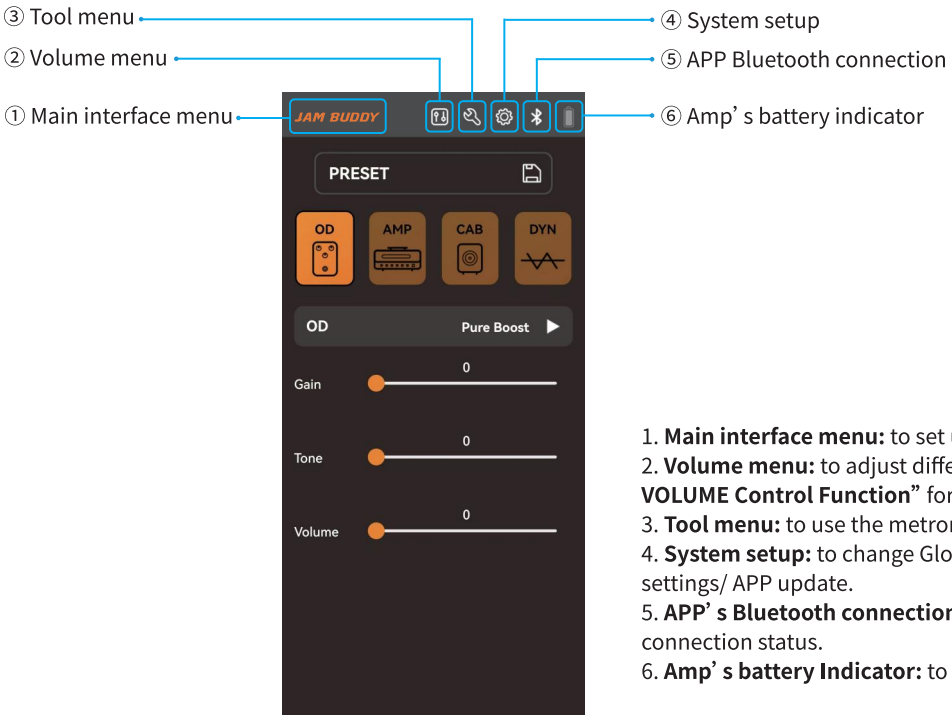

1. **Main interface menu:** to set up the parameters of the PRESET' s models.
2. **Volume menu:** to adjust different Volumes, pls refer to **"Page 19, No. 6 VOLUME Control Function"** for details.
3. **Tool menu:** to use the metronome/drum machine/tuner/LOOPER functions.
4. **System setup:** to change Global EQ/turns off automatically/Reset to factory settings/ APP update.
5. **APP' s Bluetooth connection:** to turn on APP and JAM BUDDY III' s Bluetooth connection status.
6. **Amp' s battery Indicator:** to gauge JAM BUDDY III' s battery of charge.

3、PRESET function' s instructions:

When you use JAM BUDDY ' s APP, you can change any one of the 40 tone presets' model effects under the PRESET mode, moreover, you can customize the PRESET' s name, take, for example, the "AMP" model:

Step 1

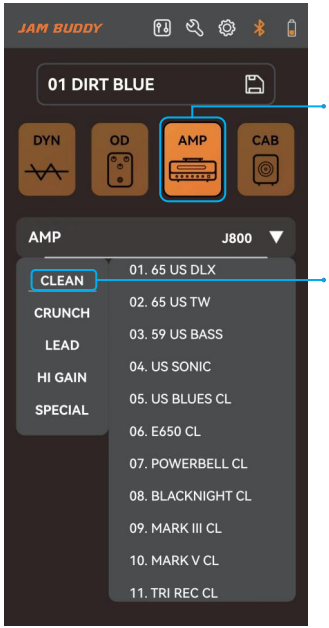

① Click AMP model

② Choose your favorite AMP model

Step 2

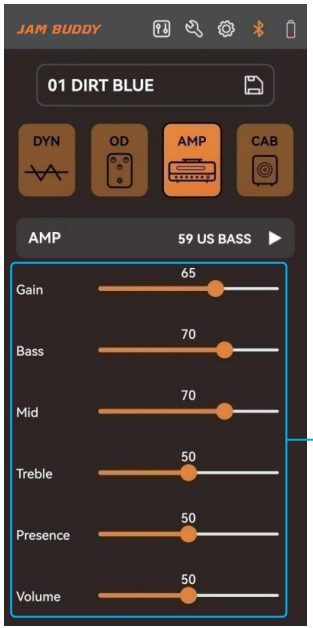

Adjust the parameters as you like

Step 3

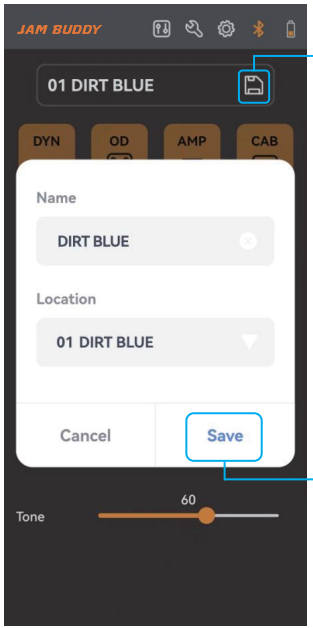

① Click Save

② Save it

4、Instructions for DRUM function machine/LOOPER functions:

JAM BUDDY III supports up to 80 seconds' LOOPER and in synch with the drum machine, the latter can be adjusted via the APP.

Step 1

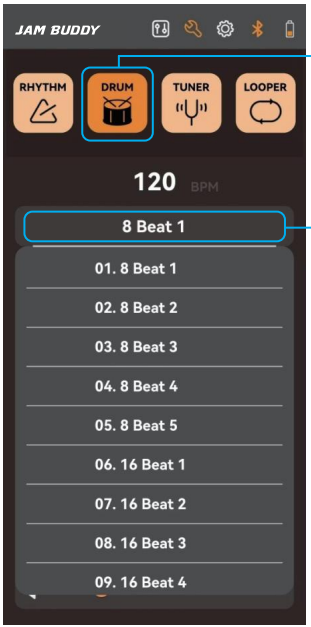

① Click "DRUM" function

② Choose the RHYTHM in the BPM menu

Step 2

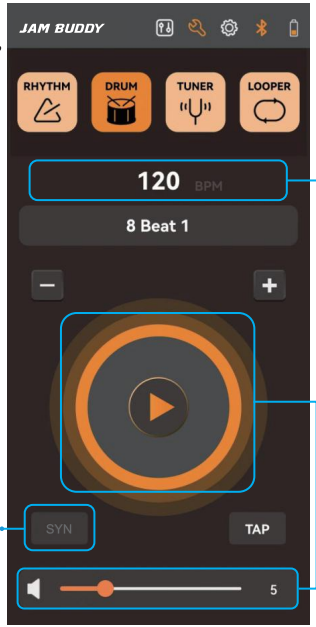

① You can set up the Tempo via "-" "+" or "TAP"

② Listen to the RHYTHM and adjust it to a suitable VOLUME

③ Tap SYN: the drum machine is in synch with the LOOPER

Step 3

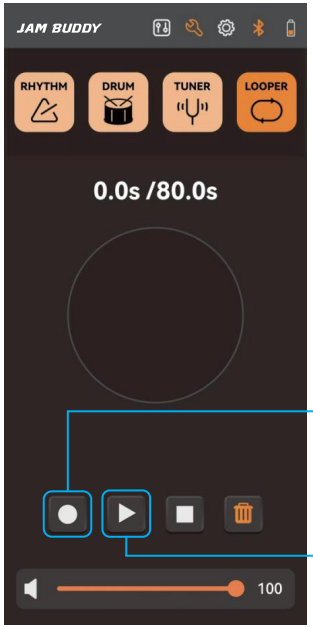

① Tap "●", and it start to record once the PREBEAT has finished

② Press "▶" to play once the recording has finished, and adjust a suitable Volume for the LOOPER's playback

5、Tuner function:

Tuner function: you can adjust the tuner mode' s MUTE function of the amp and A4 Frequency: 440Hz via the APP.

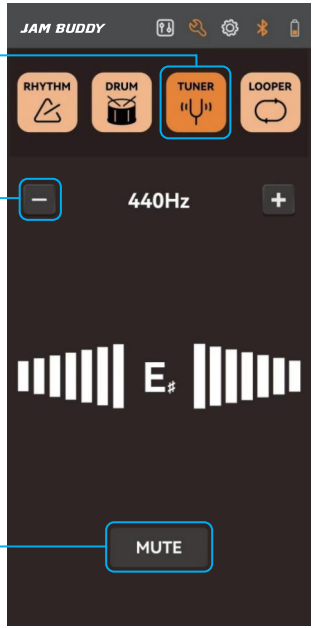

Tap "TUNER" to enter TUNER interface

You can change A4 Frequency: 440Hz frequency via " – " " + "

"MUTE" controls whether it' s MUTE or not in TUNER function

6、VOLUME Control Function:

You can adjust each VOLUME independently via the APP, pls refer to the diagram as below for details:

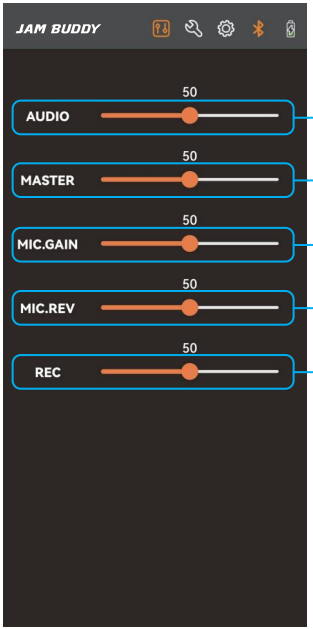

AUDIO: controls Bluetooth/AUX IN/ drum machine/USB' s VOLUME

MASTER: controls the amp' s MASTER VOLUME

MIC. GAIN: controls the mictrophone' s GAIN

MIC. REV: controls the mictrophone' s REVERB

REC: controls OTG recording/Output Volume while live streaming

X .How to use the wireless transmitter?

1.Long press it for 2 seconds to turn on/off the unit.

2.Charge the transmitter

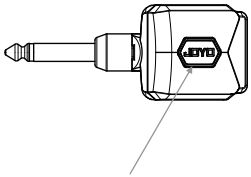

When the indicator starts to flicker, indicating the unit is in extremely low battery, you need to charge it in time.

Plug in the amplifier' s GUITAR IN to charge when the unit is on

3. The red indicator is on during charging. It goes off once fully charged.

4.Pair the transmitter and the amp all over again
Turn on the transmitter and amplifier, and then press the amplifier' s pairing button until the screen enter pairing interface. Double click the transmitter' s pairing button to enter pairing mode, if the screen displays CONNECTED, when they' re paired successfully, the green indicators on both of the transmitter and amp are on.

Switch the working channel banks
The system divides the working frequency into 4 channel banks so as to avoid mutual interference. Each pair occupy a channel bank while in use.

Each time you tap the transmitter' s pairing button will change the Channel bank once, meanwhile, the transmitter LED indicator' s flickering times indicate the current Channel bank.

XI.Specifications

Specifications	Parameters
Guitar In Impedance:	1MΩ
Guitar In Sensitivity:	-20dB/1kHz
Mic In Impedance:	4.3kΩ
Mic In Sensitivity:	-45dB/1kHz
AUX IN Impedance:	47kΩ
AUX IN Sensitivity:	0dB/1kHz
Headphone Out Impedance:	75Ω
LINE OUT Impedance:	470Ω
Loudspeaker:	4Ω 4” speakers×2+4Ω 2” speakers×2
Power:	RMS 40W
Power Supply:	DC 15V/4A (with power adapter) Center positive
Battery:	7.4V 12Ah 18650 lithium battery rechargeable (approximately 5 hours of use) * depending on usage conditions
PORT 1/2 Impedance:	4.7kΩ
Bluetooth Version:	5.1
USB charging port:	DC 5V/1A
Dimensions:	440*212*218mm
Net weight:	5.2kg

JOYO TECHNOLOGY CO., LTD

Address: 2/F, Lushi Industry Building, 28th District, Bao'an, Shenzhen, 518133 China.

www.joyoaudio.com Email: info@joyoaudio.com Tel: 0086-755-29765381