


REV A · USB BACKFEED CHECK

Battery connected / USB cable unplugged / Meter on DC volts


COMPONENT SIDE UP · NFC COIL AT TOP

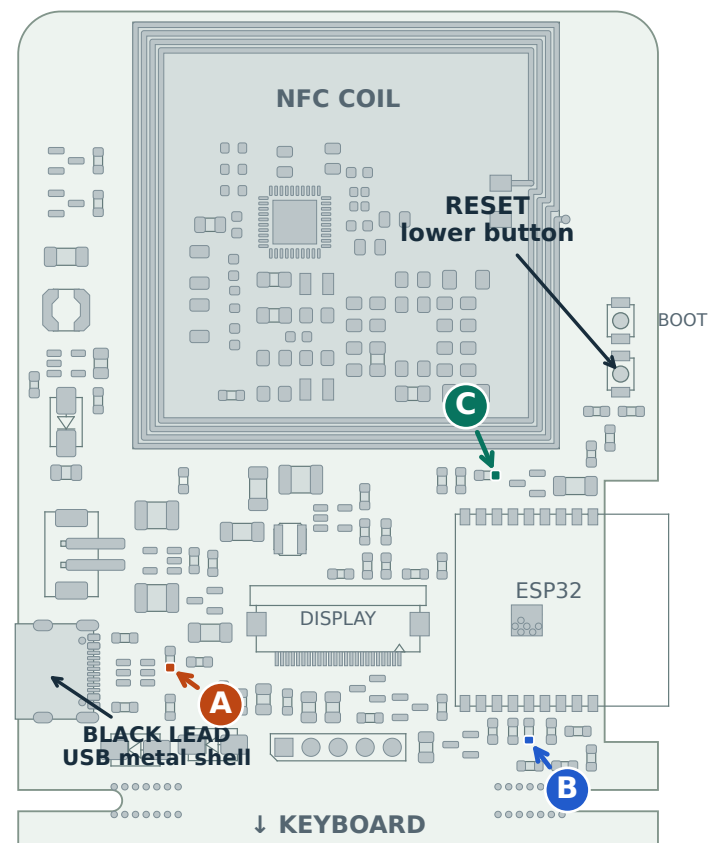

Same orientation in every enlargement.
Colored pad = red probe tip.


A VBUS · C14 pad 1

LOWER PAD

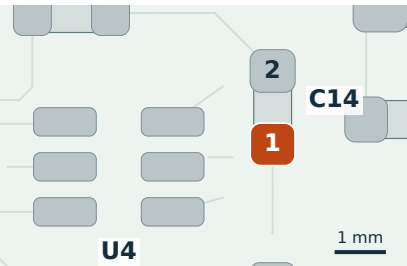


B D+ · R13 pad 1

LOWER PAD · right resistor

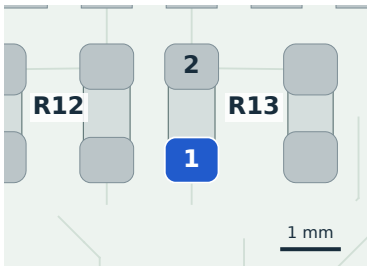

C 3.3 V · C11 pad 1

RIGHT PAD

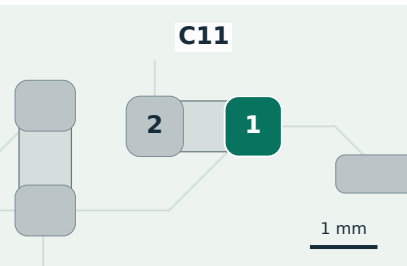

WRITE SIX READINGS · VOLTS DC

Probe	RESET released	RESET held
A VBUS / C14.1	<u>2.05</u> V	<u>0.01</u> V
B D+ / R13.1	<u>2.84</u> V	<u>0.0</u> V
C 3.3 V / C11.1	<u>3.33</u> V	<u>3.33</u> V

- 1 Power off. Clip black lead to the USB metal shell; keep USB unplugged.
- 2 Connect battery. Leave BOOT alone. With RESET released, read A → B → C.
- 3 Hold RESET (SW1) down. Read A → B → C again while keeping it held.

Use a fine insulated tip; touch only the colored pad. Wait for each reading to settle.

If A and B fall together while C stays near 3.3 V, the USB-data backfeed path is supported.
If C also falls, record it: RESET may be affecting the supply. Six readings first; no rework needed.