Figure 12-21 shows the SAS cabling on a Storwize V5030 with six attached expansion enclosures (three enclosures in each chain).

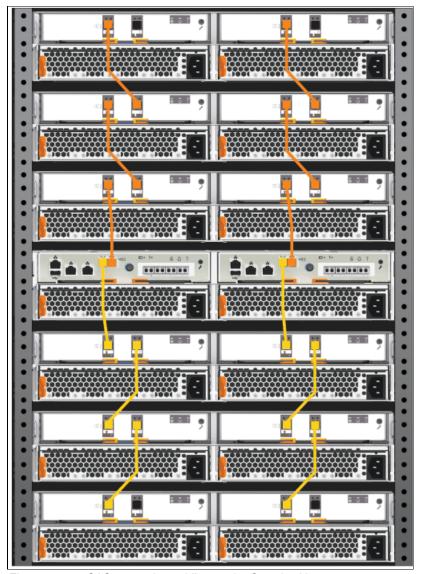


Figure 12-21 SAS expansion cabling on the Storwize V5030

**Important:** When a SAS cable is inserted, ensure that the connector is oriented correctly by confirming that the following conditions are met:

- ► The pull tab must be below the connector.
- ► Insert the connector gently until it clicks into place. If you feel resistance, the connector is probably oriented the wrong way. Do not force it.
- ► When the connector is inserted correctly, the connector can be removed only by pulling the tab.
- ► Cabling is done from the controller view top →down. Top/down button up is *not* supported.