

Bluetooth® Low Energy stack v4.x programming guidelines

Introduction

The main purpose of this document is to provide developers with reference programming guidelines on how to develop a Bluetooth[®] Low Energy (Bluetooth[®] LE) application using the Bluetooth[®] Low Energy stack v4.x family commands and events.

The document describes the Bluetooth[®] Low Energy stack v4.x stack library framework, commands and events interfaces allowing access to the Bluetooth[®] Low Energy functions provided by the STM32WB0 series Bluetooth[®] Low Energy devices system-on-chip.

The following Bluetooth® Low Energy device supports the Bluetooth® Low Energy (Bluetooth® LE) stack v4.x family:

- STM32WB05xZ devices
- STM32WB06xC and STM32WB07xC devices
- STM32WB09xE devices

The document also focuses on the STM32_BLE Middleware SW framework provided with the associated STM32CubeWB0 FW packages targeting the STM32WB0 series devices.

This programming manual also provides some fundamental concepts about the Bluetooth[®] LE technology in order to associate the Bluetooth[®] Low Energy stack v4.x commands and events parameters to the Bluetooth[®] Low Energy protocol stack features. The user is expected to have a basic knowledge of Bluetooth[®] Low Energy technology and its main features.

For more information about the supported devices and the Bluetooth[®] Low Energy specifications, refer to Section 1.1: References.

The manual is structured as follows:

- Fundamentals of the Bluetooth[®] Low Energy (Bluetooth[®] LE) technology
- Bluetooth[®] Low Energy stack v4.x library commands and events overview.
- How to design an application using the Bluetooth[®] Low Energy stack v4.x library APIs and event.

Note:

The document content is valid for all the specified Bluetooth® Low Energy devices. Any specific difference is highlighted whenever required.



1 General information

This document applies to STM32WB0 MCUs, which are Arm®-based devices.

For information on Bluetooth®, refer to the https://www.bluetooth.com website.

Note: Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.



arm

1.1 References

Table 1. Reference documents

Reference	Description		
Bluetooth specifications	Specification of the Bluetooth system (v5.x)		
DS14591	STM32WB05xZ datasheet		
DS14676	STM32WB07xC, STM32WB06xC datasheet		
DS14210	STM32WB09xE datasheet		
DB5065	STM32Cube embedded software for STM32WB0 series including LL/HAL drivers and Bluetooth® Low Energy		

1.2 List of acronyms and abbreviations

This section lists the standard acronyms and abbreviations used throughout the document.

Table 2. List of acronyms

Term	Meaning		
ACI	Application command interface		
AoA	Angle of arrival		
AoD	Angle of departure		
ATT	Attribute protocol		
Bluetooth [®] LE	Bluetooth® Low Energy		
BIS	Broadcast Isochronous Streams		
BIG	Broadcast Isochronous Groups		
BR	Basic rate		
CIG	Connected Isochronous Group		
CIS	Connected Isochronous Stream		
CRC	Cyclic redundancy check		
CSRK	Connection signature resolving key		
CTE	Constant tone extension		
EATT	Enhanced ATT		
EDR	Enhanced data rate		
ESL	Electronic Shelf Label		
DK	Development kits		
EXTI	External interrupt		

PM0274 - Rev 1 page 2/112



Term	Meaning	
GAP	Generic access profile	
GATT	Generic attribute profile	
GFSK	Gaussian frequency shift keying	
HCI	Host controller interface	
IFR	Information register	
IRK	Identity resolving key	
ISOAL	Isochronous Adaptation Layer	
ISM	Industrial, scientific, and medical	
LE	Low energy	
L2CAP	Logical link control adaptation layer protocol	
L2CAP-COS	Logical link control adaptation layer protocol - connection oriented services	
LTK	Long-term key	
MCU	Microcontroller unit	
MITM	Man-in-the-middle	
NA	Not applicable	
NESN	Next sequence number	
ООВ	Out-of-band	
PAwR	Periodic advertising with responses	
PDU	Protocol data unit	
RF	Radio frequency	
RSSI	Received signal strength indicator	
SIG	Special interest group	
SM	Security manager	
SN	Sequence number	
SW	Software	
USB	Universal serial bus	
UUID	Universally unique identifier	
WPAN	Wireless personal area networks	

PM0274 - Rev 1 page 3/112



2 Bluetooth[®] Low Energy technology

The Bluetooth® Low Energy wireless technology has been developed by the Bluetooth® special interest group (SIG) in order to achieve a very low power standard operating with a coin cell battery for several years.

Classic Bluetooth[®] technology has been developed as a wireless standard allowing cables to be replaced connecting portable and/or fixed electronic devices, but it cannot achieve an extreme level of battery life because of its fast hopping, connection-oriented behavior, and relatively complex connection procedures.

The Bluetooth[®] Low Energy devices consume only a fraction of the power of standard Bluetooth[®] products and enable devices with coin cell batteries to be connected via wireless to standard Bluetooth[®] enabled devices.

Figure 1. Bluetooth® Low Energy technology enabled coin cell battery devices



Bluetooth® Low Energy technology is used on a broad range of sensor applications transmitting small amounts of data:

- Automotive
- Sport and fitness
- Healthcare
- Entertainment
- Home automation
- Security and proximity

2.1 Bluetooth® LE stack architecture

Bluetooth[®] LE technology has been formally adopted by the Bluetooth[®] core specification version 4.0 (Section 1.1: References). This version of the Bluetooth[®] standard supports two systems of wireless technology:

- Basic rate
- Bluetooth[®] LE

The Bluetooth® LE technology operates in the unlicensed industrial, scientific, and medical (ISM) band at 2.4 to 2.485 GHz, which is available and unlicensed in most countries. It uses a spread spectrum, frequency hopping, full-duplex signal. Key features of Bluetooth® LE technology are:

- Robustness
- Performance
- Reliability
- Interoperability
- Low data rate
- Low-power.

In particular, Bluetooth[®] LE technology has been created for the purpose of transmitting very small packets of data at a time, while consuming significantly less power than basic rate/enhanced data rate/high speed (BR/EDR/HS) devices.

The Bluetooth® LE stack consists of two components:

- Controller
- Host

The controller includes the physical layer and the link layer.


PM0274 - Rev 1 page 4/112



Host includes the logical link control and adaptation protocol (L2CAP), the security manager (SM), the attribute protocol (ATT), the generic attribute profile (GATT) and the generic access profile (GAP). The interface between the two components is called host controller interface (HCI).

In addition, Bluetooth® specifications v4.1, v4.2, v5.x have been released with new supported features. For more information about these new features, refer to the related specification document.

Figure 2. Bluetooth® LE stack architecture

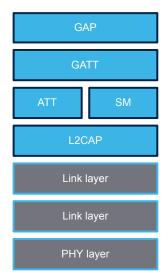

DT57297V1

2.2 Physical layer

The LE 1M physical layer is a 1 Mbps adaptive frequency-hopping Gaussian frequency shift keying (GFSK) radio. It operates in the license free 2.4 GHz ISM band at 2400-2483.5 MHz. Many other standards use this band: IEEE 802.11, IEEE 802.15.

The Bluetooth® Low Energy system uses 40 RF channels (0-39), with 2 MHz spacing. These RF channels have frequencies centered at:

$$2402 + k*2MHz$$
, where $k = 0, ..., 39$ (1)

RF channels can be divided into two groups:

- 1. Primary advertising channels that use three fixed RF channels (37, 38 and 39) for:
 - a. legacy advertising and connection
 - b. initial packet of extended advertising
- 2. General purpose channels that use all other RF channels.

Table 3. Bluetooth® Low Energy LE RF channel types and frequencies

Channel index	RF center frequency	Channel type
37	2402 MHz	Primary advertising
0	2404 MHz	General purpose
1	2406 MHz	General purpose
		General purpose
10	2424 MHz	General purpose
38	2426 MHz	Primary advertising
11	2428 MHz	General purpose
12	2430 MHz	General purpose
		General purpose

PM0274 - Rev 1 page 5/112



Channel index	RF center frequency	Channel type
36	2478 MHz	General purpose
39	2480 MHz	Primary advertising

Bluetooth® Low Energy is an adaptive frequency hopping (AFH) technology that can only use a subset of all the available frequencies in order to avoid all frequencies used by other nonadaptive technologies. This allows moving from a bad channel to a known good channel by using a specific frequency hopping algorithm, which determines the next good channel to be used.

2.2.1 LE 2M and LE Coded physical layers

Bluetooth® Low Energy specification v5.x adds two other PHY variants to the PHY specification (LE 1M) provided by Bluetooth® LE specifications v4.x:

- LE 2M
- LE Coded

Standard HCI APIs are defined on Bluetooth® Low Energy specifications v5.x to set, respectively, the PHY preferences (LE 1M, LE 2M, LE Coded) for the transmitter PHY and receiver PHY for all subsequent connections over the LE transport, or to set the transmitter PHY and receiver PHY for a specific connection.

Note: LE 1M support on Bluetooth® Low Energy specification v5.x is still mandatory.

2.2.2 LE 2M PHY

Main characteristics:

- 2 Msym/s modulation
- Uncoded

There are several application use cases demanding a higher throughput:

- Over-the-air firmware upgrade procedure
- Sports, fitness, medical applications use cases require to collect a significant amount of data with a greater accuracy, and also to send data more frequently through some medical devices.

LE 2M PHY allows the physical layer to work at 2 Mbps and, as a consequence, PHY can achieve higher data rates than LE 1M. It uses adaptive frequency-hopping Gaussian frequency shift keying (GFSK) radio. LE 2M PHY uses a frequency deviation of at least 370 kHz.

PM0274 - Rev 1 page 6/112



2.2.3 LE Coded PHY

Main characteristics:

- 1 Msym/s modulation
 - Same as LE 1M
- Payload can be coded with two different rates:
 - 500 kb/s (S = 2)
 - 125 kb/s (S = 8)

Several application scenarios ask for an increased range. By increasing the range, the signal-to-noise ratio (SNR) starts decreasing and, as a consequence, the probability of decoding errors rises: the bit error rate (BER) increases.

LE Coded PHY uses the forward error correction (FEC) to fix mistakes on received packets. This allows the received packet to be correctly decoded with a lower signal-to-noise ratio (SNR) values and, as a consequence, it increases the transmitter distance without the need to increase the transmitter power level (range can be up to four times the one allowed with Bluetooth® Low Energy v4.x).

FEC method adds some specific bits to the transmitted packet, which allows FEC to determine the correct values that the wrong bits should have. FEC method adds two further steps to the bit stream processing:

- 1. FEC encoding, which generates two further bits for each bit
- 2. Pattern mapper, which converts each bit from the previous step in P symbols depending on two coding schemes:
- S= 2: no change is done. This doubles the range (approximately)
- S= 8: each bit is mapped to 4 bits. This leads to a quadruple range (approximately)

Since the FEC method adds several bits to the overall packet, the number of data to be transmitted is increased: therefore the communication data rate is decreased.

	LE 1M	LE 2M	LE Coded (S=2)	LE Coded (S=8)
Symbol rate	1 Ms/s	2 Ms/s	1 Ms/s	1 Ms/s
Data rate	1 Mbps	2 Mbps	500 Kbps	125 Kbps
Error detection	3 bytes CRC	3 bytes CRC	3 bytes CRC	3 bytes CRC
Error correction	No	No	FEC	FEC
Range increase	1	0.8	2	4
Bluetooth® LE specification 5.x requirement type	Mandatory	Optional	Optional	Optional

Table 4. LE PHY key parameters

2.3 Link layer (LL)

The link layer (LL) defines how two devices can use a radio to transmitt information between each other. The link layer defines a state machine with five states:

PM0274 - Rev 1 page 7/112

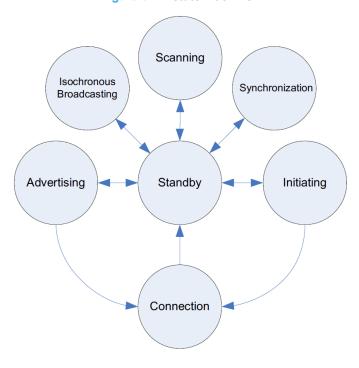


Figure 3. LL state machine

Standby: the device does not transmit or receive packets

- Advertising: the device broadcasts advertisements in advertising channels (it is called an advertiser device)
- Scanning: the device looks for advertiser devices (it is called a scanner device)
- Initiating: the device initiates a connection to the advertiser device
- Connection: if this state is entered from an initiating state, the device is in central role. If connection state is
 entered from advertising state, the device is in peripheral role. Central communicates with peripheral and
 defines the timing of transmissions.
- Synchronization: the device listens to the periodic advertising.
- Isochronous Broadcasting: the device broadcasts isochronous data packets.


2.3.1 Bluetooth® Low Energy packet

The Bluetooth® Low Energy packet format is different for uncoded and coded PHYs.

The format for uncoded PHYs (LE 1M and LE 2M) is shown in Figure 4. 2MB.

The Bluetooth® Low Energy data packet structure is described below.

Figure 4. 2MB




Preamble: start of the packet. 1 octet for LE 1M PHY, 2 octets for LE 2M PHY.

- Access address: 32 bits. It is different for each connection.
- PDU: it can be an advertising physical channel PDU or a data physical channel PDU.
- CRC: 24 bits of control code calculated over the PDU.
- Constant tone extension: optional. It consists of a constantly modulated series of unwhitened 1s.

The packet format for LE Coded PHY is shown in Figure 5. Coded PHY.

DT75175V1

DT57299V




DT57300V1

- Preamble: 80 symbols, not coded
- Access address: 32 bits. It is different for each connection
- CI: coding indicator. To select between 2 kinds of coded configurations: S=2 or S=8
- PDU: it can be an advertising physical channel PDU or a data physical channel PDU
- CRC: 24 bits of control code calculated over the PDU
- TERM1 and TERM2: termination sequences of FEC blocks to bring encoder to its original state.

The content of the PDU depends on the type of packet: advertising physical channel PDU or data physical channel PDU.

The format of advertising physical channel PDU is shown in Figure 6. Advertising physical channel PDU

Figure 6. Advertising physical channel PDU



DT57301V1

- The header is 16 bits and contains information on the PDU type and the length of the payload
- The payload filed is specific to the PDU type.

The PDU type contained in the advertising header can be one of types described in the Table 5. PDU advertising header.

Table 5. PDU advertising header

Packet			Advertising				Permitted PHY
Type	Packet Name	Description	Physical Channel	LE 1M	LE 2M	LE Coded	Notes
0000b	ADV_IND	Connectable undirected advertising	Primary	X	_	-	Used by an advertiser when it wants another device to connect to it. The device can be scanned by a scanning device, or enter connection state as a peripheral on reception of a connection request.
0001b	ADV_DIRECT_IND	Connectable directed advertising	Primary	x	-	-	Used by an advertiser when it wants to connect to a particular device. The ADV_DIRECT_IND packet contains advertiser's address and initiator address only.

PM0274 - Rev 1 page 9/112



			Advertising				Permitted PHY
Packet Type	Packet Name	Description	Physical Channel	LE 1M	LE 2M	LE Coded	Notes
0010b	ADV_NONCONN_IND	Nonconnectable undirected advertising	Primary	x	-	-	Used by an advertiser when it wants to provide some information to all the devices, but it does not want other devices to ask it for more information or to connect to it. The device simply sends advertising packets on related channels, but it does not want to be connectable or scanned by any other device.
0011b	SCAN_REQ	Scan request	Primary	x	-	-	Used by a device in scanning state to request additional information from the advertiser on primary channel using legacy PDUs.
	AUX_SCAN_REQ	Auxiliary scan request	Secondary	X	X	X	Used by a scanner to request additional info on secondary advertising physical channels.
0100b	SCAN_RSP	Scan response	Primary	x	-	-	Used by an advertiser device to provide additional information to a scan device after reception of a SCAN_REQ.
0101b	CONNECT_IND	Connection request	Primary	×	-	-	Sent by an initiating device to a device in connectable/discoverable mode on primary advertising channel.
01010	AUX_CONNECT_REQ	Auxiliary connection request	Secondary	x	x	×	Sent by an initiating device to a device in connectable/discoverable mode on secondary advertising channel.
0110b	ADV_SCAN_IND	Scannable undirected advertising	Primary	x	_	-	Used by an advertiser which wants to allow a scanner to require more information from it. The device cannot connect, but it is discoverable to advertise data and scans response data.
	ADV_EXT_IND	Extended Advertising PDU	Primary	x	-	×	Extended advertising packet which usually refers to AUX_ADV_IND packets on secondary advertising channel.
0111b	AUX_ADV_IND	Auxiliary advertising	Secondary	X	X	X	Packet containing advertising information on secondary advertising channel.
	AUX_SCAN_RSP	Auxiliary scan response	Secondary	х	х	Х	Sent by an advertiser upon reception of an AUX_SCAN_REQ.
	AUX_SYNC_IND	Auxiliary sync PDU	Periodic	х	х	Х	Packet used in periodic advertising.
	AUX_CHAIN_IND	Auxiliary chaining PDU	Secondary and Periodic	х	х	Х	PDU used to add additional data.
1000b	AUX_CONNECT_RSP	Auxiliary connection response	Secondary	Х	Х	Х	PDU used to respond to an AUX_CONNECT_REQ

Data physical channel PDUs has the format shown in Figure 7. Data physical channel PDUs.

PM0274 - Rev 1 page 10/112



Figure 7. Data physical channel PDUs



- The header contains the PDU type, the length of the payload and other information like sequence numbers.
 It is 16-bit long but can be increased to 24 bits if CTE info is included (i.e. if constant tone extension for direction finding is used)
- The payload can be up to 251 octets
- The MIC is included in encrypted link layer connection if payload length is not zero.

2.3.2 Extended advertising

On Bluetooth® LE specification v4.x, the maximum advertising packet payload is 31 bytes. Each advertising packet payload is sent on three specific channels (37, 38, 39), one packet at a time.

Bluetooth® LE v5.x advertising extension capability allows:


- To extend the data length in connectionless scenarios (that is, beacon)
- · to have multiple sets of advertising data to be sent
- to have advertising sent in a deterministic way

New extended advertising packets can use the Bluetooth[®] LE 4.x connection channels (0-36) for extending advertising payload up to 255 bytes. Initial advertising and legacy PDUs are transmitted on 3 RF channels (37, 38, 39), known as "primary advertising physical channel". The header field also includes a new data AuxPtr, which contains the channel number (0-36), where the packet, including the advertising payload, is transmitted (it is called the secondary channel).

Most of the communication is made on 37 RF channels, the "secondary advertising physical channel".


ADV_EXT_IND new packet is used and it that can be sent on the primary adv phy channel. If needed, it contains the pointer to an auxiliary packet on the secondary adv phy channel: most of the info is on the auxiliary packet.

Figure 8. Bluetooth® LE 5.x extended advertising



It is also possible to create a chain of advertising packets on secondary channels in order to transmit more advertising payload data (greater than 255 bytes). Each advertising packet on a secondary channel includes on its AuxPtr the number of the next secondary channel for the next advertising packet on the chain. Consequently, each chain in the advertising packet chain can be sent on a different secondary channel.

Figure 9. Advertising packet chain



TE73041/1

PM0274 - Rev 1



A direct advantage of the new extended advertising packets is the capability to send less data on primary channels (37,38,39) so reducing the data on primary channels. Furthermore, the advertising payload is sent on a secondary channel only and no longer on all the three primary advertising channels, reducing the overall duty cycle.

Some restrictions are applied to allowed channels:

- Legacy advertising PDUs and new ADV_EXT_IND are allowed on the primary adv phy channel only
- New advertising PDUs (except for ADV_EXT_IND) are allowed on the secondary adv phy channel only.

Some restrictions are also applied to allowed PHYs:

- Legacy advertising PDUs can only use LE 1M PHY
- New advertising PDUs can use one of the three PHYs (LE 1M, LE 2M, LE Coded), but LE 2M is not allowed on a primary adv phy channel. So, ADV_EXT_IND can only be sent on LE 1M and LE Coded.

Any combination of PHYs is possible between primary and secondary channels. However, some combination may not have a real use case.

Common use cases are: LE 1M -> LE 1M, LE 1M -> LE 2M, LE Coded -> LE Coded

Note: The minimum advertising interval has been reduced from 100 ms to 20 ms for non-connectable advertising.

2.3.3 Advertising sets

Bluetooth[®] Low Energy v4.x does not vary the advertising payload during the advertising to have different data on different advertising packets.

It does not provide enough flexibility to interleave different advertising data with a power-efficient mechanism.

Bluetooth® Low Energy v5.x defines advertising sets having an ID used to indicate which set each packet belongs to

Each set has an ID (SID, Set ID) used to indicate which set each packet belongs to.

- The SID is an identifier of the set that is sent over-the-air
- Since an advertiser can have more than one advertising set, this number can be used by the scanner to distinguish between different advertising sets from the same advertiser
- This SID is used (together with the DID, that is, Data ID) for duplicate filtering

Each set has its specific advertising parameters (advertising interval, PDU type) and it can use the primary or secondary channel.

The link layer has the ownership of scheduling and transmitting the adverting sets defined by the host layer.

2.3.4 Advertising state

Advertising states allow the link layer to transmit advertising packets and also to respond with scan responses to scan requests coming from those devices, which are actively scanning.

An advertiser device can be moved to a standby state by stopping the advertising.

Each time a device advertises, it sends the same packet on each of the three advertising channels. These three packet sequences are called an "advertising event". The time between two advertising events is referred to the advertising interval, which can go from 20 milliseconds to every 10.28 seconds.

An example of an advertising packet lists the service UUID that the device implements (general discoverable flag, tx power = 4 dBm, service data = temperature service and 16-bit service UUIDs).

Figure 10. Advertising packet with AD type flags



The flag AD type byte contains the following flag bits:

- Limited discoverable mode (bit 0)
- General discoverable mode (bit 1)

PM0274 - Rev 1 page 12/112

DT57305V1



- BR/EDR not supported (bit 2, it is 1 on Bluetooth[®] Low Energy)
- Simultaneous LE and BR/EDR to the same device capable (controller) (bit 3)
- Simultaneous LE and BR/EDR to the same device capable (host) (bit 4)

The flag AD type is included in the advertising data if any of the bits is nonzero (it is not included in a scan response).

The following advertising parameters can be set before enabling advertising:

- Advertising interval
- Advertising address type
- · Advertising device address
- Advertising channel map: which of the three advertising channels should be used
- Advertising filter policy:
 - Process scan/connection requests from the devices in the filter list.
 - Process all scan/connection requests (default advertiser filter policy).
 - Process connection requests from all the devices but only scan requests in the filter list.
 - Process scan requests from all the devices but only connection requests in the filter list.

A filter list is a list of stored device addresses used by the device controller to filter devices. The filter list content cannot be modified while it is being used. If the device is in an advertising state and uses a filter list to filter the devices (scan requests or connection requests), it has to disable the advertising mode to change its filter list.

2.3.5 Scanning state

There are two types of scanning:

- Passive scanning: it allows the advertisement data to be received from an advertiser device
- Active scanning: when an advertisement packet is received, the device can send back a scan request
 packet, in order to get a scan response from the advertiser. This allows the scanner device to get additional
 information from the advertiser device.

The following scan parameters can be set:

- Scanning type (passive or active)
- Scan interval: how often the controller should scan
- Scan window: for each scanning interval, it defines how long the device has been scanning
- Scan filter policy: it can accept all the advertising packets (default policy) or only those on the filter list.

Once the scan parameters are set, the device scanning can be enabled. The controller of the scanner devices sends to the upper layers any received advertising packets within an advertising report event. This event includes the advertiser address, advertiser data, and the received signal strength indication (RSSI) of this advertising packet. The RSSI can be used with the transmit power level information included within the advertising packets to determine the path-loss of the signal and identify how far the device is:

Path loss = Tx power–RSSI

2.3.6 Connection state

When data to be transmitted are more complex than those allowed by advertising data or a bidirectional reliable communication between the two devices is needed, the connection is established.

When an initiator device receives an advertising packet from an advertising device to which it wants to connect, it can send a connect request packet to the advertiser device. This packet includes all the required information needed to establish and handles the connection between the two devices:

- Access address used in the connection in order to identify communications on a physical link
- CRC initialization value
- Transmit window size (timing window for the first data packet)
- Transmit window offset (transmit window start)
- Connection interval (time between two connection events)
- Peripheral latency (number of times peripheral can ignore connection events before it is forced to listen)
- Supervision timeout (max. time between two correctly received packets before link is considered lost)
- Channel map: 37 bits (1 = good; 0 = bad)
- Frequency-hop value (random number between 5 and 16)

PM0274 - Rev 1 page 13/112



 Sleep clock accuracy range (used to determine the uncertainty window of the peripheral device at the connection event).

For a detailed description of the connection request packet, refer to Bluetooth® specifications [Vol 6].

The allowed timing ranges are summarized in Table 3. Bluetooth[®] Low Energy LE RF channel types and frequencies:

Parameter	Min.	Max.	Note
Transmit window size	1.25 milliseconds	10 milliseconds	-
Transmit window offset	0	Connection interval	Multiples of 1.25 milliseconds
Connection interval	7.5 milliseconds	4 seconds	Multiples of 1.25 milliseconds
Supervision timeout	100 milliseconds	32 seconds	Multiples of 10 milliseconds

Table 6. Connection request timing intervals

The transmit window starts after the end of the connection request packet plus the transmit window offset plus a mandatory delay of 1.25 ms. When the transmit window starts, the peripheral device enters the receiver mode and waits for a packet from the central device. If no packet is received within this time, the peripheral leaves the receiver mode, and it tries one connection interval again later. When a connection is established, a central has to transmit a packet to the peripheral on every connection event to allow the peripheral to send packets to the central. Optionally, a peripheral device can skip a given number of connection events (peripheral latency). A connection event is the time between the start of the last connection event and the beginning of the next

A Bluetooth[®] LE peripheral device can only be connected to one Bluetooth[®] LE central device, but a Bluetooth[®] LE central device can be connected to several Bluetooth[®] LE peripheral devices. On the Bluetooth[®] SIG, there is no limit to the number of peripherals a central can connect to (this is limited by the specific used Bluetooth[®] LE

2.3.6.1 Extended scan

Since extended advertising uses new packets and new PHYs, these changes are reflected on scan procedures. Scanning on the primary channel is possible using LE 1M, to find:

Legacy events

technology or stack).

connection event.

- Extended adverting events, possibly switching to other PHYs on secondary advertising physical channel Scanning on the primary channel is possible using LE Coded, to find:
- Extended advertising events, possibly switching to other PHYs on the secondary advertising physical channel.

2.3.7 Periodic advertising and periodic advertising sync transfer

Bluetooth® specification v5.0 defines periodic advertising that uses deterministic scheduling to allow a device to synchronize its scanning with the advertising of another device.

A new synchronization mode is defined by the generic access profile, which allows the periodic advertising synchronization establishment procedure to be performed and to synchronize with the advertising.

Periodic advertisements use a new link layer PDU called AUX_SYNC_IND. The required information (timing and timing offset) needed to synchronize with the periodic advertising packets is sent in a field, called SyncInfo, included in AUX_ADV_IND PDUs.

The periodic advertising synchronization procedure has a cost in terms of energy and some devices could not be in the conditions to perform this procedure.

A new procedure, called Periodic Advertising Sync Transfer (PAST), has been defined in order to allow a device, which receives periodic advertising packets from device B, to pass the acquired synchronization information to another device C, which is connected to the device A. As consequence, the device C is able to receive the periodic advertising packets directly from device B without the need to scan for AUX_ADV_IND PDUs, which would consume too much energy. It is also possible for a device to send through an ACL connection the synchronization information related to its own periodic advertising train.

PM0274 - Rev 1 page 14/112



2.3.8 Periodic advertising with responses

The periodic advertising with responses (PAwR) uses a connectionless communication framework by allowing data to be sent from one device (broadcaster) to one or more receiver devices (observers). The advertising packets are sent periodically at a fixed interval and the observers are able to determine the periodic packets rate through the AUX_ADV_IND PDUs or by using the Periodic Advertising Sync Transfer (PAST) procedure. PAwR Observers are also able to send response packets back to the broadcaster by allowing to establish a bidirectional, connectionless communication channel. It also enables sending different data to each observer device or to a set of observer devices. The synchronization information for periodic advertising with responses is included within the SyncInfo field and in the ACAD field of AUX_ADV_IND PDUs. The broadcaster is able to schedule transmissions within advertising events in a series of events and subevents: Observers are synchronized in order to listen during a specific subevent or subevents only. Further, the PAwR broadcaster has the capability to use a transmission time slot to send a connection request (AUX_CONNECT_REQ) to a specific device and establish a connection with it.

The periodic advertising with responses is mainly used when application data is expected to change frequently and it requires the periodic advertising sync transfer.

The main benefits of the Periodic Advertising with Response (PAwR) are:

- 1. Bidirectional connectionless communication not supported on previous Bluetooth LE versions
- 2. Scalability in creating a one-to-many topology capable of bidirectional application data communication
- 3. Energy efficiency: Observers only scan during a small subset of all broadcaster transmissions

Periodic advertising with response is not intended to be used in application scenarios where there is real-time messaging exchange since it provides a periodic transmission framework in specific time slots known as subevents and the device listen for only specific subevents. So there is a specific latency in this communication framework (from milliseconds to tens of seconds depending on the network).

The Electronic Shelf Label (ESL) profile is based on periodic advertising with response and connection-oriented communication. It provides a standard communication profile allowing to handle the control and the communication with electronic shelf labels which are electronic devices placed on shelves in a context of large stores. The ESL has a display which provides some information through an image about the name and price of the product contained within the shelf. It can also include LEDs and sensors allowing to highlight some shelves and to give information about the temperature.

ESL devices address method is the following:

- 8-bit ESL ID
- 7-bit group ID

Each ESL device has a unique ID within a group of devices identified by a group ID. There is a specific device called Access Point (AP) which acts as a PAwR broadcaster. It is responsible for configuring the ESL through GATT characteristics writes performed on the established LE ACL connection. It also writes the ESL ID and group ID. Response slot allocation is dynamically handled. ESL devices get an array of one or more commands from the access point in PAwR AUX_SYNC_SUBEVENT_IND PDUs. All commands in a request packet are related to the same ESL Group_ID but each command can be addressed to a specific ESL. The command index in the array defines the response slot to be used.

2.3.9 Randomized advertising

Bluetooth® Low Energy uses three primary advertising channels. The PDUs sent onto these channels form an advertising event.

In order to reduce the possible packet collisions, the time between two consecutive advertising events must have a random delay from 0 to 10 ms.

While in Bluetooth[®] core specification v5.0 advertising uses the three primary advertising channels in strict order (that is, 37, 38, 39) starting from Bluetooth[®] v5.1 this order is no longer required. This means that the PDUs may not be sent to a fixed order and now it is even possible to randomize the sequence of used primary advertising channels. It has been proven that a random selection of the advertising channel further reduces the probability of packet collisions, with significative benefits on a crowded network.

2.3.10 Encrypted advertising data

The encrypted advertising data enables sending encrypted data in advertising and scan response data. The mechanism implies that the device transmitting this data is configured as a GAP peripheral device. This device is also a GATT server and it defines some mandatory GATT services, including the GAP one.

PM0274 - Rev 1 page 15/112



A specific characteristic called encrypted data key material is defined, and a GAP peripheral may include it in the GAP service. This characteristic provides the way for sharing the key material with devices involved in the reception of the encrypted advertising data.

The encrypted data key material characteristic contains a 24-octet value:

- 16-octet session key
- 8-octet IV value

A GATT client can only read this value over an encrypted and authenticated ACL connection. The advertising device and all devices which should receive the encrypted advertising data must be paired. The CCM algorithm is used to encrypt and authenticate the data. A specific AD type called encrypted data is used to contain the encrypted data, which is then included within specific packets. The encrypted data AD structure's data field also includes a 40-bit randomizer field and a 32-bit Message Integrity Check (MIC). The randomizer field must also change each time the device changes its address, provided a random device address is used. This allows updating the contents of an advertising packet each time the device address changes, reducing the capability to track the device.

2.3.11 Advertising coding selection

On Bluetooth specification v5.3 when the LE coded PHY is selected, it is not possible to specify the value of the coding parameter S (2 or 8) to be used on the Forward Error Correction (FEC) algorithm. Bluetooth specification version 5.4 has modified some commands and events in order to define the FEC coding parameter S to be used on LE coded PHY.

2.3.12 Bluetooth® Low Energy power control

The Bluetooth® Low Energy power control feature allows to dynamically update the transmission power level on a specific connection.

This feature provides a way to reduce the overall power consumption on the transmitter device by dynamically changing the transmitting power level within the current connection.

Further the LE power control feature allows the receiver device to dynamically monitor the signal strength within a connection, and to request a power level change to the transmitter device in order to have the required signal strength keeping the requested range and optimize the power consumption.

The capability to tune the transmitter power level to the optimal level also improves the coexistence with all the other 2.4 GHz wireless networks.

2.4 Host controller interface (HCI)

The host controller interface (HCI) layer provides a communication between the host and the controller, either through software API or by a hardware interface, such as SPI, UART, or USB. It comes from standard Bluetooth[®] specifications, with new additional commands for Low Energy-specific functions.

2.5 Logical link control and adaptation layer protocol (L2CAP)

The logical link control and adaptation layer protocol (L2CAP) supports a higher level protocol multiplexing, packet segmentation and reassembly operations, and the conveying of quality of service information.

2.5.1 LE L2CAP connection-oriented channels

L2CAP connection-oriented channels provide support for efficient bulk data transfer with reduced overhead. Service data units (SDUs) are reliably delivered using flow control. Segmentation and reassembly of large SDUs are performed automatically by the L2CAP entity. Multiplexing allows multiple services to be carried out at the same time.

2.6 Attribute protocol (ATT)

The attribute protocol (ATT) allows a device to expose some data, known as attributes, to another device. The device defining the attributes is called the server and the peer device using them is called the client.

An attribute is data with the following components:

 Attribute handle: it is a 16-bit value, which identifies an attribute on a server, allowing the client to reference the attribute in read or write requests

PM0274 - Rev 1 page 16/112



- Attribute type: it is defined by a universally unique identifier (UUID), which determines what the value means. Standard 16-bit attribute UUIDs are defined by Bluetooth® SIG
- Attribute value: a (0 ~ 512) octets in length
- Attribute permissions: they are defined by each upper layer that uses the attribute. They specify the
 required security level for read and/or write access, as well as notification and/or indication. The
 permissions are not discoverable using the attribute protocol. There are different permission types:
 - Access permissions: they determine which types of requests can be performed on an attribute (readable, writable, readable, and writable)
 - Authentication permissions: they determine if attributes require authentication or not. If an authentication error is raised, the client can try to authenticate it by using the security manager and sending back the request
 - Authorization permissions (no authorization, authorization): this is a property of a server, which can
 authorize a client to access or not set of attributes (client cannot resolve an authorization error).

Table 7. Attribute example

Attribute handle	Attribute type	Attribute value	Attribute permissions
0x0008	"Temperature UUID"	"Temperature value"	"Read only, no authorization, no authentication"

• "Temperature UUID" is defined by "Temperature characteristic" specification and it is a signed 16-bit integer.

A collection of attributes is called a database that is always contained in an attribute server.

Attribute protocol defines a set of method protocols to discover, read, and write attributes on a peer device. It implements the peer-to-peer client-server protocol between an attribute server and an attribute client as follows:

- Server role
 - Contains all attributes (attribute database)
 - Receives requests, executes, responds commands
 - Indicates, notifies an attribute value when data changes
- Client role
 - Talks with server
 - Sends requests, waits for response (it can access (read), update (write) the data)
 - Confirms indications.

Attributes exposed by a server can be discovered, read, and written by the client, and they can be indicated and notified by the server as described in Table 4. LE PHY key parameters:

Table 8. Attribute protocol messages

Protocol data unit (PDU message)	Sent by	Description
Request	Client	Client asks server (it always causes a response)
Response	Server	Server sends response to a request from a client
Command	Client	Client commands something to server (no response)
Notification	Server	Server notifies client of a new value (no confirmation)
Indication	Server	Server indicates to client a new value (it always causes a confirmation)
Confirmation	Client	Confirmation to an indication

2.7 Security manager (SM)

TheBluetooth® Low Energy link layer supports both encryption and authentication by using the counter mode with the CBC-MAC (cipher block chaining-message authentication code) algorithm and a 128-bit AES block cipher (AES-CCM). When encryption and authentication are used in a connection, a 4-byte message integrity check (MIC) is appended to the payload of the data channel PDU.

PM0274 - Rev 1 page 17/112



Encryption is applied to both the PDU payload and MIC fields.

When two devices want to encrypt the communication during the connection, the security manager uses the pairing procedure. This procedure allows two devices to be authenticated by exchanging their identity information in order to create the security keys that can be used as the basis for a trusted relationship or a (single) secure connection. There are some methods used to perform the pairing procedure. Some of these methods provide protections against:

- Man-in-the-middle (MITM) attacks: a device is able to monitor and modify or add new messages to the communication channel between the two devices. A typical scenario is when a device is able to connect to each device and act as the other devices by communicating with each of them
- Passive eavesdropping attacks: listening through a sniffing device to the communication of other devices

The pairing on Bluetooth[®] Low Energy specifications v4.0 or v4.1, also called LE legacy pairing, supports the following methods based on the IO capability of the devices: *Just Works*, Passkey Entry and *out of band* (OOB).

On Bluetooth[®] Low Energy specification v4.2, the LE secure connection pairing model has been defined. The new security model main features are:

- 1. Key exchange process uses the elliptical curve Diffie-Hellman (ECDH) algorithm: this allows keys to be exchanged over an unsecured channel and to protect against passive eavesdropping attacks (secretly listening through a sniffing device to the communication of other devices)
- 2. A new method called "numeric comparison" has been added to the three methods already available with LE legacy pairing

The paring procedures are selected depending on the device IO capabilities.

There are three input capabilities:

- No input
- Ability to select yes/no
- Ability to input a number by using the keyboard.

There are two output capabilities:

- No output
- Numeric output: ability to display a six-digit number

The following table shows the possible IO capability combinations:

Table 9. Combination of input/output capabilities on a Bluetooth® LE device

	No output	Display
No input	No input, no output	Display only
Yes/No	No input, no output	Display yes/no
Keyboard	Keyboard only	Keyboard display

LE legacy pairing

LE legacy pairing algorithm uses and generates two keys:

- Temporary key (TK): a 128-bit temporary key, which is used to generate a short-term key (STK)
- Short-term key (STK): a 128-bit temporary key used to encrypt a connection following pairing

Pairing procedure is a three-phase process.

Phase 1: pairing feature exchange

The two connected devices communicate their input/output capabilities by using the pairing request message. This message also contains a bit stating if out-of-band data is available and the authentication requirements. The information exchanged in phase 1 is used to select which pairing method is used for the STK generation in phase 2.

Phase 2: short-term key (STK) generation

The pairing devices first define a temporary key (TK), by using one of the following key generation methods:

1. The out-of-band (OOB) method, which uses out-of-band communication (for example, NFC) for TK agreement. It provides the authentication (MITM protection). This method is selected only if the out-of-band bit is set on both devices, otherwise the IO capabilities of the devices must be used to determine which other method could be used (*Passkey Entry* or *Just Works*)

PM0274 - Rev 1 page 18/112



- Passkey Entry method: user passes six numeric digits as the TK between the devices. It provides the authentication (MITM protection)
- 3. Just Works: this method does not provide the authentication and protection against man-in-the-middle (MITM) attacks

The selection between the Passkey and *Just Works* method is done based on the IO capability as defined in the following table.

			-		
	Display only	Display yes/no	Keyboard only	No input, no output	Keyboard display
Display only	Just Works	Just Works	Passkey Entry	Just Works	Passkey Entry
Display Yes/No	Just Works	Just Works	Passkey Entry	Just Works	Passkey Entry
Keyboard only	Passkey Entry	Passkey Entry	Passkey Entry	Just Works	Passkey Entry
No input No output	Just Works	Just Works	Just Works	Just Works	Just Works
Keyboard display	Passkey Entry	Passkey Entry	Passkey Entry	Just Works	Passkey Entry

Table 10. Methods used to calculate the temporary key (TK)

Phase 3: transport specific key distribution methods used to calculate the temporary key (TK)

Once phase 2 is completed, up to three 128-bit keys can be distributed by messages encrypted by the STK key:

- 1. Long-term key (LTK): it is used to generate the 128-bit key used for link layer encryption and authentication
- 2. Connection signature resolving key (CSRK): a 128-bit key used for the data signing and verification performed at the ATT layer
- 3. Identity resolving key (IRK): a 128-bit key used to generate and resolve random addresses

LE secure connections

LE secure connection pairing methods use and generate one key:

 Long-term key (LTK): a 128-bit key used to encrypt the connection following pairing and subsequent connections

Pairing procedure is a three-phase process:

Phase 1: pairing feature exchange

The two connected devices communicate their input/output capabilities by using the pairing request message. This message also contains a bit stating if out-of-band data is available and the authentication requirements. The information exchanged in phase 1 is used to select which pairing method is used in phase 2.

Phase 2: long-term key (LTK) generation

Pairing procedure is started by the initiating device, which sends its public key to the receiving device. The receiving device replies with its public key. The public key exchange phase is done for all the pairing methods (except the OOB one). Each device generates its own elliptic curve Diffie-Hellman (ECDH) public-private key pair. Each key pair contains a private (secret) key, and a public key. The key pair should be generated only once on each device and may be computed before a pairing is performed.

The following pairing key generation methods are supported:

- The out-of-band (OOB) method uses OOB communication to set up the public key. This method is selected if
 the out-of-band bit, in the pairing request/response, is set at least by one device, otherwise the IO capabilities
 of the devices must be used to determine which other method could be used (*Passkey Entry*, *Just Works* or
 numeric comparison)
- 2. Just Works: this method is not authenticated, and it does not provide any protection against man-in-the-middle (MITM) attacks
- 3. Passkey Entry method: this method is authenticated. User passes six numeric digits. This six-digit value is the base of the device authentication
- 4. Numeric comparison: this method is authenticated. Both devices have IO capabilities set to either display Yes/No or keyboard display. The two devices compute six-digit confirmation values that are displayed to the user on both devices: user is requested to confirm if there is a match by entering yes or not. If yes is selected on both devices, pairing is performed with success. This method allows confirmation to the user that their device is connected with the right one, in a context where there are several devices, which could not have different names

The selection among the possible methods is based on the following table.

PM0274 - Rev 1 page 19/112



Initiator/ responder	Display only	Display yes/no	Keyboard only	No input no output	Keyboard display
Display only	Just Works	Just Works	Passkey Entry	Just Works	Passkey Entry
Display yes/no	Just Works	Just Works (LE legacy) Numeric comparison (LE secure connections)	Passkey Entry	Just Works	Passkey Entry (LE legacy) Numeric comparison (LE secure connections)
Keyboard only	Passkey Entry	Passkey Entry	Passkey Entry	Just Works	Passkey Entry
No input no output	Just Works	Just Works	Just Works	Just Works	Just Works
Keyboard display	Passkey Entry	Passkey Entry (LE legacy) Numeric comparison (LE secure connections)	Passkey Entry	Just Works	Passkey Entry (LE legacy) Numeric comparison (LE secure connections)

Table 11. Mapping of IO capabilities to possible key generation methods

Note:

If the possible key generation method does not provide a key that matches the security properties (authenticated - MITM protection or unauthenticated - no MITM protection), then the device sends the pairing failed command with the error code "Authentication Requirements".

Phase 3: transport specific key distribution

The following keys are exchanged between central and peripheral:

- · Connection signature resolving key (CSRK) for authentication of unencrypted data
- Identity resolving key (IRK) for device identity and privacy

When the established encryption keys are stored in order to be used for future authentication, the devices are bonded.

Data signing

It is also possible to transmit authenticated data over an unencrypted link layer connection by using the CSRK key: a 12-byte signature is placed after the data payload at the ATT layer. The signature algorithm also uses a counter, which protects against replay attacks (an external device that catches some packets and sends them later. The receiver device checks the packet counter and discards it since its frame counter is less than the latest received good packet).

2.8 Privacy

A device, which always advertises with the same address (public or static random), can be tracked by scanners. However, this can be avoided by enabling the privacy feature on the advertising device. On a privacy-enabled device, private addresses are used. There are two kinds of private addresses:

- Non-resolvable private address
- · Resolvable private address

Non-resolvable private addresses are completely random (except for the two most significant bits) and cannot be resolved. Hence, a device using a non-resolvable private address cannot be recognized by those devices, which have not been previously paired. The resolvable private address has a 24-bit random part and a hash part. The hash is derived from the random number and from an IRK (identity-resolving key). Hence, only a device that knows this IRK can resolve the address and identify the device. The IRK is distributed during the pairing process. Both types of addresses are frequently changed, enhancing the device identity confidentiality. The privacy feature is not used during the GAP discovery modes and procedures but during GAP connection modes and procedures only.

On Bluetooth® Low Energy stacks up to v4.1, the private addresses are resolved and generated by the host. In Bluetooth® Low Energy v4.2, the privacy feature has been updated from version 1.1 to version 1.2. On Bluetooth® Low Energy stack v4.2, private addresses can be resolved and generated by the controller, using the device identity information provided by the host.

Peripheral

A privacy-enabled peripheral in a non-connectable mode uses non-resolvable or resolvable private addresses.

PM0274 - Rev 1 page 20/112



To connect to a central, the undirected connectable mode should only be used if host privacy is used. If controller privacy is used, the device can also use the directed connectable mode. When in connectable mode, the device uses a resolvable private address.

Whether non-resolvable or resolvable private addresses are used, they are automatically regenerated after each interval of 15 minutes. The device does not send the device name to the advertising data.

Central

A privacy-enabled central, performing active scanning, uses non-resolvable or resolvable private addresses only. To connect to a peripheral, the general connection establishment procedure should be used if host privacy is enabled. With controller-based privacy, any connection procedure can be used. The central uses a resolvable private address as the initiator's device address. A new resolvable or non-resolvable private address is regenerated after each interval of 15 minutes.

Broadcaster

A privacy-enabled broadcaster uses non-resolvable or resolvable private addresses. New addresses are automatically generated after each interval of 15 minutes. A broadcaster should not send the name or unique data to the advertising data.

Observer

A privacy-enabled observer uses non-resolvable or resolvable private addresses. New addresses are automatically generated after each interval of 15 minutes.

2.8.1 The device filtering

Bluetooth[®] LE reduces the number of responses from the devices in order to diminish the power consumption, since this implies fewer transmissions and fewer interactions between controller and upper layers. The filtering is implemented by a filter list. When the filter list is enabled, those devices, which are not on this list, are ignored by the link layer.

Before Bluetooth[®] 4.2, the device filtering could not be used, while privacy was used by the remote device. Thanks to the introduction of the link layer privacy, the remote device identity address can be resolved before checking whether it is on the filter list or not.

2.9 Generic attribute profile (GATT)

The generic attribute profile (GATT) defines a framework to use the ATT protocol, and it is used for services, characteristics, descriptors discovery, characteristics reading, writing, indications, and notifications.

On a GATT context, when two devices are connected, there are two device roles:

- GATT client: the device accesses data on the remote GATT server via read, write, notify, or indicates
 operations
- GATT server: the device stores data locally and provides data access methods to a remote GATT client It is possible for a device to be a GATT server and a GATT client at the same time.

The GATT role of a device is logically separated from the central, peripheral role. The central, peripheral roles define how the Bluetooth[®] Low Energy radio connection is managed, and the GATT client/server roles are determined by the data storage and flow of data.

It is the most common for the peripheral device to be the GATT server and the central device to be the GATT client, but this is not required.

Attributes, as transported by the ATT, are encapsulated within the following fundamental types:

- 1. Characteristics (with related descriptors)
- 2. Services (primary, secondary, and include services)

2.9.1 Characteristic attribute type

A characteristic is an attribute type, which contains a single value and any number of descriptors describing the characteristic value that may make it understandable for the user.

A characteristic exposes the type of data that the value represents, if the value can be read or written, how to configure the value to be indicated or notified, and it says what a value means.


A characteristic has the following components:

- 1. Characteristic declaration
- 2. Characteristic value
- 3. Characteristic descriptor(s)

PM0274 - Rev 1 page 21/112



Figure 11. Example of characteristic definition

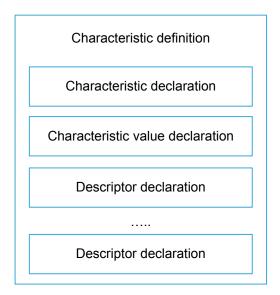

A characteristic declaration is an attribute defined as follows:

Table 12. Characteristic declaration

Attribute handle	Attribute type	Attribute value	Attribute permissions
0×NNNN	0x2803 (UUID for characteristic	Characteristic value properties (read, broadcast, write, write without response, notify, indicate,). Determine how characteristic value can be used or how characteristic descriptor can be accessed	Read only, no authentication, no authorization
	attribute type)	Characteristic value attribute handle Characteristic value UUID (16 or 128 bits)	authorization

A characteristic declaration contains the value of the characteristic. This value is the first attribute after the characteristic declaration:

Table 13. Characteristic value

Attribute handle	Attribute type	Attribute value	Attribute permissions
0xNNNN	0xuuuu–16 bits or 128 bits for characteristic UUID	Characteristic value	Higher layer profile or implementation specific

DT57306V1

PM0274 - Rev 1 page 22/112



2.9.2 Characteristic descriptor type

Characteristic descriptors are used to describe the characteristic value to add a specific "meaning" to the characteristic and make it understandable for the user. The following characteristic descriptors are available:

- 1. Characteristic extended properties: it allows extended properties to be added to the characteristic
- 2. Characteristic user description: it enables the device to associate a text string to the characteristic
- 3. Client characteristic configuration: it is mandatory if the characteristic can be notified or indicated. Client application must write this characteristic descriptor to enable characteristic notifications or indications (provided that the characteristic property allows notifications or indications)
- 4. Server characteristic configuration: optional descriptor
- Characteristic presentation format: it allows the characteristic value presentation format to be defined through some fields as format, exponent, unit name space, description in order to display the related value (example temperature measurement value in ^oC format)
- 6. Characteristic aggregation format: it allows several characteristic presentation fthe ormats to be aggregated For a detailed description of the characteristic descriptors, refer to Bluetooth® specifications.

2.9.3 Service attribute type

A service is a collection of characteristics, which operates together to provide a global service to an applicative profile. For example, the health thermometer service includes characteristics for a temperature measurement value, and a time interval among measurements. A service or primary service can refer to other services that are called secondary services.

A service is defined as follows:

Table 14. Service declaration

Attribute handle	Attribute type	Attribute value	Attribute permissions
0xNNNN	0x2800–UUID for "Primary Service" or 0x2801–UUID for "Secondary Service"	0xuuuu–16 bits or 128 bits for service UUID	Read only, no authentication, no authorization

A service contains a service declaration and may contain definitions and characteristic definitions. A "service include declaration" follows the service declaration and any other attributes of the service.

Table 15. Include declaration

Attribut handle	Attribute type	A	Attribute value		Attribute permissions
0xNNNI	0x2802 (UUID for include attribute type	Include service attribute handle	End group handle	Service UUID	Read only, no authentication, no authorization

"Include service attribute handle" is the attribute handle of the included secondary service and "end group handle" is the handle of the last attribute within the included secondary service.

2.9.4 GATT procedures

The generic attribute profile (GATT) defines a standard set of procedures allowing services, characteristics, related descriptors to be known and how to use them.

The following procedures are available:

- Discovery procedures (Table 16. Discovery procedures and related response events)
- · Client-initiated procedures (Table 17. Client-initiated procedures and related response events)
- Server-initiated procedures (Table 18, Server-initiated procedures and related response events)

PM0274 - Rev 1 page 23/112



Procedure	Response events
Discovery all primary services	Read by group response
Discovery primary service-by-service UUID	Find by type value response
Find included services	Read by type response event
Discovery all characteristics of a service	Read by type response
Discovery characteristics by UUID	Read by type response
Discovery all characteristic descriptors	Find information response

Table 17. Client-initiated procedures and related response events

Procedure	Response events	
Read characteristic value	Read response event	
Read characteristic value by UUID	Read response event	
Read-long characteristic value	Read blob response events	
Read-multiple characteristic values	Read response event	
Write characteristic value without response	No event is generated	
Signed write without response	No event is generated	
Write characteristic value	Write response event	
Write long characteristic value	Prepare write response	
vviite iong characteristic value	Execute write response	
Reliable write	Prepare write response	
reliable wife	Execute write response	

Table 18. Server-initiated procedures and related response events

Procedure	Response events
Notifications	No event is generated
Indications	Confirmation event

For a detailed description of the GATT procedures and related response events, refer to the Bluetooth® specifications in Section 1.1: References.

2.9.5 GATT caching

The Bluetooth® LE service and characteristic discovery procedures allow a GATT client to know all the GATT server services and characteristics stored on the server attributes database table and to use them through ATT procedures (read, write, etc.). These procedures are time and power consuming.

Some devices often do not change their attributes table in terms of new services and characteristics, but they only change the characteristic and descriptor values.

Some other devices could add new services/characteristics during their life.

The only way to inform a GATT client about a possible change on the GATT server attributes database table is the service change indication characteristic, which allows a GATT server to send a specific indication to a bonded connected GATT client, which, in its turns, can perform a Service/Characteristic discovery to get the updated table.

This mechanism does not provide any synchronization between client and server and it could lead to a situation where a GATT client could start ATT procedures on the server attribute database before receiving the service change indication from the server.

PM0274 - Rev 1 page 24/112



For connected and not bonded devices, the only safe mechanism to be aligned to the possible change of the GATT server attribute table is to perform a time and power consuming service discovery procedure at each connection.

Bluetooth® specifications v5.1 defines two new characteristics:

- 1. Database hash
- 2. Client-supported features

These characteristics allow a client to understand if something has been changed on the server GATT attributes table, even if there is no bonding between the two devices.

The GATT client updates a flag on the client-supported features characteristic on the server to inform the server that it supports the database hash characteristic.

The database hash characteristic stores a 128-bit value, which is an AES-CMAC hash calculated from the server attribute table. Any change in the server GATT attribute database structure results in a different hash value. The server has the responsibility to keep the database hash value always up to date.

The database hash characteristic allows the client to ask the server if something has been changed on its attributes database: each time a GATT client connects to a server, it performs immediately a read of this characteristic in order to establish if a change or not has been performed on the server attribute table.

The GATT client may cache the read database hash value to verify if a change on the database structure occurred since the last connection. This allows the client to perform the service and characteristic discovery procedures only if a change has occurred since the last discovery, enhancing the user experience in terms of timing and saving power.

In addition to these two characteristics, the concept of robust caching has been defined in order to synchronize client and server views of the attributes table. Basically, when client tries to read the GATT server attributes table before receiving the service change indication, the client may get inconsistent data if the GATT server attributes table content has changed. In this case, the server can send a new ATT error code (database out-of-sync) to inform the client of this inconsistency.

When robust caching is enabled, a client can be in two states, from the server point of view:

- 1. Change-aware state
- 2. Change-unaware state

After connection, the state of a client without a trusted relationship is change-aware. Instead, if the client is bonded, the state is the same as on the previous connection, unless the database has changed. In this case, the client is considered change-unaware.

Server ignores all the ATT commands from a client that are change-unaware and if it receives an ATT request it sends an ATT error response with an error code set to the database out of sync.

Some events can change the state of the client to change-aware:

- 1. Server receives an ATT confirmation for a service changed indication it has previously sent
- 2. Server sends the database out of sync ATT error response to an ATT request from client and then receives another ATT request from the client.

2.10 Generic access profile (GAP)

The Bluetooth[®] system defines a base profile implemented by all Bluetooth[®] devices called generic access profile (GAP). This generic profile defines the basic requirements of a Bluetooth[®] device.

The four GAP profile roles are described in the table below:

PM0274 - Rev 1 page 25/112



Table 19. GAP roles	Tab	le 19	. GA	P ro	les
---------------------	-----	-------	------	------	-----

Role ⁽¹⁾	Description	Transmitter	Receiver	Typical example
Broadcaster	Sends advertising events	M	0	Temperature sensor, which sends temperature values
Observer	Receives advertising events	0	M	Temperature display, which just receives and displays temperature values
Peripheral	Always a peripheral. It is on connectable advertising mode. Supports all LL control procedures; encryption is optional	M	M	Watch
Central	Always a central. It never advertises. It supports active or passive scan. It supports all LL control procedures; encryption is optional	М	M	Mobile phone

1. 1. M = mandatory; O = optional

On a GAP context, two fundamental concepts are defined:

- GAP modes: it configures a device to act in a specific way for a long time. There are four GAP mode types: broadcast, discoverable, connectable, and bondable type
- GAP procedures: it configures a device to perform a single action for a specific, limited time. There are four GAP procedure types: observer, discovery, connection, bonding procedures

Different types of discoverable and connectable modes can be used at the same time. The following GAP modes are defined:

Table 20. GAP broadcaster mode

Mode	Description	Notes	GAP role
Broadcast mode	Device only broadcasts data using the link layer advertising channels and packets (it does not set any bit on flags AD type)	Broadcast data can be detected by a device using the observation procedure	Broadcaster

Table 21. GAP discoverable modes

Mode	Description	Notes	GAP role
Non-discoverable mode	It cannot set the limited and general discoverable bits on flags AD type	It cannot be discovered by a device performing a general or limited discovery procedure	Peripheral
Limited discoverable mode	It sets the limited discoverable bit on flags AD type	It is allowed for about 30 s. It is used by devices with which the user has recently interacted. For example, when a user presses a button on the device	Peripheral
General discoverable mode	It sets the general discoverable bit on flags AD type	It is used when a device wants to be discoverable. There is no limit on the discoverability time	Peripheral

PM0274 - Rev 1 page 26/112



Table 22. GAP connectable modes

Mode	Description	Notes	GAP role
, – – –		It cannot use a connectable advertising packet when it advertises	Peripheral
Direct connectable mode	It is used from a peripheral device that wants to connect quickly to a central device. It can be used only for 1.28 seconds, and it requires both peripheral and central device addresses		Peripheral
Undirected connectable mode	It uses the ADV_IND advertising packet	It is used from a device that wants to be connectable. Since ADV_IND advertising packet can include the flag AD type, a device can be in discoverable and undirected connectable mode at the same time.	Peripheral
		Connectable mode is terminated when the device moves to connection mode or when it moves to non-connectable mode	

Table 23. GAP bondable modes

Mode	Description	Notes	GAP role
Non-bondable mode	It does not allow a bond to be created with a peer device	No keys are stored from the device	Peripheral
Bondable mode	Device accepts bonding request from a central device	-	Peripheral

The following GAP procedures are defined in Section 2.3.1: Bluetooth {\it ^{\it B}} Low Energy packet:

Table 24. GAP observer procedure

Procedure	Description	Notes	Role
Observation procedure	It allows a device to look for broadcaster device data	-	Observer

Table 25. GAP discovery procedures

Procedure	Description	Notes	Role
Limited discoverable procedure	It is used for discovery of peripheral devices in limited discovery mode	Device filtering is applied based on flag AD type information	Central
General discoverable procedure	It is used for discovery of peripheral devices in general and limited discovery mode	Device filtering is applied based on flag AD type information	Central
Name discovery procedure	It is the procedure to retrieve the "Bluetooth® Device Name" from connectable devices	-	Central

Table 26. GAP connection procedures

Procedure	Description	Notes	Role
Auto connection establishment procedure	Allows connection with one or more devices in the directed connectable mode or the undirected connectable mode	It uses filter lists	Central

PM0274 - Rev 1 page 27/112



Procedure	Description	Notes	Role
General connection establishment procedure	Allows a connection with a set of known peer devices in the directed connectable mode or the undirected connectable mode	It supports private addresses by using the direct connection establishment procedure when it detects a device with a private address during the passive scan	Central
Selective connection establishment procedure	Establishes a connection with the host-selected connection configuration parameters with a set of devices in the whitelist	It uses filter lists and it scans by this filter list	Central
Direct connection establishment procedure	Establishes a connection with a specific device using a set of connection interval parameters	General and selective procedures use it	Central
Connection parameter update procedure	Updates the connection parameters used during the connection	-	Central
Terminate procedure	Terminates a GAP procedure	-	Central

Table 27. GAP bonding procedures

Proced	dure	Description	Notes	Role
Bonding pro	ocedure	Starts the pairing process with the bonding bit set on the pairing request	-	Central

For a detailed description of the GAP procedures, refer to the Bluetooth® specifications.

2.11 Direction finding

Classic location applications (proximity, beacons...) using Bluetooth® LE are based on the simple concept of received signal strength (RSSI) measurements. This establishes if two devices are in the range of each other and estimates the related distance.

Bluetooth® specifications v5.1 define a new feature, which allows the direction of a received Bluetooth® LE packet to be identified with a high degree of accuracy.

There are two methods:

- 1. Angle of arrival (AoA)
- 2. Angle of departure (AoD).

Both methods require one of the two communicating devices to have an array of multiple antennas (on receiving device with AoA, on transmitting device with AoD).

2.11.1 Direction finding with angle of arrival (AoA)

In AoA method, a transmitter (tag) device to which direction is being determined, sends a direction-finding signal using a single antenna. The receiver device (locator) has multiple array antennas, through which it detects a signal phase difference due to the difference in distance from each of the antenna in the array to the transmitting antenna. The receiver device takes IQ samples data of the signal while switching between the active antenna in the array. The receiver device is able to calculate the relative signal direction by applying specific algorithms to the IQ samples data.

This feature allows several application scenarios to be addressed as real-time asset tracking.

PM0274 - Rev 1 page 28/112

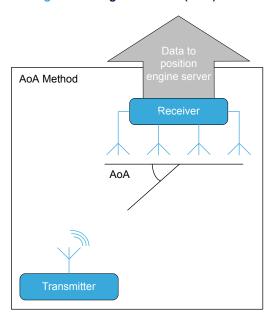


Figure 12. Angle of arrival (AoA)

DT57307V1

On a receiver (locator) device, an antenna array is needed, and the angle calculation of several tags requires a consistent processing power. The transmitter (tag) device requires a single antenna, and it must only support the capability to send the information required to perform IQ data sampling.

2.11.2 Direction finding with angle of departure (AoD)

In the AoD method, a transmitter device (typically an anchor device) to which direction is being determined, sends a special direction-finding signal using an antenna array. The receiver device (for example, a mobile phone) has a single antenna.

As the multiple signals from the transmitting device cross the array antenna in the receiver device, the latter takes the IQ samples. The receiver device is able to calculate the relative signal direction by applying specific algorithms to the IQ samples.

This feature allows several application scenarios to be addressed as an indoor positioning system.

PM0274 - Rev 1 page 29/112

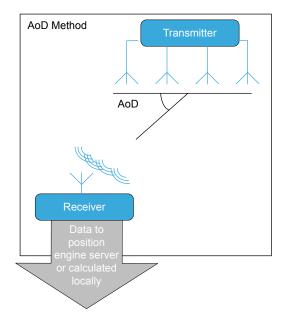


Figure 13. Angle of departure (AoD)

DT57308V1

The transmitter device needs to send a multi-antenna location signal using an antenna array. It must support the capability to send the information required to perform an IQ data sampling.

The receiver device needs a single antenna and the angle calculation of the received signal may require an FPU (float processing unit) and some memory resources.

2.11.3 In-phase and quadrature (IQ)

Direction finding uses in-phase and quadrature (IQ) sampling to measure the phase of radio waves incident upon an antenna at a specific time.

In the AoA approach, the sampling procedure is done on each antenna in the array, one at a time, and in a specific sequence depending on the design of the array.

The sampled data is then provided to the host through the host controller interface (HCI). The IQ sample should then be used with some specific algorithms to calculate the angle of the incident wave. These algorithms are not defined on the Bluetooth[®] LE core specification.

The IQ sampling process has involved some changes at a link layer (LL) and the host controller interface (HCI) level. At link layer level, a new field called constant tone extension is added to the LL packet. This field provides a constant frequency signal against which IQ sampling can be performed. This field includes a sequence of 1s, and it is not subjected to the whitening process and is not used in the CRC calculation.

Constant tone extension can be used in both connectionless and connection-oriented scenarios:

- 1. connectionless use: the periodic advertising feature is needed (since deterministic timing in the sampling process is important) and CTE is appended to AUX_SYNC_IND PDUs.
- 2. connection-oriented use: new PDUs LL_CTE_REQ and LL_CTE_RSP are defined.

2.12 Enhanced attribute protocol

On ATT protocol, a sequential transaction model is used. Once a ATT transaction is started, it must be completed with a response or confirm packet. Otherwise, a timeout is generated after 30 seconds.

Furthermore, the MTU related to the L2CAP layer has a one to one correspondence with the MTU value related to the ATT layer. As consequence, the L2CAP cannot interleave packets coming from different applications and different ATT packets.

ATT protocol over Bluetooth[®] Low Energy connections is also based on the L2CAP Basic mode, which has no flow control. As consequence, the ATT transactions cannot be considered as a reliable mechanism: not acknowledged packets, such as notifications, may get lost on the receiving side, without no evidence.

PM0274 - Rev 1 page 30/112



Another limitation is linked to the ATT MTU size (which can negotiated through the ATT_Exchange_MTU request) and response PDUs, as soon as 2 devices connect with no capability to change the established value. This prevents that a second application from requesting an increased ATT MTU size on the same connection.

Enhanced Attribute protocol (EATT) is an improvement of the Attribute protocol (ATT) which provides the following main new features:

- Concurrent transactions of L2CAP packets related to ATT packets coming from different applications are
 possible over distinct enhanced ATT bearers, which are based on a new L2CAP mode called L2CAP
 Enhanced Credit Based Flow Control Mode providing flow control and reliable communication.
- Capability to change the ATT Maximum Transmission Unit (MTU) during a connection (the MTU values at ATT and L2CAP layer can be independently configured by reducing latency problems on scenarios where some applications share the Bluetooth® Low Energy stack with other applications).

The new features in the EATT + L2CAP Enhanced Credit Based Flow Control Mode determine a consistent improvement in terms of latency, when different applications use the Bluetooth® Low Energy stack at the same time. Since L2CAP packets can be interleaved with each other, this reduces the case where application usage of the stack would prevent usage of other application. This implies a benefit on latency and therefore on user experience.

Some mechanisms are available to know if a connected device supports the new EATT feature:

- A new characteristic Server Supported Feature is defined. It must be included if the device supports the EATT feature. A client device can just read this characteristic value to discover if the EATT is supported (bit 0 of the first octet of the characteristic value equal to 1 means that EATT is supported).
- The Client Supported Features characteristic bit 1 indicates whether or not the Enhanced ATT Bearer is supported by the client. Bit 2 indicates whether or not a new ATT packet called Multiple Handle Value Notifications is supported.

2.13 L2CAP enhanced credit-based flow control

The new credit-based flow control method has been defined as follows:

- When a data transfer must start, the transmitter device can obtain the receiver capacity: the transmitter device can get the number of PDUs that the receiver device could obtain without losing any data.
- The transmitter device has a counter, which is initialized to the receiver capacity.
- The counter value is decreased when a PDU is sent from the transmitter to the receiver device.
- When the value reaches 0, the transmitter device stops sending PDUs until the receiver device reads and handle some of the received PDUs.
- The receiver device sends back the number of read PDUs. The counter is set to this value and the transmitter device could restart the PDUs sending.

The enhanced attribute protocol uses the L2CAP enhanced credit-based flow control mode. It also allows the ATT MTU size to be dynamically modified. It can be used only over an encrypted connection.

Two types of L2CAP channels are available:

- Enhanced ATT Bearer based on the enhanced credit-based flow control method used by EATT
- Unenhanced ATT Bearer, which is used by ATT

2.14 Bluetooth® Low Energy isochronous channels

The Bluetooth® Low Energy isochronous channels feature has been defined in order to send time-bound data to one or more devices for allowing time-synchronized processing.

The Bluetooth[®] Low Energy isochronous channels feature allows multiple sink devices receiving data from a specific source device, rendering it simultaneously. Data has a time-limited validity period, after which data is declared as expired. Expired data that has not yet been transmitted is discarded. The receiver devices only obtain valid data, according to age and latency rules.

A new Bluetooth[®] Low Energy isochronous physical channel has been defined in order to support both connection-oriented or connectionless (broadcast scenarios towards several devices) isochronous channels.

This new physical channel uses frequency hopping to set the timing of the first packet, which then determines the anchor point for the timing of next packets.

The new Bluetooth[®] Low Energy isochronous physical channel is supported on all Bluetooth[®] Low Energy PHYs. Connection-oriented isochronous channels use the Connected Isochronous Stream (CIS) logical transport and support bidirectional communication.

PM0274 - Rev 1 page 31/112



A CIS stream defines a point-to point isochronous communication between two connected devices.

A flushing period is defined for the CIS logical transport. Any packet that has not been transmitted within the flushing period is discarded.

CIS streams are members of groups named Connected Isochronous Groups (CIG), each of which may contain multiple CIS instances.

Connectionless isochronous channels use Broadcast Isochronous Streams (BIS) and only support uni-directional communication. A BIS can stream identical copies of data to multiple receiver devices. BIS streams are members of groups named Broadcast Isochronous Groups (BIG), each of which may contain multiple BIS instances.

The capability of the Bluetooth[®] Low Energy isochronous channels has a wide range of application use cases, in particular on audio sharing domains:

- Personal audio sharing groups of friends: sharing simultaneously music on one smartphone through Bluetooth[®]headphones.
- Public assisted hearing: broadcasting a dialogue to a specific audience.
- Public television: listening to the television through Bluetooth® Low Energy headphones.
- Multilanguage flight announcements: getting specific information through the preferred language via Bluetooth[®] Low Energy headphones.

2.15 Bluetooth® Low Energy connection subrating

Some application scenarios, like audio applications, require the capability to switch quickly from a low duty cycle connection to a high duty cycle connection. The Bluetooth[®] Low Energy connection subrating capability addresses this scenario.

The connection subrating feature makes possible to indicate that only a specific subset of connection events has to be actively used by the connected devices. The radio is not used on all the other connection events. As a consequence, the connection subrating mechanism provides both a connection interval, which establishes the connection events rate, and an effective connection interval, which establishes how often the connection intervals are actually used when the subrating parameters are used.

Connection subrating is also based on continuation events: when a subrated connection is actively in use (nonzero length link layer packet), a specific number of next standard connection events can still be selected. The subrating feature does not impact the application data exchange.

2.16 Bluetooth® Low Energy channel classification

The central device performs the channel classification procedure on the Bluetooth® Low Energy specification up to version 5.2.

On Bluetooth® Low Energy version 5.3, the channel classification procedure is performed by both the peripheral device and the central device:

- The peripheral device can now report its channel classifications to the connected central device.
- The central device can use such data to update the channel map used on adaptive frequency hopping (AFH).

As consequence, the central device uses channels in the AFH procedure that are appropriate for both devices, improving communication reliability and throughput.

2.17 Bluetooth® Low Energy profiles and applications

A service collects a set of characteristics and exposes the behavior of these characteristics (what the device does, but not how a device uses them). A service does not define characteristic use cases. Use cases determine which services are required (how to use services on a device). This is done through a profile defining which services are required for a specific use case:

- Profile clients implement use cases
- Profile servers implement services


Standard profiles or proprietary profiles can be used. When using a non-standard profile, a 128-bit UUID is required and must be generated randomly.

Currently, any standard Bluetooth[®] SIG profile (services, and characteristics) uses 16-bit UUIDs. Services, characteristic specifications, and UUID assignation can be downloaded from the following SIG web pages: on https://www.bluetooth.com

PM0274 - Rev 1 page 32/112



Figure 14. Client and server profiles

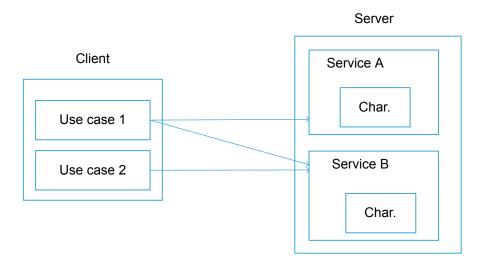

T57309V1

2.17.1 Proximity profile example

This section describes the proximity profile target, how it works and required services:

Target

- When a device is close, very far away:
 - Causes an alert

How it works

- If a device disconnects, it causes an alert
- Alert on link loss: «Link Loss» service
 - If a device is too far away
 - Causes an alert on path loss: «Immediate Alert» and «Tx Power» service
- «Link Loss» service
 - «Alert Level» characteristic
 - Behavior: on link loss, causes alert as counted
- «Immediate Alert» service
 - «Alert Level» characteristic
 - Behavior: when written, causes alert as counted
- «Tx Power» service
 - «Tx Power» characteristic
 - Behavior: when read, reports current Tx power for connection.


PM0274 - Rev 1 page 33/112



3 Bluetooth[®] Low Energy stack v4.x

Bluetooth® Low Energy stack v4.x offers same architecture as Bluetooth LE stack v3.x, but it provides further advantages in terms of new supported features, some redesigned features and updated set of commands and events. Further a new events handling policy is implemented. The Bluetooth LE stack v4.x is provided included on the STM32_BLE middleware included on the STM32CubeWB0 FW package.

Figure 15. Bluetooth® Low Energy stack v4.x architecture

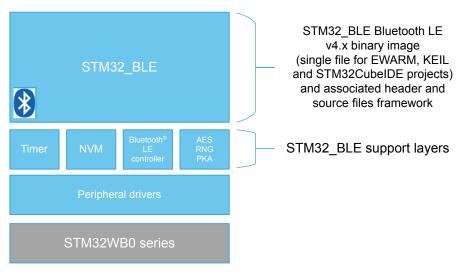

The STM32 BLE Bluetooth LE stack v4.x architecture provides the following features with related benefits:

- 1. Code is modular and testable in isolation:
 - High test coverage
- 2. Hardware-dependent parts are provided in source form:
 - Sleep timer module external to Bluetooth[®] Low Energy stack (Init API and tick API to be called on user main application)
 - NVM module external to Bluetooth[®] Low Energy stack (Init API and tick API to be called on user main application).
- 3. Certification targets the protocol part only:
 - It reduces the number of stack versions, since hardware-related problems are mostly isolated in other modules
 - It reduces the number of certifications
- 4. It implements a flexible and robust radio activity scheduler
 - It allows the robustness against late interrupt routines (for example, flash writes and/or interrupt disabled by the user)
- 5. It reduces real-time constraint (less code in interrupt handler)
 - System gives more time to applications

Bluetooth® Low Energy stack v4.x is a standard C library, in binary format, which provides a high-level interface to control STMicroelectronics devices Bluetooth® Low Energy functionalities. The Bluetooth® Low Energy binary library provides the following functionalities:

- Stack APIs for
 - Bluetooth[®] Low Energy stack initialization
 - Bluetooth[®] Low Energy stack application command interface (HCI command prefixed with hci_, and vendor-specific command prefixed with aci_)
 - Bluetooth[®] Low Energy stack state machine handling

PM0274 - Rev 1 page 34/112




- Stack event dispatcher module
 - Inform user application about Bluetooth[®] Low Energy stack events which has been registered and not registered
- · Interrupt handler for radio IP

In order to get access to the Bluetooth® Low Energy stack functionalities, a user application is just requested to:

- Call the related stack APIs
- Handle the expected events through the provided stack dispatcher module
- Link the Bluetooth® Low Energy stack binary library to the user application, as described in Figure 16. Bluetooth® LE stack reference application.

Figure 16. Bluetooth® LE stack reference application

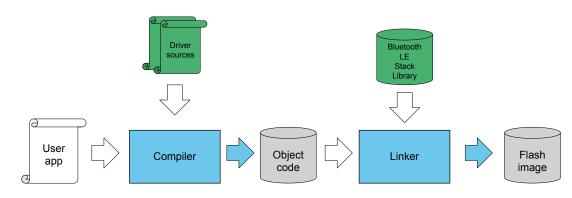

- Provided by ST
- Provided by third party

Note:

- 1. API is a C function defined by the Bluetooth® Low Energy stack library and called by the user application.
- 2. Driver sources are a set of drivers (header and source files), which handles all the Bluetooth® Low Energy device peripherals (ADC, I²C, SPI, timers, watchdog, GPIOs, RTC, UART, ...).

DT57311V1



3.1 Bluetooth® Low Energy stack library framework

The Bluetooth® Low Energy stack library framework allows commands to be sent to Bluetooth® Low Energy stack and it also provides definitions of Bluetooth® Low Energy event callbacks.

The Bluetooth® Low Energy stack APIs use and extend the standard HCI data format defined within the Bluetooth® specifications.

The provided set of APIs supports the following commands:

- Standard HCl commands for controller as defined by Bluetooth[®] specifications.
- Vendor specific (VS) HCI commands for controller.
- Vendor specific (VS) ACI commands for host (L2CAP, ATT, SM, GATT, GAP).

The reference Bluetooth[®] Low Energy API interface framework is provided within the supported ST Bluetooth[®] Low Energy devices DK software package targeting the related DK platforms (refer to Section 1.1: References).

The Bluetooth® Low Energy stack library framework interface for the STM32WB0 devices is defined by the following header files:

Table 28. Bluetooth® Low Energy stack library framework interface

File	Description	Location	Notes
ble_status.h	Header file for Bluetooth® Low Energy stack error codes	Middlewares\ST\STM32_BLE\stack\in clude	-
ble_api.h	Header file for Bluetooth® Low Energy stack APIs	u u	-
ble_events.h	Header file for Bluetooth® Low Energy stack events packets structures	u u	-
ble_gatt.h	Header file for the Bluetooth® Low Energy GATT	п	It provides new GATT structures definition
ble_stack.h	Bluetooth® Low Energy stack header file	"	-
ble_const.h	Bluetooth® Low Energy stack defines for APIs	"	-
bleplat.h	Bluetooth [®] Low Energy platform layer interface	"	-
bleplat_cntr .h	Bluetooth® Low Energy controller platform layer interface	"	-
ble_stack_user_cfg.h	Bluetooth [®] Low Energy stack configuration header file	"	It provides the available configuration options for Bluetooth® Low Energy stack v4.x
stack_user_cfg.c	Bluetooth® Low Energystack configuration file	Middlewares\ST\STM32_BLE\stack\c onfig	Source file to be included on user application IDE project in order to support the Bluetooth® Low Energy modular approach available with Bluetooth® Low Energy stack v4.x

PM0274 - Rev 1 page 36/112



File	Description	Location	Notes
ble_evt.[ch]	Header and source file for handling multiple events Bluetooth LE stack event dispatcher module	Middlewares\ST\STM32_BLE\evt_han dler	-

Note:

Bluetooth[®] Low Energy stack v4.x provides the capability to enable/disable, at compile time, the following Bluetooth[®] Low Energy stack features based on a user-specific application scenario:

- 1. Enable/disable controller privacy
- 2. Enable/disable LE secure connections
- 3. Enable/disable scan capability
- 4. Enable/disable data length extension (valid only for the device supporting the data length extension feature)
- 5. Enable/disable LE 2M and LE Coded PHYs features
- 6. Enable/disable extended advertising and scanning features
- 7. Enable/disable L2CAP, connection-oriented data service feature (L2CAP-COS)
- 8. Enable/disable periodic advertising
- 9. Enable/disable periodic advertising with responses
- 10. Enable/disable constant tone extension (where applicable)
- 11. Enable/disable LE Power Control and Path Loss Monitoring
- 12. Enable/disable the connection capability. It configures support to connections:
 - If connection option is disabled, connections are not supported; the device is a broadcaster only if the scan capability option is disabled, or a broadcaster and observer only if the scan capability option is enabled.
 - If connection option is enabled, connections are supported; device can only act as broadcaster or peripheral if the scan capability option is disabled, or any role (broadcaster, observer, peripheral, and scan) if scan capability option is enabled.
- 13. Enable/disable the connection subrating
- 14. Enable/disable the channel classification
- 15. Enable/disable the broadcast isochronous streams
- 16. Enable/disable the connected isochronous streams

The scan capability option is linked to the new connection option as follows:

- 1. Observer disabled (scan capability option disabled) or enabled (scan capability option enabled) if connection option is disabled
- Observer and Central disabled (scan capability option disabled) or enabled (scan capability option enabled) if connection option is enabled.

The modular configuration options allow the user to exclude some features from the available Bluetooth[®] Low Energy stack binary library and decrease the overall flash memory.

The following table provides the list of modular options to be added or not in order to address some typical Bluetooth® Low Energy configurations:

- 1. Broadcaster only: send advertising PDU and scan response PDU; receive and process scan request PDU.
- 2. Broadcaster + observer only: send advertising PDU, scan request PDU and scan response PDU; receive and process advertising PDU, scan request PDU and scan response PDU.
- 3. Basic: all modular options OFF expects the capability to connect as a peripheral device (connection capability enabled).
- 4. Basic + DLE: all modular options OFF expect with the connection and the data length extension capabilities.
- 5. Full: all the modular options ON.

PM0274 - Rev 1 page 37/112



Table 29. Modular	configurations	option combination	n examples

-	Broadcaster only ⁽¹⁾	Broadcaster and observer only ^{(1) (2)}	Basic	Basic + DLE	Full
Controller Privacy	NO	NO	NO	NO	YES
Secure Connections	NO	NO	NO	NO	YES
Scan/Observer capability	NO	YES	NO	NO	YES
Controller Data Length Extension	NO	NO	NO	YES	YES
Controller 2M, coded PHY	NO	NO	NO	NO	YES
Controller extended advertising	NO	NO	NO	NO	YES
L2CAP Cos	NO	NO	NO	NO	YES
Controller Periodic Advertising	NO	NO	NO	NO	YES
Controller Periodic Advertising with Responses	NO	NO	NO	NO	YES
Controller CTE (Direction Finding)	NO	NO	NO	NO	YES
Controller LE power control	NO	NO	NO	NO	YES
Connection (3)	NO	NO	YES	YES	YES
Channel classification	NO	NO	NO	NO	YES
Connection subrating	NO	NO	NO	NO	YES
Broadcast Isochronous Stream (BIS)	NO	NO	NO	NO	YES
Connected Isochronous Stream (CIS)	NO	NO	NO	NO	YES

Broadcaster only or broadcaster + observer-only roles could be also extended with other modular options and related features except for the following ones:

- Secure Connections
- L2CAP COS
- Power Control
- 2. Observer-only role is not supported.
- 3. aci_gap_profile_init(), Role parameter should be set according to the connection support and scan role modular options (using the available parameter values or combination of such values: broadcaster, peripheral, observer, central).

The following Bluetooth® Low Energy stack preprocessor configuration options defined on file app_conf.h are used to activate/disactivate each modular configuration option (1: ENABLED; 0: DISABLED):

CFG BLE CONTROLLER SCAN ENABLED

CFG_BLE_CONTROLLER_PRIVACY_ENABLED

CFG_BLE_SECURE_CONNECTIONS_ENABLED

CFG BLE CONTROLLER DATA LENGTH EXTENSION ENABLED

CFG_BLE_CONTROLLER_2M_CODED_PHY_ENABLED

CFG BLE CONTROLLER EXT ADV SCAN ENABLED

CFG_BLE_L2CAP_COS_ENABLED

CFG_BLE_CONTROLLER_PERIODIC_ADV_ENABLED

PM0274 - Rev 1 page 38/112



Note:

CFG_BLE_CONTROLLER_CTE_ENABLED

CFG_BLE_CONTROLLER_CONTROL_ENABLED

CFG_BLE_CONNECTION_ENABLED

CFG_BLE_CONTROLLER_CHAN_CLASS_ENABLED

CFG_BLE_CONTROLLER_BIS_ENABLED

CFG_BLE_CONNECTION_SUBRATING_ENABLED

CFG_BLE_CONTROLLER_CIS_ENABLED

The modular configurations options can be generated on app_conf.h file through the STM32CubeMX tool, STM32_BLE Middleware, by using the Configuration,, Application Configuration - Modular Options tab.

Table 30. Bluetooth® Low Energy application stack library framework interface

File	Description	Location	Notes
gap_profile.[ch]	Header and source files for generic access profile service (GAP) library.	On user application folder under: System\Modules\Profiles\ {Inc Src}	-
gatt_profile.[ch]	Header and source files for generic attribute profile service (GATT) library	On user application folder under: System\Modules\Profiles\ $\{Inc Src\}$	-
att_pwrq.[ch]	Header and source files for ATT prepare write queue implementation library	Middlewares\ST\STM32_BLE\Queued_Writes\{Inc Src}	-
eatt_pwrq.[ch]	Header and source files for EATT Prepare Write Queue implementation	Middlewares\ST\STM32_BLE\Queued_Writes\{Inc Src}	-

Note: The AES CMAC encryption functionality required by Bluetooth® Low Energy stack is available on a standalone binary library: cryptolib\cryptolib.a. This library must also be included on the user application IDE project.

3.2 Bluetooth® Low Energy stack event dispatcher module

The Bluetooth® Low Energy stack library framework provides an event dispatcher module, which allows user application to register an event handler to get notification of GATT events to be processed. The event dispatcher framework is implemented on ble_evt.[ch] files available in the Middlewares\ST\STM32_BLE\evt_handler folder.

When the event dispatcher is used (recommended), the application should register a callback for each Service and each client implemented, since a GATT event is usually relevant to only one Service and/or one client. When a GATT event is received, it is notified to the registered handlers. When no registered handler acknowledges positively the GATT event, it is reported to the application. A GAP event is not relevant to either a Service or a client. For this reason it is always sent to the application.

Note:

- The maximum number of GATT registered handlers is controlled by BLE_CFG_MAX_NBR_GATT_EVT_HANDLERS macros.
- 2. This handler is called from BLEStack_Process() context.

The BLEEVT_RegisterHandler(BLEEVT_HciPcktHandlerFunc_t EvtHandlerFunc) API allows registering a handler to be called when a generic non-GATT event is received from the Bluetooth LE core stack. A Bluetooth profile may use this function to be notified when an event is received.

Note:

- 1. The maximum number of these registered handlers is controlled by BLE_CFG_MAX_NBR_EVT_HANDLERS macros.
- 2. If the handler returns BLEEVT_Ack, no other registered handlers are called.
- 3. This handler is called from BLEStack_Process() context.

PM0274 - Rev 1 page 39/112



The BLEEVT App Notification(const hci pckt *hci pckt) API callback is triggered when either:

- A standard HCI event is received from the Bluetooth LE core device
- A proprietary event not positively acknowledged by the registered handler is received from the Bluetooth LE core device.

Note: This callback is triggered in the BLEStack_Process() context.

3.3 Bluetooth® Low Energy stack init, tick and event

The Bluetooth® Low Energy stack v4.x must be initialized in order to properly configure some parameters inline with a specific application scenario.

The following API must be called before using any other Bluetooth® Low Energy stack v4.x functionality:

```
BLE_STACK_Init(&BLE_STACK_InitParams);
```

BLE_STACK_InitParams is a variable, which contains memory and low-level hardware configuration data for the device, and it is defined using this structure:

```
typedef struct {
   uint8_t* BLEStartRamAddress ;
   uint32 t TotalBufferSize;
   uint16 t NumAttrRecord;
   uint8_t MaxNumOfClientProcs;
   uint8 t NumOfRadioTasks;
   uint8 t NumOfEATTChannels;
   uint16 t NumBlockCount;
   uint16_t ATT_MTU;
   uint32 t MaxConnEventLength;
   uint16 t SleepClockAccuracy;
   uint8_t NumOfSubeventsPAwR;
   uint8 t MaxPAwRSubeventDataCount;
   uint8 t NumOfAdvDataSet;
   uint8 t NumOfAuxScanSlots;
   uint8 t NumOfSyncSlots;
   uint8 t FilterAcceptListSizeLog2;;
   uint16 t L2CAP MPS;
   uint8_t L2CAP_NumChannels;
   uint8 t CTE MaxNumAntennaIDs;
   uint8 t CTE MaxNumIQSamples;
   uint8_t NumOfSyncBIG;
   uint8_t NumOfBrcBIG;
   uint8 t NumOfSyncBIS;
   uint8 t NumOfBrcBIS;
   uint8_t NumOfCIG;
   uint8 t umOfCIS;
   uint16 t isr0 fifo size;
   uint16_t isr1_fifo_size;
   uint16_t user_fifo_size;
```

Table 31. Bluetooth® Low Energy stack v4.x initialization parameters

Name Description		Value
BLEStartRamAddress	Start address of the RAM buffer for GATT database allocated according to BLE_STACK_TOTAL_BUFFER_SIZE macro	32-bit aligned RAM area
TotalBufferSize	BLE_STACK_TOTAL_BUFFER_SIZE macro return value, used to check the MACRO correctness.	Refer to \Middlewares\ST\STM32_BLE\stack\include\ble_stack.h file

PM0274 - Rev 1 page 40/112



Name	Description	Value
	It defines the total RAM reserved to manage all the data stack according to the number of radio tasks, number of attributes, number of concurrent GATT client procedures, number of memory blocks allocated for packets, number of advertising sets, number of auxiliary scan slots, filter list size, number of L2CAP connection oriented channels supported).	
NumAttrRecord	Maximum number of attributes (that is, the number of characteristic declarations + the number of characteristic values + the number of descriptors + the number of the services) that can be stored in the GATT database	Minimum number is 2 attributes for each characteristic.
MaxNumOfClientProcs	Maximum number of concurrent client procedures	This value is less or equal to NumOfLinks
NumOfRadioTasks	Maximum number of simultaneous radio tasks that the device can support. A radio task is an internal link layer state machine, which handles a specific radio activity (connection, advertising, scanning).	Radio controller supports up to 128 simultaneous radio tasks, but the actual usable max. value depends on the available device RAM (NumOfRadioTasks is used in the calculation of BLE_STACK_TOTAL_BUFFER_SIZE) The value is set through the CFG_NUM_RADIO_TASKS macro defined when configuring the RADIO IP (file stm32wb0x_hal_conf.h)
NumOfEATTChannels	Maximum number of simultaneous EATT active channels	0 to L2CAP channels -1
NumBlockCount	Number of allocated memory blocks for the Bluetooth® LE stack packet allocations.	The minimum required value is calculated using a specific macro provided on ble_stack.h file: BLE_STACK_MBLOCKS_CALC()
ATT_MTU	Maximum supported ATT_MTU size	Supported values range is from 23 to 1020 bytes
MaxConnEventLength	Maximum duration of the connection event when the device is in peripheral mode in units of 625/256 us (~2.44 us)	<= 4000 (ms)
SleepClockAccuracy	Sleep clock accuracy	ppm value
NumOfAdvDataSet	Maximum number of advertising data set, valid only when advertising extension feature is enabled	-
NumOfSubeventsPAwR	Maximum number of Periodic Advertising with Responses subevents	[1-128]
MaxPAwRSubeventDataCount	Maximum number of Periodic Advertising with Responses subevents that data can be requested for.	[1 - min(15, CFG_BLE_STACK_NUM_SUBEVENTS_PAWR)]
NumOfAuxScanSlots	Maximum number of slots for scanning on the secondary advertising channel, valid only when advertising extension feature is enabled	-
NumOfSyncSlots	Maximum number of slots to be synchronized, valid only when Periodic Advertising and Synchronizing Feature is enabled.	0 if Periodic Advertising is disabled. [1 - NumOfLinks-1] if Periodic Advertising is enabled

PM0274 - Rev 1 page 41/112



Name	Description	Value
FilterAcceptListSizeLog2	Two's logarithm of the filter/resolving list size	-
L2CAP_MPS	The maximum size of payload data in octets that the L2CAP layer entity can accept	Supported values range is from 0 to 1024 bytes
L2CAP_NumChannels	Maximum number of channels in LE credit based flow control mode	Supported values range is from 0 to 255 bytes
CTE MayNumAntonnalDa	Maximum number of antenna IDs in the antenna pattern used in CTE	[0x02-0x4B] if the direction finding feature is enabled and supported from the device.
CTE_MaxNumAntennalDs	connection oriented mode.	0: if the direction finding feature is not supported from the device.
CTE MaxNumlQSamples	Maximum number of IQ samples in the buffer used in CTE connection	[0x09-0x52] if the direction finding feature is enabled and supported from the device.
CTE_MaxNumiQSampleS	oriented mode.	0: if the direction finding feature is supported from the device
NumOfSyncBIG	Maximum number of ISO Synchronizer groups	[0-1]
NumOfBrcBIG	Maximum number of ISO Broadcaster groups	[0-1]
NumOfSyncBIS	Maximum number of ISO Synchronizer streams	0 if CFG_BLE_NUM_SYNC_BIG_MAX = 0; [1-2] if CFG_BLE_NUM_SYNC_BIG_MAX ! = 0;
NumOfBrcBIS	Maximum number of ISO Broadcaster streams	0 if CFG_BLE_NUM_BRC_BIG_MAX = 0; [1-2] if CFG_BLE_NUM_BRC_BIG_MAX != 0;
NumOfCIG	Maximum number of Connected Isochronous Groups.	Supported values range from 0 to 2.
	Maximum number of Connected	Supported values range:
NumOfCIS	Isochronous Streams.	0 if CFG_BLE_NUM_CIG_MAX = 0; [1-2] if CFG_BLE_NUM_CIG_MAX! = 0.
isr0_fifo_size	Size of the internal FIFO used for critical controller events produced by the ISR (for example, rx data packets)	Default value: 256
isr1_fifo_size	Size of the internal FIFO used for noncritical controller events produced by the ISR (for example, advertising or IQ sampling reports)	Default value: 768
user_fifo_size	Size of the internal FIFO used for controller and host events produced outside the ISR	Default value: 1024

Note:

The Bluetooth LE stack v4.x stack initialization parameters can be generated on app_conf.h file through the STM32CubeMX tool, STM32_BLE Middleware, by using the Configuration,, Application Configuration - BLE stack tab.

3.4 The Bluetooth® Low Energy stack v4.x application configuration hardware configuration

During the device initialization phase, after STMicroelectronics Bluetooth[®] Low Energy device powers on, some specific hardware configurations parameters must be defined on the Bluetooth[®] Low Energy device controller registers, in order to define the following configurations:

- SMPS: on or off (if on: 2.2 μH, 1.5 μH or 10 μH SMPS inductor)
- HSE capacitor

PM0274 - Rev 1 page 42/112



The STM32WB0 devices SMPS application configuration parameters are defined on a file system_stm32wb0x.c through the following configuration table:

Define	Possible value	Description
	SMPS_ON	SMPS configuration: active (default value)
CFG_HW_SMPS_BOM	SMPS_OFF	SMPS configuration: off
	SMPS_BYPAPSS	SMPS configuration: bypass mode
	SMPS_BOM1	SMPS Inductor: 1.5 uH
CFG_HW_SMPS	SMPS_BOM2	SMPS Inductor: 2.2 uH
	SMPS_BOM3	SMPS Inductor: 10 uH (default value)
	SMPS_LOW_POWER_NO_OPEN	SMPS Configuration during power save: OFF
CFG_HW_SMPS_LOW_POWER	SMPS_LOW_POWER_OPEN	SMPS Configuration during power save: ON (default value)
CONFIG_HW_HSE_TUNE	[0-63]	HSE capacitor value

Table 32. Hardware configurations parameters options

3.5 Bluetooth® Low Energy stack tick function

The Bluetooth[®] Low Energy stack v4.x provides a special API BLE_STACK_Tick(), which must be called in order to process the internal Bluetooth[®] Low Energy stack state machines and when there are Bluetooth[®] Low Energy stack activities ongoing (normally within the main application while loop).

The BLE_STACK_Tick() function executes the processing of all host stack layers and it has to be executed regularly to process incoming link layer packets and to process host layers procedures.

If a low speed ring oscillator is used instead of the LS crystal oscillator, this function also performs the LS RO calibration, and hence must be called at least once at every system wake-up in order to keep the 500 ppm accuracy (at least 500 ppm accuracy is mandatory if acting as a central).

Note:

No Bluetooth® Low Energy stack function must be called while the <code>BLE_STACK_Tick()</code> is being run. For example, if a Bluetooth® Low Energy stack function may be called inside an interrupt routine, that interrupt must be disabled during the execution of <code>BLE_STACK_Tick()</code>.

Example: if a stack function may be called inside UART ISR, the following code should be used:

```
NVIC_DisableIRQ(UART_IRQn);
BLE_STACK_Tick();
NVIC_EnableIRQ(UART_IRQn);
```

3.6 Bluetooth Low Energy stack event function

The BLE_STACK_Event(hci_pckt *hci_pckt, uint16_t length) function is called when an event is coming from the Bluetooth LE stack.

It checks the event type (GATT event handler, proprietary non-GATT events, standard events or not registered events).

PM0274 - Rev 1 page 43/112



Designing an application with the Bluetooth® Low Energy stack v4.x

This section provides some information and code examples about how to design and implement a Bluetooth[®] Low Energy application using the Bluetooth[®] Low Energy stack v4.x binary library.

A user implementing a Bluetooth[®] Low Energy stack v4.x application has to go through some basic and common steps:

- 1. Initialization phase and main application loop.
- Bluetooth[®] Low Energy stack events register.
- 3. Services and characteristic configuration on GATT server.
- 4. Create a connection: discoverable, connectable modes and procedures.
- 5. Security (pairing and bonding).
- 6. Service and characteristic discovery.
- 7. Characteristic notification/indications, write, read.
- 8. Basic/typical error conditions description.

Note:

In the following sections, some user applications "defines" identify the Bluetooth® Low Energy device role (central, peripheral, client, and server). Furthermore, the STM32WB09 device is used as a reference device running Bluetooth® Low Energy stack v4.x applications. Any specific device-dependent part is highlighted whenever it is needed.

Table 33. User application defines for Bluetooth® Low Energy device roles

Define	Description
GATT_CLIENT	GATT client role
GATT_SERVER	GATT server role

4.1 Initialization phase and main application loop

The following main steps are required to properly configure the Bluetooth[®] Low Energy device running a Bluetooth[®] Low Energy stack v4.x application on STM32CubeWB0 software package supporting STM32WB0 MCUs:

- 1. Reset all the peripherals, initialize the flash memory interface and the SysTick (HAL Init () API).
- Configure the system clocks (SystemClock_Config() API) and the peripherals common clocks (PeriphCommonClock Config() API).
- Initialize the GPIO (MX_GPIO_Init() API), Radio peripheral (MX_Radio_Init() API), Radio timer (MX_RADIO_TIMER_Init() API) and PKA (MX_PKA_Init() API).
- 4. Initialize the STM32 Bluetooth® Low Energy framework: (MX APP Init() API).
- 5. Add a while loop calling the (MX_APP_Process() API).

The following pseudocode example illustrates the required initialization steps:

```
/**
  * @brief The application entry point.
  * @retval int
  */
int main(void)
{
  /* USER CODE BEGIN 1 */
  /* USER CODE END 1 */
  /* MCU Configuration------------------------/
  /* Reset of all peripherals, Initializes the Flash interface and the Systick. */
  HAL_Init();
```

PM0274 - Rev 1 page 44/112



```
/* USER CODE BEGIN Init */
/* USER CODE END Init */
/* Configure the peripherals common clocks */
SystemClock Config();
/* Configure the peripherals common clocks */
PeriphCommonClock Config();
/* USER CODE BEGIN SysInit */
/* USER CODE END SysInit */
/* Initialize all configured peripherals */
MX GPIO Init();
MX RADIO Init();
MX RADIO TIMER Init();
MX PKA Init()
/* USER CODE BEGIN 2 */
/* USER CODE END 2 */
/* Init code for STM32 BLE */
MX APPE Init(NULL);
/* Infinite loop */
/* USER CODE BEGIN WHILE */
while (1)
  /* USER CODE END WHILE */
 MX APPE Process();
  /* USER CODE BEGIN 3 */
/* USER CODE END 3 */
```

The GAP layer must be initialized by calling the following API: tBleStatus aci_gap_init(uint8_t Privacy_Type, uint8_t Identity_Address_Type);

Where:

- Privacy Type Specify if privacy is enabled or not and which one. Possible values are:
 - 0x00: Privacy disabled
 - 0x01: Privacy host enabled
 - 0x02: Privacy controller enabled
- Identity Address Type Specify which address has to be used as identity. Possible values are:
 - 0x00: Public Address
 - 0x01: Static Random Address

This API is called on BLE Init() function provided within the Application STM32_BLE\App\app_ble.c file.

If the user application supports connections, the GATT and GAP and services implementation must be handled at application level by registering these services and associated characteristics through, respectively, the GATT and GAP profiles: aci_gatt_srv_profile_init() and aci_gap_profile_init(). Refer to Section 4.2.2.9: GAP and GATT profile components for more details.

On each application, these APIs are implemented, respectively, on files System\Modules\Profiles\Src\gatt_pofile.c and gap_profile.c.

Table 34. GATT, GAP service handles

Service	Start handle	End handle	Service UUID
Attribute profile service	0x0001	0x000A	0x1801
Generic access profile (GAP) service	0x0008	0x0011	0x1800

PM0274 - Rev 1 page 45/112



Default services	Characteristic	Attribute handle	Char property	Char value handle	Char UUID	Char value length (bytes)
Attribute profile service	-	0x0001	-	-	-	-
-	Service changed	0x0002	Indicate	0x0003	0x2A05	4
-	Client Supported Features	0x0005	Read, Write	0x0006	0x2B29	1
-	Database Hash GATT	0x0007	Read	0x0008	0x2B2A	16
-	Server Supported Features	0x0009	Read	0x0010	0x283A	1
Generic access profile (GAP) service	-	0x000B	-	-	-	-
-	Device name	0x000C	Read write without response write authenticated signed writes	0x000C	0x2A00	8
-	Appearance	0x000E	Read write without response write authenticated signed writes	0x000F	0x2A01	2
-	Peripheral preferred connection parameters	0x0010	Read write	0x00011	0x2A04	8
-	Central address resolution ⁽¹⁾	0x0012	Readable without authentication or authorization. Not writable	0x00013	0x2AA6	1

Table 35. GATT, GAP characteristic handles

For a complete description of these APIs and related parameters, refer to the Bluetooth® Low Energy stack APIs and event documentation, in References.

4.1.1 Bluetooth® Low Energy addresses

The following device addresses are supported by the Bluetooth® Low Energy stack:

- Public address
- Random address
- Private address

Public MAC addresses (6 bytes - 48 bits address) uniquely identify a Bluetooth® Low Energy device, and they are defined by the institute of electrical and electronics engineers (IEEE).

The first three bytes of the public address identify the company that issued the identifier and are known as the organizationally unique identifier (OUI). An organizationally unique identifier (OUI) is a 24-bit number that is purchased from the IEEE. This identifier uniquely identifies a company and it allows a block of possible public addresses to be reserved (up to 2^24 coming from the remaining three bytes of the public address) for the exclusive use of a company with a specific OUI.

An organization/company can request a new set of 6-byte addresses when at least 95% of the previously allocated block of addresses have been used (up to 2^24 possible addresses are available with a specific OUI).

If the user wants to program their custom MAC address, they have to store it on a specific device flash location used only for storing the MAC address. Then, at device power-up, it has to program this address on the radio by calling a specific stack API.

The Bluetooth $^{\circledR}$ Low Energy API command to set the MAC address is $aci_hal_write_config_data()$

PM0274 - Rev 1 page 46/112

^{1.} It is added only when controller-based privacy (0x02) is enabled on aci_gap_profile_init() API.



The command $aci_hal_write_config_data()$ should be sent to Bluetooth® Low Energydevices before starting any Bluetooth® Low Energy operations (after stack initialization API BLE_STACK_Init()).

The following pseudocode example illustrates how to set a public address:

```
uint8_t bdaddr[] = {0x12, 0x34, 0x00, 0xE1, 0x80, 0x02};
ret=aci_hal_write_config_data(CONFIG_DATA_PUBADDR_OFFSET,CONFIG_DATA_PUBAD DR_LEN, bdaddr);
if(ret) PRINTF("Setting address failed.\n")}
```

MAC address needs to be stored in the specific flash location associated to the MAC address during the product manufacturing.

A user can write its application assuming that the MAC address is placed at a known specific MAC flash location of the device. During manufacturing, the microcontroller can be programmed with the customer flash image via

A second step could involve generating the unique MAC address (that is, reading it from a database) and storing of the MAC address in the known MAC flash location.

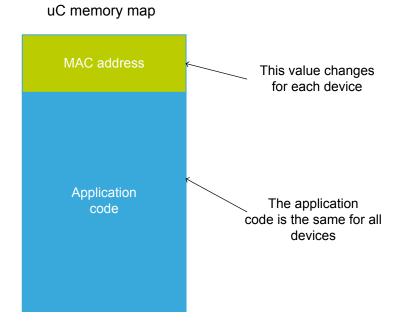


Figure 17. MAC address storage

The STM32WB0 series do not have a valid preassigned MAC address, but a unique serial number (read only for the user). The unique serial number is an 8-bytes value stored at address 0x10001EF0: it is stored as two words at address 0x10001EF0 and 0x10001EF4.

The following utility APIs get access to the STM32WB0 series unique serial ID:

```
uint32_t UID_word0;
uint32_t UID_word1;
/* Get first serial ID 4 bytes at serial id base address (0x10001EF0) */
UID_word0 = LL_GetUID_Word0();
/* Get last serial ID 4 bytes at serial id base address + 4 */
UID_word1 = LL_GetUID_Word1();
```

The static random address is generated and programmed at every first boot of the device on the dedicated flash area. The value on flash is the actual value that the device uses: each time the user resets the device the stack checks if valid data is on the dedicated flash area and it uses it (a special valid marker on flash is used to identify if valid data is present). If the user performs mass erase, the stored values (including marker) are removed so the stack generates a new random address and stores it on the dedicated flash.

PM0274 - Rev 1 page 47/112



Private addresses are used when privacy is enabled and according to the Bluetooth® Low Energy specification. For more information about private addresses, refer to Security manager (SM).

4.1.2 Set tx power level

During the initialization phase, the user can also select the transmitting power level using the following APIs:

```
aci hal set tx power level(En High Power, PA Level);
```

Follow a pseudocode example for setting the radio transmit power at 0 dBm output power:

```
ret= aci_hal_set_tx_power_level (0, 25);
```

The En_High_Power parameter allows the selection of one of two possible power configurations. In each configuration, a different SMPS output voltage level is set. The PA_Level parameter is used to select the output level of the power amplifier with a granularity of around 1 dB. This output level depends on the SMPS output voltage.

Moreover, to reach 8 dBm, in addition to using an higher SMPS voltage, it is also needed to bypass the LDO_TRANSFO. On STM32WB05/06/07 devices, this is done for every transmission and any PA Level if High Power mode is enabled. On STM32WB09, the LDO_TRANSFO is bypassed only if PA_Level 32 is used.

The En_High_Power can assume 2 values:

- 0x00: Normal Power (SMPS 1.4 V)
- 0x01: High Power (SMPS 1.9 V)

Table 36 provides the expected TX output power for each level in the two configurations on STM32WB0 devices.

Normal power mode: SMPS 1.4V High power mode: SMPS 1.9V STM32WB05, STM32WB07/ STM32WB05, STM32WB07/ Value **STM32WB09** STM32WB06, STM32WB09 STM32WB06 dBm dBm dBm -21 dBm -19 dBm -21 dBm 1 2 -20 dBm -18 dBm -20 dBm 3 -19 dBm -17 dBm -19 dBm -16 dBm 4 -17 dBm -17 dBm 5 -16 dBm -15 dBm -16 dBm 6 -15 dBm -14 dBm -15 dBm 7 -14 dBm -13 dBm -14 dBm 8 -13 dBm -12 dBm -13 dBm 9 -12 dBm -11 dBm -12 dBm 10 -11 dBm -10 dBm -11 dBm 11 -10 dBm -9 dBm -10 dBm -9 dBm 12 -8 dBm -9 dBm -8 dBm -7 dBm -8 dBm 13 -7 dBm 14 -6 dBm -7 dBm 15 -6 dBm -5 dBm -6 dBm -6 dBm 16 -4 dBm -6 dBm 17 -4 dBm -3 dBm -4 dBm -3 dBm -3 dBm 18 -3 dBm 19 -3 dBm -2 dBm -3 dBm -2 dBm 20 -2 dBm -1 dBm

Table 36. STM32WB0 devices TX power level

PM0274 - Rev 1 page 48/112



	Normal power mode: SMPS 1.4V	High power mode: SMPS 1.9V		
Value	STM32WB05, STM32WB07/ STM32WB06, STM32WB09	STM32WB05, STM32WB07/ STM32WB06	STM32WB09	
	dBm	dBm	dBm	
21	-2 dBm	0 dBm	-2 dBm	
22	-1 dBm	1 dBm	-1 dBm	
23	-1 dBm	2 dBm	-1 dBm	
24	0 dBm	3 dBm	0 dBm	
25	0 dBm	8 dBm	0 dBm	
26	1 dBm	8 dBm	1 dBm	
27	2 dBm	8 dBm	2 dBm	
28	3 dBm	8 dBm	3 dBm	
29	4 dBm	8 dBm	4 dBm	
30	5 dBm	8 dBm	5 dBm	
31	6 dBm	8 dBm	6 dBm	
32	-	-	8 dBm	

Note:

When using an SMPS OFF configuration, the output power levels depend on the voltage applied to the VFBSD pin. In this case, the user must fill the look-up table in RADIO_utils.c file (under each specific Application on System\Modules\RADIO_utils\Src directory) with the real-measured values. Filling the look-up table with the correct values is important because it is used by the Bluetooth® stack to correctly convert dBm to PA level and vice versa.

4.2 Bluetooth® LE stack v4.x GATT interface

4.2.1 Introduction

The ATT/GATT component is designed to optimize the memory footprint and usage. To achieve this result, the GATT component avoids allocating the static buffer. The user application allocates such resources and provides them to the stack library on demand. Instead of allocating space for attribute values inside the Bluetooth® LE stack buffer, the Bluetooth® LE stack asks the application for read and write operations on attribute values. It is then up to the application to decide if it is necessary to store values and how to store and retrieve them. For instance, a characteristic linked to real-time data from a sensor may not need a static buffer to store an attribute value, since data are read on-demand from the sensor. Similarly, a control-point attribute, which controls an external component (e.g. an LED) may not need a static buffer for the attribute value.

Bluetooth® LE stack v4.x ATT/GATT component avoids, as much as possible, such memory allocation, providing a profile registration mechanism based on C-language structures that can be stored in flash memory if needed. These structures are also designed to reduce memory allocation. The components needed to be stored in volatile memory are collected in a structure that sits in 8 bytes of RAM.

The Bluetooth® LE stack v4.x ATT/GATT component also supports the Bluetooth® robust caching feature. This is handled internally in the stack and it does not need support from the application.

4.2.2 GATT server

The GATT server is in charge of storing the attribute, which composes a profile on a GATT database.

The GATT profile is designed to be used by an application or another profile and defines how to use the contained attributes to obtain some information.

Note:

On the context of the STM32CubeWB0 software package, it is defined a specific event dispatcher module framework for registering the application callbacks related to events linked to characteristics operations (ble_evt. [ch] on Middlewares\ST\STM32_BLE\evt_handler folder).

PM0274 - Rev 1 page 49/112



4.2.2.1 Service

A service is a collection of data and associated behaviors to accomplish a function or feature. A service definition may contain included services and characteristics.

There are two types of services:

- Primary service is a service that exposes the primary usable functionality of this device
- Secondary service is a service that is only intended to be included from a primary service or another secondary service

A service is defined using the following ble_gatt_srv_def_t C language structure:

```
typedef struct ble_gatt_srv_def_s {
   ble_uuid_t uuid;
   uint8_t type;
   uint16_t group_size;
   struct {
       uint8_t incl_srv_count;
       struct ble_gatt_srv_def_s **included_srv_pp;
   } included_srv;
   struct {
       uint8_t chr_count;
       ble_gatt_chr_def_t *chrs_p;
   } chrs;
} ble_gatt_srv_def_t
```

This structure represents a service with its properties:

- uuid: is the 16-bit Bluetooth® UUID or 128-bit UUID for the service, known as service UUID
- type: indicates if the service is primary (BLE_GATT_SRV_PRIMARY_SRV_TYPE, with value 0x01) or secondary (BLE_GATT_SRV_SECONDARY_SRV_TYPE, with value 0x02)
- group_size: optional field, indicates how many attributes can be added to the service group. If it is set to 0 then no size is defined, and no limit is used on the number of attributes that is added to the service. An equal number of handles are reserved, so that new attributes can be added to the service at a later time
- included_srv: optional field, is the list of included services
- chrs: optional field, is the list of contained characteristics. If one or more characteristics are present then these are registered, with their descriptors if any, at service registration

For instance, consider a GAP profile composed of a primary service with the 16-bit UUID equal to 0x1800, the C structure that defines it is

```
static ble_gatt_srv_def_t gap_srvc = {
    .type = BLE_GATT_SRV_PRIMARY_SRV_TYPE,
    .uuid = BLE_UUID_INIT_16(0x1800),
    .chrs = {
        .chrs_p = gap_chrs,
        .chr_count = 2U,
    },
};
```

Note:

Static variables and global variables (and their fields in case of structures) are initialized to 0 if not explicitly initialized.

```
To register a service in the GATT DB the aci\_gatt\_srv\_add\_service function is used:
```

```
aci_gatt_srv_add_service(&gap_srvc);
```

while retrieving the assigned attribute handle the aci_gatt_srv_get_service_handle

function is used: uint16 t gap h = aci gatt srv get service handle(&gap srvc);

The registered services can be also removed at run time if needed using the <code>aci_gatt_srv_rm_service</code> function: <code>aci_gatt_srv_rm_service(gap_h);</code>

Note:

The memory used for a service definition structure is kept valid for all the time such service is active.

4.2.2.2 The characteristic

A characteristic is used to expose a device value: for instance, to expose the temperature value.

A characteristic is defined using the following $ble_gatt_chr_def_t$ C language structure:

PM0274 - Rev 1 page 50/112



```
typedef struct ble_gatt_chr_def_s {
    uint8_t properties;
    uint8_t min_key_size;
    uint8_t permissions;
    ble_uuid_t uuid;
    struct {
        uint8_t descr_count;
        ble_gatt_descr_def_t *descrs_p;
    } descrs;
    ble_gatt_val_buffer_def_t *val_buffer_p;
} ble_gatt_chr_def_t;
```

This structure represents a characteristic with its properties:

- properties: is a bit field and determines how the characteristic value can be used or how the characteristic descriptor can be accessed.
- min_key_size: indicates the minimum encryption key size requested to access the characteristic value. This parameter is only used if encryption is requested for this attribute (see permission field) and in this case its value must be greater than or equal to 7 and less than or equal to 16.
- permission: this is a bit field and indicates how the characteristic can be accessed:
 - BLE_GATT_SRV_PERM_NONE (0x00): indicates no permissions are required to access characteristic value
 - BLE_GATT_SRV_PERM_AUTHEN_READ (0x01): indicates that the reading of the characteristic value requires an authenticated pairing (i.e. with MITM protection enabled)
 - BLE_GATT_SRV_PERM_AUTHOR_READ (0x02): indicates that the application must authorize access to the device services on the link before the reading of the characteristic value can be granted
 - BLE_GATT_SRV_PERM_ENCRY_READ (0×0.4) : indicates that the reading of the characteristic value requires an encrypted link. The minimum encryption key size to access this characteristic value must be specified through the min key size field
 - BLE_GATT_SRV_PERM_AUTHEN_WRITE (0x08): indicates that the writing of the characteristic value requires an authenticated pairing (i.e. with MITM protection enabled)
 - BLE_GATT_SRV_PERM_AUTHOR_WRITE (0x10): indicates that the application must authorize access to the device services on the link before the writing of the characteristic value can be granted
 - BLE_GATT_SRV_PERM_ENCRY_WRITE (0x20): indicates that writing of the characteristic value requires an encrypted link. The minimum encryption key size to access this characteristic value must be specified through the min key size field
- uuid: this field is a 16-bit Bluetooth® UUID or 128-bit UUID that describes the type of characteristic value
- descrs: this optional field is the list of characteristic descriptors. If one or more descriptors are present,
 then these are registered at the time of characteristic registration
- val_buffer_p: this is an optional field that if set, points to the allocated buffer storing the characteristic value. If it is not set (e.g. set to NULL) then an event is emitted by the stack to request a read or a write operation on the characteristic value (see aci_gatt_srv_read_event and aci_gatt_srv_write_event).

For instance, consider the device name characteristic of the GAP profile, that has read/write access, no particular security permission and a 16-bit UUID equal to 0x2A00 (min_key_size is not set since encryption is not required):

```
static ble_gatt_chr_def_t gap_device_name_chr = {
.properties = BLE_GATT_SRV_CHAR_PROP_READ,
.permissions = BLE_GATT_SRV_PERM_NONE,
.uuid = BLE_UUID_INIT_16(0x2A00),
.val_buffer_p=(ble_gatt_val_buffer_def_t *)\ &gap_device_name_val_buff,
};
```

To register the defined characteristic the $\verb"aci_gatt_srv_add_char"$ function can be used:

```
aci gatt srv add char (&gap device name chr, gap p);
```

As an alternative, the characteristic can be added to the service at the same time that the service is registered. In this case, the list of characteristics is passed to the stack through the <code>chrs</code> field of the <code>ble_gatt_srv_def_t</code> structure

As services and characteristics, there is a function to retrieve the assigned attribute handle (aci_gatt_srv_get_char_decl_handle) and to remove a registered characteristic at run time (aci_gatt_srv_rm_char).

PM0274 - Rev 1 page 51/112



Note: The memory used for a characteristic definition structure is kept valid for all the time such characteristic is active.

4.2.2.3 Descriptor

Characteristic descriptors are used to contain the related information about the characteristic value. A standard set of characteristic descriptors are defined to be used by application. The application can also define additional characteristic descriptors as profile specifics.

A characteristic descriptor is defined using the following $ble gatt_descr_def_t C$ language structure:

```
typedef struct ble_gatt_descr_def_s {
    uint8_t properties;
    uint8_t min_key_size;
    uint8_t permissions;
    ble_uuid_t uuid;
    ble_gatt_val_buffer_def_t *val_buffer_p;
} ble_gatt_descr_def_t;
```

This structure represents a characteristic descriptor with its properties:

- properties: is a bit field and determines how the characteristic descriptor can be accessed. The BLE_GATT_SRV_DESCR_PROP_READ (0x01) bit enables the descriptor reading, while the BLE_GATT_SRV_DESCR_PROP_WRITE (0x02) bit enables the descriptor writing
- min_key_size: indicates the minimum encryption key size requested to access the characteristics descriptor. This parameter is used only if encryption is requested for this attribute (see permission field) and in this case its value must be greater than or equal to 7 and less than or equal to 16
- Permission: this is a bit field and indicates how the characteristic descriptor can be accessed:
 - BLE_GATT_SRV_PERM_NONE, (0x00) indicates no permissions are set to access characteristic descriptor
 - BLE_GATT_SRV_PERM_AUTHEN_READ, (0x01) indicates that the reading of characteristic descriptor requires prior pairing with authentication (MITM) on
 - BLE_GATT_SRV_PERM_AUTHOR_READ, (0x02) indicates that the link is authorized before reading
 the characteristic descriptor
 - BLE_GATT_SRV_PERM_ENCRY_READ, (0x04) indicates that reading of characteristic descriptor requires prior pairing with encryption
 - BLE_GATT_SRV_PERM_AUTHEN_WRITE, (0x08) indicates that writing about characteristic descriptor requires prior pairing with authentication (MITM) on
 - BLE_GATT_SRV_PERM_AUTHOR_WRITE, (0x10) indicates that the link is authorized before writing
 the characteristic descriptor
 - BLE_GATT_SRV_PERM_ENCRY_WRITE, (0x20) indicates that writing of characteristic descriptor requires prior pairing with encryption
- uuid: this field is a 16-bit Bluetooth® UUID or 128-bit UUID that describes the type of characteristic descriptor
- val_buffer_p: this is an optional field that, if set, points to the allocated buffer storing characteristic
 descriptor value. If it is not set (e.g. set to NULL) then an event is emitted by the stack to request a read or
 a write operation on characteristic descriptor value (see aci_gatt_srv_read_event and
 aci_gatt_srv_write_event).

For instance, to define a descriptor with a read access permission, a 16-bit UUID value set to 0xAABB and no security permissions, the following structure is used:

To register the defined descriptor in the DB the <code>aci_gatt_srv_add_char_desc</code> function is used: <code>aci_gatt_srv_add_char_desc</code> (&chr_descr, chr_handle);

where chr_handle is the attribute handle of the characteristic that contains this descriptor. Besides, for descriptors there is the function to retrieve its attribute handle (aci_gatt_srv_get_descriptor_handle) and to remove the descriptor (aci_gatt_srv_rm_char_desc) itself.

PM0274 - Rev 1 page 52/112



The descriptor can also be added together with the related characteristic by specifying the descrs field of $ble_gatt_chr_def_t$.

Since the client characteristic configuration descriptor (CCCD) is quite common to be present in a profile, then some helper macros are provided to define it:

- BLE_GATT_SRV_CCCD_DECLARE: declares CCCD value buffer and descriptor fields. Commonly used when a characteristic has just the CCCD as unique descriptor
- BLE_GATT_SRV_CCCD_DEF_STR_FIELDS: fills the descriptor structure fields for a CCCD. It can be used
 when a characteristic has more than the CCC descriptor to fill the fields of a descriptor definition array

Note:

The memory used for a characteristic descriptor definition structure is valid for all the time such descriptor is active.

4.2.2.4 Value buffer

The value buffer is a structure that holds the characteristic value and characteristic descriptor values. Such structure stores the buffer information and is kept valid for all the life of the containing structure. The value buffer structure is defined by ble gatt val buffer_def_t type:

```
typedef struct ble_gatt_val_buffer_def_s {
    uint8_t op_flags;
    uint16_t val_len;
    uint16_t buffer_len;
    uint8_t *buffer_p;
} ble_gatt_val_buffer_def_t;
```

This structure has the following field:

- op flags: this is a bit field that enables a specific behavior when the value is written
 - BLE_GATT_SRV_OP_MODIFIED_EVT_ENABLE_FLAG (0x01): enables the generation of aci gatt attribute modified event event when the value is changed by the client
 - BLE_GATT_SRV_OP_VALUE_VAR_LENGTH_FLAG (0x02): indicates that the value is a variable length
- val_len, stores the value length. Ignored if <code>BLE_GATT_SRV_OP_VALUE_VAR_LENGTH_FLAG</code> bit is not set in the <code>op_flags</code> field
- buffer_len, the length of the buffer pointed by buffer_p pointer. For a fixed length characteristic, this is the length of the characteristic value
- buffer_p, the pointer to value buffer.

For example, to define a variable length value buffer, with a maximum size of 10 bytes, the following code is used:

```
uint8_t buffer[10];
ble_gatt_val_buffer_def_t val_buffer = {
    op_flags = BLE_GATT_SRV_OP_VALUE_VAR_LENGTH_FLAG,
    buffer_len = 10,
    buffer_p = buffer,
};
```

If the application needs to fill the value buffer with a 2-byte value (e.g. 0x0101), it can directly address its value through the buffer and set the actual length:

```
memset(val_buffer.buffer_p, 0x01, 2);
val_buffer.val_len = 2;
```

The stack is not aware of such value update until a remote device sends a read request to retrieve its value. If the characteristic has a fixed length, ble_gatt_val_buffer_def_t structure can be defined as a constant.

```
const ble_gatt_val_buffer_def_t val_buffer = {
   buffer_len = 2,
   buffer_p = buffer,
};
```

Moreover, if the value cannot be changed (i.e. read only access), then the buffer pointed by buffer_p can be also declared as a constant.

```
const uint8 t buffer[2] = \{0x01, 0x01\};
```

PM0274 - Rev 1 page 53/112



If the value is dynamically computed (e.g. temperature) then the value buffer is not needed: if <code>val_buffer_p</code> field of characteristic or descriptor C structure is not set (i.e. set to NULL) then some events are generated to access such value:

- aci_gatt_srv_read_event is generated when a remote device needs to read a characteristic value or descriptor
- aci_gatt_srv_write_event, is generated when a remote device needs to write a characteristic value or descriptor

Note: The memory used for value buffer definition is valid for all the time such buffer is active.

4.2.2.5 GATT server database APIs

The following paragraph contains the list of functions that are available to manipulate the GATT server database.

API Description aci_gatt_srv_add_service This function adds the provided service to the database aci_gatt_srv_rm_service This function removes the provided service from the database This function retrieves the attribute handle assigned to the aci gatt srv get service handle service registered using the provided definition structure aci gatt srv include service This function adds the provided include service This function removes the provided include service from the aci gatt srv rm include service database This function retrieves the attribute handle assigned to the aci gatt srv get include service handle include service aci_gatt_srv_add_char This function adds the provided characteristic to the database This function removes the provided characteristic from the aci gatt srv rm char database. All the included attributes (characteristic value and descriptors) are removed accordingly This function retrieves the attribute handle assigned to the aci_gatt_srv_get_char_decl_handle characteristic registered using the provided definition structure aci_gatt_srv_add_char_desc This function adds the provided descriptor to the database This function removes the provided descriptor from the database aci_gatt_srv_rm_char_desc This function retrieves the attribute handle assigned to the aci gatt srv get descriptor handle characteristic descriptor registered using the provided definition structure

Table 37. GATT server database APIs

4.2.2.6 Examples

The following examples are intended to explain how to define a profile.

GATT profile

This example illustrates how to implement and register the GATT profile.

Note: The complete GATT service is already implemented in gatt_profile.c. A more simple implementation is described here.

This profile is composed of a primary service with a 16-bit UUID set to 0x1801 and the service changed characteristic, with the indication property bit set. To support indications the characteristic has the client characteristic configuration descriptor. To declare this descriptor the BLE_GATT_SRV_CCCD_DECLARE macro can be used. This macro has the following parameter:

BLE GATT SRV CCCD DECLARE (NAME, NUM CONN, PERM, OP FLAGS)

Where:

- NAME is the name assigned to identify this CCCD
- NUM CONN is the number of supported concurrent connections for the targeted application
- PERM, is the bit field of descriptor permission

PM0274 - Rev 1 page 54/112



OP FLAGS is the bit field of descriptor value buffer.

Then, for instance, the declaration can be the following:

Declare now the characteristic value buffer, since it has to be provided as <code>val_buffer_p</code> of ble gatt chr def t structure:

```
uint8_t srv_chgd_buff[4];
const ble_gatt_val_buffer_def_t srv_chgd_val_buff = {
    .buffer_len = 4U,
    .buffer_p = gatt_chr_srv_changed_buff,
};
```

Once the descriptor and the characteristic value buffer are declared then the service changed characteristic can be declared:

```
static ble_gatt_chr_def_t gatt_chr = {
.properties = BLE_GATT_SRV_CHAR_PROP_INDICATE,
.permissions = BLE_GATT_SRV_PERM_NONE,
.uuid = BLE_UUID_INIT_16(0x2A05),
.val_buffer_p = &srv_chgd_val_buff,
.descrs = {
.descrs_p =
&BLE_GATT_SRV_CCCD_DEF_NAME(gatt_chr_srv_changed),
.descr_count = 1U,
},
};
```

As stated, this characteristic has the indication bit set in the properties bit field, no security permissions, the UUID set to 0x2A05 and one descriptor.

Now the GATT service can be declared:

```
static ble_gatt_srv_def_t gatt_srvc = {
    .type = BLE_GATT_SRV_PRIMARY_SRV_TYPE,
    .uuid = BLE_UUID_INIT_16(0x1801),
    .chrs = {
        .chrs_p = &gatt_chr,
        .chr_count = 1,
    },
};
```

To register the whole profile, only the service is registered: all the included characteristics and its descriptors are automatically registered. Use the <code>aci_gatt_srv_add_service</code> to register the service:

```
aci_gatt_srv_add_service(&gatt_srvc);
```

Glucose

Consider the following database:

Table 38. Example database

Attribute handle	Attribute type	UUID	Properties	Note
0x0001	Primary service	0x1808	-	Glucose service
-	Included service	-	-	Included battery service
-	Characteristic	0x2A18	Read, indicate, extended properties	Glucose measurement characteristic
-	Descriptor	-	-	CCCD
-	Descriptor	-	-	Extended properties descriptor
0x1000	Secondary service	0x180F	-	Battery service
-	Characteristic	0x2A19	Read	Battery level characteristic

PM0274 - Rev 1 page 55/112



Start defining the battery service with its characteristic:

```
uint8_t battery_level_value;
const ble_gatt_val_buffer_def_t battery_level_val_buff = {
    .buffer_len = 1,
    .buffer_p = &battery_level_value,
};

ble_gatt_chr_def_t batt_level_chr = {
    .properties = BLE_GATT_SRV_CHAR_PROP_READ,
    .permissions = BLE_GATT_SRV_PERM_NONE,
    .uuid = BLE_UUID_INIT_16(0x2A19),
    .val_buffer_p = &battery_level_val_buff,
};

ble_gatt_srv_def_t battery_level_srvc = {
    .type = BLE_GATT_SRV_SECONDARY_SRV_TYPE,
    .uuid = BLE_UUID_INIT_16(0x180F),
    .chrs = {
        .chrs_p = &batt_level_chr,
        .chr_count = 1,
    },
};
```

Define the glucose profile:

```
uint8_t ext_prop_descr_buff[2];
ble_gatt_val_buffer_def_t ext_prop_descr_val_buff = {
.buffer_len = 2,
.buffer_p = ext_prop_descr_buff,
BLE_GATT_SRV_CCCD_BUFFER_DECLARE(glucose_mes, MAX_CONN, 0);
ble_gatt_descr_def_t glucose_chr_descrs[] = {
    BLE GATT SRV CCCD DEF STR FIELDS (glucose mes, MAX CONN,
                                         BLE_GATT_SRV_CCCD_PERM_DEFAULT),
},
ble_gatt_chr_def_t glucose_mes_chr = {
.properties = BLE_GATT_SRV_CHAR_PROP_READ | BLE_GATT_SRV_CHAR_PROP_INDICATE | BLE_GATT_SRV_CHAR_PROP_EXTENDED_PROP,
.permissions = BLE_GATT_SRV_PERM_NONE,
.uuid = BLE_UUID_INIT_16(0x2A18),
.descrs = {
.descrs p = &BLE GATT SRV CCCD DEF NAME(glucose chr descrs),
.descr_count = 2U,
static ble gatt srv def t *incl srv pa[1] = {&battery level srvc};
ble_gatt_srv_def_t glucose_srvc = {
.type=BLE_GATT_SRV_PRIMARY_SRV_TYPE,
.uuid = BLE_UUID_INIT_16(0x1808),
.group_size = 0x1000,
```

As shown the <code>glucose_srvc</code> has set the <code>group_size</code> field: this is there to allow the battery service to be registered at 0x1000 attribute handles. This service does not include any characteristic or included services. This is a choice, for this example, to show how to register such elements one by one.

First, register the glucose service:

```
aci_gatt_srv_add_service(&glucose_srvc);
```

this is a primary service with a 16-bit UUID set to 0x1808.

Register battery service and its characteristic:

```
aci gatt srv add service(&battery level srvc);
```

This is a secondary service with a 16-bit UUID set to 0x180F that includes a characteristic. Both service and characteristic are registered.

Now it is time to include the battery service in the glucose service and register its characteristic and descriptors. For this purpose the assigned attribute handle is needed to get for the glucose and battery services:

PM0274 - Rev 1 page 56/112



```
uint16_t glucose_srvc_handle =
aci_gatt_srv_get_service_handle(&glucose_srvc);
uint16_t battery_srvc_handle =
aci_gatt_srv_get_service_handle(&battery_level_srvc);
```

Include battery into glucose service:

```
aci_gatt_srv_include_service(glucose_srvc_handle,
  battery_srvc_handle);
```

Note:

Included services are added to service before registering any characteristic to the same service. This is needed because the include service attribute is placed after the service declaration attribute and before any characteristic declaration attributes.

To register the glucose measurement characteristic and its descriptors, use the aci_gatt_srv_add_char() function as shown below:

```
aci_gatt_srv_add_char(&glucose_mes_chr, glucose_srvc_handle);
```

The glucose measurement characteristic and the included descriptors are added.

4.2.2.7 Server initiated procedures

The so-called server initiated procedures are the ones used to send data to a remote client that is subscribed to receive it. There are two kinds of server initiated procedures.

- **Notification**: this procedure is used when the server is configured to notify a characteristic value to a client without expecting any acknowledgment that the notification was successfully received
- Indication: this procedure is used when the server is configured to indicate a characteristic value to a
 client and to expect an acknowledgment that the indication has been successfully received

For both procedures, an API is provided: the aci_gatt_srv_notify().

Type **Parameter** Description uint16_t Connection_Handle The connection handle for which the notification is requested uint16_t CID Channel Identifier of the ATT bearer. It must be set to 0x0004 for unenhanced ATT bearer. uint16_t Attr_Handle The attribute handle to notify Notification flags: 0x00: sends a notification uint8_t Flags 0x01: sends a flushable notification 0x02: sends an indication Val_Length The length of provided value buffer uint16_t uint8 t* Val p The pointer to the buffer containing the value to notify

Table 39. aci_gatt_srv_notify parameters

The Flags parameter indicates the kind of message that is sent. For instance, to notify the value of the attribute with handle 0x13 to a client, with a connection handle of 0x0801 then the following code is used.

```
uint8_t value = 1;
ret = aci_gatt_srv_notify(0x0801, 0x0004, 0x13, 0, 1, &value);
```

If the client has set the notification bit into the CCCD of the characteristic then the notification is sent, otherwise a BLE_STATUS_NOT_ALLOWED error is returned.

PM0274 - Rev 1 page 57/112



4.2.2.8 Attribute value read and write

As described in the previous section, the stack can access the characteristic values and descriptors through their value buffers. If such buffer is not set in the definition structure (val_buffer_p = NULL), then the stack generates an event to ask the application to operate on the related value buffer. There are two events: aci_gatt_srv_read_event and aci_gatt_srv_write_event. For queued writes, the stack does not have a queue to store them: if the application wants to support the queued write, it must implement the queue to store each prepare write. For this reason, the stack generates the aci_att_srv_prepare_write_req_event for each received prepare write request so that the application can store them. The aci att srv exec write req event is generated when an execute write request is received.

aci_gatt_srv_read_event

This event is generated when the server receives a read operation of an attribute value and the stack does not have direct access to such value. This event must be followed by $aci_gatt_srv_resp()$, passing the value of the attribute.

Туре	Parameter	Description
uint16_t	Connection_Handle	The connection handle where the read request is received
unit16_t	CID	CID Channel Identifier of the ATT bearer.
uint16_t	Attr_Handle	The attribute handle to read
uint16_t	Data_Offset	The offset where to start reading value

Table 40. aci_gatt_srv_read_event parameters

aci_gatt_srv_write_event

This event is generated when the server receives a write operation of an attribute value and it does not have access to the attribute value buffer. This event must be followed by aci_gatt_srv_resp() if Resp_Needed is 1.

Type	Parameter	Description	
uint16_t	Connection_Handle	The connection handle where the write request is received	
unit16_t	CID	CID Channel Identifier of the ATT bearer.	
uint8_t	Resp_Needed	If the value is 1, a call to <code>aci_gatt_serv_resp()</code> is required. This happens for ATT requests. ATT commands do not need a response (this parameter is set to 0)	
uint16_t	Attribute_Handle	The attribute handle to write	
uint16_t	Data_Length	The length of data to write	
uint8_t *	Data	The data to write	

Table 41. aci_gatt_srv_write_event parameters

aci_att_srv_prepare_write_req_event

This event is generated when the server receives a prepare write request. It carries the received data stored at application level. This event must be followed by <code>aci_gatt_srv_resp()</code>, passing back to the stack the value, which is written by the application.

Table 42. aci_att_srv_prepare_write_req_event parameters

Туре	Parameter	Description
uint16_t	Connection_Handle	Connection handle that identifies the connection
unit16_t	CID	CID Channel Identifier of the ATT bearer.
uint16_t	Attribute_Handle	Attribute handle for which the write request is received
uint16_t	Data_Offset	The offset where to start writing value

PM0274 - Rev 1 page 58/112



Туре	Parameter	Description
uint16_t	Data_Length	Length of the data field
uint8_t *	Data	The data to write

aci_att_srv_exec_write_req_event

This event is generated when the server receives an execute write request. Application must handle it to write or flush all stored prepare write requests, depending on the Flags value. This event must be followed by aci_gatt_srv_resp().

Table 43. aci_att_srv_exec_write_req_event parameters

Туре	Parameter	Description	
uint16_t	Connection_Handle	Connection handle identifies the connection	
unit16_t	CID	CID Channel Identifier of the ATT bearer.	
uint8_t	Flags	 0x00 – Cancel all prepared writes 0x01 – Immediately write all pending prepared values 	

aci_gatt_srv_resp()

When the previous events are generated by the stack, the application must decide to allow (and execute) or deny the requested operation. To inform the stack about the choice made by the application and pass the requested data (in case of a read request or a prepare write request), a function is provided: aci_gatt_srv_resp(). This function is used to close a read or write transaction started by a remote client.

Note: This function is executed within 30 seconds from the reception of event otherwise a GATT timeout occurs.

Table 44. aci_gatt_srv_resp parameters

Type	Parameter	Description	
uint16_t	Connection_Handle	Connection handle that identifies the connection	
unit16_t	CID	CID Channel Identifier of the ATT bearer.	
uint16_t	Attribute_Handle	Attribute handle for which the response command is issued	
uint8_t	Error_Code	The reason why the request has generated an error response (use one of the ATT error codes, see [1], Vol. 3, Part F, Table 3.4)	
uint16_t	Val_Length	Length of the value field	
uint8_t *	Val	The response data in the following cases: read request prepare write request For other requests, this parameter can be NULL	

Note: Data pointed by Val is no more needed on function return and can be released.

aci_gatt_srv_read_event() example

The following code shows an example of how to implement the aci_gatt_srv_read_event handler.

```
static BLEEVT_EvtAckStatus_t Application_EventHandler(aci_blecore_event *p_evt)
{
   BLEEVT_EvtAckStatus_t return_value = BLEEVT_NoAck;

   aci_gatt_srv_read_event_rp0  *p_read;
   uint16_t val_len;
   uint8_t attr_error_code = BLE_ATT_ERR_NONE;
   uint8_t val_buff[4];

switch(p_evt->ecode)
{
```

PM0274 - Rev 1 page 59/112



```
case ACI GATT SRV READ VSEVT CODE :
     p_read = (aci_gatt_srv_read_event_rp0*)p_evt->data;
     if(p_read->Attribute_Handle == 0x16)
      /** Attribute is mapped on a GPIO value */
      val len = 1;
      gpio_get(GPIO_01, val_buffer[0]);
     else if (p_read->Attribute_Handle == 0x19)
       /** Fill buffer with some custom data */
       val len = 4;
       memset(val_buffer, 2, 4);
     else
       val len = 0;
      attr_error_code = BLE_ATT_ERR_UNLIKELY;
     aci_gatt_srv_resp(p_read->Connection_Handle, BLE_GATT_UNENHANCED_ATT_L2CAP_CID, p_read->Attribute
_Handle, attr_error_code , val_len, val_
    buff);
     break; /* ACI GATT SRV READ VSEVT CODE */
```

The code manages the attribute handles 0x16 and 0x19. The handle 0x16 is mapped on a GPIO value while handle 0x19 returns 4 bytes. The $aci_gatt_srv_resp()$ generates the read response with the given data if Error Code is set to 0, otherwise it sends an error response.

aci_gatt_srv_write_event() example

The following example shows how to manage the $aci_gatt_srv_write_event$. In this example, writing the attribute handle 0x16 changes a GPIO state.

```
static BLEEVT_EvtAckStatus_t Application_EventHandler(aci_blecore_event *p_evt)
 BLEEVT_EvtAckStatus_t return_value = BLEEVT_NoAck;
 aci_gatt_srv_write_event_rp0 *p_write;
 uint16 t buffer len = 0;
 uint8_t *buffer=NULL;
 uint8_t attr_error_code = BLE_ATT_ERR_NONE;
 uint8 t val buff[4];
  switch(p_evt->ecode)
    case ACI GATT SRV WRITE VSEVT CODE :
     p_write = (aci_gatt_srv_write_event_rp0*)p_evt->data;
      if (p_write->Data_Length != 1)
          att_err = BLE_ATT_ERR_INVAL_ATTR_VALUE_LEN;
     else if (p write->Attribute Handle != 0x16)
           attr error code = BLE ATT ERR UNLIKELY;
     else if ((p_write->Data[0] != 0) && (Data[0] != 1))
           attr error code = BLE ATT ERR VALUE NOT ALLOWED;
     else
        /** Set GPIO value */
       attr error code = BLE ATT ERR NONE;
       gpio_set(GPIO_01, p_write->Data[0]);
```

PM0274 - Rev 1 page 60/112



```
}
if (p_write->Resp_Needed == 1U)
{
    aci_gatt_srv_resp(p_write->Connection_Handle, BLE_GATT_UNENHANCED_ATT_L2CAP_CID, p_write->Attri
bute_Handle,attr_error_code , buffer_len, buffer);
}
break;/* ACI_GATT_SRV_WRITE_VSEVT_CODE */
}
}
```

4.2.2.9 GAP and GATT profile components

The ATT/GATT component of the Bluetooth LE stack v4.x does not automatically allocate the GAP and GATT services but it delegates the implementation of these services to the application: this allows the application to customize such profiles based on its needs. Two components are provided as reference to register such profiles: they can be found in <code>gatt_profile.c</code> and <code>gap_profile.c</code>. These components implement the initialization functions to register GATT and GAP profiles: <code>aci_gatt_srv_profile_init()</code> and <code>aci_gap_profile_init()</code>. The user application must call these two APIs if connections are supported. <code>gatt_profile.c</code> provides a default GATT profile, but it can be customized: for instance, if the client supported feature and database hash characteristics are not registered in the GATT service then the robust caching feature is automatically disabled since these characteristics are mandatory for such feature. If the service changed characteristic is removed, the database is intended to be static and then no service change indication can be sent.

Note:

The database hash characteristics are handled in a special way: no value buffer is allocated by the application, since the hash is generated and allocated internally by stack. <code>gap_profile.c</code> implements the default GAP profile with its characteristics. These components also provide some commodity functions to set up characteristic values like the device name.

4.2.2.10 EATT_PWRQ component

The scope of this component is to provide the mechanism to store in a FIFO the received prepare write requests. This is an optional component provided in eatt pwrq.c as a reference.

EATT_pwrq_init()

This function initializes the EATT_PWRQ component.

Table 45. EATT_pwrq_init parameters

Туре	Parameter	Description
uint16_t	queue_length	Queue buffer size
uint8_t *	queue_buffer_p	Pointer to the buffer used to store the FIFO

EATT_pwrq_flush()

This function removes all the queued writes related to a connection handle.

Table 46. EATT_pwrq_flush parameter

Туре	Parameter	Description
uint16_t	conn_handle	Queue buffer size
uint16_t	cid	The channel ID of the prepare write to flush

EATT_pwrq_read()

Read the FIFO elements. Such elements are filtered per connection handle and indexed by a parameter.

PM0274 - Rev 1 page 61/112



Table 47. EATT	_pwrq_read	parameters
----------------	------------	------------

Туре	Parameter	Description
uint16_t	conn_handle	The connection handle to filter
uint16_t	cid	The channel ID of the prepare write to flush
uint16_t idx		The index of the entry to read
ble_gatt_clt_write_ops_t *	wr_ops_p	Returning pointer to the structure that holds the prepared write information

EATT_pwrq_pop()

Extract an entry from the FIFO. The entry is filtered per connection and attribute handles.

Table 48. EATT_pwrq_pop parameters

Туре	Parameter	Description
uint16_t	conn_handle	The connection handle to filter
uint16_t	cid	The channel ID of the prepare write to flush
uint16_t	attr_handle	The attribute handle to filter
ble_gatt_clt_write_ops_t *	wr_ops_p	Returning pointer to the structure that holds the prepared write information

EATT_pwrq_push()

Push the data of a prepare write in the FIFO.

Table 49. EATT_pwrq_push parameters

Туре	Parameter	Description
uint16_t	conn_handle	The connection handle from where the connection handle is received
uint16_t	cid	The channel ID of the prepare write to flush
uint16_t	attr_handle	The attribute handle to write
uint16_t	data_offset	The offset from where to start writing the data
uint16_t	data_length	Length of data to write
uint8_t *	data	Pointer to data to write

4.2.3 SoC vs. network coprocessor

While in the application processor mode, the application resides on the device memory; in the network coprocessor mode the application runs outside. The application layer inside the Bluetooth® Low Energy device exports Bluetooth® Low Energy stack functionality through a serial interface. For this scope the network coprocessor needs to allocate buffers that can hold the database definition structure and values.

4.2.3.1 BLE_TransparentMode

An adaptation layer inside the device is needed to use the device as a network coprocessor. The BLE_TransparentMode (also known as direct test mode) example application is a way to use the device in a network processor mode. DTM application exposes ACI (application-controller interface) commands and events, so that an application on an external device can use the Bluetooth® Low Energy stack through a serial interface. The interface to the GATT layer exposed by the BLE_TransparentMode application is different from the native GATT API. The aci_gatt_nwk.c file implements the adaptation layer between the network co-processor API and the native API. This module defines some buffers used to allocate the memory space needed to define services, characteristics and descriptors. It also allocates the memory needed to store the attribute values that reside in the BLE_TransparentMode memory space. It uses a dynamic memory allocator to allocate the requested memory. The allocated structures are inserted in a linked list to search the associated value buffer when a read/ write operation is requested by a client.

PM0274 - Rev 1 page 62/112



Some client procedures (e.g. write and write long characteristic procedures) need to temporary store data in a buffer. This component also allocates the buffer needed by those procedures. These buffers are kept allocated until the procedure is complete.

4.2.4 GATT client

A device, acting as a client, initiates commands and requests towards the server and can receive responses, indications and notifications sent by the server. The following actions are covered by this role:

- Exchange configuration
- Discover services and characteristics on a server
- Read an attribute value
- Write an attribute value
- Receive notifications and indications by a server
- Send a confirmation of a received indication.

GATT uses the attribute protocol (ATT) to transport data to the form of commands, requests, indications, notifications and confirmations between client and server. Some GATT client procedures generate only one ATT request and wait for the response from the server. The procedure is terminated after the response is received (or a timeout occurs). Other procedures are composed of more than one exchange of request-response ATT packets.

The end of a procedure is indicated by the reception of aci_gatt_clt_proc_complete_event. Once a procedure is on-going, no other procedures can be started with the same server.

In the following section, the list of available functions for a GATT client is shown.

Table 50. GATT client APIs

API	Description
aci_gatt_clt_exchange_config	This procedure is used to set the ATT MTU to the maximum possible value that can be supported by both devices. This procedure can be initiated once during a connection
aci_gatt_clt_disc_all_primary_services	This function is used to discover all the primary services on a server
aci_gatt_clt_disc_primary_service_by_uuid	This function is used to discover a specific primary service on a server when only the service UUID is known
aci_gatt_clt_find_included_services	This function is used to find include service declarations within a service definition on a server. The service is identified by the service handle range
aci_gatt_clt_disc_all_char_of_service	This function is used to find all characteristic declarations within a service definition on a server when only the service handle range is known
aci_gatt_clt_disc_char_by_uuid	This function is used to discover service characteristics on a server when only the service handle ranges are known and the characteristic UUID is known
aci_gatt_clt_disc_all_char_desc	This function is used to find all the characteristic descriptor attribute handles and attribute types within a characteristic definition when only the characteristic handle range is known. The characteristic specified is identified by the characteristic handle range
aci_gatt_clt_read	This function is used to read an attribute value from a server when the client knows the attribute handle
aci_gatt_clt_read_long	This function is used to read a long attribute value from a server when the client knows the attribute handle
aci_gatt_clt_read_multiple_char_value	This function is used to read multiple characteristic values from a server when the client knows the characteristic value handles
aci_gatt_clt_read_using_char_uuid	This function is used to read a characteristic value from a server when the client only knows the characteristic UUID and does not know the handle of the characteristic

PM0274 - Rev 1 page 63/112



API	Description
aci_gatt_clt_write_without_resp	This function is used to write an attribute value to a server when the client knows the attribute handle and the client does not need an acknowledgment that the write was successfully performed. This function only writes the first (ATT_MTU – 3) octets of an attribute value
aci_gatt_clt_signed_write_without_resp	This function is used to write an attribute value to a server when the client knows the attribute handle and the ATT bearer is not encrypted. This function is only used if the attribute properties authenticated bit is enabled and the client and server device share a bond
aci_gatt_clt_write	This function is used to write an attribute value to a server when the client knows the attribute handle. This function only writes the first (ATT_MTU – 3) octets of an attribute value
aci_gatt_clt_write_long	This function is used to write an attribute value to a server when the client knows the attribute handle, but the length of the attribute value is longer than can be sent using the aci_gatt_clt_write() function
aci_gatt_clt_write_char_reliable	This function is used to write a characteristic value to a server when the client knows the characteristic value handle, and assurance is required that the correct characteristic value is going to be written by transferring the characteristic value to be written in both directions before the write is performed. This function can also be used when multiple values must be written, in order, in a single operation.
aci_gatt_clt_notification_event	This event is generated when a server is configured to notify a characteristic value to a client without expecting any attribute protocol layer acknowledgment that the notification was successfully received
aci_gatt_clt_indication_event	This event is generated when a server is configured to indicate a characteristic value to a client and expects an attribute protocol layer acknowledgment that the indication was successfully received. To confirm it the aci_gatt_clt_confirm_indication function is used
aci_gatt_clt_confirm_indication	This function is used to generate a handle value confirmation to the server to indicate that the handle value indication is received.
aci_gatt_clt_prepare_write_req	This function is used to request the server to prepare to write the value of an attribute. The application can send more than one prepare write request to a server, which queues and sends a response for each handle value pair
aci_gatt_clt_execute_write_req	This function is used to request the server to write or cancel the write of all the prepared values currently held in the prepare queue from this client

4.2.5 Services and characteristic configuration

In order to add a service and its related characteristics, a user application has to define the specific profile to be addressed:

- Standard profile defined by the Bluetooth[®] SIG organization. The user must follow the profile specification and services, characteristic specification documents in order to implement them by using the related defined Profile, Services and Characteristics 16-bit UUID (refer to Bluetooth[®] SIG web page: https:// www.bluetooth.com).
- 2. Proprietary, non-standard profile. The user must define their own services and characteristics. In this case, 128-bit UIDS are required and must be generated by profile implementers (refer to UUID generator web page: www.famkruithof.net/uuid/uuidgen⁽¹⁾).
- 1. This URL belongs to a third party. It is active at document publication, however STMicroelectronics shall not be liable for any change, move or inactivation of the URL or the referenced material.

PM0274 - Rev 1 page 64/112



The following pseudocode describes how to define a service with two characteristics, TX (notification property) and RX (write without response property) with the following UUIDs (128 bits):

Service UUID: D973F2E0-B19E-11E2-9E96-0800200C9A66 TX_Char UUID: D973F2E1-B19E-11E2-9E96-0800200C9A66 RX_Char UUID: D973F2E2-B19E-11E2-9E96-0800200C9A66

```
/* Service and Characteristic UUIDs */
#define SRVC UUID 0x66,0x9a,0x0c,0x20,0x00,0x08,0x96,0x9e,0xe2,0x11,0x9e,0xb1,0xe0,0xf2,0x73,
0xd9
#define TX CHR UUID 0x66,0x9a,0x0c,0x20,0x00,0x08,0x96,0x9e,0xe2,0x11,0x9e,0xb1,0xe1,0xf2,0x7
3.0xd9
#define RX CHR UUID 0x66,0x9a,0x0c,0x20,0x00,0x08,0x96,0x9e,0xe2,0x11,0x9e,0xb1,0xe2,0xf2,0x7
3,0xd9
#define RX BUFFER SIZE (20)
/* Define the client configuration characteristic descriptor */
BLE GATT SRV CCCD DECLARE(tx, NUM LINKS, BLE GATT SRV CCCD PERM DEFAULT,
                     BLE GATT SRV OP MODIFIED EVT ENABLE FLAG);
/* TX (notification), RX(write without response) characteristics definition */
static const ble_gatt_chr_def_t user_chars[] = {
       /* TX characteristic with CCCD */
        .properties = BLE GATT SRV CHAR PROP NOTIFY,
        .permissions = BLE GATT SRV PERM NONE,
        .min key size = BLE GATT SRV MAX ENCRY KEY SIZE,
        .uuid = BLE UUID INIT 128(TX CHR UUID),
        .descrs = {
            .descrs_p = &BLE GATT SRV CCCD DEF NAME(tx),
            .descr count = 1U,
        1.
    },
       /* RX characteristic */
        .properties = BLE GATT SRV CHAR PROP WRITE | BLE GATT SRV CHAR PROP WRITE NO RESP,
        .permissions = BLE GATT SRV PERM NONE,
        .min key size = BLE GATT SRV MAX ENCRY KEY SIZE,
        .uuid = BLE UUID INIT 128(RX CHR UUID),
    },
};
/* Chat Service definition */
static const ble gatt srv def t user service = {
   .type = BLE GATT SRV PRIMARY SRV TYPE,
   .uuid = BLE_UUID_INIT_128(SRVC_UUID),
   .chrs = {
       .chrs_p = (ble_gatt_chr_def_t *) user _chars,
       .chr count = 2U,
   },
};
uint16 t TXCharHandle, RXCharHandle;
```

A service with its characteristics can be added using the following command:

```
ret= aci_gatt_srv_add_service((ble_gatt_srv_def_t *)&user_service);
```

Once the service with related characteristics (TX, RX) has been added, the user can get the related TX, RX characteristics handles with the following commands:

```
TXCharHandle=aci_gatt_srv_get_char_decl_handle((ble_gatt_chr_def_t *)&chat_chars[0]);
RXCharHandle=aci_gatt_srv_get_char_decl_handle((ble_gatt_chr_def_t *)&chat_chars[1]);
```

For a detailed description of the $aci_gatt_srv_add_service()$ API parameters refer to the header file $ble_api.h$.

PM0274 - Rev 1 page 65/112



4.3 GAP API interface

Bluetooth[®] LE stack v4.x has redefined the GAP API interface allowing the advertising mode and scanning procedures to be enabled, or a connection to be established between a Bluetooth[®] LE GAP central device and a Bluetooth[®] LE GAP peripheral device.

GAP peripheral mode APIs

The aci_gap_set_advertising_configuration() API allows the advertising parameters to be configured for the legacy advertising or for a given extended advertising set. In particular, it defines the discoverable modes and a type of advertising to be used.

Table 51. aci_gap_set_advertising_configuration() API : discoverable mode and advertising type selection

АРІ	Discoverable_Mode parameter	Advertising_Event_Properties parameter
<pre>aci_gap_set_advertising_configuration()</pre>	0x00: not discoverable 0x01: limited discoverable 0x02: general discoverable	0x0001: connectable 0x0002: scannable 0x0004: directed 0x0008: high duty cycle directed connectable 0x0010: legacy 0x0020: anonymous 0x0040: include TX power

The aci_gap_set_advertising_data() API allows the data to be set in advertising PDUs. In particular, the user is requested to specify the length of advertising data (Advertising_Data_Length parameter) and to provide the advertising data (Advertising_Data parameter) inline with the advertising format defined on Bluetooth® LE specifications.

The content of the buffer containing the advertising/scan response data is directly accessed by the stack, hence it should not change when device is advertising.

An aci_hal_adv_scan_resp_data_update_event is received to inform the application that the buffer is no more used by the stack. This can happen after a new advertising buffer is provided to the stack through aci_gap_set_advertising_data or when advertising has been terminated. It is possible to change the content of the advertising buffer, while it is used by the stack, without any unwanted effect (e.g. corrupted data over-the-air) only when the change is atomic, e.g. a single byte or word is modified.

Once the advertising configuration and data have been defined, the user can enable/disable advertising using the $aci_gap_set_advertising_enable()$ API (Enable parameter).

GAP discovery procedure

The aci_gap_set_scan_configuration() API allows the scan parameters to be configured for a given PHY. Once the scan parameters are defined, the user can start a specific discovery procedure by using the aci_gap_start_procedure() API, Procedure_Code parameter.

Table 52. aci_gap_start_procedure() API

API	Procedure_Code parameter
	0x00: LIMITED_DISCOVERY
	0x01: GENERAL_DISCOVERY
agi gan start procedure()	0x02: AUTO_CONNECTION
aci_gap_start_procedure()	0x03: GENERAL_CONNECTION
	0x04: SELECTIVE_CONNECTION
	0x05: OBSERVATION

A GAP discovery procedure can be terminated using the <code>aci_gap_terminate_proc()</code> API.

PM0274 - Rev 1 page 66/112



Table 53. aci_gap_terminate_proc() API

API	Procedure_Code parameter
	0x00: LIMITED_DISCOVERY
	0x01: GENERAL_DISCOVERY
agi gan terminate prog()	0x02: AUTO_CONNECTION
<pre>aci_gap_terminate_proc()</pre>	0x03: GENERAL_CONNECTION
	0x04: SELECTIVE_CONNECTION
	0x05: OBSERVATION

The aci_gap_set_connection_configuration() API allows the connection configuration parameter to be configured for a given PHY to establish a connection with a peer device.

A direct connection with a peer device can be built by the <code>aci_gap_create_connection()</code>. This API specifies the PHY only to be used for the connection, the peer device type (<code>Peer_Address_Type</code> parameter) and the peer address (<code>Peer_Address_parameter</code>).

The aci_gap_terminate() API allows an established connection to be terminated by selecting the related handle (Connection Handle parameter) and the reason to end the connection (reason parameter).

4.3.1 Set the discoverable mode and use the direct connection establishment procedure

The following pseudocode example illustrates the specific steps only to be followed to let a GAP peripheral device be a general discoverable mode, and for a GAP central device to directly connect to it through a direct connection establishment procedure.

Note: It is assumed that the device public address has been set during the initialization phase as follows:

```
uint8_t bdaddr[] = {0x12, 0x34, 0x00, 0xE1, 0x80, 0x02}; ret=aci_hal_write_config_data(CONFIG_DATA_PUBA
DDR OFFSET, CONFIG_DATA_PUBADDR_LEN, bdaddr);
if(ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
/*GAP Peripheral: configure general discoverable mode and set advertising data
void GAP Peripheral Configure Advertising(void )
    tBleStatus ret;
    /\star Define advertising data content: set AD type flags and complete local name \star/
static uint8_t adv_data[] = {0x02,AD_TYPE_FLAGS, FLAG_BIT_LE_GENERAL_DISCOVERABLE_MODE|FLAG_BIT_BR_EDR_NOT_SUPPORTED,13, AD_TYPE_COMPLETE_LOCAL_NAME, 'B','1','u','e','N','R','G','X','T','e','s',' t'};
    /* Configure the General Discoverable mode, connectable and scannable (legacy advertising):
    Advertising_Handle: 0
    Discoverable Mode: GAP MODE GENERAL DISCOVERABLE (general discovery mode)
    Advertising_Event_Properties ADV_PROP_CONNECTABLE | ADV_PROP_SCANNABLE | ADV_PROP_LEGACY (connectable, s
cannable and legacy)
   Primary_Advertising_Interval_Min: 100;
    Primary_Advertising_Interval_Max: 100
    Primary_Advertising_Channel_Map: ADV_CH_ALL (channels 37,38,39)
    Peer_Address_Type: 0;
    Peer Address[6]: NULL;
    Advertising_Filter_Policy: ADV_NO_FILTER_LIST_USE (no filter list);
    Advertising_Tx_Power: 0;
    Primary Advertising PHY: 0;
    Secondary_Advertising_Max_Skip: 0;
    Secondary_Advertising_PHY: 0;
    Advertising SID: 0;
    Scan Request Notification Enable: 0.
    ret = aci gap set advertising configuration(0,
                                                    GAP MODE GENERAL DISCOVERABLE,
                                                    ADV_PROP_CONNECTABLE
                                                    ADV_PROP_SCANNABLE | ADV_PROP_LEGACY,
                                                    100, 100,
                                                    ADV_CH_ALL,
                                                    0,
                                                    NULL,
```

PM0274 - Rev 1 page 67/112



Once that advertising mode and data have been configured, the GAP peripheral device can enable advertising using the aci gap set advertising enable () API:

```
static Advertising_Set_Parameters_t Advertising_Set_Parameters[1];

/*GAP Peripheral: enable advertising(and no scan response is sent)
*/
void GAP_Peripheral_Enable_Advertising(void)
{
    /* Enable advertising:
        Enable: ENABLE (enable advertsing);
        Advertising_Set_Parameters: Advertising_Set_Parameters */
    Advertising_Set_Parameters[0].Advertising_Handle = 0;
    Advertising_Set_Parameters[0].Duration = 0;
    Advertising_Set_Parameters[0].Max_Extended_Advertising_Events = 0;
    //enable advertising
    ret = aci_gap_set_advertising_enable(ENABLE, 1, Advertising_Set_Parameters);
    if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
}
```

GAP central device must configure the scanning and connection parameters, before connecting to the GAP peripheral device in discoverable mode.

```
/*{\tt GAP} Central: configure scanning and connection parameters
void GAP Central Configure Connection (void)
/\star Configure the scanning parameters:
 Filter_Duplicates: DUPLICATE_FILTER_ENABLED (Duplicate filtering enabled)
 Scanning_Filter_Policy: SCAN_ACCEPT_ALL (accept all scan requests)
 Scanning_PHY: LE_1M_PHY (1Mbps PHY)
 Scan_Type: PASSIVE_SCAN
 Scan Interval: 0x4000;
 Scan Window: 0x4000;
ret=aci gap set scan configuration(DUPLICATE FILTER ENABLED,
    SCAN ACCEPT ALL,
     LE 1M PHY.
    PASSIVE SCAN,
    0x4000.
    0 \times 4000):
if(ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
/* Configure the connection parameters:
Initiating_PHY: LE_1M_PHY (1Mbps PHY)
Conn_Interval_Min: 40 (Minimum value for the connection event interval);
Conn Interval Max: 40 (Maximum value for the connection event interval);
Conn_Latency: 0 (Peripheral latency for the connection in a number of connection events);
Supervision Timeout: 60 (Supervision timeout for the LE Link); Minimum CE Length: 2000 (Minimum length
of connection needed for the LE connection);
Maximum CE Length: 2000 (Maximum length of connection needed for the LE connection).
ret = aci_gap_set_connection_configuration(LE_1M_PHY, 40, 40, 0, 60,
                                       2000, 2000);
if(ret != BLE STATUS SUCCESS) PRINTF("Failure.\n");
}/* GAP_Central_Configure_Connection()*/
```

Once the scanning and connection parameters have been configured, the GAP central device can perform the direct connection to the GAP peripheral device using the <code>aci_gap_create_connection()</code> API.

PM0274 - Rev 1 page 68/112



Note:

- 1. If ret = BLE_STATUS_SUCCESS is returned, on termination of the GAP procedure, the hci_le_enhanced_connection_complete_event is raised, to indicate that a connection has been established with the GAP_Peripheral_address (same event is returned on the GAP peripheral device)
- 2. The connection procedure can be explicitly terminated by issuing the API aci_gap_terminate_proc() with proper Procedure Code parameter value
- 3. The last two parameters <code>Minimum_CE_Length</code> and <code>Maximum_CE_Length</code> of the <code>aci_gap_set_connection_configuration()</code> are the length of the connection event needed for the <code>Bluetooth®LE</code> connection. These parameters allow the user to specify the amount of time the central has to allocate for a single peripheral so they must be chosen wisely. In particular, when a central connects to more peripherals, the connection interval for each peripheral must be equal or a multiple of the other connection intervals and the user must not overdo the connection event length for each peripheral.

4.3.2 Set discoverable mode and use general discovery procedure (active scan)

aci gap set advertising enable() API:

The following pseudocode example illustrates the specific steps only to be followed to let a GAP peripheral device be in a general discoverable mode, and for a GAP central device to start a general discovery procedure in order to discover the devices within its radio range.

Note:

It is assumed that the device public address has been set during the initialization phase as follows:

```
uint8_t bdaddr[] = {0x12, 0x34, 0x00, 0xE1, 0x80, 0x02};
ret =aci_hal_write_config_data(CONFIG_DATA_PUBADDR_OFFSET,CONFIG_DATA_PUBADDR_LEN, bdaddr)
if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
```

Furthermore, the GAP peripheral device has configured the advertising and related data as described in Section 4.3.1: Set the discoverable mode and use the direct connection establishment procedure. The GAP peripheral device can enable scan response data and then the advertising using the

```
static Advertising_Set_Parameters_t Advertising_Set_Parameters[1];
/* GAP Peripheral:general discoverable mode (scan responses are sent):
void GAP_Peripheral_Make_Discoverable(void)
    tBleStatus ret;
    const char local_name[] = {AD_TYPE_COMPLETE_LOCAL_NAME, 'B', 'l', 'u', 'e',
    /* As scan response data, a proprietary 128bits Service UUID is used.
    This 128bits data cannot be inserted within the advertising packet
    (ADV IND) due its length constraints (31 bytes). AD Type
                                                                  description:
    0x11: length
    0x06: 128 bits Service UUID type
    0x8a,0x97,0xf7,0xc0,0x85,0x06,0x11,0xe3,0xba,0xa7,0x08,0x00,0x20,0x0c,
    0x9a,0x66: 128 bits Service UUID
    static uint8 t ServiceUUID Scan[18]=
    \{0x11,0x06,0x8a,0x97,0xf7,0xc0,0x85,
    0x06,0x11,0xe3,0xba,0xa7,0x08,0x00,0x2,0x0c,0x9a,0x66};
    /* Enable scan response to be sent when GAP peripheral receives scan requests
    from GAP Central performing general
```

PM0274 - Rev 1 page 69/112



```
discovery procedure(active scan)
  */
  aci_gap_set_scan_response_data(18,ServiceUUID_Scan);

/* Enable advertising:
  Enable: ENABLE (enable advertsing);
  Number_of_Sets: 1;
  Advertising_Set_Parameters: Advertising_Set_Parameters */
  Advertising_Set_Parameters[0].Advertising_Handle = 0;
  Advertising_Set_Parameters[0].Duration = 0;
  Advertising_Set_Parameters[0].Max_Extended_Advertising_Events = 0;

//enable advertising
  ret = aci_gap_set_advertising_enable(ENABLE, 1,Advertising_Set_Parameters);
  if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");

} /* end GAP_Peripheral_Make_Discoverable() */
```

The GAP central device must configure the scanning parameters, before starting the GAP general discovery procedure.

```
/ \, {}^\star \text{GAP Central: configure scanning parameters for general discovery procedure} \, {}^\star / \, {}
void GAP_Central_Configure_General_Discovery_Procedure(void)
 /* Configure the scanning parameters (active scan):
      Filter_Duplicates: DUPLICATE_FILTER_DISABLED (Duplicate filtering disabled)
      Scanning_Filter_Policy: SCAN_ACCEPT_ALL (accept all scan requests)
      Scanning PHY: LE 1M PHY (1Mbps PHY)
      Scan_Type: ACTIVE_SCAN
      Scan Interval: 0x4000;
     Scan_Window: 0x4000;
ret=aci_gap_set_scan_configuration(DUPLICATE_FILTER_DISABLED,
                  SCAN ACCEPT ALL,
                  LE_1M_PHY,
                  ACTIVE SCAN,
                  0x4000,
                  0x4000);
if(ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
}/* end GAP_Central_Configure_General_Discovery_Procedure() */
 /*GAP Central: start general discovery procedure to discover the GAP peripheral device in dis coverable
void GAP Central General Discovery Procedure (void)
tBleStatus ret;
/* Start the general discovery procedure using the following parameters:
          Procedure Code: 0x1 (general discovery procedure)
             PHYs: LE 1M PHY (1Mbps PHY) */
ret =aci_gap_start_procedure(0x01,LE_1M_PHY,0,0);
if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
```

The responses of the procedure are given through the hci_le_extended_advertising_report_event. The end of the procedure is indicated by aci_gatt_clt_proc_complete_event with Procedure_Code parameter equal to GAP GENERAL DISCOVERY PROC (0x1).

In particular, in this specific context, the following events are raised on the GAP central hci_le_extended_advertising_report_event, as a consequence of the GAP peripheral device in discoverable mode with scan response enabled:

- 1. Advertising Report event with advertising packet type (evt_type =ADV_IND 0x0013)
- 2. Advertising Report event with scan response packet type (evt type = SCAN RSP 0x001B)

PM0274 - Rev 1 page 70/112



Table 54. ADV_IND event type: main fields

Event type	Address type	Address	Advertising data	RSSI
0x0013	0x00 (public address)	0x0280E1003	0x02,0x01,0x06,0x08,0x09,0x42 ,0x6C,0x75,0x65,0x4E,0x52,0x4	0xCE
(ADV_IND)	,	412	7,0x02,0x 0A,0xFE	

The advertising data are shown as follows (refer to Bluetooth® specification version in Section 1.1: References):

Table 55. ADV_IND advertising data: main fields

Flag AD type field	Local name field
0x02: length of the field 0x01: AD type flags	0x08: length of the field
0x06: 0x110 (Bit 2: BR/EDR Not supported; bit 1: general discoverable mode)	0x09: complete local name type
	0x42,0x6C,0x75,0x65,0x4E0x
	52,0x47: BlueNRG

Table 56. SCAN RSP event type

	Event type	Address type	Address	Scan response data	RSSI
(0x001B (SCAN_RS P)	0x01 (random	0x0280E1003412	0x12,0x66,0x9A,0x0C, 0x20,0x00,0x08,0xA7,0 xBA,0xE3,0x11,0x06,0x	0xDA
		address)		85,0xC0,0xF7,0x97,0x8A,0x06,0x11	

The scan response data can be interpreted as follows: (refer to Bluetooth® specifications):

Table 57. Scan response data

Scan response data
0x12: data length
0x11: length of service UUID advertising data; 0x06: 128 bits service UUID type;
0x66,0x9A,0x0C,0x20,0x00,0x08,0xA7,0xBA,0xE3,0x11,0x06,0x85,0xC0,0xF7,0x97,0x8A: 128-bit service UUID

4.4 Bluetooth® Low Energy stack events

Whenever there is a Bluetooth® Low Energy stack event to be processed, the Bluetooth® Low Energy stack library notifies this event to the user application through a handler mechanism to route the GATT/GAP events to the application. The Bluetooth® Low Energy stack events packets structures are defined on file ble_events.h. As a consequence, based on their own application scenario, the user has to identify the required device devices events to be handled with proper events registrations and the related application specific actions to be done.

When a Bluetooth[®] Low Energy application is implemented, the most common and widely used Bluetooth[®] Low Energy stack events are those related to the discovery, connection and terminate procedures, services, characteristics, characteristics descriptors discovery procedures and attribute notification/ indication events on a GATT client, attribute writes/reads events on a GATT server.

Table 58. Bluetooth® Low Energy stack: main event

Event	Description	Where
		GAP
hci_disconnection_complete_event	A connection is terminated	central/
		peripheral

PM0274 - Rev 1 page 71/112



Event	Description	Where
hci_le_enhanced_connection_complete_event	Indicates to both of the devices forming the connection that a new connection has been established. This event is raised when the Bluetooth® LE stack supports the extended advertsing/scanning features	GAP central/ peripheral (Bluetooth® LE stack v4.x)
aci_gatt_clt_notification_event	Generated by the GATT client when a server notifies any attribute on the client	GATT client
aci_gatt_clt_indication_event	Generated by the GATT client when a server indicates any attribute on the client	GATT client
aci_gap_passkey_req_event	Generated by the security manager to the application when a passkey is required for pairing. When this event is received, the application has to respond with the aci_gap_passkey_resp() API	GAP central/ peripheral
aci_gap_pairing_complete_event	Generated when the pairing process has completed successfully or a pairing procedure timeout has occurred or the pairing has failed	GAP central/ peripheral
aci_gatt_clt_read_by_group_type_resp_event	The Read-by-group type response is sent in reply to a received Read-by-group type request and contains the handles and values of the attributes that have been read	GATT client
aci_gatt_clt_read_by_type_resp_event	The Read-by-type response is sent in reply to a received Read-by-type request and contains the handles and values of the attributes that have been read	GATT client
aci_gatt_clt_proc_complete_event	A GATT procedure has been completed	GATT client
hci_le_extended_advertising_report_event	Event given by the GAP layer to the upper layers when a device is discovered during scanning as a consequence of one of the GAP procedures started by the upper layers. This event is raised when the Bluetooth® LE stack supports the extended advertsing/scanning features	GAP central (Bluetooth® LE stack v4.x)

For a detailed description of the Bluetooth $^{\otimes}$ Low Energy event, and related formats refer to the Bluetooth $^{\otimes}$ Low Energy stack APIs and events documentation in References.

4.5 Security (pairing and bonding)

This section describes the main functions to be used in order to establish a pairing between two devices (authenticate the device identity, encrypt the link and distribute the keys to be used on the next reconnections).

To successfully pair with a device, IO capabilities must be correctly configured, depending on the IO capability available on the selected device.

aci_gap_set_io_capability(io_capability) should be used with one of the following io_capability
values:

```
0x00: 'IO_CAP_DISPLAY_ONLY'
0x01: 'IO_CAP_DISPLAY_YES_NO',
0x02: 'KEYBOARD_ONLY'
0x03: 'IO_CAP_NO_INPUT_NO_OUTPUT'
0x04: 'IO_CAP_KEYBOARD_DISPLAY'
```

PassKey Entry example with 2 Bluetooth® Low Energy devices: Device_1, Device_2

PM0274 - Rev 1 page 72/112



The following pseudocode example illustrates only the specific steps to be followed to pair two devices by using the PassKey entry method.

As described in Table 4. LE PHY key parameters, Device_1, Device_2 must set the IO capability in order to select PassKey entry as a security method.

In this particular example, "Display Only" on Device_1 and "Keyboard Only" on Device_2 are selected, as follows:

```
/*Device_1: */
tBleStatus ret;
ret= aci_gap_set_io_capability(IO_CAP_DISPLAY_ONLY);
if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");

/*Device_2: */
tBleStatus ret;
ret= aci_gap_set_io_capability(IO_CAP_KEYBOARD_ONLY);
if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
```

Once the IO capability is defined, the aci_gap_set_security_requirements should be used to set all the security requirements the device needs (MITM mode (authenticated link or not), OOB data present or not, enabling bonding or not).

The following pseudocode example illustrates only the specific steps to be followed to set the authentication requirements for a device with: "MITM protection, no OOB data": this configuration is used to authenticate the link and to use the pairing process with PassKey Method.

Once the security IO capability and security requirements are defined, an application can initiate a pairing procedure as follows:

By using aci_gap_set_security() on a GAP peripheral or central device:

Once the paring procedure is initiated by one of the two devices, Bluetooth® Low Energy device raises the aci_gap_passkey_req_event (with related connection handle) to ask the user application to provide the password to be used to establish the encryption key. Bluetooth® Low Energy application has to provide the correct password by using the aci_gap_passkey_resp(conn_handle,passkey) API.

When the aci_gap_passkey_req_event is raised on Device_1, it should generate a random pin and set it through the aci_gap_passkey_resp() API, as follows:

```
void aci_gap_passkey_req_event(uint16_t Connection_Handle)
{
   tBleStatus ret;
   uint32_t pin;
   /*Generate a random pin with an user specific function */
   pin = generate_random_pin();
   ret= aci_gap_passkey_resp(Connection_Handle,pin);
   if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
}
```

Since the Device_1, I/O capability is set as "Display Only", it should display the generated pin in the device display. Since Device_2, I/O capability is set as "Keyboard Only", the user can provide the pin displayed on Device_1 to the Device_2 though the same <code>aci_gap_passkey_resp()</code> API, by a keyboard.

PM0274 - Rev 1 page 73/112



Note:

- 1. When the pairing procedure is started by calling the described (aci_gap_set_security() API) and the value ret= BLE_STATUS_SUCCESS is returned, on termination of the procedure, an aci_gap_pairing_complete_event is raised to indicate the pairing status on the callback Status parameter:
 - 0x00: pairing success
 - 0x01: pairing timeout
 - 0x02: pairing failed

The reason parameter provides the pairing failed reason code in case of failure (0 if status parameter returns success or timeout).

- 2. When two devices get paired, the link is automatically encrypted during the first connection. If bonding is also enabled (keys are stored for a future time), when the two devices get connected again, the link can be simply encrypted (with no need to perform again the pairing procedure). User applications can simply use the same aci_gap_set_security() API, which do not perform the paring process but just encrypt the link.
- 3. When user select the Pairing Response parameter to 1 (pairing response required for bonded devices only), the pairing is always automatically accepted (no user interaction) except when the request comes from an already bonded device; in this case aci_gap_pairing_event is always notified, and the explicit pairing response is required (a sort of confirmation of rebonding; this mode is a replacement of Bluetooth LE stack v4.x bond lost event requiring explicit allow rebond command from user).

4.6 Service and characteristic discovery

This section describes the main functions allowing a GAP central device to discover the GAP peripheral services and characteristics, once the two devices are connected. The sensor profile demo services and characteristics with related handles are used as reference services and characteristics on the following pseudocode examples. Furthermore, it is assumed that a GAP central device is connected to a GAP peripheral device running an application implementing a custom Bluetooth LE profile with some services and associated characteristics (sensor profile). The GAP central device uses the service and discovery procedures to find the GAP peripheral sensor profile services and characteristics.

Table 59. Bluetooth® Low Energy sensor profile demo services and characteristic handle

Service	Characteristic	Service / characteristic handle	Characteristic value handle	Characteristic client descriptor configuration handle	Characteristic format handle
Acceleration service	NA	0x0012	NA	NA	NA
-	Free Fall characteristic	0x0013	0x0014	0x0015	NA
-	Acceleration characteristic	0x0016	0x0017	0x0018	NA
Environmental service	NA	0x0019	NA	NA	NA
-	Temperature characteristic	0x001A	0xx001B	NA	0x001C
-	Pressure characteristic	0x001D	0xx001E	NA	0x001F

A list of the service discovery APIs with related description is as follows:

PM0274 - Rev 1 page 74/112



Table 60. Service discovery	procedures	APIs
-----------------------------	------------	-------------

Discovery service API	Description
aci_gatt_clt_disc_all_primary_services()	This API starts the GATT client procedure to discover all primary services on the GATT server. It is used when a GATT client connects to a device and it wants to find all the primary services provided on the device to determine what it can do
aci gott alt dies primary sonice by unid/)	This API starts the GATT client procedure to discover a primary service on the GATT server by using its UUID.
aci_gatt_clt_disc_primary_service_by_uuid()	It is used when a GATT client connects to a device and it wants to find a specific service without the need to get any other services
aci_gatt_clt_find_included_services()	This API starts the procedure to find all included services. It is used when a GATT client wants to discover secondary services once the primary services have been discovered

The following pseudocode example illustrates the aci_gatt_clt_disc_all_primary_services() API:

```
/*GAP Central starts a discovery all services procedure: conn_handle is the connection handle returned
on hci_le_extended_advertising_report_event() event callback
*/
if (aci_gatt_clt_disc_all_primary_services(Connection_Handle, CID) !=BLE_STATUS_SUCCESS)
{
PRINTF("Failure.\n");
}
```

The responses of the procedure are given through the $aci_gatt_clt_read_by_group_type_resp_event$. The end of the procedure is indicated by $aci_gatt_clt_proc_complete_event$.

In the context of the sensor profile, the GAP central application should get three read by group type response events (through related aci_gatt_clt_read_by_group_type_resp_event), with the following parameter values.

First read by group type response event callback parameters:

```
Connection_Handle: 0x0801 (connection handle);
Attr_Data_Length: 0x06 (length of each discovered service data: service handle, end group handle, service uuid);
Data_Length: 0x0C (length of Attribute_Data_List in octets
Att_Data_List: 0x0C bytes as follows:
```

Table 61. First read by group type response event callback parameters

Attribute handle	End group handle	Service UUID	Notes
0x0001	0x000A	0x1801	Attribute profile service. Standard 16-bit service UUID
0x000B	0x00011	0x1800	GAP profile service. Standard 16-bit service UUID.

Second read by group type response event callback parameters:

```
Conn_Handle: 0x0801 (connection handle);
Attr_Data_Length: 0x14 (length of each discovered service data:
service handle, end group handle, service uuid);
Data_Length: 0x14 (length of Attribute_Data_List in octets);
Att_Data_List: 0x14 bytes as follows:
```

Table 62. Second read by group type response event callback parameters

Attribute handle	End group handle	Service UUID	Notes
0x0012	0x0018	0x02366E80CF3A11E19AB4	Acceleration service 128-bit service proprietary UUID
0,0012	0,0010	0002A5D5C51B	Acceleration service 120-bit service proprietary 001b

PM0274 - Rev 1 page 75/112



Third read by group type response event callback parameters:

```
Connection_Handle: 0x0801 (connection handle);
Attr_Data_Length: 0x14 (length of each discovered service data:
service handle, end group handle, service uuid);
Data_Length: 0x14 (length of Attribute_Data_List in octets);
Att_Data_List: 0x14 bytes as follows:
```

Table 63. Third read by group type response event callback parameters

Attribute handle	End group handle	Service UUID	Notes
0x0019	0x001F	0x42821A40E47711E282D00	Environmental service 128-bit service proprietary UUID
		002A5D5C51B	OliD

In the context of the sensor profile demo, when the discovery all primary service procedure completes, the aci gatt clt proc complete eventis raised on GAP central application, with the following parameters:

```
CID: 0xx0004;
Conn_Handle: 0x0801 (connection handle;
Error_Code: 0x00
```

4.7 Characteristic discovery procedures and related GATT events

A list of the characteristic discovery APIs with associated description is as follows:

Table 64. Characteristics discovery procedures APIs

Discovery service API	Description
<pre>aci_gatt_ctl_disc_all_char_of_service()</pre>	This API starts the GATT procedure to discover all the characteristics of a given service
aci_gatt_ctl_disc_char_by_uuid()	This API starts the GATT procedure to discover all the characteristics specified by a UUID
aci_gatt_ctl_disc_all_char_desc()	This API starts the procedure to discover all characteristic descriptors on the GATT server

In the context of theBluetooth[®] Low Energy sensor profile, follow a simple pseudocode illustrating how a GAP central application can discover all the characteristics of the acceleration service (refer to Table 3. Bluetooth[®] Low Energy LE RF channel types and frequencies second read by group type response event parameters):

The responses of the procedure are given through the $aci_gatt_clt_disc_all_char_of_service$. The end of the procedure is indicated by $aci_gatt_clt_proc_complete_event$.

In the context of the Bluetooth® Low Energy sensor profile, the GAP central application should get two read type response events (through related $aci_att_clt_read_by_type_resp_event$), with the following callback parameter values.

First read by type response event parameters:

PM0274 - Rev 1 page 76/112



```
conn_handle : 0x0801 (connection handle);
cid: 0x0004
Handle_Value_Pair_Length: 0x15 length of each discovered
characteristic data: characteristic handle, properties,
characteristic value handle, characteristic UUID;
Data_Length: 0x16(length of the event data);
Handle_Value_Pair_Data: 0x15 bytes as follows:
```

Table 65. First read by type response event parameters

Characteristic handle	Characteristic properties	Characteristic value handle	Characteristic UUID	Note
0x0013	0x12 (notify)	0x0014	0xE23E78A0CF4A11E18FFC0002A5D5C51B	Free fall characteristic 128-bit characteristic proprietary UUID

Second read by type response event callback parameters:

```
conn_handle : 0x0801 (connection handle);
cid: 0x0004
Handle_Value_Pair_Length: 0x15 length of each discovered
characteristic data: characteristic handle, properties,
characteristic value handle, characteristic UUID;
Data_Length: 0x16(length of the event data);
Handle_Value_Pair_Data: 0x15 bytes as follows:
```

Table 66. Second read by type response event parameters

Characteristic handle	Characteristic properties	Characteristi c value handle	Characteristic UUID	Note
0x0016	0x14 (notify and read)	0x0017	0x340A1B80CF4B11E1AC360002A5D5C51 B	Acceleration characteristic 128-bit characteristic proprietary UUID

In the context of the sensor profile demo, when the discovery all primary service procedure completes, the aci gatt clt proc complete event is raised on GAP central application, with the following parameters:

```
Connection_Handle: 0x0801 (connection handle); cid: 0x0004 Error_Code: 0x00.
```

Similar steps can be followed in order to discover all the characteristics of the environment service (Table 3. Bluetooth® Low Energy LE RF channel types and frequencies).

4.8 Characteristic notification/indications, write, read

This section describes the main functions to get access to Bluetooth® Low Energy device characteristics.

PM0274 - Rev 1 page 77/112



Table 67.	Characteristic u	pdate, read,	, write APIs
------------------	------------------	--------------	--------------

Discovery service API	Description	Where
aci_gatt_srv_notify	If notifications (or indications) are enabled on the characteristic, this API sends a notification (or indication) to the client.	GATT server
aci_gatt_clt_read	It starts the procedure to read the attribute value.	GATT client
aci_gatt_clt_write	It starts the procedure to write the attribute value (when the procedure is completed, a GATT procedure complete event is generated).	GATT client
aci_gatt_clt_write_without_resp()	It starts the procedure to write a characteristic value without waiting for any response from the server.	GATT client
aci_gatt_clt_confirm_indication()	It confirms an indication. This command has to be sent when the application receives a characteristic indication.	GATT client

In the context of the sensor profile, the GAP central application should use a simple pseudocode in order to configure the free fall and the acceleration characteristic client descriptor configuration for notification:

```
tBleStatus ret;
uint16_t cid = 0x0004;
uint16_t handle_value = 0x0013;
/*Enable the free fall characteristic client descriptor configuration */
ret = aci_gatt_clt_write(conn_handle,
                         handle value, /* handle for free fall client descriptor configuration */
                         0x02,/* attribute value length */
                         0x0001,/* attribute value: 1 for notification */
                         if (ret != BLE STATUS SUCCESS) PRINTF("Failure.\n");
handle value = 0x0016;
/*{	t Enable} the acceleration characteristic client descriptor configuration for notification */
ret= aci_gatt_clt_write (conn_handle,handle_value, /* handle for acceleration client descriptor*/
                         cid.
                         0x02, /*attribute value length */
                         0x0001, /* attribute value:1 for notification */);
if (ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
```

Once the characteristic notification has been enabled from the GAP central, the GAP peripheral can notify a new value for the free fall and acceleration characteristics as follows:

```
tBleStatus ret;
uint8_t val = 0 \times 01;
uint1\overline{6} t cid = 0x0004;
uint16_t charac_handle = 0x0017;
/*GAP peripheral notifies free fall characteristic to GAP central*/
ret= aci_gatt_srv_notify (conn_handle,/*connection handle*/
                           cid: 0x0004
                           charac_handle,/* free fall
                           characteristic handle*/
                           0,/*updated type: notification*/
                           0x01,/* characteristic value length */
                           &val /* characteristic value */)
if(ret != BLE_STATUS_SUCCESS) PRINTF("Failure.\n");
tBleStatus ret;
uint8 t buff[6];
uint16 t charac handle = 0 \times 004;
/*Set the mems acceleration values on three axis x,y,z on buff array */
/*GAP peripheral notifies acceleration characteristic to GAP Central*/
ret= aci_gatt_srv_notify (conn_handle, /* connection handle */
                           cid: 0x0004
                           \verb|charac_handle|, /* acceleration characteristic handle*/|
                           0, /* updated type: notification *,
                           0x06, /* characteristic value length */
                           buff /* characteristic value */)
if(ret != BLE STATUS SUCCESS) PRINTF("Failure.\n");
```

On GAP central, the <code>aci_gatt_clt_notification_event</code> is raised on reception of the characteristic notification (acceleration or free fall) from the GAP peripheral device.

PM0274 - Rev 1 page 78/112



Basic/typical error condition description

On the Bluetooth® Low Energy stack v4.x API framework, the tBleStatus type is defined in order to return the Bluetooth® Low Energy stack error conditions. The error codes are defined within the header file "ble status.h". When a stack API is called, it is recommended to get the API return status and to monitor it in order to track potential error conditions.

BLE STATUS SUCCESS (0x00) is returned when the API is successfully executed. For a list of error conditions associated to each ACI API refer to Bluetooth® Low Energy stack APIs and event documentation, in References.

4.10 Simultaneously central, peripheral scenario


The Bluetooth® LE stack v4.x supports multiple roles simultaneously. This allows the same device to act as central on one or more connections, and to act as a peripheral on one or more connections.

The following pseudocode describes how a Bluetooth[®] LE stack device can be initialized to support central and peripheral roles simultaneously:

```
uint8 t role= GAP PERIPHERAL ROLE | GAP CENTRAL ROLE;
ret= aci gap profile init(role, 0, &service handle,
&dev_name_char_handle, &appearance_char_handle);
```

A simultaneous central and peripheral test scenario can be targeted as follows:

Figure 18. Bluetooth® LE simultaneous central and peripheral scenario

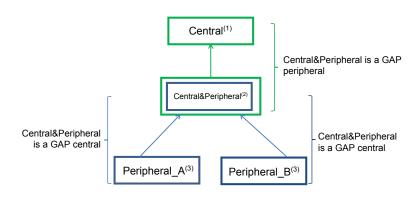

- (1) Bluetooth® LE GAP central
- (2) Bluetooth® LE GAP central & peripheral
 (3) Bluetooth® LEGAP peripheral

One Bluetooth® LE device (called Central&Peripheral) is configured as central and peripheral by setting role as GAP PERIPHERAL ROLE | GAP CENTRAL ROLE on aci gap profile init API. Let's also assume that this device also defines a service with a characteristic.

- Two devices (called Peripheral_A, Peripheral_B) are configured as peripheral by setting role as Step 2. GAP_PERIPHERAL_ROLE on aci_gap_profile_init API. Both Peripheral_A and Peripheral_B define the same service and characteristic as Central&Peripheral device.
- Step 3. One device (called Central) is configured as central by setting role as GAP CENTRAL ROLE on aci gap profile init() API.

PM0274 - Rev 1 page 79/112

DT75156V



- Step 4. Both Peripheral_A and Peripheral_B devices enter discovery mode by using the following APIs:
 - aci_gap_set_advertising_configuration(). This API defines the advertising configuration with the following main parameters:

```
• Discoverable_mode = GAP_MODE_GENERAL DISCOVERABLE
```

```
Advertising_Event_Properties = ADV_PROP_CONNECTABLE |
ADV_PROP_SCANNABLE | ADV_PROP_LEGACY,
```

- Primary_Advertising_Interval_Min = 0x20
- o Primary_Advertising_Interval_Max = 0x100
- aci_gap_set_advertising_enable(). This API allows advertising to be enabled as follows:

```
static Advertising_Set_Parameters_t Advertising_Set_Parameters[1];
Advertising_Set_Parameters[0].Advertising_Handle = 0;
Advertising_Set_Parameters[0].Duration = 0;
Advertising_Set_Parameters[0].Max_Extended_Advertising_Events = 0;
ret = aci_gap_set_advertising_enable(ENABLE, 1,Advertising_Set_Parameters);
```

- aci_gap_set_advertising_data(). This API defines the advertising data with the following parameters:
 - o Advertising Handle = 0;
 - Operation = ADV COMPLETE DATA'
 - o Advertising_Data_Length = sizeof(adv_data);
 - Advertising_Data_Length = adv_data
 - Where adv data is defined as follows:

- Step 5. Central&Peripheral device configures the scanning and connection parameters before performing a discovery procedure, by using the following APIs:
 - aci_gap_set_scan_configuration(). This API defines the scanning parameters:

```
• Filter Duplicates: 0x0;
```

- Scanning Filter Policy: 0x0 (accept all);
- Scanning_PHY: LE_1M_PHY (1 Mbps PHY);
- Scan Type: PASSIVE SCAN;
- Scan Interval: 0x10;Scan Window: 0x10
- aci_gap_set_connection_configuration(). This API defines the connection parameters:

```
Initiating PHY = LE 1M PHY (1 Mbps PHY);
```

- conn_Interval_Min = 0x6c;
- Conn Interval Max= 0x6c;
- conn Latency = 0;
- Supervision_Timeout = 0xc80;
- Minimum CE Length = 0x000c;
- Maximum CE Length = 0x000c

PM0274 - Rev 1 page 80/112



Step 6. Central&Peripheral device performs a discovery procedure in order to discover the peripheral devices Peripheral A and Peripheral B:

The general discovery procedure is started by calling the API aci_gap_start_procedure() with the parameters:

```
- Procedure_Code = 0x01 /* GENERAL_DISCOVERY */
- PHYs=LE 1M PHY /* 1 Mbps PHY */
```

The two devices are discovered through the advertising report events

```
(hci_le_extendede_advertising_report_event.
```

Once the two devices are discovered, Central&Peripheral device starts two connection procedures (as central) to connect, respectively, to Peripheral A and Peripheral B devices:

```
/*
Connect to Peripheral_A: Peripheral_A address type and address have been found during the dis
covery
procedure through the Advertising Report events.
*/
ret = aci_gap_create_connection(LE_1M_PHY, "Peripheral_A address type", "Peripheral_A address
");

/* Connect to Peripheral_B: Peripheral_B address type and address have been found during the
discovery procedure through the Advertising Report events.
*/
ret = aci_gap_create_connection(LE_1M_PHY, "Peripheral_B address type", "Peripheral_B address
");
```

- Step 7. Once connected, Central&Peripheral device enables the characteristics notification, on both of them, using the aci_gatt_clt_write API. Peripheral_A and Peripheral_B devices start the characteristic notification by using the the aci gatt srv notify API.
- Step 8. At this stage, Central&Peripheral device enters discovery mode (acting as peripheral). During initialization sequence, defines the advertising configuration data and advertising data with local name 'Test' = [0x08, 0x74, 0x65, 0x73, 0x74]. Central&Peripheral enters in discovery mode by enabling advertising as follows:

```
aci_gap_set_advertising_enable(ENABLE, 1, Advertising_Set_Parameters);
int16_t cid = 0x0004;
```

Since Central&Peripheral also acts as a central device, it receives the notification event related to the characteristic values notified from, respectively, Peripheral_A and Peripheral_B devices.

Step 9. Once Central&Peripheral device enters discovery mode, it also waits for the connection request coming from the other Bluetooth® LE device (called Central) configured as GAP central. Central device starts discovery procedure to discover the Central&Peripheral device after configuring the scan parameters by using the aci_gap_set_scan_configuration()API).

The general discovery procedure is started as follows:

```
\label{eq:code} \mbox{ret = aci\_gap\_start\_procedure(Procedure\_Code = 0x01, PHYs = 0x01, Duration = 0; Period=0);}
```

Step 10. Once the Central&Peripheral device is discovered, Central device starts a connection procedure to connect to it (after configuring the scan parameters using the:

```
aci_gap_set_scan_configuration() API).
```

```
/* Central device connects to Central&Peripheral device: Central&Peripheral address
type and address have been found during the discovery procedure through the Advertis
ing Report events */
ret= aci_gap_create_connection(Initiating_PHY = 0x01, Peer_Address_Type= "Central&Peripheral address type", Peer_Address=" Central&Peripheral address");
```

Central&Peripheral device is discovered through the advertising report events notified with the hci_le_extended_advertising_report_event() event callback.

Step 11. Once connected, Central device enables the characteristic notification on Central&Peripheral device using the aci_gatt_clt_write API.

PM0274 - Rev 1 page 81/112



Step 12. At this stage, Central&Peripheral device receives the characteristic notifications from both Peripheral_A, Peripheral_B devices, since it is a GAP central and, as GAP peripheral, it is also able to notify these characteristic values to the Central device.

4.11 Bluetooth® Low Energy privacy 1.2

Bluetooth® Low Energy stack v4.x supports the Bluetooth® Low Energy privacy 1.2.

Privacy feature reduces the ability to track a specific Bluetooth[®] Low Energy by modifying the related Bluetooth[®] Low Energy address frequently. The frequently modified address is called the private address and the trusted devices are able to resolve it.

To use this feature, the devices involved in the communication need to be previously paired: the private address is created using the devices IRK exchanged during the previous pairing/bonding procedure.

There are two variants of the privacy feature:

- 1. Host-based privacy private addresses are resolved and generated by the host
- 2. Controller-based privacy private addresses are resolved and generated by the controller without involving the host after the Host provides the controller device identity information.

When controller privacy is supported, device filtering is possible since address resolution is performed in the controller (the peer's device identity address can be resolved prior to checking whether it is in the filter list).

4.11.1 Controller-based privacy and the device filtering scenario

The aci_gap_init() and aci_gap_profile_init() APIs support the following options for the privacy type parameter:

- 0x00: privacy disabled
- 0x01: host privacy enabled
- 0x02: controller privacy enabled.

When a peripheral device wants to resolve a resolvable private address and be able to filter on private addresses for reconnection with bonded and trusted devices, it must perform the following steps:

- 1. Enable privacy controller on aci_gap_init() and aci_gap_profile_init(): use 0x02 as privacy_typeparameter.
- 2. Connect, pair and bond with the candidate trusted device using one of the allowed security methods: the private address is created using the devices IRK.
- 3. Get the bonded device identity address and type using the aci gap get bonded devices () API.
- 4. Add the bonded device identity address and type to the Bluetooth® Low Energy device controller filter list and to the list of address translations used to resolve resolvable private addresses in the controller, by using the $aci_gap_configure_filter_accept_and_resolving_list(0x01|0x02)$; API.
- 5. The device configures the undirected connectable mode by calling the aci_gap_set_advertising_configuration() API with Advertising_Filter_Policy as follows: allow scan request from filter list only, allow connect request from filter list only.
- 6. When a bonded central device performs a connection procedure for reconnection to the peripheral device, the peripheral device is able to resolve and filter the central address and connect with it.

4.11.2 Resolving addresses

After a reconnection with a bonded device, it is not strictly necessary to resolve the address of the peer device to encrypt the link. In fact, Bluetooth® Low Energy stack automatically finds the correct LTK to encrypt the link. However, there are some cases where the peer's address must be resolved. When a resolvable privacy address is received by the device, it can be resolved by the host or by the controller (i.e., link layer).

Host-based privacy

PM0274 - Rev 1 page 82/112



Controller-based privacy

If the resolution of addresses is enabled at link layer, a resolving list is used when a resolvable private address is received. To add a bonded device to the resolving list, the

 $aci_gap_configure_filter_accept_and_resolving_list()$; has to be called. This function searches for the corresponding IRK and adds it to the resolving list.

When privacy is enabled, if a device has been added to the resolving list, its address is automatically resolved by the link layer and reported to the application without the need to explicitly call any other function. After a connection with a device, the hci_le_enhanced_connection_complete_event is returned. This event reports the identity address of the device, if it has been successfully resolved.

When scanning, the hci_le_extended_advertising_report_event contains the identity address of the device in advertising if that device uses a resolvable private address and its address is correctly resolved. In that case, the reported address type is 0x02 or 0x03. If no IRK can be found that can resolve the address, the resolvable private address is reported. If the advertiser uses directed advertisement, the resolved private address is reported through the hci_le_extended_advertising_report_event or through the hci_le_direct_advertising_report_event if it has been unmasked and the scanner filter policy is set to 0x02 or 0x03.

4.12 ATT MTU and exchange MTU APIs, events

ATT_MTU is defined as the maximum size of any packet sent between a client and a server:

default ATT_MTU value: 23 bytes

This determines the current maximum attribute value size when the user performs characteristic operations (notification/write max. size is ATT_MTU-3).

The client and server may exchange the maximum size of a packet that can be received using the exchange MTU request and response messages. Both devices use the minimum of these exchanged values for all further communications:

```
tBleStatus aci gatt clt exchange config(uint16 t Connection Handle);
```

In response to an exchange MTU request, the $aci_att_exchange_mtu_resp_event$ is triggered on both devices with these parameters:

```
Connection_handle;
Server_RX_MTU
```

Server RX MTU specifies the ATT_MTU value agreed between the server and client.

4.13 LE data packet length extension APIs and events

On Bluetooth® LE specification v4.2, packet data unit (PDU) size has been increased from 27 to 251 bytes. This allows data rate to be increased by reducing the overhead (header, MIC) needed on a packet. As a consequence, it is possible to achieve: faster OTA FW upgrade operations, more efficiency due to less overhead.

The Bluetooth® LE stack v4.x supports LE data packet length extension features and related APIs, events:

- HCI LE APIs (API prototypes on ble_api.h)
 - hci le set data length()
 - hci_le_read_suggested_default_data_length()
 - hci_le_write_suggested_default_data_length()
 - hci le read maximum data length()
- HCI LE events (events packets stuctures on ble events.h)
 - hci_le_data_length_change_event

hci_le_set_data_length() API allows the user's application to suggest maximum transmission packet size (TxOctets) and maximum packet (TxTime) transmission time to be used for a given connection:

The supported TxOctets value is in the range [27-251] and the TxTime is provided as follows: (TxOctets +14)*8.

PM0274 - Rev 1 page 83/112



Once hci_le_set_data_length() API is performed after the device connection, if the connected peer device supports LE data packet length extension feature, the hci_le_data_length_change_event is raised on both devices.

This event notifies the host of a change to either the maximum link layer payload length or the maximum time of link layer data channel PDUs in either direction (TX and RX). The values reported (MaxTxOctets, MaxTxTime, MaxRxTime) are the maximum values that are actually used on the connection following the change.

4.14 No packet retry feature

Bluetooth[®] Low Energy stack v4.x provides the capability to disable the standard Bluetooth[®] Low Energy link layer retransmission mechanism for characteristic notifications that are not acknowledged by the link layer of the peer device. This feature is supported only on notifications that are within the maximum allowed link layer packet length.

When a standard Bluetooth[®] Low Energy protocol is used, no packets can be lost, since an unlimited number of retries is applied by the protocol. In case of a weak link with many errors and retries, the time taken to deliver a certain number of packets can increase with the number of errors. If the "no packet retry feature" is applied, the corrupted packets are not retried by the protocol and, therefore, the time to deliver the selected number of packets is the same, but the number of lost packet moves from 0 to something proportional to the error rates. No packet retry feature can be enabled when a notification is sent by setting the parameter.

Flags = 0x01 on aci gatt srv notify() API:

Refer to the $aci_gatt_srv_notify()$ API description for detailed information about API usage and its parameter values.

4.15 Bluetooth® Low Energy radio activities and flash operations

During flash erase or write operations, execution from flash could be stalled and so critical activities like radio interrupt may be delayed. This could lead to a loss of connection and/or incorrect radio behavior. It is worth noticing that Bluetooth[®] Low Energy v4.x implements a more flexible and robust radio activity scheduler which enhances the overall robustness against late interrupt routines.

In order to prevent this possible delay and impact on radio activities, flash erase and write operations could be synchronized with the scheduled $Bluetooth^{\&}$ Low Energy radio activities through the aci hal end of radio activity event().

The aci_hal_end_of_radio_activity_event is raised when the device completes a radio activity and provides information when a new radio activity is performed. Provided information includes the type of radio activity and absolute time in system ticks when a new radio activity is scheduled. Application can use this information to schedule user activity synchronous to selected radio activities.

Let us assume a Bluetooth[®] Low Energy application starts advertising and it also performs write operations on flash. The <code>aci_hal_end_of_radio_activity_event</code> is used to register the <code>Next_Advertising_SysTime</code> () time when next advertising event is programmed:

A FlashRoutine () performs the flash write operation only if there is enough time for this operation before next scheduled radio activity.

4.16 Bluetooth® Low Energy 2 Mbit/s and Coded Phy

The following APIs allow the host to specify its preferred values for the transmitter PHY and receiver PHY to be used for all subsequent connections over the LE transport.

```
BleStatus hci le set default phy(uint8 t ALL PHYS,uint8 t TX PHYS,uint8 t RX PHYS);
```

The following API allows PHY preferences to be set for the connection identified by the Connection Handle.

PM0274 - Rev 1 page 84/112



```
tBleStatus hci_le_set_phy(uint16_t Connection_Handle,
		uint8_t ALL_PHYS,
		uint8_t TX_PHYS,
		uint8_t RX_PHYS,
		uint16_t PHY_options);
```

The following API allows the current PHY to be read:

Refer to APIs html documentation for detailed description about APIs and related parameters.

4.17 Bluetooth® Low Energy extended advertising/scanning

A set of HCI LE standard APIs for extended advertising/scanning is supported by Bluetooth® Low Energystack v4.x.

Refer to related html documentation for APIs and parameters description.

Furthermore, new GAP APIs for configuring advertising modes and scanning procedures allow an extended advertising/scanning feature to be supported. Refer to Section 4.3: GAP API interface for more details and examples.

An example about how to set advertising configuration to enable extended advertising is as follows:

```
/* Advertising Handle used to identify an advertising set */
#define ADVERTISING HANDLE 0
/* Type of advertising event that is being configured:
0x0001: Connectable
0x0002: Scannable
0x0004: Directed
0x0008: High Duty Cycle Directed Connectable
0x0010: Legacy (if this bit is not set, extended advertising is used)
0x0020: Anonymous
0x0040: Include TX Power
#define ADVERTISING_EVENT_PROPERTIES 0x01 /* Connectable adverting event */
^{\prime \star} PHY on which the advertising packets are transmitted ^{\star \prime}
#define ADV PHY LE 1M PHY
/* Advertising data: ADType flags + manufacturing data */
static uint8_t adv_data[] = {
                                  0x02,0x01,0x06, # ADType Flags for discoverability
                                  0x08,# Length of next AD data
                                  0xFF,/* Manufacturing data */
                                  0x53, 0x54,0x4d, 0x69, 0x63, 0x72,0x6f /* STMicro */
/* Set advertising configuration for extended advertising. */
ret = aci gap set advertising configuration(ADVERTISING HANDLE GAP MODE GENERAL DISCOVERABLE, ADVERTISIN
G_EVENT_PROPERTIES,
                                               160, 160,
                                               ADV_CH_ALL,
                                               0, NULL, /* No peer address */
                                               ADV NO FILTER LIST USE,
                                               0./* 0 dBm */
                                               ADV_PHY,/* Primary advertising PHY */
                                               0, /* 0 skips */
                                               ADV PHY, /* Secondary advertising PHY */
                                               0, \overline{/}* SID */
                                               0 /* No scan request notifications */)
/* Set the advertising data */
ret = aci gap set advertising data(ADVERTISING HANDLE, ADV COMPLETE DATA, sizeof(adv data), adv data);
/* Define advertising set (at least one advertising must be set) */
Advertising_Set_Parameters_t Advertising_Set_Parameters[1]; Advertising_Set_Parameters[0].Advertising_Handle = 0;
Advertising_Set_Parameters[0].Duration = 0;
Advertising_Set_Parameters[0].Max_Extended_Advertising_Events = 0;
/* Enable advertising */
ret = aci_gap_set_advertising_enable(ENABLE, 1, Advertising_Set_Parameters);
```

PM0274 - Rev 1 page 85/112



4.17.1 Events for extended adv and scan

The following events are now available:

• hci le extended advertising report event:

This event indicates that one or more Bluetooth[®] devices have responded to an active scan or have broadcast advertisements that were received during a passive scan.

It is generated if the extended advertising and scan is supported. Otherwise, the hci le advertising report event is generated.

• hci le enhanced connection complete event:

This event indicates that a new connection has been created.

It is already available to support controller privacy (if it is enabled). On Bluetooth® Low Energy stack v4.x, this event is also generated if the extended advertising and scan is supported. Otherwise, the hci_le_connection_complete_event is generated.

4.18 Periodic advertising and periodic advertising sync transfer

Bluetooth® specification v5.0 defines periodic advertising that uses deterministic scheduling to allow a device to synchronize its scanning with the advertising of another device.

A new synchronization mode is defined by the generic access profile, which allows the periodic advertising synchronization establishment procedure to be performed and to synchronize with the advertising.

Periodic advertisements use a new link layer PDU called AUX_SYNC_IND. The required information (timing and timing offset) needed to synchronize with the periodic advertising packets is sent in a field, called SyncInfo, included in AUX_ADV_IND PDUs.

The periodic advertising synchronization procedure has a cost in terms of energy and some devices could not be in the conditions to perform this procedure.

A new procedure, called Periodic Advertising Sync Transfer (PAST), has been defined in order to allow a device, which receives periodic advertising packets from device B, to pass the acquired synchronization information to another device C, which is connected to the device A. As consequence, the device C is able to receive the periodic advertising packets directly from device B without the need to scan for AUX_ADV_IND PDUs, which would consume too much energy. It is also possible for a device to send through an ACL connection the synchronization information related to its own periodic advertising train.

4.18.1 Periodic advertising mode

The periodic advertising mode provides a method for a device to send advertising data at periodic and deterministic intervals. This mode applies to the broadcaster role only.

A device in the periodic advertising mode sends periodic advertising events at the interval and using the frequency hopping sequence specified in the periodic advertising synchronization information.

A device entering periodic advertising mode shall also enter periodic advertising synchronization mode for at least long enough to complete one extended advertising event.

HCI commands

```
hci_le_set_periodic_advertising_parameters();
hci_le_set_periodic_advertising_data();
hci_le_set_periodic_advertising_enable().
```

Note:

Refer to Bluetooth® Low Energy APIs html documentation for detailed commands description.

GAP commands

GAP commands for periodic advertising in the broadcaster role are just formal wrappers to the HCI commands.

A mechanism analogous to the one already existing for advertising data is used.

In system-on-chip (SoC) mode the buffer pointer is provided by the application and transferred to the controller by the <code>ll_set_periodic_advertising_data_ptr</code> and freed by the aci hal adv scan resp data update event.

In network mode the buffer shall be managed at DTM level both for the standard and GAP level commands:

```
aci_gap_set_periodic_advertising_configuration();
aci_gap_set_periodic_advertising_enable();
aci_gap_set_periodic_advertising_data();
aci_gap_set_periodic_advertising_data_nwk().
```

PM0274 - Rev 1 page 86/112



Note: Refer to Bluetooth® Low Energy APIs html documentation for detailed commands description.

4.18.2 Periodic advertising synchronizability mode

The periodic advertising synchronizability mode provides a method for a device to send synchronization information about a periodic advertising train using advertisements. This mode applies to the Broadcaster role only.

A device in the periodic advertising synchronizability mode sends synchronization information for a periodic advertising train in non-connectable and non-scannable extended advertising events. The advertising interval used is unrelated to the interval between the periodic advertising events.

A device is not in periodic advertising synchronizability mode unless it is also in periodic advertising mode. It may leave, and possibly re-enter, periodic advertising synchronizability mode while remaining in periodic advertising mode.

Selection between periodic advertising mode and periodic advertising synchronizability mode is achieved by explicitly enabling/disabling (regular) advertising and periodic advertising. While regular advertising and periodic advertising are both enabled, the device is in synchronizability mode. If regular advertising is disabled, device exits periodic advertising synchronizability mode.

4.18.3 Periodic advertising synchronization establishment procedure

The periodic advertising synchronization establishment procedure provides a method for a device to receive periodic advertising synchronization information and to synchronize to a periodic advertising train. This procedure applies to the observer, peripheral and central roles

A device performing the periodic advertising synchronization establishment procedure scans for non-connectable and non-scannable advertising events containing synchronization information about a periodic advertising train or accepts periodic advertising synchronization information over an existing connection by taking part in the Link Layer Periodic Advertising Sync Transfer Procedure defined in [Vol 6] part B, section 5.1.13.

When a device receives synchronization information for a periodic advertising train, it may listen for periodic advertising events at the intervals and using the frequency hopping sequence specified in the periodic advertising synchronization information.

HCI commands

```
hci_le_periodic_advertising_create_sync();
hci_le_periodic_advertising_terminate_sync();
hci_le_periodic_advertising_terminate_sync();
hci_le_set_periodic_advertising_receive_enable();
hci_le_add_device_to_periodic_advertiser_list();
hci_le_remove_device_from_periodic_advertiser_list();
hci_le_clear_periodic_advertiser_list();
hci_le_read_periodic_advertiser_list_size();
hci_le_set_periodic_advertising_sync_transfer_parameters();
hci_le_set_default_periodic_advertising_sync_transfer_parameters()
```

Note: Refer to

Refer to Bluetooth® LE APIs html documentation for detailed commands description.

GAP commands

GAP commands for synchronizing are just formal wrappers to the HCI commands.

```
aci_gap_periodic_advertising_create_sync();
aci_gap_periodic_advertising_create_sync_cancel();
aci_gap_periodic_advertising_terminate_sync();
aci_gap_set_periodic_advertising_receive_enable();
aci_gap_add_device_to_periodic_advertiser_list();
aci_gap_remove_device_from_periodic_advertiser_list();
aci_gap_clear_periodic_advertiser_list();
aci_gap_read_periodic_advertiser_list_size();
aci_gap_set_periodic_advertising_sync_transfer_parameters();
aci_gap_set_default_periodic_advertising_sync_transfer_parameters().
```

Note:

Refer to Bluetooth® Low Energy APIs html documentation for detailed commands description.

PM0274 - Rev 1 page 87/112



Events

The events involved on this mode are the following:

```
hci le periodic advertising sync established event()
hci_le_periodic_advertising_report_event()
hci le periodic advertising sync lost event()
hci le periodic advertising sync transfer received event().
```

4.18.4 Periodic advertising synchronization transfer procedure

The periodic advertising synchronization transfer procedure provides a method for a device to send synchronization information about a periodic advertising train over an existing connection. This procedure applies the Peripheral and Central roles only.

A device performing the periodic advertising synchronization transfer procedure shall initiate the link layer periodic advertising sync transfer procedure defined in [Vol 6] part B, section 5.1.13.

HCI commands

```
hci le periodic advertising sync transfer();
hci le periodic advertising set info transfer().
```

Note:

Note:

Refer to Bluetooth® Low Energy APIs html documentation for detailed commands description.

Refer to Bluetooth® Low Energy APIs html documentation for detailed commands description.

GAP commands

```
aci_gap_periodic_advertising_sync_transfer();
aci gap periodic advertising set info transfer().
```

4.18.5 Periodic Advertising with Responses (PAwR)

The following commands have been added in order to support the periodic advertising with responses feature:

Table 68. Periodic advertising with responses (PAwR) commands

Command name	Short description
hci_le_extended_create_connection_v2	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_set_extended_advertising_paramete rs_v2	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_set_periodic_sync_subevent	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_extended_create_connection_v2	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_set_periodic_advertising_paramete rs_v2	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_set_periodic_advertising_subevent _data	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
hci_le_set_periodic_advertising_response _data	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.8
<pre>ll_set_periodic_advertising_subevent_dat a_ptr</pre>	Defined for ADV data management
<pre>ll_set_periodic_advertising_response_dat a_ptr</pre>	Defined for ADV data management.
<pre>aci_gap_create_periodic_advertising_conn ection</pre>	Vendor Specific, currently stubbed to void.

The following new events have been added in order to support the periodic advertising with responses feature:

PM0274 - Rev 1 page 88/112



Table 69. Periodic advertising with responses (PAwR) events

Event name	Short description
hci_le_periodic_advertising_subevent_dat a_request_event	
hci_le_periodic_advertising_response_report_event	
hci_le_periodic_advertising_sync_establi shed_v2_event	
hci_le_periodic_advertising_report_v2_ev ent	Soo BT Spooy 5.4 Vol. 4 Part E. HCL Soc. 7.7
hci_le_periodic_advertising_sync_transfer_received_v2_event	See BT Spec v.5.4, Vol. 4, Part E, HCl, Sec. 7.7
hci_le_periodic_advertising_subevent_dat a_request_event	
hci_le_periodic_advertising_response_report_event	
hci_le_enhanced_connection_complete_v2_e vent	
aci_hal_pawr_data_free_event	New event used to notify the application when the Stack has released the previously provided PAwR subevent data pointer or response data pointer.

Note: Refer to Bluetooth® Low Energy APIs and events html documentation for detailed commands and events description.

4.19 LE power control and path loss monitoring

The following commands handle the LE power control and path loss monitoring features provided by the $Bluetooth^{@}$ Low Energy stack v4.x

```
/* Read the current and maximum transmit power levels of the local Controller on a connection */
tBleStatus hci_le_enhanced_read_transmit_power_level(uint16_t Connection_Handle,
                                                     uint8_tPHY,
                                                      int8 t*Current Transmit Power Level,
                                                      int8 t *Max Transmit Power Level);
/* Read the transmit power level used by the remote Controller on a connection*/
tBleStatus hci_le_read_remote_transmit_power_level(uint16_t Connection_Handle,
                                                   uint8 t PHY);
/st Set the path loss threshold reporting parameters for a connection st/
tBleStatus hci_le_set_path_loss_reporting_parameters(uint16_t Connection_Handle,
                                                     uint8_t High_Threshold,
                                                      uint8_t High_Hysteresis,
                                                      uint8_t Low_Threshold,
                                                      uint8_t Low_Hysteresis,
                                                     uint16 t Min Time Spent);
/* Enable or disable path loss reporting for a connection ^{\star}/
tBleStatus hci_le_set_path_loss_reporting_enable(uint16_t Connection_Handle,
                                                 uint8 t Enable);
/* Enable or disable the reporting of transmit power level changes in the
local and remote Controllers for a connection */
tBleStatus hci_le_set_transmit_power_reporting_enable(uint16_t Connection_Handle,
                                                      uint8_t Local_Enable,
                                                      uint8_t Remote_Enable);
/st Enable or disable the LE Power Control feature and procedure for a given PHY on the later establishe
d connections */
tBleStatus aci_hal_set_le_power_control(uint8_t Enable,
                                        int8_t RSSI_Target,
                                        uint8 t RSSI Hysteresis,
                                        int8_t Initial_TX_Power,
                                        uint8_t RSSI_Filtering_Coefficient);
```

PM0274 - Rev 1 page 89/112



The following events are available:

- hci le path loss threshold event: report a path loss threshold crossing on a connection.
- hci le transmit power reporting event: report the transmit power level on a connection.

Note:

Refer to Bluetooth® Low Energy APIs html documentation for a detailed description of commands and events.

4.20 Direction finding commands and events

The STM32WB09xE, STM32WB05xZ devices support both methods used for the direction finding feature (angle of arrival and angle of departure) by managing:

- the constant tone extension (CTE) inside a packet
- the antenna switching mechanism for both AoA and AoD.

STM32WB09xE, STM32WB05xZ can both append a new field called constant tone extension to the link layer packets: this field provides a constant frequency signal against which IQ sampling can be performed, in line with Bluetooth® core specification v5.1.

To support some features of the direction finding, the controller needs to support antenna switching. STM32WB09xE, STM32WB05xZ are able to control an external antenna switch by using a control signal called ANTENNA_ID. This signal is a 7-bit antenna identifier (ANTENNA_ID[6:0]) indicating the antenna number, to be used during a certain time slot, and it is provided in real time by the internal sequencer. With a 7-bit identifier, the maximum number of antennas that can be controlled is 128.

In a AoD transmitter or in a AoA receiver, the radio needs to switch antenna during the CTE field of the packet. For this purpose, the ANTENNA_ID signal can be enabled on some I/Os, by programming them in the associated alternate function. A specific command aci_hal_set_antenna_switch_parameters() is provided inside the software development kit for more convenience to perform the proper ANTENNA_ID signal configuration.

This signal needs to be provided to an external antenna switching circuit, where ANTENNA_ID[0] is the least significant bit and ANTENNA_ID[6] the most significant bit of the antenna identifier to be used.

Note:

The I/Os to be used are the ones with the ANTENNA ID alternate function (that is from PB0 to PB6).

Bluetooth® core specification v5.1 define new HCI commands and events to control constant tone extension and IQ sampling. In particular, the antenna switching pattern is controlled by the Antenna_IDs parameter of the following HCI commands:

- hci le set connectionless cte transmit parameters()
- hci le set connectionless iq sampling enable()
- hci_le_set_connection_cte_transmit_parameters()
- hci le set connection cte receive parameters()

Each antenna ID specified in the pattern corresponds to the ANTENNA_ID number generated by the STM32WB0 devices internal sequencer, which is sent out on PB[6:0].

The Table 70. Direction finding commands and events provides the list of HCI commands and events, which handles the packet transmission and reception with the proper CTE information. These commands allow the configuration of several CTE aspects as follows:

- · CTE length
- CTE type
- Length of the antenna switching pattern
- Antenna IDs
- Slot duration.

Table 70. Direction finding commands and events

Output parameter	Command/event and parameters
tBleStatus	<pre>aci_hal_set_antenna_switch_parameters(uint8_t Antenna_IDs, uint8_t Antenna_ID_Shift, uint8_t Default_Antenna_ID, uint8_t RF_Activity_Enable)</pre>
tBleStatus	hci_le_set_connectionless_cte_transmit_parameters (uint8_t Advertising_Handle, uint8_t CTE_Length, uint8_t CTE_Type, uint8_t CTE_Count, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[])

PM0274 - Rev 1 page 90/112



Output parameter	Command/event and parameters	
tBleStatus	hci_le_set_connectionless_cte_transmit_enable(uint8_t Advertising_Handle, uint8_t CTE_Enable)	
tBleStatus	hci_le_set_connectionless_iq_sampling_enable (uint16_t Sync_Handle, uint8_t Sampling_Enable, uint8_t Slot_Durations, uint8_t Max_Sampled_CTEs, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[])	
tBleStatus	hci_le_set_connection_cte_receive_parameters (uint16_t Connection_Handle, uint8_t Sampling_Enable, uint8_t Slot_Durations, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[])	
tBleStatus	<pre>hci_le_set_connection_cte_transmit_parameters (uint16_t Connection_Handle, uint8_t CTE_Type, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[])</pre>	
tBleStatus	hci_le_connection_cte_request_enable (uint16_t Connection_Handle, uint8_t Enable, uint16_t CTE_Request_Interval, uint8_t Requested_CTE_Length, uint8_t Requested_CTE_Type)	
tBleStatus	<pre>hci_le_connection_cte_response_enable (uint16_t Connection_Handle, uint8_t Enable)</pre>	
tBleStatus	hci_le_read_antenna_information (uint8_t *Supported_Switching_Sampling_Rates, uint8_t *Num_Antenna, uint8_t *Max_Switching_Pattern_Length, uint8_t *Max_CTE_Length)	
tBleStatus	hci_le_transmitter_test_v3 (uint8_t TX_Channel, uint8_t Test_Data_Length, uint8_t Packet_Payload, uint8_t PHY, uint8_t CTE_Length, uint8_t CTE_Type, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[])	
tBleStatus	hci_le_transmitter_test_v4 (uint8_t TX_Channel, uint8_t Test_Data_Length, uint8_t Packet_Payload, uint8_t PHY, uint8_t CTE_Length, uint8_t CTE_Type, uint8_t Switching_Pattern_Length, uint8_t Antenna_IDs[], int8_t Transmit_Power_Level)	
void	hci_le_connectionless_iq_report_event (uint16_t Sync_Handle, uint8_t Channel_Index, uint16_t RSSI, uint8_t RSSI_Antenna_ID, uint8_t CTE_Type, uint8_t Slot_Durations, uint8_t Packet_Status, uint16_t Periodic_Event_Counter, uint8_t Sample_Count, Samples_t Samples[])	
void	hci_le_connection_iq_report_event (uint16_t Connection_Handle, uint8_t RX_PHY, uint8_t Data_Channel_Index, uint16_t RSSI, uint8_t RSSI_Antenna_ID, uint8_t CTE_Type, uint8_t Slot_Durations, uint8_t Packet_Status, uint16_t Connection_Event_Counter, uint8_t Sample_Count, Samples_t Samples[])	
void	<pre>hci_le_cte_request_failed_event (uint8_t Status, uint16_t Connection_Handle)</pre>	

Refer to the Bluetooth® Low Energy v4 commands and event documentation for a detailed description. Direction finding features are supported only on the STM32WB09xE, STM32WB05xZdevices.

Bluetooth® specifications allow the direction-finding enabled packets to be used in both connectionless and connection-oriented communication, as described on next Section 4.20.1: Connectionless scenario and Section 4.20.2: Connection-oriented scenario.

4.20.1 Connectionless scenario

In a connectionless scenario, the CTE field is sent inside advertising packets in a periodic advertising train. To send such type of advertising packets, the host needs to follow these steps:

1. Configure extended advertising with aci_gap_set_advertising_configuration().

PM0274 - Rev 1 page 91/112



- 2. Set advertising data, if needed, with aci_gap_set_advertising_data(). Data can be changed also while advertising is enabled.
- 3. Configure periodic advertising on the same advertising handle with aci_gap_set_periodic_advertising configuration().
- 4. Set periodic advertising data, if needed, with aci_gap_set_periodic_advertising_data(). Data can be changed also while periodic advertising is enabled.
- 5. Configure CTE transmit parameters with hci_le_set_connectionless_cte_transmit_parameters(). The type of CTE, the number of packets with CTE and, in case of AoD, also the switching pattern must be specified.
- $\textbf{6. Enable the transmission of the CTE with } \verb|hci_le_set_connectionless_cte_transmit_enable (). \\$
- 7. Enable periodic advertising with aci_gap_set_periodic_advertising_enable(). The periodic advertising actually starts after enabling extended advertising.
- 8. Enable extended advertising with aci_gap_set_advertising_enable().

On the scanner side, to receive the periodic advertising and extract the IQ samples from the CTE field, the host must execute the following steps:

- Configure extended scanning with aci_gap_set_scan_configuration().
- 2. Start an extended scanning procedure with aci gap start procedure().
- Synchronize with the periodic advertising train by using aci_gap_periodic_advertising_create_sync().
- 4. Stop scanning procedure, if no longer needed, with aci_gap_terminate_proc().
- 5. Enable IQ sampling with hci_le_set_connectionless_iq_sampling_enable(). The switching pattern needs to be specified for AoA CTE.
- 6. Process the IQ samples received with hci le connectionless iq report event().

Note:

- To receive the Connectionless IQ Report events on the scanner, they must be enabled also through the hci le set event mask() command.
- Some other events, which may be needed in some of the steps on the scanner, are not enabled by default. It is suggested to enable at least:
 - LE Extended Advertising Report event
 - LE Periodic Advertising Sync Established event
 - LE Periodic Advertising Report event
 - LE Periodic Advertising Sync Lost event
- The IQ samples algorithms are not defined by Bluetooth Core specifications
- Reception of IQ reports can be disabled with hci_le_set_connectionless_iq_sampling_enable() when no longer needed.

4.20.2 Connection-oriented scenario

In a connection-oriented scenario, both peripheral and central can send a request (the LL_CTE_REQ PDU) to the peer device to send a packet (the LL_CTE_RSP PDU) containing a CTE field.

Assuming there is a connection between the two devices, these are the steps that the host needs to follow.

On the device that wants to receive the packets with CTE field:

- 1. Configure CTE receive parameters with hci_le_set_connection_cte_receive_parameters(). Slot duration for IQ sampling and the antenna switching pattern need to be specified only if the device wants to request an AoA CTE type.
- 2. Enable the automatic sending of requests with hci_le_connection_cte_request_enable(). With this function, the CTE type (AoA/AoD) must be specified.
- 3. Process the IQ samples received with the hci_le_connection_iq_report_event

On the device that wants to support the sending of a CTE field during the connection:

- 1. Configure CTE transmit parameters with hci_le_set_connection_cte_transmit_parameters(). The type of CTE must be specified, together with the antenna pattern to be used in case of AoD.
- 2. Enable the CTE response with hci_le_connection_cte_response_enable. From this moment, the controller automatically responds to CTE requests from the peer.

PM0274 - Rev 1 page 92/112



Note:

- To receive the connection IQ report events, they must be enabled through the hci_le_set_event_mask() command.
- Bluetooth core specifications do not define tThe IQ sample algorithms.
- Reception of IQ reports can be disabled with hci_le_connection_cte_request_enable() when no longer needed.

4.21 Enhanced ATT commands and events

The GATT commands provide a specific CID parameter which allows the handling of the EATT channels. Refer to the APIs and events html documentation for a detailed description of the APIs and the related parameters.

4.22 L2CAP enhanced credit flow APIs and events

The following tables detail the new L2CAP credit flow commands and events added by Bluetooth® Low Energy stack v4.0.

Table 71. L2CAP enhanced credit flow commands

Command name	Short description
aci_12cap_cos_connection_req()	Create and configure an L2CAP channel between two devices using either LE credit based flow control mode or enhanced credit based flow Control Mode
aci_12cap_cos_connection_resp()	Command to be sent to respond to a request to open an L2CAP channel using LE Credit based Flow Control or Enhanced Credit Based Flow Control Mode. The request is notified through aci_I2cap_cos_connection_req_event.
<pre>aci_12cap_cos_disconnect_req()</pre>	Command to terminate an L2CAP channel.
aci_12cap_cos_sdu_data_transmit()	Command to be called to send an SDU using an L2CAP channel in LE Credit Based Flow Control mode or Enhanced Credit Based Flow Control Mode.
aci_l2cap_cos_reconfigure_req()	Command to send an L2CAP_CREDIT_BASED_RECONFIGURE_REQ packet in order to request to change its receive MTU or MPS values compared to when the channels were created or last reconfigured.
aci_12cap_cos_reconfigure_resp()	Command to send an L2CAP_CREDIT_BASED_RECONFIGURE_RSP packet in order to respond to an incoming L2CAP_CREDIT_BASED_RECONFIGURE_REQ. It has to be used upon the reception of an ACI_L2CAP_ECFC_RECONFIGURATION_EVENT.
aci_12cap_cos_sdu_data_extract()	Command to be used to extract an SDU from receiving buffer.

Table 72. L2CAP enhanced credit flow events

Event name	Short description
aci_12cap_cos_disconnection_complete_event	Event that indicates an L2CAP disconnection
aci_12cap_cos_flow_control_credit_event	Event that indicates a L2CAP flow control credit
aci_12cap_cos_sdu_data_tx_event	Event that indicates a L2CAP data transmission
aci_12cap_cos_reconfiguration_event	Event that indicates an incoming L2CAP Reconfiguration request related to a set of channels handled through the Enhanced Credit Based Flow Control model
aci_12cap_cos_sdu_data_rx_event	Event that indicates a L2CAP data reception

PM0274 - Rev 1 page 93/112



Event name	Short description
aci_12cap_cos_connection_req_event	Event that indicates an incoming L2CAP Connection request related to either LE Credit Based Flow Control Mode or Enhanced Credit Based Flow Control Mode.
aci_12cap_cos_connection_resp_event	Event that indicates a L2CAP connection response

4.23 Bluetooth® Low Energy isochronous channels APIs and events

The following tables detail the new HCI commands and events related to ISOAL, BIG/BIS and CIG/CIS commands added byBluetooth® Low Energy stack v4.x for supporting the isochronous channels feature.

Table 73. ISOAL HCI commands

Command name	Short description
hci_le_iso_read_test_counters	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.113
hci_le_iso_receive_test	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.112
hci_le_iso_test_end	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.114
hci_le_iso_transmit_test	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.111
hci_le_read_iso_link_quality	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.116
hci_le_read_iso_tx_sync	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.96
hci_le_remove_iso_data_path	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.110
hci_le_setup_iso_data_path	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.109
hci_tx_iso_data	Function to send isochronous data to the Controller

Table 74. BIG/BIS HCI commands

Command name	Short description
hci_le_big_create_sync	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.106
hci_le_big_terminate_sync	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.107
hci_le_create_big	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.103
hci_le_create_big_test	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.104
hci_le_terminate_big	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.105

Table 75. CIG/CIS HCI commands

Command name	Short description
hci_le_accept_cis_request	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.101

PM0274 - Rev 1 page 94/112



Command name	Short description
hci_le_create_cis	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.99
hci_le_reject_cis_request	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.102
hci_le_remove_cig	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.100
hci_le_set_cig_parameters	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.97
hci_le_set_cig_parameters_test	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.98

Table 76. BIG/BIS HCI events

Command name	Short description
hci_le_create_big_complete_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.27.
hci_le_big_sync_established_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.29.
hci_le_big_sync_lost_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.30.
hci_le_biginfo_advertising_report_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.31.
hci_le_terminate_big_complete_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.28.
hci_le_cis_established_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.25.
hci_le_cis_request_event	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.26.

4.24 New Bluetooth® Low Energy stack v4.x HCl APIs and events

Table 77. New HCI commands related to some link layer controller features

Command name	Short description
hci_le_read_buffer_size_v2	Returns the size of the HCI buffers used by the LE Controller to buffer data that is to be transmitted. [v2] command adds support for ISO data packets.
	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.2.
hci_le_set_data_related_address_changes	Used to specify circumstances when the Controller shall refresh any Resolvable Private Address used by the advertising set identified by the Advertising_Handle parameter, whether or not the address timeout period has been reached. This command may be used while advertising is enabled. Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.122.
hci_le_set_host_feature	The HCI_LE_Set_Host_Feature command is used to set or clear a bit controlled by the Host in the Link Layer Feature Set stored in the Controller.

PM0274 - Rev 1 page 95/112



Command name	Short description
	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.115.
hci_read_afh_channel_assessment_mode	Command to read the value for the AFH_Channel_Assessment_Mode parameter, that controls whether the Controller's channel assessment scheme is enabled or disabled.
	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.3.53.
hci_write_afh_channel_assessment_mode	Command to read the value for the AFH_Channel_Assessment_Mode parameter, that controls whether the Controller's channel assessment scheme is enabled or disabled.
	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.3.54.
hci le set default subrate	Command used by the Host to set the initial values for the acceptable parameters for subrating requests.
Inci_ie_set_derauit_subrate	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.123.
hci_le_subrate_request	Command used by a Central or a Peripheral to request a change to the subrating factor and/or other parameters applied to an existing connection using the Connection Subrate Update procedure.
	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.124.
hai mand connection account timeout	Command to read the value for the Connection_Accept_Timeout configuration.
hci_read_connection_accept_timeout	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.3.13.
hci write connection accept timeout	Command to write the value for the Connection_Accept_Timeout configuration.
inci_wiite_commection_accept_timeout	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.3.14.
hci le request peer sca	The HCI_LE_Request_Peer_SCA command requests the Sleep Clock Accuracy of the peer device.
mor_ro_roquest_sea	Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.8.108.

Table 78. New HCI events related to some link layer controller features

Event name	Short description
hci_le_request_peer_sca_complete_event	Event that indicates the completion of HCI_LE_Request_Peer_SCA command. Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.31.
hci_le_subrate_change_event	Event that indicates completion of the Connection Subrate Update procedure and that some parameters of the connection have changed. Refer to the Bluetooth® Low Energy specification v.5.3, Vol. 4, Part E, HCI, Sec. 7.7.65.35.

PM0274 - Rev 1 page 96/112



5 Bluetooth[®] LE stack v4.x scheduler

This section aims to provide the user the fundamentals of the Bluetooth® LE stack v4.x time scheduler.

The goal is to help the user to set up connections, scanning, and advertising procedures in multilink scenarios so that the measured performance (for example, throughput, latency, robustness against connection drops) is as much coherent as possible with the expected one.

Advantages/disadvantages with respect to the `Bluetooth® LE stack v2.x time scheduler are also be described. All link layer (LL) **radio tasks** (that is, connection, advertising, or scanning) can be represented in a time base through sequences of slots (that is time windows where associated events occur).

Each slot occurrence of a radio task can be represented through:

- an **anchor**, that is the exact time the slot is expected to start;
- a length, that is the expected time duration of the slot.

Radio tasks can be classified as:

- periodic, where slots are repeated at fixed time intervals (for example, connect events)
- asynchronous, where:
 - Slots are NOT repeated (usually referred as one-shot slots)
 - Slots are repeated but NOT at fixed time intervals (for example, advertising events)

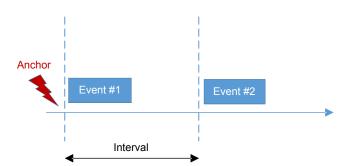


Figure 19. Example of periodic radio task

Since multiple radio tasks can be concurrently active on a device, the associated slots can overlap in time. In the following, a slot overlap is referred as a **collision**.

In case of collision, only one of the colliding slots is granted access to the air and is referred as a **scheduled slot**. Colliding slots that do not have access to the air is referred as **skipped slots**.

The **time scheduler** is an SW module that provides the following functionalities:

- At the time, a new radio task is started by the host, it computes the very first anchor of the associated slot sequence (that is, the exact time the first Rx/Tx event associated, with the radio task, is expected to "grab the air")
- At the time a slot ends, according to the rules specified by the Bluetooth® standard (that is, in case of a central connection event, at the time, the CE_Length is exceeded):
 - 1. it computes the next anchor (if any) of the associated radio task.
 - 2. In case of multiple radio tasks currently active on the device, it computes, per each radio task, the next anchor (if any) that is, in the future, with respect to the current time.
 - 3. In case of multiple radio tasks currently active on the device, it selects which radio task has to be served next, based on a chronological order.
 - 4. In case the first slot (in chronological order) collides with other slots, it schedules one of the colliding slots based on a priority mechanism.

Number of radio tasks

When a Bluetooth[®] activity is started, for example a new advertising set or a connection, usually a single radio task is needed. However, there are some Bluetooth[®] activities, which need more than one radio task.

PM0274 - Rev 1 page 97/112

7314V1



Bluetooth [®] LE stack activity	Number of radio tasks
Advertising set, legacy advertising	1
Advertising set, extended advertising	2
Scan, extended ad and scan disabled	1
Scan, extended adv and scan enabled	1 + NumOfAuxScanSlots
Connection	1
Periodic advertising	1
Periodic advertising synchronization	1

Table 79. Bluetooth® LE stack activity and radio tasks

In particular, the number of radio tasks for each advertising set is two if extended advertising PDUs are used. Moreover, if an extended scan is enabled through the modular configuration (CONTROLLER_EXT_ADV_SCAN_ENABLED), the scan requires a number of slots equal to 1 + NumOfAuxScanSlots, which is a parameter of the initialization structure passed to BLE_STACK_Init() function. The NumOfAuxScanSlots is equal to the number of radio tasks that can be allocated simultaneously to scan on the secondary advertising physical channel. Once a packet on the primary advertising physical channel is received, which points to a packet on the secondary advertising physical channel, a radio task is allocated and, if

the secondary advertising physical channel. Once a packet on the primary advertising physical channel is received, which points to a packet on the secondary advertising physical channel, a radio task is allocated and, served, it triggers a scan on the secondary advertising physical channel. In a presence of several advertisers using extended advertising events, the higher the number of auxiliary scan slots is, the higher the chance to receive extended advertising events.

The total number of radio tasks that can be allocated is specified through NumOfLinks field of the initialization structure BLE_STACK_InitTypeDef. In addition to this constraint, the number of simultaneous periodic advertising synchronization slots is limited by the NumOfSyncSlots field.

5.1 Limitations of the Bluetooth® LE stack v2.x time scheduler

The Bluetooth® LE stack v2.x time scheduler was built around the concept of the anchor period.


The *anchor period* is the minimum time interval used to represent all the periodic "central" radio tasks running on a device. Note that we refer to "central" radio tasks to indicate Bluetooth[®] 4.2 standard advertising, scanning, and central connection events (peripheral connection events are excluded).

According to this definition, the time base is represented as a repetition of anchor periods, where all central radio tasks must have an interval that is an integer multiple of the anchor period.

The anchor period is started at the time the first "central" radio task is started by the host and it is equal to the radio task interval. The anchor period can be decreased (that is, if a new central radio task is started with an interval that is an integer submultiple of the current anchor period), but it cannot be increased after being decreased.

In the following picture, there is a representation of two central radio task allocations in an anchor period. Here radio task #0 has the same interval as the anchor period while radio task #1 has an interval that is three times the anchor period.

Figure 20. Example of two radio tasks allocation in an anchor period

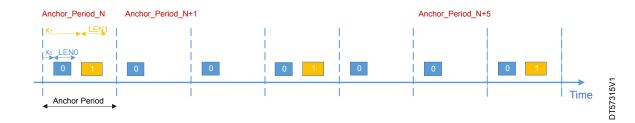

Here is a list of the main advantages of the Bluetooth® Low Energy stack v2.x time scheduler:

PM0274 - Rev 1 page 98/112



- The scheduler forces the application to choose suitable parameters for new slots in order to avoid collisions
 with existing slots. If new *central* slots cannot be allocated because they would collide with other slots, the
 scheduler just returns an error. In this condition, where no collisions can occur between central slots, the
 maximum throughput is guaranteed.
- 2. Collisions can occur only with peripheral connect slots. Here the priority mechanism used by the time scheduler is a simple round-robin approach

Here is a list of the main limitations of the Bluetooth® Low Energy stack v2.x time scheduler:

- 1. Since the sum of the allocated central radio task lengths must fit within the anchor period, there is a limit to the number of concurrent central radio tasks.
- 2. Since new central radio tasks must have an interval that is a multiple integer of the existing anchor period, the user has a very reduced flexibility in choosing the periodicity of a new link layer slot (that is, connect, advertising, and scan intervals).
- 3. Once reduced (due to the start of a new radio task), the anchor period cannot be increased anymore, thus resulting in an additional limitation to the number of concurrent radio tasks.
- 4. Asynchronous radio tasks are not compatible with the anchor period approach because they are not periodic. Almost all the link layer features introduced by the Bluetooth 5.0 standard (for example, advertising extensions) are characterized by asynchronous events that are not compatible with the anchor period approach of the Bluetooth® Low Energy stack v2.x time scheduler; this is the main reason that led to the implementation of a new time scheduler.

The probability of having multi slots collisions is also proportional to the number of concurrent asynchronous radio tasks, which makes the simple round-robin mechanism of the Bluetooth[®] Low Energy stack v2.x time scheduler no more appropriate to guarantee adequate performance.

5.2 The Bluetooth® Low Energy v4.x stack time scheduler

To support to all new link layer features introduced by the Bluetooth[®] 5.0 standard as well as to allow the user to implement application scenarios with different QoS requirements, a new Bluetooth[®] Low Energy stack v4.x time scheduler removes the main constraints of the previous implementation.

In the Bluetooth® Low Energy stack v4.x time scheduler, all radio tasks are treated as they were asynchronous, that is they are excluded from the anchor period representation.

One significant advantage with respect to the Bluetooth® Low Energy stack v2.x time scheduler is that an LL activity, started by the host, is never rejected because of its periodicity (that is, connection, advertising, or scan interval) or event duration (that is, connection CE_Length, scan window, etc.).

The main drawback of this new approach is that central task slots (that is, Bluetooth® connection, advertising, and scanning events) can now potentially collide each other. For this reason, the users could occasionally experience reduced performances (for example, reduced throughput). Performance can be increased if certain guidelines are followed (refer to Section 5.4: User guidelines).

5.3 The prescheduler

The prescheduler is a software module of the Bluetooth[®] Low Energy stack v4.x time scheduler responsible for the selection of the "best anchor" in a newly started central connection.

The best anchor is the start time of the first connection slot that minimizes the collisions with existing slots, for an observation period that is 10 times the connection interval of the newly started connection.

PM0274 - Rev 1 page 99/112

JT57316V1

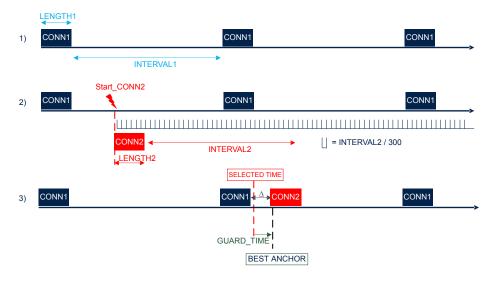


Figure 21. Prescheduler operation example

The above image provides an example of prescheduler operation:

- 1. The device is already running a radio task (CONN1), with its own slot length and interval.
- 2. At Start_CONN2 time, the host issues a command to start a new connection (that is, central role) and the prescheduler is requested to select the best anchor.
 - a. A grid of potential best anchors is created, starting at $Start_CONN2$ time and ending at $(Start_CONN2 + 10 \times INTERVAL2)$
 - b. Points in the grid are spaced in time:

$$\frac{INTERVAL2}{300}$$

- c. The number of collisions with existing slots is computed per each point in the grid.
- 3. A point in the grid is selected (in the picture, SELECTED TIME) that:
 - a. minimizes the collisions with existing slots,
 - b. minimizes as much as possible the time gap with existing slots (for a more efficient usage of the bandwidth)
- 4. The best anchor (BEST_ANCHOR in the picture) is equal to (SELECTED_TIME + GUARD_TIME), where GUARD_TIME is an estimation of the maximum time spent by the time scheduler to reschedule a new radio task (that is, to program the associated next slot anchor) after the current scheduled slot is ended.

The prescheduler selection of the best anchor takes a time that increases linearly with the number of currently active radio tasks. This time interval is in the range of 100 ms (with eight radio tasks currently active) to 1 second (with 128 radio tasks currently active).

The advertising radio tasks are not considered by the prescheduler operations. These are usually not periodic tasks, except for periodic advertising slots, which, however, are not considered by the prescheduler since their duration can vary significantly.

Scanning is also not considered by the prescheduler because it is handled as a background operation, with a low priority. A scan window (that is, the time the device is continuously receiving on a specific channel) is divided into scan chunks with a duration of 10 ms. Whenever a scan chunk is expected to collide with another slot, the scan chunk is shortened to try to avoid the collision. Since, by design, the duration of a scan chunk cannot be reduced below a certain minimum value (that is hardcoded in the firmware), the scan slot can still collide with other slots.

5.4 User guidelines

As already described, while the Bluetooth[®] Low Energy stack v2.x prescheduler always avoids collisions among central radio tasks by adding constraints to the allocation of new slots, the Bluetooth[®] Low Energy stack v4.x prescheduler approach aims instead at minimizing the probability of collisions with existing radio tasks, without preventing to allocate slots, which are expected to collide. For this reason, even if the stack never forbids allocations of radio slots, the user experiences bad performances if connection parameters are not properly chosen.

PM0274 - Rev 1 page 100/112



Here are some basic recommendations to maximize the performance of the Bluetooth[®] Low Energy stack v4.x in scenarios where the device can be connected as a central to multiple peripherals.

1. Choose the same connection interval (Conn Interval) for all the central connections such that:

Conn_interval
$$> \Sigma_i(CE_Lengthi + guard_time + \frac{Conn_Interval}{300})$$

Where:

- CE Lengthi is the CE Length of the i-th connection. It is always a multiple of 625 µs.
- guard time is equal to 350 µs.

Note:

- Conn_Interval/300 is included in the formula to consider the worst-case impact of the time granularity used when calculating the best anchor point.
- The minimum CE_Length parameter provided by the application is ignored. The prescheduler only uses the maximum CE_Length.
- The maximum connection interval parameter provided by the application is ignored. The prescheduler only uses the minimum CE Length.
- The actual value of CE_Length, used by the stack, can differ from the one passed by the application: the minimum value used by the stack depends on the support to the Data Length Extension (enabled through modular configuration), and by the initiating PHY. These values are reported in the table below.

Table 80	Minimum	CE_Length
----------	---------	-----------

Data length extension	Initating PHY	Minimum CE Length (ms)
DISABLED	1M/2M	1.25
ENABLED	1M/2M	5
DISABLED	CODED	5.625
ENABLED	CODED	34.375

2. Choose a combination of CE Length and Conn Interval that allows the required throughput.

The throughput can be calculated with the following formula:

$$Throughput = \frac{num_bits_CE}{Conn_Interval_ms}$$

where num_bits_CE is the number of bits transmitted in the same connection event and Conn_Interval_ms is the connection interval in units of 625 µs.

The number of bits, transmitted in the same connection event, depends on the maximum length of the link layer PDU and on the number of packets per connection event, which, in turn, depends on the CE length parameter.

If Conn_Interval is given, the following formula gives the number of packets to be transmitted per connection event to achieve the desired throughput:

$$num_packets_CE = \left[\frac{(Throughput \times Conn_Interval_ms)}{(bytes_per_packets \times 8)} \right]$$

where:

- Throughput is in kbps
- Conn Interval ms is in ms
- bytes_per_packets is the number of bytes contained in an LLn payload

The maximum length of an LL PDU that can be sent or received is established during the connection by using the data length update procedure. The LL payload length can be set either through the

hci_le_write_suggested_default_data_length() command or through

hci_le_set_data_length() command. The length of an LL PDU payload is 27 octets by default and can be increased up to 251 octets if the data length extension feature is supported (in the Bluetooth® Low Energy stack 3.x, this is done through the CONTROLLER DATA LENGTH EXTENSION ENABLED macro).

The duration of an LL PDU is reported in the table below and it includes transmission of the MIC (message integrity check) field. Payload length does not include MIC.

PM0274 - Rev 1 page 101/112



Table 81.	LL PDU	duration	(including	MIC)
-----------	--------	----------	------------	------

PHY	Empty LL PDU duration (μs)	Max LL PDU duration (μs)
LE_1M	80	(payload_length + 14) x 8
LE_2M	44	(payload_length + 15) x 4
LE_CODED (S=8)	720	976 + payload_length x 64

A connection event is made by several packets exchanged between central and peripheral. The CE length can be calculated with this formula:

$$\textit{CE_Length} = \left[num_packets_\textit{CE} \times \frac{(\textit{TX_PDU_Duration} + \textit{RX_PDU_Duration} + 2 \times \textit{T_IFS})}{625} \right]$$

Where:

- TX_PDU_Duration is the value in microseconds needed to transmit the data PDU (see Table 81). If this value is not known, the maximum possible value should be used.
- RX_PDU_Duration is the value in microseconds to receive a data PDU (see Table 81). If this value is not known, the maximum possible value should be used.
- T IFS is equal to 150 μs.
- CE Length is in a unit of 625 µs and it is rounded to the next integer value.

If the resulting value of the CE length is greater than the connection interval or, more generally, the condition (2) is not satisfied, the connection interval needs to be increased and a number of packets per connection event needs to be recalculated. If the connection interval cannot be increased, the desired throughput cannot be reached.

5.4.1 Guidelines example

It is requested to have 100 kbps of unidirectional throughput (LL data throughput), with a connection interval of 50 ms. If the data length extension is enabled (LL payload up to 251 octets), data is sent only in one direction (empty packet on RX), and PHY is LE 1M:

$$num_packets_CE = \frac{(100 \times 50)}{(251 \times 8)} = 3$$

$$CE_Length = 3 \times \frac{(2120 + 80 + 300)}{625} = 12$$

CE Length
$$ms = 7.5 ms$$

The CE length is less than the connection interval, meaning that an increase is not needed.

3. The Conn_Interval should be chosen to be less than the maximum latency required by all the connections. In case a central connection can tolerate a bigger latency than Conn_Interval, the user may choose, for that connection, a connection interval that is an integer multiple of Conn_Interval.

5.4.2 Three central connections example

If we suppose that the application needs to start three central connections with a different throughput and latency requirements, for example:

- Application 1:
 - Throughput = 10 kbps, bidirectional
 - Latency = 100 ms
- Application 2:
 - Throughput = 20 kbps, bidirectional
 - Latency = 100 ms
- Application 3:
 - Throughput = 30 kbps, bidirectional
 - Latency = 200 ms

The maximum connection interval value that guarantees the required latency to all central connections is equal to 100 ms:

$$Connection_Interval \le 100ms$$
 (2)

PM0274 - Rev 1 page 102/112



Now, we have to verify whether the 100 ms of connection interval is also appropriate to contain all central connections CE Lengths.

If the data length extension is not enabled and PHY is 1 Mbps:

- Application 1 has to transmit $(10 \times 100)/(27 \times 8) = 5$ data PDUs (27 bytes each) per each connection event: $CE_Lenght1 = 5 \times ((27+14)x8 + (27+14)x8 + 2x150)/625 = 8$ (that is, 5 ms).
- Application 2 has to transmit $(20 \times 100)/(27 \times 8) = 10$ data PDUs (27 bytes each) per each connection event: $CE_Lenght2 = 10 \times ((27+14)x8 + (27+14)x8 + 2x150)/625 = 16$, (that is, 10 ms).
- Application 3 has to transmit (30 x 100)/(27 x 8) = 14 data PDUs (27 bytes each) per each connection event: CE Lenght3 = 14 x ((27+14)x8 + (27+14)x8 + 2x150)/625 = 22, (that is, 13.75 ms).

The minimum connection interval that fits all connections CE Lengths is:

Conn_Interval_Min_allowed = $SUM(Max_CE_Length(i)/2 + GUARD) = (4 + 1) + (8 + 1) + (11 + 1) = 26$ (that is, 32.5 ms).

Where GUARD = 1, assuming the maximum number of radio tasks supported by the device is not greater than 25.

Since $Conn_Interval_Min_allowed \le 100 \, ms$, a connection interval of 100 ms can be used for all the central connections to ensure the appropriate performance.

5.5 The priority mechanism

At the time a slot ends, the time scheduler is responsible to compute the next slot (and consequently the next radio task) to be served.

In the case of multiple radio tasks currently active on the device, the next slot in chronological order could collide with other slots. In this case, the next slot selection is based on a priority mechanism.

The priority mechanism consists in:

1. Assigning priorities to each radio task based on the following formula:

```
priority = min(priority_max, priority_min + log 2(skipped_slots + 1))
```

where:

- priority_max and priority_min are constants that are specific of each radio task (that is, different for advertising, scanning, and connection radio tasks)
- skipped_slots indicates the current number of consecutive slots, associated to a specific radio task that have been skipped due to collisions
 - According to this definition, the priority associated to a radio task is a dynamic value that is computed
 every time the associated slot is either served or skipped.
- 2. Selecting, among the colliding radio tasks, the highest priority radio task.

5.6 Interactions with the ISR robustness mechanism

The ISR robustness mechanism has been implemented to make the firmware robust against delays in the execution of the interrupt service routine (ISR).

A delayed ISR is typically a consequence of the radio interrupt that has been disabled by the application for too long time and, if not properly recovered, can lead to an unpredictable behavior of the stack.

In particular, the most critical situations from the LL protocol perspective are the so-called back-to-back operations, that is, events (receptions or transmissions) that must trigger other events within a very short time spacing (that is, $150 \mu s$).

A typical example of a back-to-back operation is when the device receives a scan request that triggers the transmission of a scan response. In this time-critical situation, a delayed execution of the ISR, associated with the reception of the scan request, can cause the hardware registers, associated with the transmission of the scan response, not to be properly set at the time the transmission occurs, thus causing an unpredictable behavior (for example, a malformed packet is transmitted).

With the ISR robustness mechanism, the firmware can detect the situation where the ISR is served too late with respect to the associated radio event. Whenever this specific condition is detected by the firmware:

- 1. The associated back-to-back radio event is skipped
- 2. The Bluetooth® Low Energy stack v4.x time scheduler is called that selects the next radio task to be served
- 3. A hardware error event is pushed to the application to inform that something wrong happened. The application is not expected to handle the hardware error event in a specific way but, upon receiving it, the user gets an indication that the application design was not at 100% correct in terms of masking time of the radio

interrupt.

PM0274 - Rev 1 page 103/112



Revision history

Table 82. Document revision history

Date	Revision	Changes
28-Jun-2024	1	Initial release.

PM0274 - Rev 1 page 104/112



Contents

1	Gene	ral info	rmation	2
	1.1	Referer	nces	2
	1.2	List of a	acronyms and abbreviations	2
2	Bluet	tooth® L	Low Energy technology	4
	2.1	2.1 Bluetooth® LE stack architecture		
	2.2	Physica	ıl layer	5
		2.2.1	LE 2M and LE Coded physical layers	6
		2.2.2	LE 2M PHY	6
		2.2.3	LE Coded PHY	7
	2.3	Link lay	rer (LL)	7
		2.3.1	Bluetooth® Low Energy packet	8
		2.3.2	Extended advertising	. 11
		2.3.3	Advertising sets	. 12
		2.3.4	Advertising state	. 12
		2.3.5	Scanning state	. 13
		2.3.6	Connection state	. 13
		2.3.7	Periodic advertising and periodic advertising sync transfer	. 14
		2.3.8	Periodic advertising with responses	. 15
		2.3.9	Randomized advertising	. 15
		2.3.10	Encrypted advertising data	. 15
		2.3.11	Advertising coding selection	. 16
		2.3.12	Bluetooth® Low Energy power control	. 16
	2.4	Host co	ntroller interface (HCI)	. 16
	2.5	Logical	link control and adaptation layer protocol (L2CAP)	. 16
		2.5.1	LE L2CAP connection-oriented channels	. 16
	2.6	Attribute	e protocol (ATT)	. 16
	2.7	Security	y manager (SM)	. 17
	2.8	Privacy		. 20
		2.8.1	The device filtering	. 21
	2.9	Generio	attribute profile (GATT)	. 21
		2.9.1	Characteristic attribute type	. 21
		2.9.2	Characteristic descriptor type	. 23
		2.9.3	Service attribute type	. 23
		2.9.4	GATT procedures	. 23
		2.9.5	GATT caching	. 24



	2.10	Generi	c access profile (GAP)	25
	2.11	Direction	on finding	28
		2.11.1	Direction finding with angle of arrival (AoA)	28
		2.11.2	Direction finding with angle of departure (AoD)	29
		2.11.3	In-phase and quadrature (IQ)	30
	2.12	Enhand	ced attribute protocol	30
	2.13	L2CAP	enhanced credit-based flow control	31
	2.14	Bluetoo	oth® Low Energy isochronous channels	31
	2.15	Bluetoo	oth® Low Energy connection subrating	32
	2.16	Bluetoo	oth $^{ ext{ iny B}}$ Low Energy channel classification \dots	32
	2.17	Bluetoo	oth® Low Energy profiles and applications	32
		2.17.1	Proximity profile example	33
3	Blue	tooth [®] l	Low Energy stack v4.x	34
	3.1	Bluetoo	oth® Low Energy stack library framework	36
	3.2	Bluetoo	oth® Low Energy stack event dispatcher module	39
	3.3	Bluetoo	oth $^{ ext{ iny B}}$ Low Energy stack init, tick and event \dots	40
	3.4	The Blu	uetooth [®] Low Energy stack v4.x application configuration hardware configuration	42
	3.5	Bluetoo	oth® Low Energy stack tick function	43
	3.6	Bluetoo	oth Low Energy stack event function	43
4 Designing an application with the Bluetooth® Low Energy stack v4.x				44
	4.1	Initializ	ation phase and main application loop	44
		4.1.1	Bluetooth® Low Energy addresses	46
		4.1.2	Set tx power level	48
	4.2	Bluetoo	oth® LE stack v4.x GATT interface	49
		4.2.1	Introduction	49
		4.2.2	GATT server	49
		4.2.3	SoC vs. network coprocessor	62
		4.2.4	GATT client	63
		4.2.5	Services and characteristic configuration	64
	4.3	GAP A	PI interface	
		4.3.1	Set the discoverable mode and use the direct connection establishment procedure	
		4.3.2	Set discoverable mode and use general discovery procedure (active scan)	
	4.4		oth [®] Low Energy stack events	
	4.5		y (pairing and bonding)	
	4.6	Service	e and characteristic discovery	74



4.7	Characteristic discovery procedures and related GATT events76				
4.8	Characteristic notification/indications, write, read				
4.9	Basic/typical error condition description				
4.10	Simultaneously central, peripheral scenario				
4.11	1 Bluetooth [®] Low Energy privacy 1.2				
	4.11.1 Controller-based privacy and the device filtering scenario	82			
	4.11.2 Resolving addresses	82			
4.12	ATT_MTU and exchange MTU APIs, events				
4.13	LE data packet length extension APIs and events				
4.14	No packet retry feature				
4.15	Bluetooth® Low Energy radio activities and flash operations	84			
4.16	Bluetooth® Low Energy 2 Mbit/s and Coded Phy	84			
4.17	Bluetooth® Low Energy extended advertising/scanning				
	4.17.1 Events for extended adv and scan	86			
4.18	Periodic advertising and periodic advertising sync transfer				
	4.18.1 Periodic advertising mode	86			
	4.18.2 Periodic advertising synchronizability mode	87			
	4.18.3 Periodic advertising synchronization establishment procedure	87			
	4.18.4 Periodic advertising synchronization transfer procedure				
	4.18.5 Periodic Advertising with Responses (PAwR)				
4.19	LE power control and path loss monitoring				
4.20	Direction finding commands and events	90			
	4.20.1 Connectionless scenario	91			
	4.20.2 Connection-oriented scenario	92			
4.21	Enhanced ATT commands and events				
4.22	L2CAP enhanced credit flow APIs and events				
4.23	$Bluetooth^{ ext{ iny B}}$ Low Energy isochronous channels APIs and events	94			
4.24	New Bluetooth® Low Energy stack v4.x HCl APIs and events	95			
Bluet	tooth [®] LE stack v4.x scheduler	97			
5.1	Limitations of the Bluetooth® LE stack v2.x time scheduler				
5.2	The Bluetooth® Low Energy v4.x stack time scheduler				
5.3	The prescheduler				
5.4	User guidelines	100			
	5.4.1 Guidelines example				
	5.4.2 Three central connections example	102			
5.5	The priority mechanism	103			

5



	history	
5.6	Interactions with the ISR robustness mechanism	103

PM0274 - Rev 1



List of tables

Table 1.	Reference documents	2
Table 2.	List of acronyms	2
Table 3.	Bluetooth® Low Energy LE RF channel types and frequencies	5
Table 4.	LE PHY key parameters	7
Table 5.	PDU advertising header	9
Table 6.	Connection request timing intervals	. 14
Table 7.	Attribute example	. 17
Table 8.	Attribute protocol messages	. 17
Table 9.	Combination of input/output capabilities on a Bluetooth® LE device	. 18
Table 10.	Methods used to calculate the temporary key (TK)	
Table 11.	Mapping of IO capabilities to possible key generation methods	
Table 12.	Characteristic declaration	
Table 13.	Characteristic value	
Table 14.	Service declaration	. 23
Table 15.	Include declaration	. 23
Table 16.	Discovery procedures and related response events	
Table 17.	Client-initiated procedures and related response events	
Table 18.	Server-initiated procedures and related response events	
Table 19.	GAP roles	
Table 20.	GAP broadcaster mode	
Table 21.	GAP discoverable modes	
Table 22.	GAP connectable modes	
Table 23.	GAP bondable modes	
Table 24.	GAP observer procedure	
Table 25.	GAP discovery procedures	
Table 26.	GAP connection procedures	
Table 27.	GAP bonding procedures	
Table 28.	Bluetooth® Low Energy stack library framework interface	
Table 29.	Modular configurations option combination examples	
Table 30.	Bluetooth® Low Energy application stack library framework interface	
Table 31.	Bluetooth® Low Energy stack v4.x initialization parameters	
Table 31.	Hardware configurations parameters options	
Table 33.	User application defines for Bluetooth® Low Energy device roles	
Table 34.	GATT, GAP service handles	
Table 35.	GATT, GAP characteristic handles	
Table 36.	STM32WB0 devices TX power level	
Table 37.	GATT server database APIs	
Table 38.	Example database	
Table 39.	aci_gatt_srv_notify parameters	
Table 40.	aci_gatt_srv_read_event parameters	
Table 41.	aci_gatt_srv_write_event parameters	
Table 42.	aci_att_srv_prepare_write_req_event parameters	
Table 43.	aci_att_srv_exec_write_req_event parameters	
Table 44.	aci_gatt_srv_resp parameters	
Table 45.	EATT_pwrq_init parameters	
Table 46.	EATT_pwrq_flush parameter	
Table 47.	EATT_pwrq_read parameters	
Table 48.	EATT_pwrq_pop parameters	
Table 49.	EATT_pwrq_push parameters	
Table 50.	GATT client APIs	
Table 51.	aci_gap_set_advertising_configuration() API : discoverable mode and advertising type selection	
Table 52.	aci gap start procedure() API	. 66





Table 53.	aci_gap_terminate_proc() API	
Table 54.	ADV_IND event type: main fields	71
Table 55.	ADV_IND advertising data: main fields	71
Table 56.	SCAN_RSP event type	71
Table 57.	Scan response data	71
Table 58.	Bluetooth® Low Energy stack: main event	71
Table 59.	Bluetooth® Low Energy sensor profile demo services and characteristic handle	74
Table 60.	Service discovery procedures APIs	75
Table 61.	First read by group type response event callback parameters	75
Table 62.	Second read by group type response event callback parameters	75
Table 63.	Third read by group type response event callback parameters	76
Table 64.	Characteristics discovery procedures APIs	76
Table 65.	First read by type response event parameters	77
Table 66.	Second read by type response event parameters	77
Table 67.	Characteristic update, read, write APIs	78
Table 68.	Periodic advertising with responses (PAwR) commands	88
Table 69.	Periodic advertising with responses (PAwR) events	89
Table 70.	Direction finding commands and events	90
Table 71.	L2CAP enhanced credit flow commands	93
Table 72.	L2CAP enhanced credit flow events	93
Table 73.	ISOAL HCI commands	94
Table 74.	BIG/BIS HCI commands	94
Table 75.	CIG/CIS HCI commands	94
Table 76.	BIG/BIS HCI events	95
Table 77.	New HCI commands related to some link layer controller features	95
Table 78.	New HCI events related to some link layer controller features	96
Table 79.	Bluetooth® LE stack activity and radio tasks	98
Table 80.	Minimum CE_Length	101
Table 81.	LL PDU duration (including MIC)	
Table 82.	Document revision history	104





List of figures

Figure 1.	Bluetooth® Low Energy technology enabled coin cell battery devices	. 4
Figure 2.	Bluetooth® LE stack architecture	. 5
Figure 3.	LL state machine	. 8
Figure 4.	2MB	. 8
Figure 5.	Coded PHY	. 9
Figure 6.	Advertising physical channel PDU	. 9
Figure 7.	Data physical channel PDUs	11
Figure 8.	Bluetooth® LE 5.x extended advertising	11
Figure 9.	Advertising packet chain	11
Figure 10.	Advertising packet with AD type flags	12
Figure 11.	Example of characteristic definition	22
Figure 12.	Angle of arrival (AoA)	29
Figure 13.	Angle of departure (AoD)	30
Figure 14.	Client and server profiles	33
Figure 15.	Bluetooth® Low Energy stack v4.x architecture	34
Figure 16.	Bluetooth® LE stack reference application	35
Figure 17.	MAC address storage	47
Figure 18.	Bluetooth® LE simultaneous central and peripheral scenario	79
Figure 19.	Example of periodic radio task	97
Figure 20.	Example of two radio tasks allocation in an anchor period	98
Figure 21.	Prescheduler operation example	00



IMPORTANT NOTICE - READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2024 STMicroelectronics – All rights reserved

PM0274 - Rev 1 page 112/112