
FOLDING OFFICE CHAIR ASSEMBLY INSTRUCTIONS

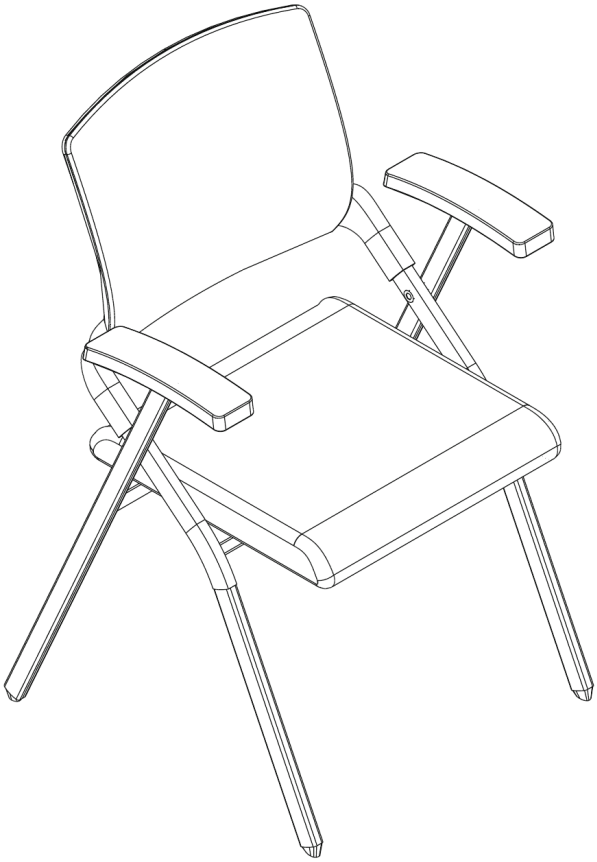


Pre-Assembly Safety Guidelines & Recommendations:

- Read all step-by-step instructions thoroughly prior to beginning assembly.
- Verify all parts and hardware components against the parts list on Page 2.
- Assemble the chair on a soft, smooth surface to protect product finish from scratches.
- Do not fully torque fasteners until all connecting pieces are properly aligned.

FOLDING OFFICE CHAIR ASSEMBLY INSTRUCTIONS

Parts & Hardware Diagram


Package Components & Hardware Breakdown

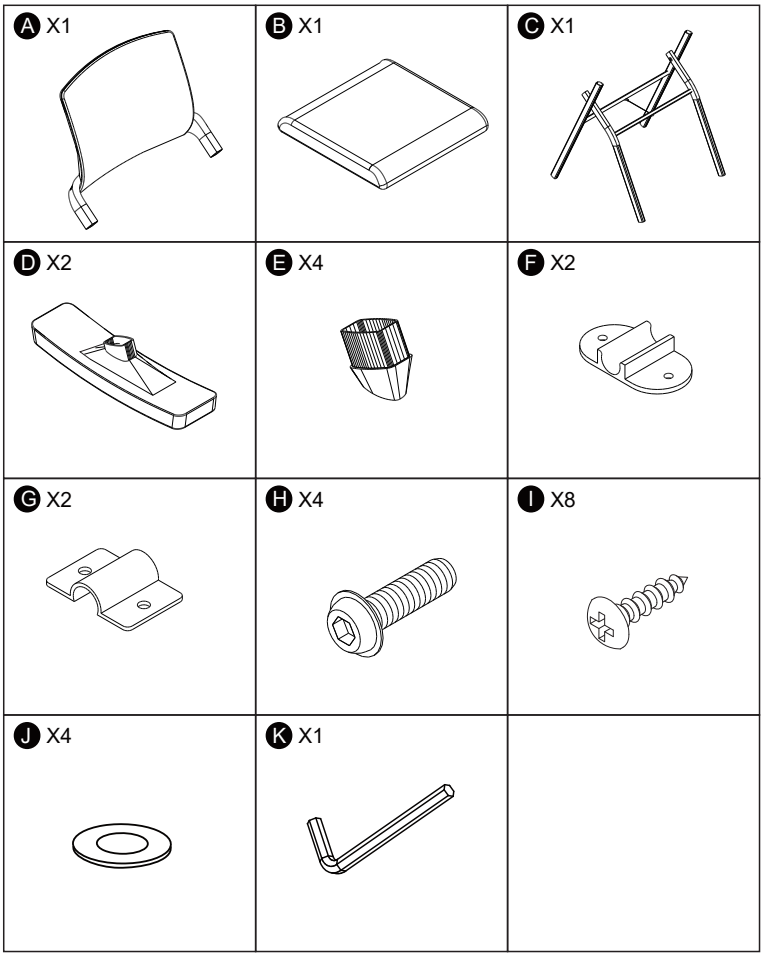

Ref	Description	Quantity	Remarks
A	Backrest Assembly	1 pc	Ergonomic Mesh Back
B	Seat Cushion Assembly	1 pc	Main Padded Cushion
C	Main Folding Leg Frame	1 pc	Steel Frame Structure
D	Armrest Pads (Left & Right)	2 pcs	Top Arm Rest Cover
E	Tube End Caps	4 pcs	Leg Top Plugs
F	Stabilizer Brackets	2 pcs	Rear Seat Guides
G	Frame Mounting Brackets	2 pcs	Metal Saddle Clamps
H	Hex Socket Head Bolts	4 pcs	M6 Screws
I	Self-Tapping Screws	8 pcs	Phillips Screws
J	Flat Washers	4 pcs	Metal Washers
K	Allen Key Wrench	1 pc	Included Tool

FOLDING OFFICE CHAIR ASSEMBLY INSTRUCTIONS

Assembly Steps 1 & 2

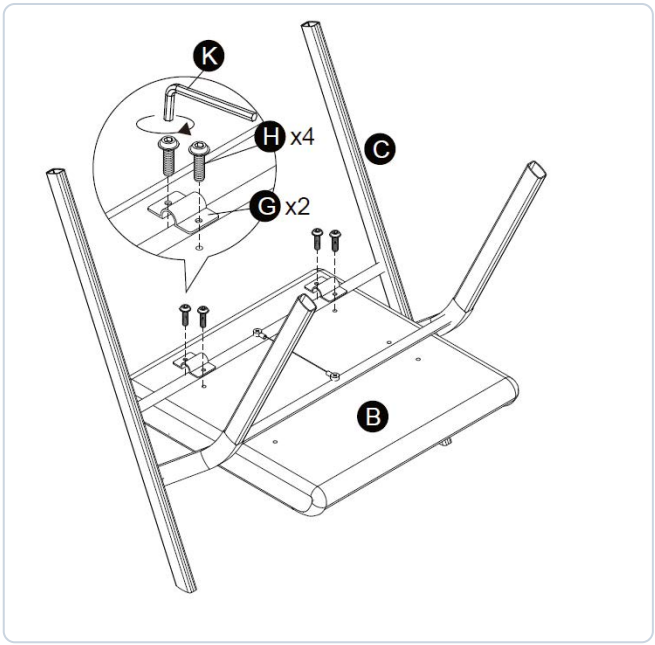


STEP 1

Attach Leg Frame to Seat Cushion

Hardware Required: (G) x 2, (H) x 4 | Tool: Allen Wrench (K)

1. Place the **Seat Cushion Assembly (B)** upside down on a clean, soft surface.
2. Align the crossbar of the **Main Folding Leg Frame (C)** onto the underside of the seat frame.
3. Place two **Mounting Brackets (G)** over the frame tube.
4. Insert four **Hex Socket Head Bolts (H)** through brackets (G) into the seat frame holes.
5. Tighten all bolts securely using the **Allen Wrench (K)**.

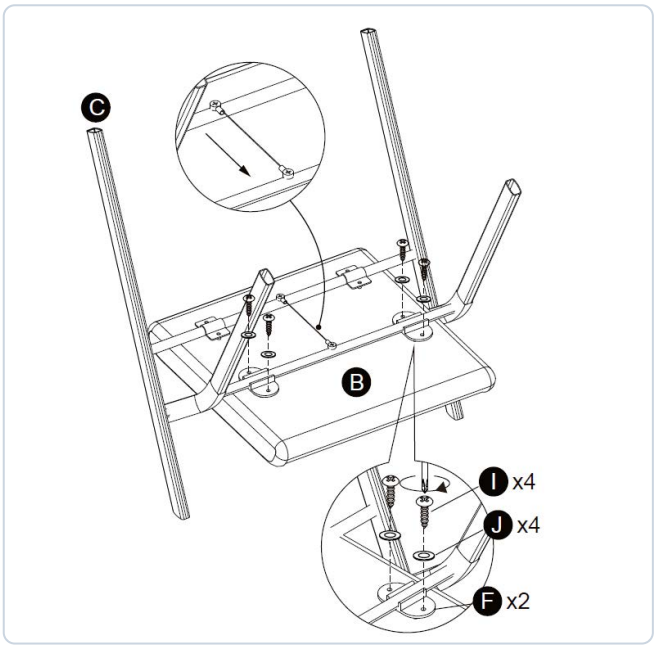

STEP 2

Install Seat Base Stabilizers


Hardware Required: (F) x 2, (I) x 4, (J) x 4

1. Check that the seat folding guide wire is positioned properly along its track (see top detail).
2. Position two **Stabilizer Brackets (F)** over the rear seat frame attachment points.
3. Thread a **Flat Washer (J)** onto each **Self-Tapping Screw (I)**.
4. Fasten the four screws (I) firmly into the seat frame base.

Tip: Ensure wire mechanisms slide smoothly before fully tightening screws.

FOLDING OFFICE CHAIR ASSEMBLY INSTRUCTIONS

Assembly Steps 3 & 4

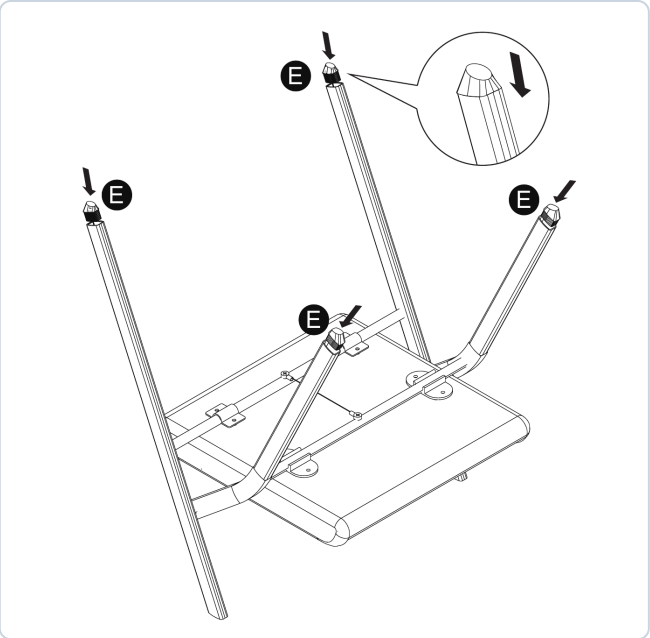


STEP 3

Insert Tube End Caps

Hardware Required: (E) x 4

1. Locate the 4 open steel tube tops on the main leg frame structure.
2. Align one **Tube End Cap (E)** with each open tube top as shown by the arrows.
3. Press each cap down firmly into place until it sits flush against the tube edge.

Note: Caps cap off raw metal edges and protect user hands and clothing.

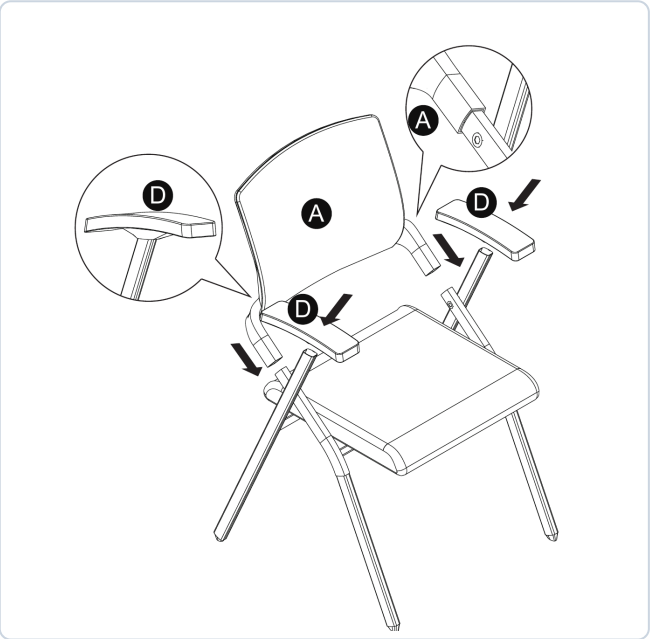

STEP 4


Fit Backrest & Armrest Pads

Parts Required: (A) x 1, (D) x 2

1. Insert the bottom tubes of the **Backrest Assembly (A)** into the side frame tubes.
2. Position the left and right **Armrest Pads (D)** onto the top support bar posts.
3. Push both armrest pads downward firmly until fully engaged.

FOLDING OFFICE CHAIR ASSEMBLY INSTRUCTIONS

Assembly Steps 5 & 6

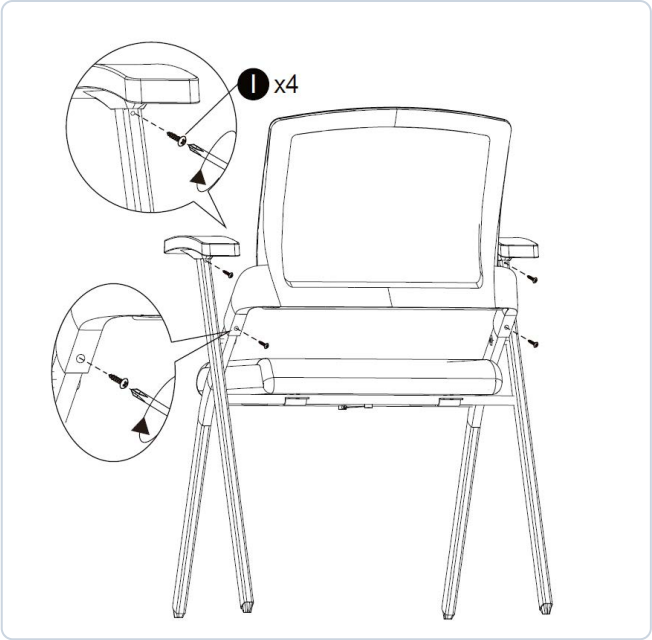

STEP 5

Fasten Backrest & Pivot Connections

> **Hardware Required: (I) x 4**

1. Locate the fixing holes at the rear backrest joints and lower pivot points.
2. Insert two **Self-Tapping Screws (I)** into the upper backrest holes (top inset).
3. Insert two **Self-Tapping Screws (I)** into the lower side pivot holes (bottom inset).
4. Tighten all screws securely using a Phillips screwdriver.



STEP 6

Assembly Completion & Inspection

> **Assembly Status: COMPLETE**

1. Inspect all screw joints to confirm they are securely tightened.
2. Test the chair's folding action by lifting and folding the seat cushion smoothly.
3. Your folding office chair assembly is now complete and ready for everyday use!