



1

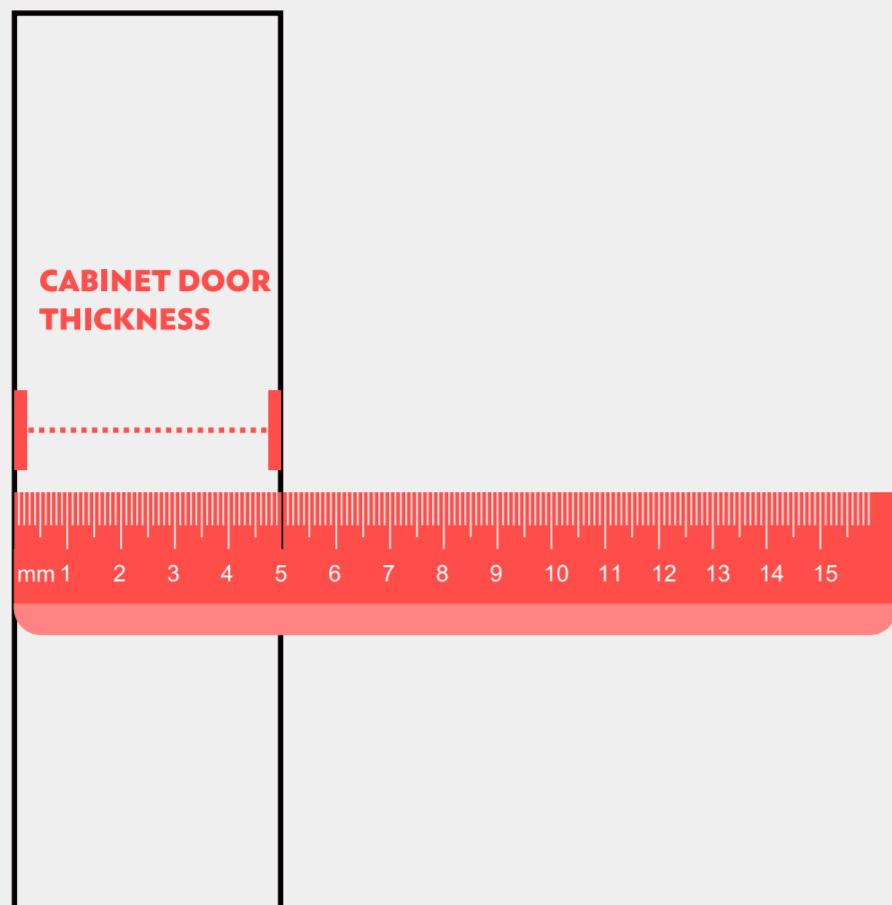


MEASURE THE THICKNESS OF THE CABINET DOOR WHERE YOU NEED TO INSTALL THE HANDLE OR KNOB.

2

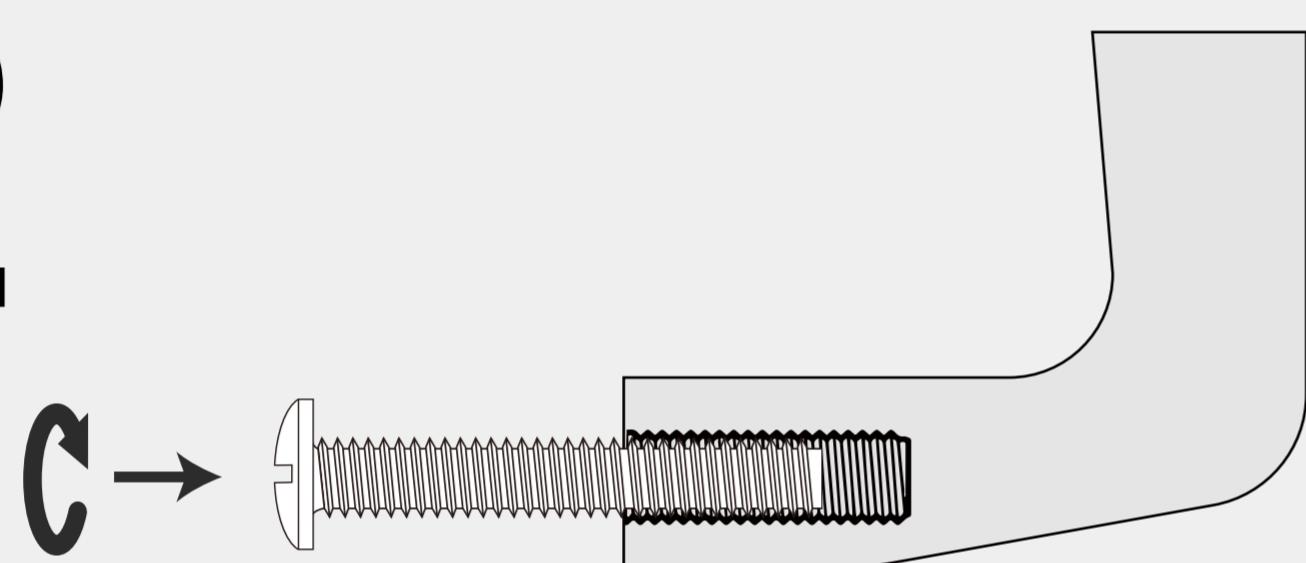


MEASURE THE DEPTH OF THE SCREW HOLES USING THE SUPPLIED SHORT SCREWS.

3

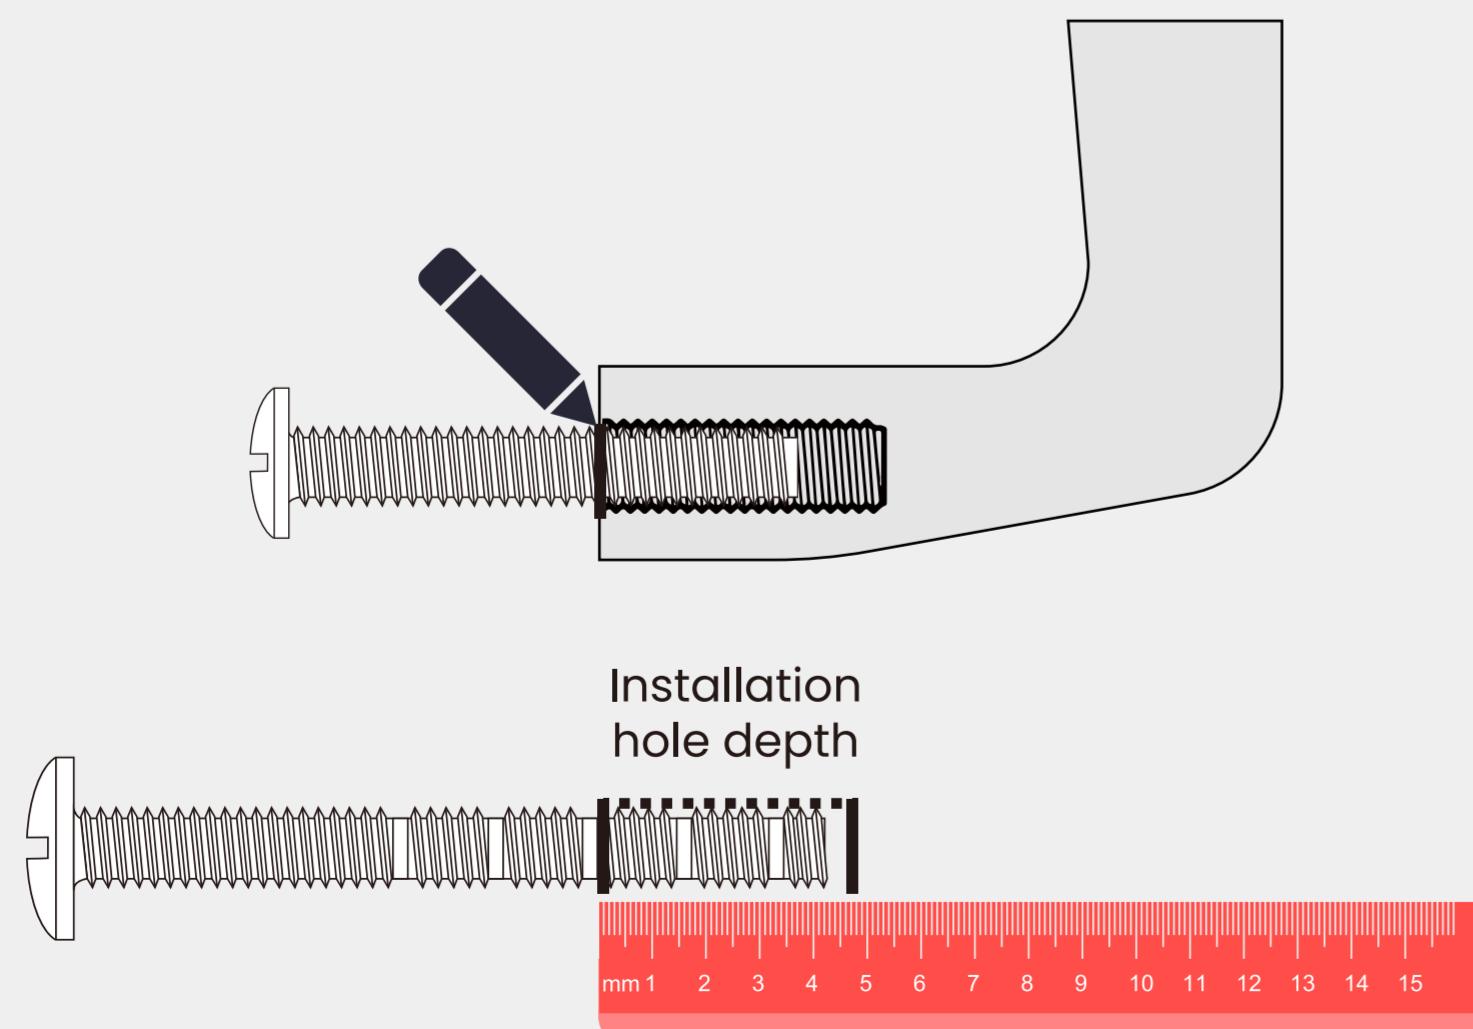


Estimate the length needed based on the depth of the screw hole for the short screw test.

4

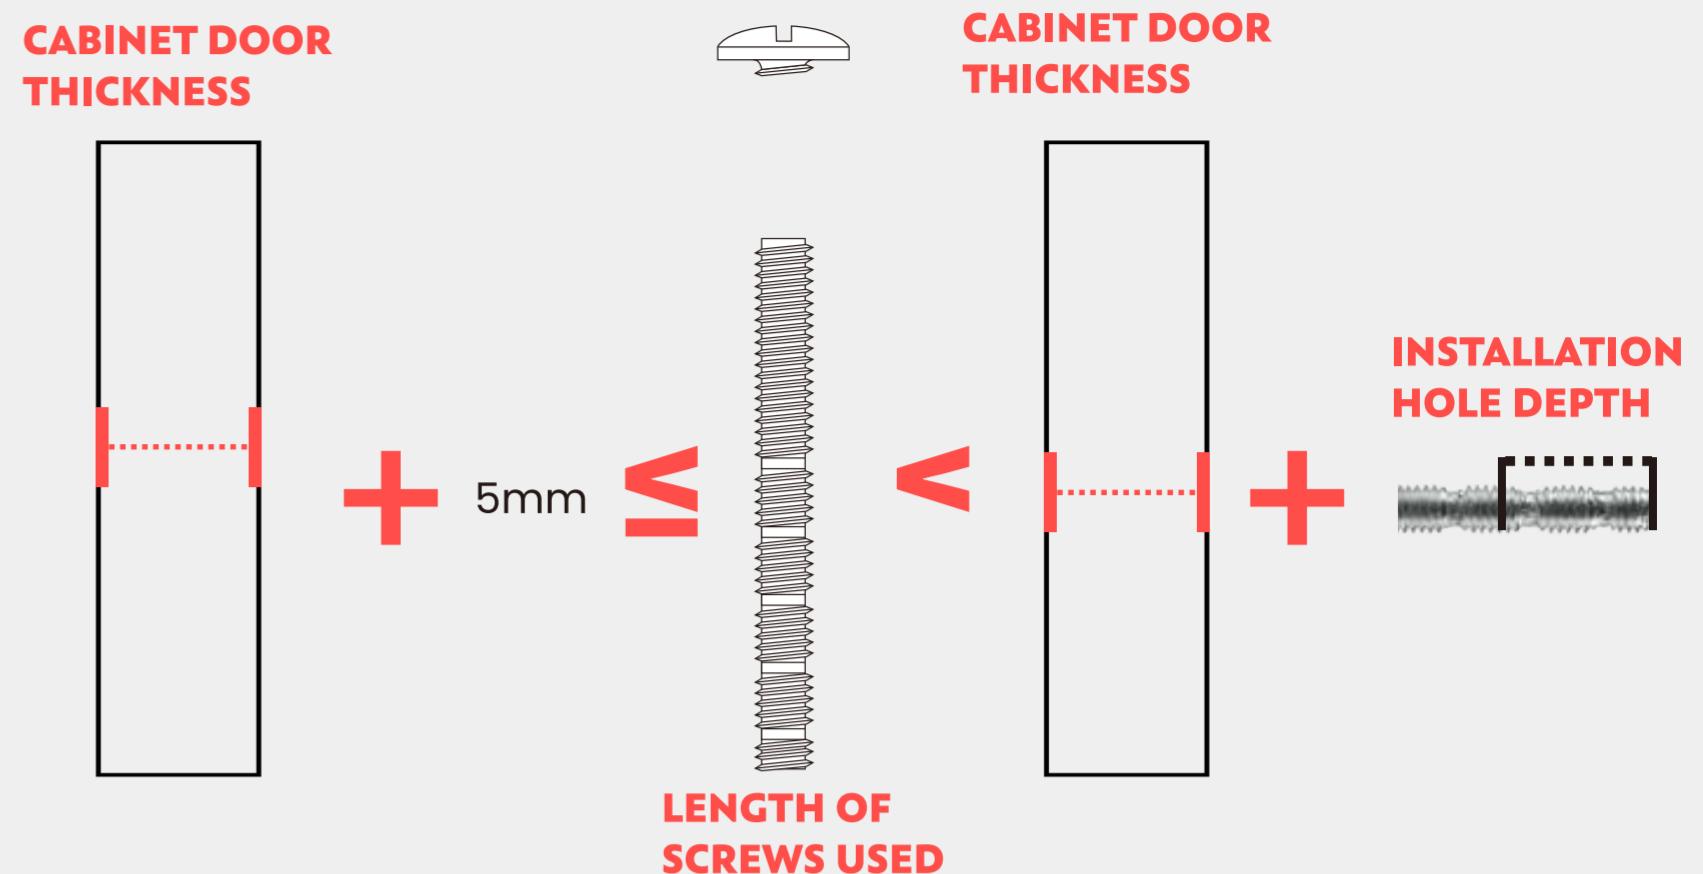


SCREW LENGTH: ENSURE THE REQUIRED LENGTH OF THE BREAKAWAY SCREW MEETS THE CRITERIA: $\text{Cabinet Door Thickness} + 5 \text{ mm} \leq \text{Screw Length} < \text{Cabinet Door Thickness} + \text{Installation Hole Depth}$.

5

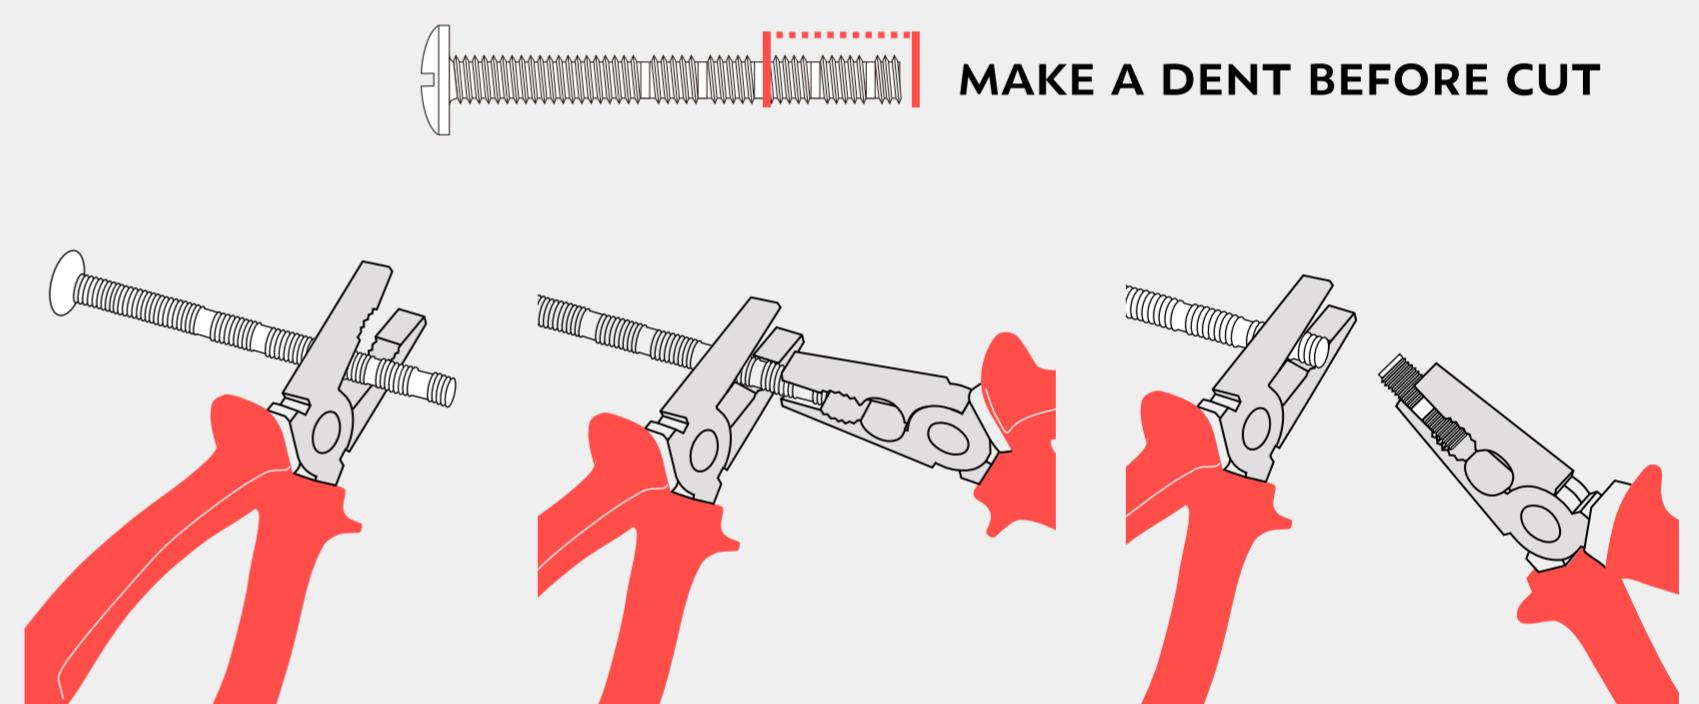

MAKE SURE THE ACTUAL LENGTH AND MAKE A DENT ON THE BREAKING POINT BEFORE THE CUT. USE A PLIER TO HOLD THE SCREW ABOVE THE BREAKING POINT FROM THE SIDE OF THE SCREW. HOLD JUST BELOW THE BREAKING POINT WITH ANOTHER PLIER. THE TWO PLIERS ARE AT 90° ANGLES. BEND THE SCREW END UPWARD OR DOWN TO BREAK IT OFF. DO NOT TWIST THE SCREW WITHIN THE GRIP OF THE PLIERS.

6

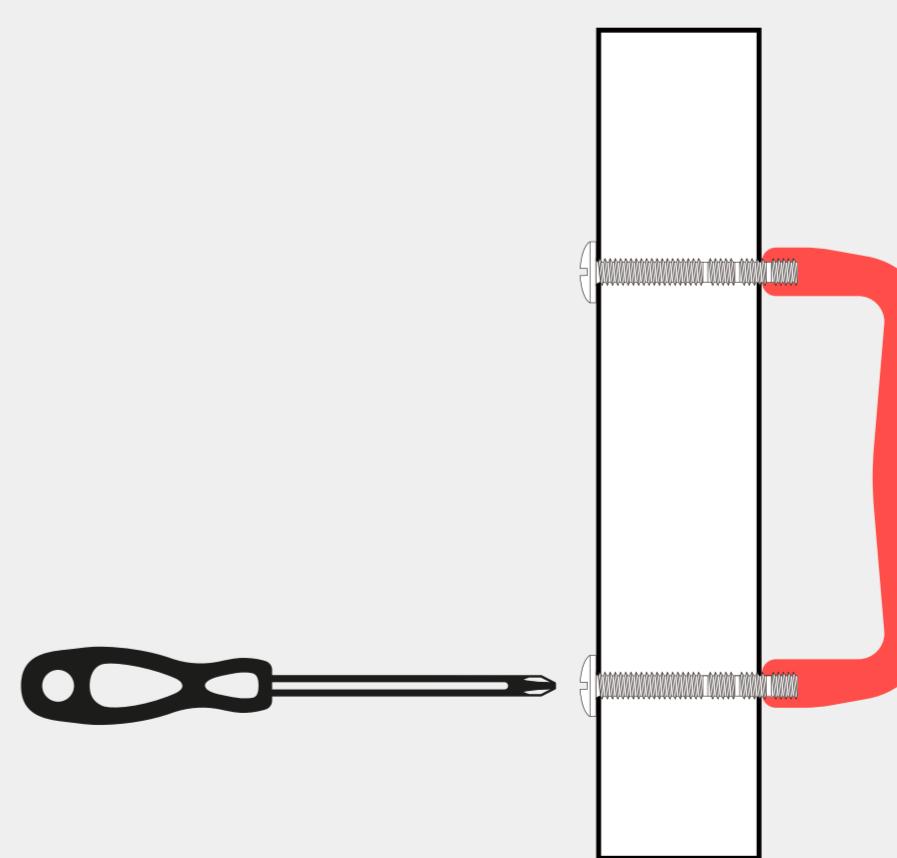

INSTALLATION: PLACE THE HANDLE OR KNOB ON THE CABINET DOOR AND INSERT THE BREAKAWAY SCREW THROUGH THE MARKED CENTER POSITION. TIGHTEN THE SCREW USING A SCREWDRIVER OR WRENCH TO COMPLETE THE INSTALLATION.