



## STEP 1

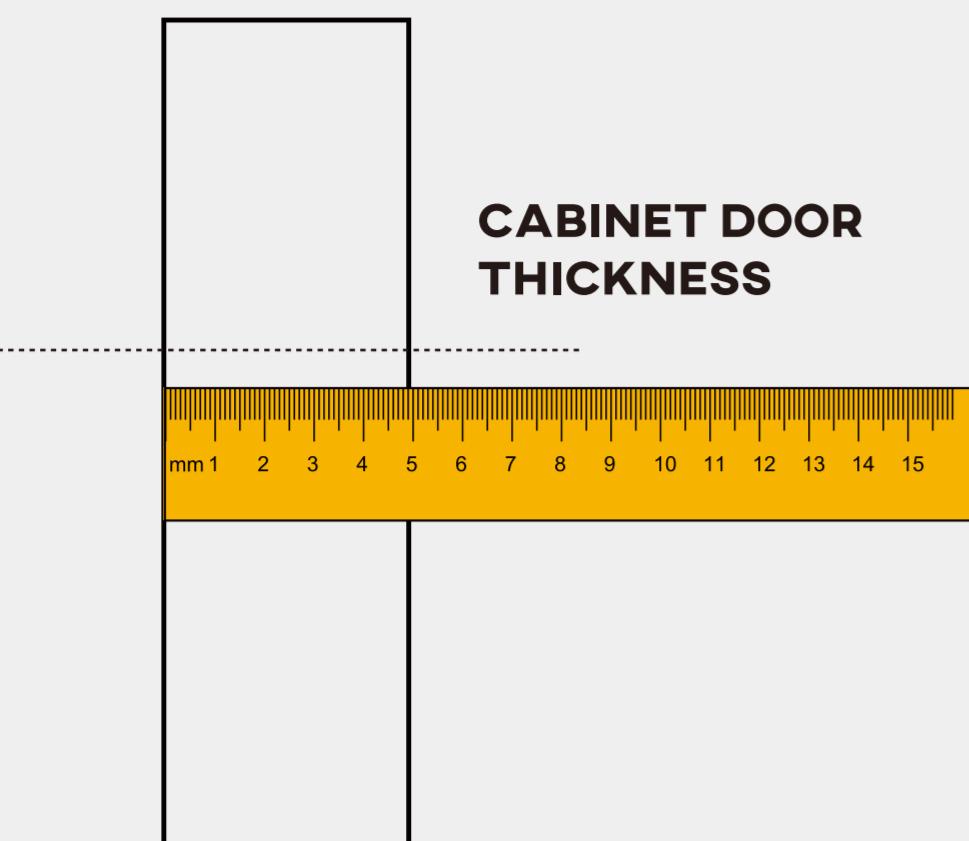


MEASURE THE THICKNESS OF THE CABINET DOOR WHERE YOU NEED TO INSTALL THE HANDLE OR KNOB.

## STEP 2

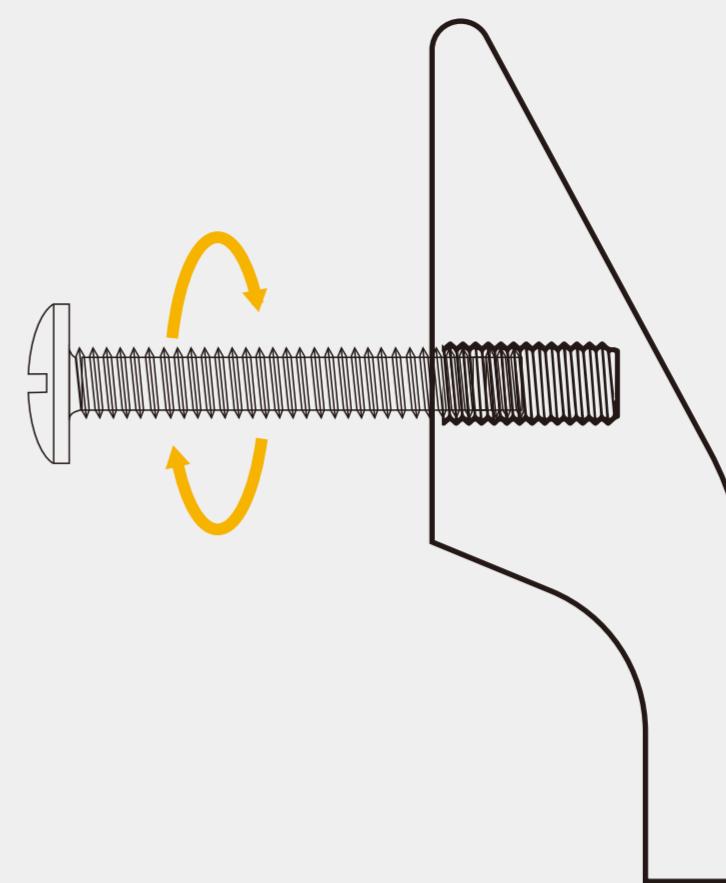


MEASURE THE DEPTH OF THE SCREW HOLES USING THE SUPPLIED SHORT SCREWS.

## STEP 3

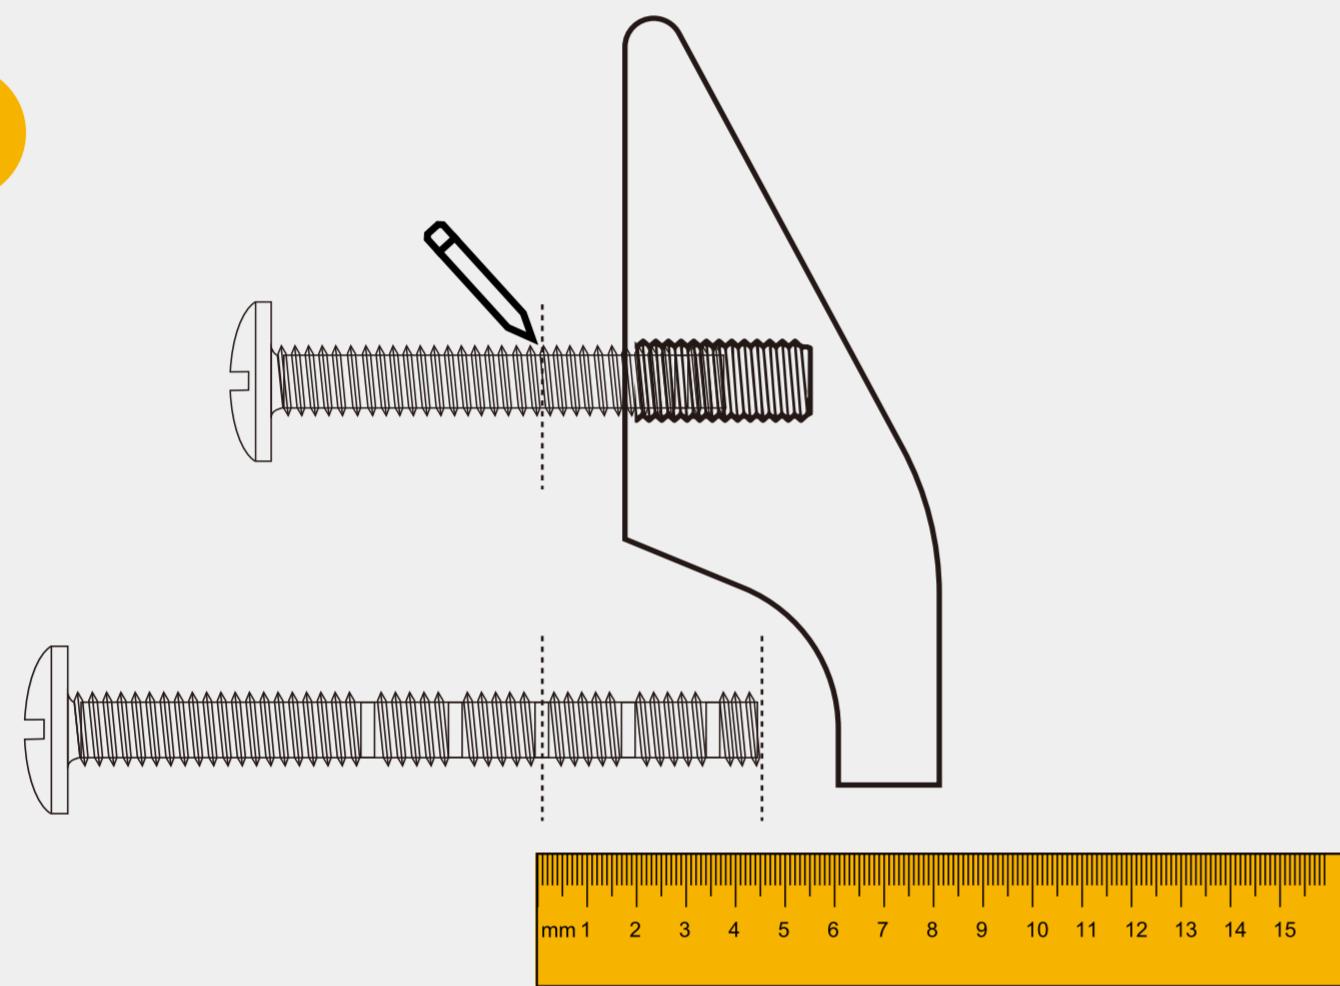

ESTIMATE THE LENGTH NEEDED BASED ON THE DEPTH OF THE SCREW HOLE FOR THE SHORT SCREW TEST.


## STEP 4

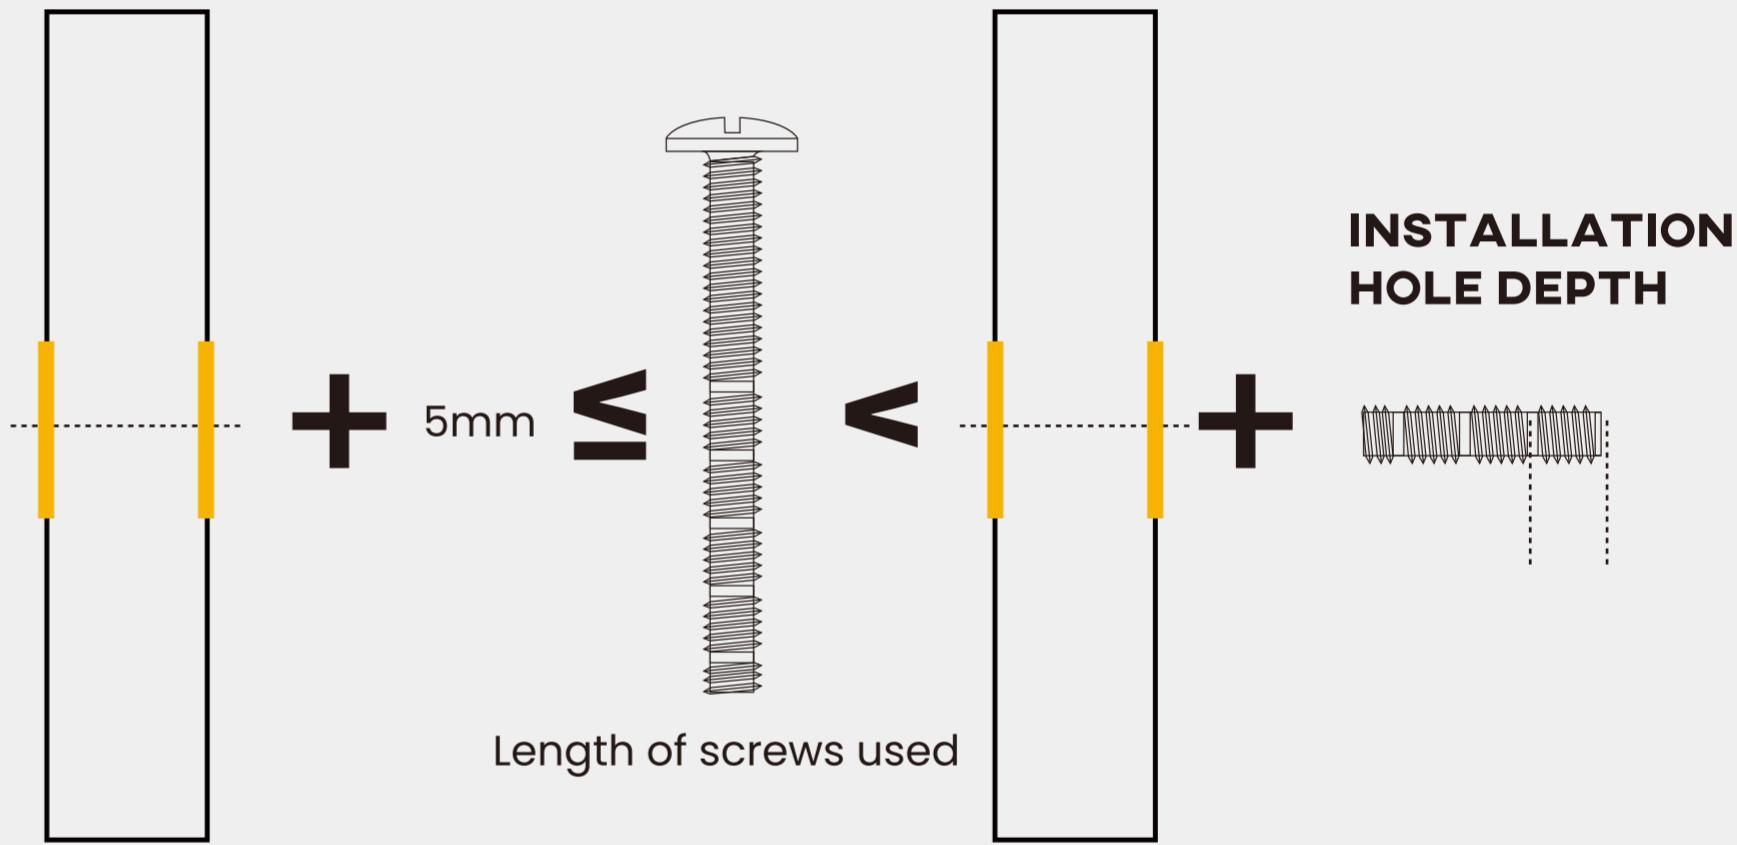

CONFIRM THE REQUIRED LENGTH OF THE BREAKAWAY SCREW. ENSURING THAT IT MEETS THE FOLLOWING CRITERIA: CABINET DOOR THICKNESS + 5 MILLIMETERS ≤ SCREW LENGTH < CABINET DOOR THICKNESS + INSTALLATION HOLE DEPTH.


## STEP 5

MAKE A DENT BEFORE CUT

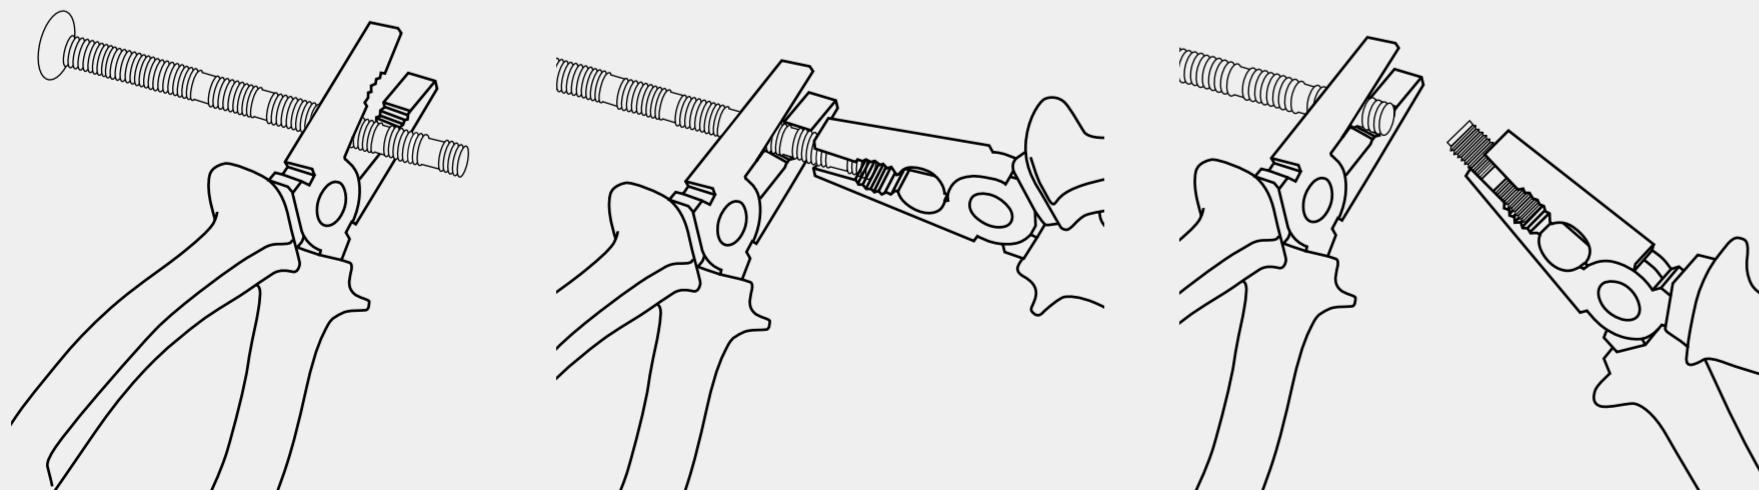

MAKE SURE THE ACTUAL LENGTH AND MAKE A DENT ON THE BREAKING POINT BEFORE THE CUT. USE A PLIER TO HOLD THE SCREW ABOVE THE BREAKING POINT FROM THE SIDE OF THE SCREW. HOLD JUST BELOW THE BREAKING POINT WITH ANOTHER PLIER. THE TWO PLIERS ARE AT 90° ANGLES. BEND THE SCREW END UPWARD OR DOWN TO BREAK IT OFF. DO NOT TWIST THE SCREW WITHIN THE GRIP OF THE PLIERS.

## STEP 6

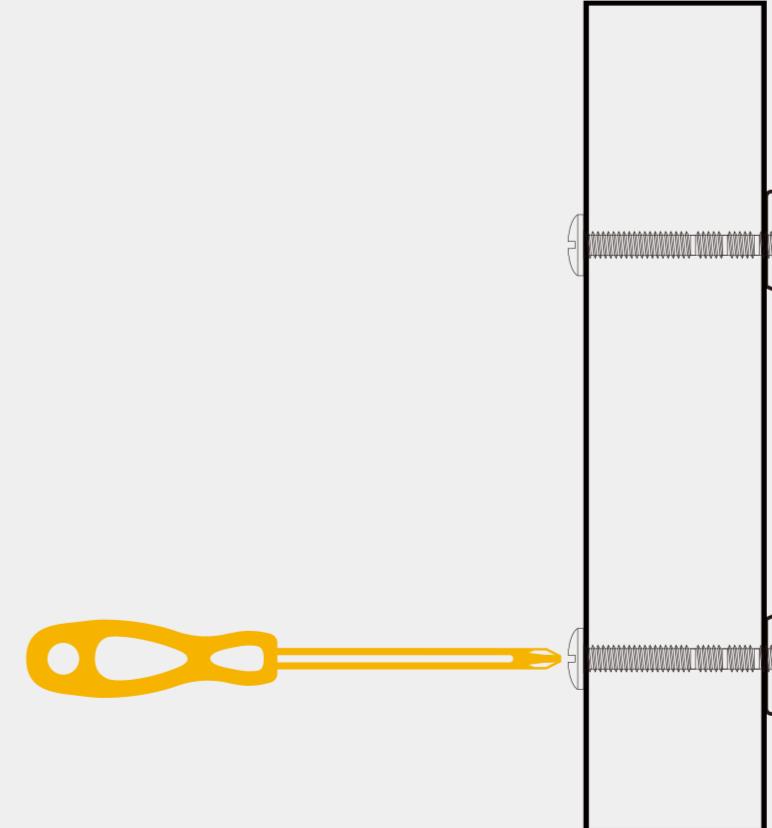

SUCCESSFUL INSTALLATION. PLACE THE HANDLE OR KNOB ON THE CABINET DOOR AND INSERT THE BREAKAWAY SCREW THROUGH THE MARKED CENTER POSITION. THEN, USE A SCREWDRIVER OR WRENCH TO TIGHTEN THE SCREW.