```
Notes for ECE 30100 - Signals and Systems
Zeke Ulrich
March 31, 2025
Contents
    Course Description
                            2
     Introduction
                      3
    Linearity
                  5
    Classifying Signal Types
                                  6
        DT vs. CT
                      6
         Energy vs. Power
                             6
    Transformations
                         8
         Time Shift
         Time Reversal
                         8
         Time Scaling
                         8
     Periodicity
         Periodicty in Discrete Time
                                      11
    Unit Step Signal
         Discrete-Time Unit Step Signal
                                         13
         Continuous-Time Unit Step Signal
                                             13
         Discrete-Time Delta Function
                                        14
         Continuous-Time Delta Function
                                           15
    Complex Exponential
                               16
    System Connections
                             18
                  18
         Series
                    18
         Parallel
        Feedback
                     18
    System Properties
                           19
        Memoryless
                        19
        Linear
                   19
         Time Invariance
                            19
        Linear Time Invariant (LTI)
                                      19
```

Invertible 20 Causal 20 Stable 20 Convolution 22 Fourier Transforms 24 Eigenfunctions and H(s)24 Fourier Transform 24 Fourier Transform Properties 25 Continuous Time Fourier Series 25 Discrete Time Fourier Series 27 Spectrum Analysis Fourier Series Properties 28

# Course Description

Classification, analysis and design of systems in both the time- and frequency-domains. Continuous-time linear systems: Fourier Series, Fourier Transform, bilateral Laplace Transform. Discrete-time linear systems: difference equations, Discrete-Time Fourier Transform, bilateral z-Transform. Sampling, quantization, and discrete-time processing of continuous-time signals. Discrete-time nonlinear systems: median-type filters, threshold decomposition. System design examples such as the compact disc player and AM radio.

## Introduction

As this course studies signals and systems, it behooves us to understand what signals and systems are. A signal is a quantity that varies over time. Examples include voltage waveform on a circuit, height as a function of age, or pulses of light through fiber optic.

We distinguish between continuous time (CT) and discrete time (DT) signals. CT signals have a continuous independent variable, such as time. DT signals have a discrete independent variable, such as the date. The indices are a set of integers.

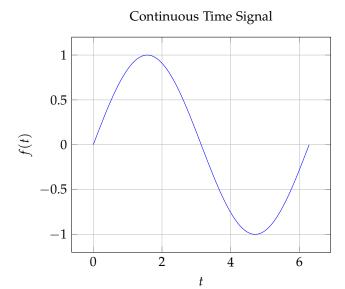


Figure 1: Continuous Time Signal

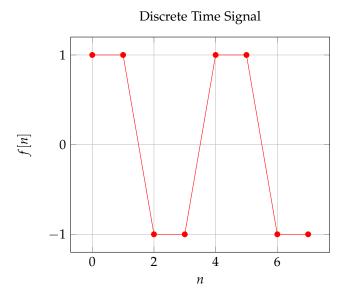


Figure 2: Discrete Time Signal

In the most general terms, a systems transform inputs to outputs. They're interconnections of subsystems. Examples of systems include, topically, circuits.

Similarly to signals, there are continuous time systems and discrete time systems. In a CT system, the input and output are continuous. Conversely, DT systems have discrete inputs and outputs.



Figure 3: System Diagram

The astute reader will notice systems operate much like functions. We use function notation to describe systems. For a CT system, we write y(t) = S(x(t)) with parentheses to show it's CT. For DT, we use brackets like y[t] = S(x[t]).

It's easy to imagine a system with continuous input and discrete output, or vice versa. These are called samplers and reconstructors respectively. We'll mostly be looking at linear time-invariant discrete systems, since they have the greatest application to ECE.

#### Linearity

Readers are familiar with the concept of linearity, which mathematically may be expressed as

$$f(a+b) = f(a) + f(b) \tag{1}$$

Linear systems possess the property of superposition, so given an input as a sum of weighted inputs the output is a sum of weighted outputs.

The necessary and sufficient conditions for linearity in a CT system are if the input is  $\alpha_1 x_1(t) + \alpha_2 x_2(t)$  the output is  $S(\alpha_1 x_1(t)) +$  $S(\alpha_2 x_2(t))$ . Formally,

$$S(\alpha_1 x_1(t) + \alpha_2 x_2(t)) = \alpha_1 S(x_1(t)) + \alpha_2 S(x_2(t)).$$
 (2)

Likewise for DT systems,

$$S[\alpha_1 x_1[t] + \alpha_2 x_2[t]] = \alpha_1 S[x_1[t]] + \alpha_2 S[x_2[t]].$$
 (3)

This equality for hold for any real valued  $\alpha_1$  and  $\alpha_2$ .

Consider the CT system *S* given by y(t) = tx(t). We are interested in determining if the system is linear. We test it with the definition of linearity,

$$y(\alpha_1 x_1(t) + \alpha_2 x_2(t)) = t(\alpha_1 x_1(t) + \alpha_2 x_2(t)) \tag{4}$$

$$= t\alpha_1 x_1(t) + t\alpha_2 x_2(t) \tag{5}$$

$$= \alpha_1 y(x_1(t)) + \alpha_2 y(x_2(t)) \tag{6}$$

Since this is the definition of linearity, the system is linear.

Why do we care? We care because linearity gives us many useful properties and makes solving systems much easier. If we know the output for any set of inputs, we can find the output for any linear combination of those inputs.

# Classifying Signal Types

Before we proceed we must be able to classify signal types. There are five ways to divide signal types.

- DT vs. CT
- Periodic vs. aperiodic
- Finite energy vs. finite power
- Even and odd
- Complex exponential

#### DT vs. CT

- DT: x[n] is a sequence of complex values, including purely real values. numbers. Example:  $x[n] = \frac{n}{2}$ .
- CT: x(t) is complex (including purely real) and continuous for all real values of *t*. Example:  $x(t) = \frac{t}{2} - jt$ .
- Complex:

For DT, complex x[n] can be represented in Cartesian or polar form. For Cartesian,

$$x[n] = x_{Re}[n] + jx_{Im}[n]. (7)$$

For polar,

$$x[n] = A[n]e^{j\Theta[n]}. (8)$$

We can swap between the two with Euler's formula.

$$A[n]e^{j\Theta[n]} = A[n]\cos(\Theta[n]) + jA[n]\sin(\Theta[n])$$
(9)

$$x_{Re}[n] + jx_{Im}[n] = \sqrt{x_{Re}[n]^2 + x_{Im}[n]^2} \times e^{j\arctan(\frac{x_{Im}[n]}{x_{Re}[n]})}$$
 (10)

Energy vs. Power

DT vs. CT is one option to classify signals. Another possibility is Energy vs. Power. For this class, energy in a continuous time system is the area under the squared magnitude of the signal. Mathematically energy over  $(t_1, t_2)$  is equal to

$$E = \int_{t_1}^{t_2} |x(t)|^2 dt \tag{11}$$

$$= \int_{t_1}^{t_2} (x_{Re}(t)^2 + x_{Im}(t)^2) dt.$$
 (12)

For DT systems, the formula for energy is

$$E = \sum_{n=n_1}^{n_2} |x[n]|^2 \tag{13}$$

$$=\sum_{n=n_1}^{n_2}(x_{Re}[n]^2+x_{Im}[n]^2). \tag{14}$$

The total energy  $E_{\infty}$  is the energy from  $t = -\infty$  to  $t = \infty$ .

Power is energy per unit time, or in terms of calculus  $P(t) = \frac{d}{dt}E(t)$ . For CT, average power is

$$P_{avg} = \frac{1}{t_2 - t_1} \int_{t_1}^{t_2} |x(t)|^2 dt.$$
 (15)

For DT,

$$P_{avg} = \frac{1}{n_2 - n_1 + 1} \sum_{n=n_1}^{n_2} |x[n]|^2.$$
 (16)

The overall average power is

$$P_{\infty} = \lim_{T \to \infty} \frac{1}{2T} \int_{-T}^{T} |x(t)|^2 dt$$
 (17)

for CT and

$$P_{\infty} = \lim_{N \to \infty} \frac{1}{2N+1} \sum_{n=-N}^{N} |x[n]|^2$$
 (18)

for DT time.

# **Transformations**

Just as with functions, signals can be transformed in time. Here are the different transformations that can be applied to signals.


# Time Shift

A CT time shift is given by  $x(t) \rightarrow x(t - t_0)$ , where  $t_0$  is real.

- $t_0 > 0$ : shifted to the right or delayed by  $t_0$
- $t_0 < 0$ : shifted to the left or advanced by  $t_0$


A DT time shift is given by  $x[n] \rightarrow x[n-n_0]$ , where  $n_0$  is an integer.

- $n_0 > 0$ : shifted to the right or delayed by  $n_0$
- $n_0 < 0$ : shifted to the left or advanced by  $n_0$

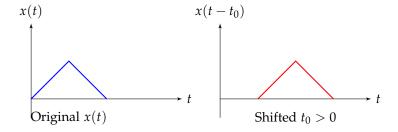

# Time Reversal

A CT time reversal is given by  $x(t) \rightarrow x(-t)$ . A DT time reversal is given by  $x[n] \rightarrow x[-n]$ .

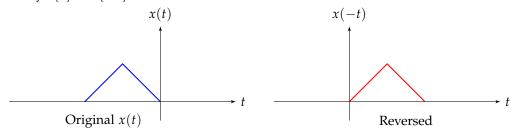


## Time Scaling

A CT time scaling is given by  $x(t) \rightarrow x(\alpha t)$ , where  $\alpha > 0$  is the time scaling factor.

If  $\alpha$  < 0, that's viewed as a combination of reversal and scaling.


- $\alpha > 1$ : shorter timescale, or sped up
- $\alpha$  < 1: longer timescale, or slowed down

A DT time scaling is given by  $x[n] \rightarrow x[\alpha n]$ .

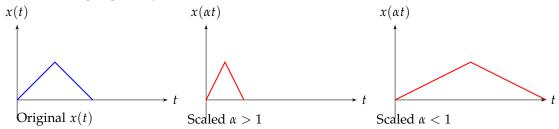

A signal is even if it's symmetric with respect to the dependent axis. Mathematically, if x(t) = x(-t).

A signal is odd if it's symmetric with respect to the origin. Mathematically, if x(-t) = -x(t).

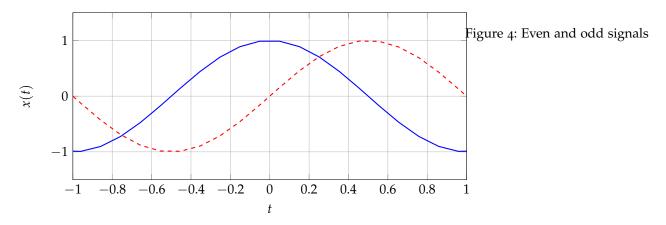

Even: 
$$x_{\text{even}}(t) = \cos(\pi t)$$
 - - Odd:  $x_{\text{odd}}(t) = \sin(\pi t)$ 

Signals can be odd, even, both, or neither. x(t) = 0, for instance, is both even and odd. x + 1 is neither.

The product of two odd signals is even (e.g.  $x \times x^3$ ). The product of two evens is even ( $x^2 \times 2$ ). The product of an odd and an even is odd

Any signal can be written as the sum of an even and an odd signal using these formulas:

$$x(t) = x_{even}(t) + x_{odd}(t)$$
(19)

$$=\frac{x(t)+x(-t)}{2}+\frac{x(t)-x(-t)}{2}$$
 (20)

(21)

$$x[n] = x_{even}[n] + x_{odd}[n]$$
 (22)

$$= \frac{x[n] + x[-n]}{2} + \frac{x[n] - x[-n]}{2}$$
 (23)

## Periodicity

A system is periodic if x(t) = x(t+T), or in the case of discrete time, if x[n] = x[n+N].

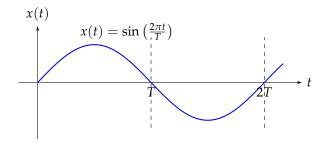


Figure 5: Periodic CT Signal

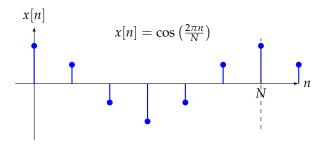



Figure 6: Periodic DT Signal

The fundemental period is the smallest  $T_0$  (or  $N_0$ ) such that x(t) = $x(t+T_0)$  (or  $x[n]=x[n+N_0]$ ). If x(t) is periodic,  $x_{Re}(t)+jx_{Im}(t)$  is also periodic. However, if  $x_1(t)$  and  $x_2(t)$  are periodic then it is not necessarily the case that  $x_1(t) + x_2(t)$  is periodic. Consider  $x_1(t) =$  $\sin(t)$  and  $x_2(t) = \sin(\sqrt{2}t)$ .  $x_1(t) + x_2(t) = \sin(t) + \sin(\sqrt{2}t)$ .  $x_1(t)$  has period  $2\pi$ .  $x_2(t)$  has period  $\frac{2\pi}{\sqrt{2}}$ . However, their sum is not periodic and in fact the sum of any  $x_1(t)$ ,  $x_2(t)$  will be aperiodic when the ratio of their periods is irrational. To get the average power of a periodic signal, we can just calculate the power over one period.

#### Periodicty in Discrete Time

Periods in discrete time differ in some unintuitive ways from the continuous time case. For instance, in CT, two functions with different  $\omega$  will never represent the same function. However, in DT, they can if  $\omega_2 = \omega_1 + 2\pi n$ . Functions like  $x[n] = \cos(n)$  are aperiodic in discrete time since the period as given by  $\frac{2\pi}{\omega}$  must be a rational number, and in this case it's  $2\pi$ . When  $\omega = k\pi$ , k = 1, 3, 5, ... and  $e^{jkn} = (-1)^n$ . In general, if

$$x_k[n] = e^{jk\frac{2\pi}{N}n} \tag{25}$$

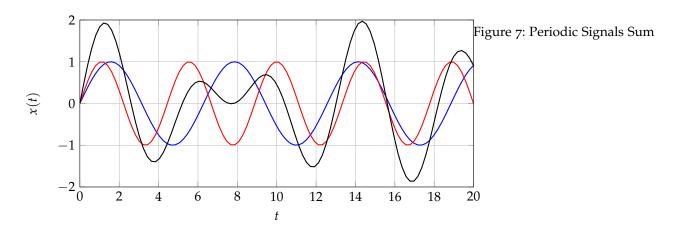

$$---x_1(t) = \sin(t) - ---x_2(t) = \sin(\sqrt{2}t) - ---x_1(t) + x_2(t)$$

then  $x_k[n]$  is unique only for k = 0, 1, ..., N - 1. Also in general,

$$N_k = LCM(\frac{N}{k}, 1) \tag{26}$$

## Unit Step Signal

The unit step signal, also known as the Heaviside step function, is o for values less than o and 1 otherwise.

Discrete-Time Unit Step Signal

The discrete-time unit step signal is defined as:

$$u[n] = \begin{cases} 1 & n \ge 0, \\ 0 & n < 0. \end{cases}$$

Or alternatively,

$$u[n] = \sum_{i = -\infty}^{n} \delta[i] \tag{27}$$

In either definition,

$$u[n] = 1$$
 for  $n \ge 0$ , and  $u[n] = 0$  for  $n < 0$ .

Figure 8 is the plot for the discrete-time unit step signal.

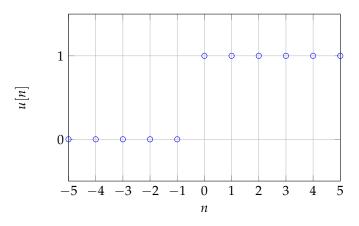


Figure 8: Discrete-Time Unit Step Signal

A useful property for signal sampling is that, if we just want to consider a section of the signal between 0 and  $n_0$ , we can just multiply x[n] by  $u[n] - u[n - n_0]$ .

Continuous-Time Unit Step Signal

The continuous-time unit step signal is defined as:

$$u(t) = \begin{cases} 1 & t \ge 0, \\ 0 & t < 0. \end{cases}$$

Or alternatively,

$$u(t) = \int_{-\infty}^{t} \delta(\tau) d\tau \tag{28}$$

We can also make the substitution  $\sigma = t - \tau$ , which gives

$$u(t) = \int_0^\infty \delta(t - \sigma) d\sigma \tag{29}$$

Figure 9 is the plot for the continuous-time unit step signal:

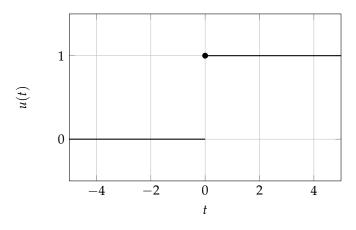


Figure 9: Continuous-Time Unit Step Signal

## Discrete-Time Delta Function

The discrete-time delta function, known as the Kronecker delta function, is defined as:

$$\delta[n] = \begin{cases} 1 & n = 0, \\ 0 & n \neq 0. \end{cases}$$

Figure 10 is the plot for the discrete-time delta function:

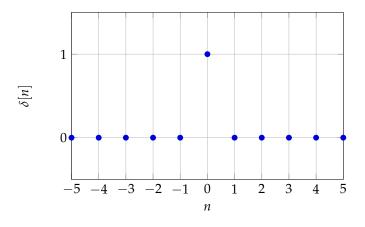


Figure 10: Discrete-Time Delta **Function** 

A useful property of the delta function in DT is that, since it is just equal to one when its argument is o, then

$$x[n] = \sum_{k = -\infty}^{\infty} x[k]\delta[n - k]$$
(30)

#### Continuous-Time Delta Function

The continuous-time delta function, known as the Dirac delta function or unit impulse, is defined as:

$$\delta(t) = \begin{cases} \infty & t = 0, \\ 0 & t \neq 0, \end{cases}$$

with the property that:

$$\int_{-\infty}^{\infty} \delta(t)dt = 1.$$

An alternative definition for  $\delta(t)$  is

$$\delta(t) = \frac{d}{dt}u(t) \tag{31}$$

Figure 11 is the plot for the continuous-time delta function. The height of the arrow indicates not the value of the function but its area, since the value is technically undefined.

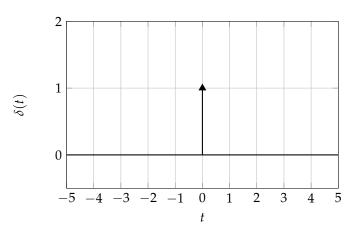


Figure 11: Continuous-Time Delta Function

The sampling property is the property that

$$x(t)\delta(t-\sigma) = x(\sigma)\delta(t-\sigma). \tag{32}$$

We can decompose x(t)

$$x(t) = x(t) \times 1 \tag{33}$$

$$= x(t) \int_{-\infty}^{\infty} \delta(t - \sigma) d\sigma \tag{34}$$

$$= \int_{-\infty}^{\infty} x(t)\delta(t-\sigma)d\sigma \tag{35}$$

$$= \int_{-\infty}^{\infty} x(\sigma)\delta(t-\sigma)d\sigma. \tag{36}$$

In DT, this becomes

$$x[n] = \sum_{k = -\infty}^{\infty} x[k]\delta[n - k]$$
(37)

## Complex Exponential

A CT complex exponential signal is of the form  $x(t) = Ce^{\alpha t}$ , where C and  $\alpha$  are in general complex. Alternatively,

$$x(t) = |C|e^{\sigma t}e^{j(\omega t + \phi)} \tag{38}$$

where  $\phi$  is the angle between the real axis and C when plotted on the complex plane and  $\alpha = \sigma + j\omega$ .

The  $\sigma$  term determines whether the signal has exponential growth, decay, or neither. If  $\sigma = 0$  then we are left with the periodic complex exponential  $e^{j(\omega t + \phi)}$  with period  $\frac{2\pi}{\omega}$ .

 $\omega$  is called the fundemental frequency,  $\phi$  is called the phase.

The signal  $x(t) = |C|e^{\sigma t}e^{j(\omega t + \phi)}$  forms a family of signals called harmonically related complex exponentials (HRCEs), each of the form

$$x_k(t) = e^{jk\omega_0 t}, k \in \mathbb{Z}. \tag{39}$$

These signals will serve as our building blocks when we construct Fourier series of complex exponential signals later on.

Let's now look at the discrete time complex exponential,

$$x[n] = C\alpha^n. (40)$$

In general, C and  $\alpha$  can be complex. This can be rewritten

$$x[n] = |C|e^{\sigma n}e^{j(\omega n + \phi)}. (41)$$

Where the continuous and discrete begin to diverge is when we consider the  $e^{j(\omega n + \phi)}$  term. This term is not always periodic, unlike the case of continuous time. For the CT case, the fundemental frequency is  $\omega$  and larger values of  $\omega$  produce higher rates of oscillation.

Now say we want to compute the fundemental period of x[n] = $\cos(3\pi n)$ . In the continuous case it's easy,  $\frac{2}{3}$ . In the discrete case, we need to find the least common multiple of the fundemental period of the CT signal (in this case,  $\frac{2}{3}$ ) and the sampling period. This is why the discrete case may not be periodic. Imagine the sampling period is 1 and the fundemental period of the CT signal is  $2\pi$ . Then the least common multiple does not exist.

Let's do an example problem. Consider the signal

$$x(t) = e^{j2t} + e^{j5t}. (42)$$

We can rewrite this, using the identity

$$\cos(\omega t) = \frac{e^{-j\omega t} + e^{j\omega t}}{2} \tag{43}$$

to the expression

$$e^{j3.5t}(e^{j1.5t} + e^{-j1.5t}) (44)$$

$$=2e^{j3.5t}\cos(1.5t) \tag{45}$$

$$|x(t)| = 2|\cos(1.5t)|\tag{46}$$

$$x[n] = C\alpha^n \tag{47}$$

$$= Ce^{\beta n} \tag{48}$$

is the general form of a discrete complex exponential and  $\beta$  is in general complex. If  $\alpha$  is real and less than o, then  $\beta$  must be complex.

# System Connections

Often we analyze a complex system as a set of subsystems connected to one another. These connections can take many forms, but some of the more common ones are in series, parallel, and feedback.

Series

$$y(t) = S_2(S_1(x(t))) \tag{49}$$



Figure 12: Series connection block diagram.

Parallel

$$y(t) = S_1(x(t)) + S_2(x(t))$$
(50)



Figure 13: connection block diagram.

Feedback

$$y(t) = S_1(x(t) - S_2(y(t)))$$
(51)

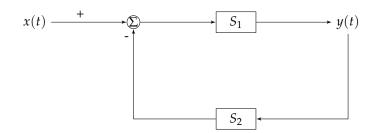


Figure 14: connection block diagram.

## System Properties

#### Memoryless

A *memoryless* system's output depends only on the input at time t (or *n* for discrete-time systems), and not on past or future states. For example, y(t) = 2x(t) is memoryless, while y[n] = x[n-1] has memory.

Recall that for any system,

$$y[n] = \sum_{k=-\infty}^{\infty} h[k]x[n-k]$$
 (52)

For a memoryless system, y[n] must be dependent only on x[n] and not some past or future inputs. That forces h[n] to be o for all values of n except o. Thus, for a memoryless system, the impulse response is the delta function times some scalar.

## Linear

A system is linear if it satisfies superposition and homogeneity. Formally, for any inputs  $x_1(t) \rightarrow y_1(t)$  and  $x_2(t) \rightarrow y_2(t)$ , and constants a, b, the system satisfies:

$$S\{ax_1(t) + bx_2(t)\} = aS\{x_1(t)\} + bS\{x_2(t)\} = ay_1(t) + by_2(t).$$

An example is y(t) = kx(t), where k is a constant.

#### Time Invariance

A system is *time invariant* if a time shift in the input results in an identical shift in the output. For a discrete-time system *S*, if:

$$x[n] \rightarrow y[n]$$
,

then for any integer  $n_0$ :

$$x[n-n_0] \rightarrow y[n-n_0].$$

Informally, a shift in the input signal must result in the output signal being shifted the same amount.

For continuous-time systems, this becomes  $x(t-\tau) \rightarrow y(t-\tau)$ . Time-dependent operations (e.g., y(t) = x(2t)) or explicit time-varying components make a system time variant.

#### Linear Time Invariant (LTI)

An LTI system satisfies both linearity and time invariance. LTI systems are fully characterized by their impulse response h(t) or h[n],

enabling analysis via convolution: y(t) = x(t) \* h(t). The impulse response is found by plugging in  $\delta(t)$  or  $\delta[n]$  to the system. The result is the impulse response. Mathematically,

$$h(t) = S(\delta(t)) \tag{53}$$

$$h[n] = S(\delta[n]). \tag{54}$$

#### Invertible

A system is *invertible* if distinct inputs produce distinct outputs. If there exist  $x_1(t) \neq x_2(t)$  such that  $y_1(t) = y_2(t)$ , the system is not invertible. Examples include:

- **Modulation**:  $y(t) = x(t)\cos(\omega t)$  (invertible with synchronous demodulation).
- **Sampling**: Invertible if the Nyquist criterion is satisfied.
- **Encoding**: Lossy compression (e.g., JPEG) is non-invertible.

For an invertible system  $S_1$ , there exists an inverse  $S_2$  such that:

$$S_2(S_1(x(t))) = S_1(S_2(x(t))) = x(t).$$

It would be useful to have a general method of determining the inverse, so that we can algorithmically find the inverse or prove a system is noninvertable. For LTI systems we know that y[n] = x[n] \* h[n]. When this is fed into the inverse system we get x[n] = x[n] \* h[n] \* $h_I[n]$ . So the impulse response of the inverse system convolved with the impulse response of the original system must be  $\delta$ . We will find a perfectly systematic way of determining  $h_I[n]$  when we examine Fourier transforms in the section on Fourier Transforms.

#### Causal

A system is *causal* if its output at time *t* depends only on present and past inputs. All memoryless systems are causal (e.g.,  $y(t) = x(t)^2$ ). A non-causal system (e.g., moving average  $y[n] = \frac{1}{3}(x[n+1] + x[n] +$ x[n-1])) requires future inputs.

For causal systems, the impulse response must be o for values of n(t) less than o.

#### Stable

A system is stable if bounded inputs produce bounded outputs. Formally, there exist constants B, M > 0 such that:

$$|x(t)| < B \ \forall t \implies |y(t)| < M \ \forall t.$$

Examples:

- Stable:  $y(t) = e^{-t}x(t)$ .
- Unstable:  $y(t) = \int_{-\infty}^t x(\tau) d\tau$  (unbounded integral for a constant input).

For a stable LTI system, the impulse response must be absolutely summable. That is,

$$\sum_{k=-\infty}^{\infty} |h[k]| < \infty. \tag{55}$$

Or for continuous time, absolutely integrable

$$\int_{-\infty}^{\infty} |h(\tau)| d\tau < \infty. \tag{56}$$

## Convolution

The *convolution* of a signal x with a signal h is given by

$$x(t) * h(t) = \int_{-\infty}^{\infty} x(\tau)h(t-\tau)d\tau$$
 (57)

$$x[n] * h[n] = \sum_{k=-\infty}^{\infty} x[k]h[n-k].$$
 (58)

Graphically, we can envision this as flipping h and sliding it along the horizontal axis, finding and summing the area of h times x as we slide *h* along. *x* remains stationary, so the bounds of the integral (or summation in the discrete case) are determined by the window of overlap between x and the flipped h (see figure 15).

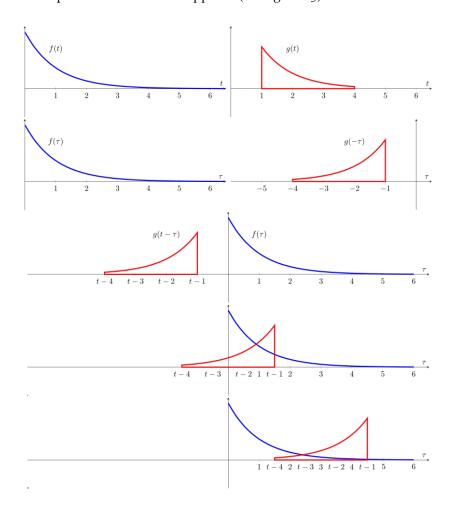


Figure 15: Convolution

This definition may seem arbitrary at first, but convolution has incredibly useful properties in signal analysis. For instance, an LTI system is completely characterized by its impulse response h, the

value obtained by plugging in  $\delta$  to the system, with y = x \* h. Recall the sifting property of the unit impulse,

$$x(t) = \int_{-\infty}^{\infty} x[\tau] \delta[\tau - t] d\tau$$
 (59)

$$x[n] = \sum_{k=-\infty}^{\infty} x[k]\delta[n-k]$$
 (60)

This property is useful in that it allows us to represent x(t) or x[n] as a series of scaled very simple functions. It also tells us that xconvolved with  $\delta$  yields x.

Convolution has the following properties:

- Commutativity:  $x_1(t) * x_2(t) = x_2(t) * x_1(t)$
- Distributivity over addition:  $x_1(t) * (x_2(t) + x_3(t)) = x_1(t) * x_2(t) + x_3(t)$  $x_1(t) * x_3(t)$
- Associative:  $x_1(t) * (x_2(t) * x_3(t)) = (x_1(t) * x_2(t)) * x_3(t)$

## Fourier Transforms

Eigenfunctions and H(s)

An eigenfunction  $x(t) = e^{j\omega t}$  is a function such that  $S\{x(t)\} = Ax(t)$ for LTI S. A property of functions of the form  $e^{j\omega t}$  is that convolution with h(t) yields

$$x(t) * h(t) = e^{j\omega t} \int_{-\infty}^{\infty} h(\tau)e^{-j\omega\tau} d\tau.$$
 (61)

This is also written as

$$x(t) * h(t) = e^{j\omega t} \left( |H(j\omega)| e^{j\angle H(j\omega)} \right)$$
 (62)

*H* is known as the transfer function as has the property that Y(S) =H(s)X(s), where Y(s) and X(s) are the Laplace transforms of y(t)and x(t).

## Fourier Transform

Throughout this class we will sometimes see the expression  $X(j\omega)$  or  $X(e^{j\omega})$ . Note that these are defined as

$$X(j\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t}dt$$
 (63)

for CT and

$$X(e^{j\omega}) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\omega n}$$
 (64)

for DT. This transformation is known as the Fourier Transform and works for well-behaved signals. A signal x(t) is well-behaved iff

- x(t) is absolutely integrable over its domain.
- x(t) has finite maximum and minimum.
- x(t) has finite discontinuities.

The original signal can be recovered with

$$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(j\omega) e^{j\omega t} d\omega \tag{65}$$

in CT and

$$x[n] = \frac{1}{2\pi} \int_{-\pi}^{\pi} X(e^{j\omega}) e^{j\omega n} d\omega$$
 (66)

in DT.

If the Fourier series of

$$x(t) = \sum_{k = -\infty}^{\infty} a_k e^{jk\omega_0 t} \tag{67}$$

then the Fourier transform is

$$X(j\omega) = \sum_{k=-\infty}^{\infty} 2\pi a_k \delta(\omega - k\omega_0). \tag{68}$$

This property quickly tells us that the Fourier transform of  $e^{jk\omega_0t}$  is  $2\pi\delta(\omega - k\omega_0)$ . From this the Fourier transforms of sinusoidals quickly follow.

Another important periodic signal is the impulse train,

$$\sum_{k=-\infty}^{\infty} \delta(t - kT). \tag{69}$$

The Fourier series coefficients for the impulse train are simply  $a_k = \frac{1}{T}$ , so the Fourier transform is  $X(j\omega) = \frac{2\pi}{T} \sum_{k=-\infty}^{\infty} \delta(\omega - \frac{2\pi k}{T})$ 

Note that as *T* increases, the impulse train gets wider and wider while its Fourier transform gets narrower and narrower. This is because, as we will see often, time and frequency are inversely related. In general, we will find that

$$x(at) \leftrightarrow \frac{1}{|a|} X(\frac{j\omega}{a}).$$
 (70)

If x(t) is real, then  $|X(j\omega)|$  is even and  $\angle X(j\omega)$  is odd. Moreover, if x(t) is real and even, then  $X(j\omega)$  must be purely real and even, and if x(t) is real and odd,  $X(j\omega)$  is purely imaginary and odd.

Arguably the most important property we will see is duality. As an example, a sinc function in time is a rectangular pulse in frequency, while a rectangular pulse in time is a sinc function in frequency. Formally,

$$F\{X(t)\} = 2\pi x(-\omega). \tag{71}$$

#### Fourier Transform Properties

Table 1 tabulates useful properties of Fourier transforms.

Table 2 tabulates the Fourier transform of common continuous time functions.

Table 3 tabulates the Fourier transform of common discrete time functions.

#### Continuous Time Fourier Series

Consider an arbitrary periodic CT signal x(t) with fundemental period T and fundemental frequency  $\omega_0$ . The Fourier series representation of x(t) is

$$x(t) = \sum_{k=-\infty}^{\infty} a_k e^{jk\omega_0 t}$$
 (72)

$$= a_0 + a_1 e^{j\omega_0 t} + a_{-1} e^{-j\omega_0 t} + a_2 e^{2j\omega_0 t} + \dots$$
 (73)

Property	Time Domain		Frequency Domain
Linearity	$Ax_1(t) + Bx_2(t)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$AX_1(j\omega) + BX_2(j\omega)$
Time Shifting	$x(t-t_0)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$X(j\omega)e^{-j\omega t_0}$
Frequency Shifting	$x(t)e^{j\omega_0t}$	$\overset{\mathcal{F}}{\leftrightarrow}$	$X(j(\omega-\omega_0))$
Time Scaling	x(at), $a > 0$	$\overset{\mathcal{F}}{\leftrightarrow}$	$\frac{1}{ a }X\left(\frac{j\omega}{a}\right)$
Time Reversal	x(-t)	$\overset{\mathcal{F}}{\leftrightarrow}$	$X(-j\omega)$
Conjugation	$x^*(t)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$X^*(-j\omega)$
Differentiation	$\frac{d^n}{dt^n}x(t)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$(j\omega)^n X(j\omega)$
Integration	$\int_{-\infty}^{t} x(\tau) d\tau$	$\overset{\mathcal{F}}{\leftrightarrow}$	$\frac{X(j\omega)}{j\omega} + \pi X(0)\delta(\omega)$
Convolution	$(x_1 * x_2)(t)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$X_1(j\omega)X_2(j\omega)$
Multiplication	$x_1(t)x_2(t)$	$\overset{\mathcal{F}}{\leftrightarrow}$	$\frac{1}{2\pi}(X_1 * X_2)(j\omega)$
Parseval's Theorem	$\int_{-\infty}^{\infty}  x(t) ^2 dt$	$\overset{\mathcal{F}}{\leftrightarrow}$	$\frac{1}{2\pi} \int_{-\infty}^{\infty}  X(j\omega) ^2 d\omega$

Table 1: **Fourier** Transforms

Time Domain Function	Fourier Transform
$\delta(t)$	1
1	$2\pi\delta(\omega)$
u(t)	$\pi  \delta(\omega) + \frac{1}{j\omega}$
$e^{-at}u(t)$ , $\Re(a)>0$	$\frac{1}{a+j\omega}$
$\cos(\omega_0 t)$	$\pi \Big[ \delta(\omega - \omega_0) + \delta(\omega + \omega_0) \Big]$
$\sin(\omega_0 t)$	$\frac{\pi}{j} \left[ \delta(\omega - \omega_0) - \delta(\omega + \omega_0) \right]$
rect(t/T)	$T\operatorname{sinc}\left(\frac{\omega T}{2}\right)$
$e^{-t^2}$	$\sqrt{\pi} e^{-\omega^2/4}$

Table 2: CT Fourier Transforms

where  $a_k$  is the kth Fourier coefficient and can be found with the formula

$$a_k = \frac{1}{T} \int_{\langle T \rangle} x(t) e^{-jk\omega_0 t} dt \tag{74}$$

with  $\langle T \rangle : [0, T], [-\frac{T}{2}, \frac{T}{2}, ...]$ . Equation 72 is known as the synthesis equation. The process of of finding  $a_k$  is Fourier analysis.

Notably,  $a_0$  gives the DC component of the signal. In general the  $a_{\pm k}$  are the *k*th harmonic components.

Let's see an example. Let x(t) be a square wave given by

$$x(t) = \begin{cases} 1 & |t| < T_1 \\ 0 & T_1 < |t| < \frac{T}{2} \end{cases}$$
 (75)

Time Domain Function	Fourier Transform	Table 3: DT Fourier Transforms
$\delta[n]$	1	
1	$2\pi \sum_{k=-\infty}^{\infty} \delta(\omega - 2\pi k)$	
$a^n u[n],   a  < 1$	$\frac{1}{1-ae^{-j\omega}}$	_
$\cos(\omega_0 n)$	$\pi \sum_{k=-\infty}^{\infty} \left[ \delta(\omega - \omega_0 - 2\pi k) + \delta(\omega + \omega_0 - 2\pi k) \right]$	
$\sin(\omega_0 n)$	$\pi \sum_{k=-\infty}^{\infty} \left[ \delta(\omega - \omega_0 - 2\pi k) + \delta(\omega + \omega_0 - 2\pi k) \right]$ $\frac{\pi}{j} \sum_{k=-\infty}^{\infty} \left[ \delta(\omega - \omega_0 - 2\pi k) - \delta(\omega + \omega_0 - 2\pi k) \right]$	c $c$
$\operatorname{rect}\left(\frac{n}{N}\right)$	$\frac{\sin\left(\frac{\omega N}{2}\right)}{\sin\left(\frac{\omega}{2}\right)} e^{-j\omega\frac{N-1}{2}}$	

x(t)

We calculate  $a_k$  as

$$a_k = \frac{1}{T} \int_{\langle T \rangle} x(t) e^{-jk\omega_0 t} dt \tag{76}$$

$$= -\frac{1}{jk\omega_0 T} \left[ e^{-jk\omega_0 T_1} - e^{jk\omega_0 T_1} \right] \tag{77}$$

$$= \frac{1}{k\omega_0 T} \left[ \frac{e^{jk\omega_0 T_1} - e^{-jk\omega_0 T_1}}{j} \right] \tag{78}$$

$$=\frac{2}{\omega_0 T} \sin(k\omega_0 T_1) \tag{79}$$

$$=\frac{1}{\pi k}\sin(k\omega_0 T_1)\tag{80}$$

This expression for  $a_0$  is fine, however, there is a problem. When k = 0we have a discontinuity. In general we may have to find  $a_0$  separately. It's not a big deal:  $a_0 = \frac{1}{T} \int_{-T_1}^{T_1} x(t) dt$  in general".

## Discrete Time Fourier Series

In discrete time, an arbitrary periodic signal x[n] with fundemental period N and fundemental frequency  $\omega_0$ . The Fourier series representation of x[n] is

$$x[n] = \sum_{k=\langle N \rangle} a_k x_k[n]$$

$$= \sum_{k=\langle N \rangle} a_k e^{jk\omega_0 n}$$
(81)

$$= \sum_{k=\langle N \rangle} a_k e^{jk\omega_0 n} \tag{82}$$

This expression yields a system of n linear equations with n unknowns, namely  $x[0], x[1], \ldots, x[n]$ . In theory we could solve this, perhaps using computers or linear algebra, but in practice there is a simpler way. Multiply equation 81 by  $e^{-jr\frac{2\pi}{N}n}$  for any r and sum over N terms. Then

$$\sum_{n=< N>} x_k[n] e^{-jr\frac{2\pi}{N}n} = \sum_{n=< N>} a_k \sum_{n=< N>} e^{j(k-r)(\frac{2\pi}{N})n}.$$
 (83)

Solving for  $a_k$ ,


$$a_k = \frac{1}{N} \sum_{n = \langle N \rangle} x[n] e^{-jk\frac{2\pi}{N}n}, \tag{84}$$

which is the synthesis equation in discrete time.

A fun property is that  $a_{k+N} = a_k$ , so  $a_k$  are periodic in N.

## Spectrum Analysis

 $a_k$  as a function of  $\kappa$  as:  $\det T_1 = \frac{T}{4}. \text{ Then } a_k = \frac{\sin(\pi \frac{k}{2})}{k\pi}.$   $\uparrow x(t)$  $a_k$  as a function of k given the *spectrum* of x(t). Let's see an example:

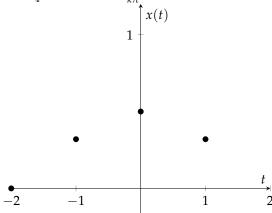

# Fourier Series Properties

Some useful properties follow from the definition of the Fourier series.

Property	Time Domain		Frequency Domain
Linearity	$Ax_1(t) + Bx_2(t)$	$\overset{FS}{\leftrightarrow}$	$Aa_k + Bb_k$
Even Symmetry	x(t) even	$\overset{FS}{\leftrightarrow}$	$a_k$ even
Odd Symmetry	x(t) odd	$\overset{FS}{\leftrightarrow}$	$a_k$ odd
Time Shifting	$x(t-t_0)$	$\overset{FS}{\leftrightarrow}$	$a_k e^{-jk\omega_0 t_0}$
Frequency Shifting	$x(t)e^{jn\omega_0t}$	$\overset{FS}{\leftrightarrow}$	$a_{k-n}$
Time Reversal	x(-t)	$\overset{FS}{\leftrightarrow}$	$a_{-k}$
Conjugation	$x^*(t)$	$\overset{FS}{\leftrightarrow}$	$a_{-k}^*$
Periodic Convolution	(x * y)(t)	$\overset{FS}{\leftrightarrow}$	$a_k b_k$
Multiplication	x(t)y(t)	$\overset{FS}{\leftrightarrow}$	$\sum_{n=-\infty}^{\infty} a_n b_{k-n}$
Differentiation	$\frac{d}{dt}x(t)$	$\overset{FS}{\leftrightarrow}$	$jk\omega_0a_k$
Integration	$\int x(t)dt$	$\overset{FS}{\longleftrightarrow}$	$\frac{a_k}{ik\omega_0}$ if $a_0=0$ )
Parseval's Theorem	$\frac{1}{T} \int_{T}  x(t) ^{2} dt$	$\overset{FS}{\leftrightarrow}$	

6

Property	Time Domain		Frequency Domain
Linearity	$A x_1[n] + B x_2[n]$	$\overset{DTFS}{\leftrightarrow}$	$A a_k + B b_k$
Even Symmetry	x[n] even (i.e., $x[n] = x[-n]$ )	$\overset{DTFS}{\leftrightarrow}$	$a_k$ even
Odd Symmetry	x[n] odd (i.e., $x[n] = -x[-n]$ )	$\overset{DTFS}{\leftrightarrow}$	$a_k$ odd
Time Shifting	$x[n-n_0]$	$\overset{DTFS}{\longleftrightarrow}$	$a_k e^{-j\frac{2\pi}{N}kn_0}$
Frequency Shifting	$x[n] e^{j\frac{2\pi}{N}n_0n}$	$\overset{DTFS}{\longleftrightarrow}$	$a_{(k-n_0) \bmod N}$
Time Reversal	x[-n]	$\overset{DTFS}{\leftrightarrow}$	$a_{-k}$ (indices mod $N$ )
Conjugation	$x^*[n]$	$\overset{DTFS}{\longleftrightarrow}$	$a_{-k}^*$
Circular Convolution	$(x \circledast y)[n]$	$\overset{DTFS}{\leftrightarrow}$	$a_k b_k$
Multiplication	x[n]y[n]	$\overset{DTFS}{\longleftrightarrow}$	$\frac{1}{N} \sum_{m=0}^{N-1} a_m b_{(k-m) \bmod N}$
Difference Operator	x[n] - x[n-1]	$\overset{DTFS}{\leftrightarrow}$	$a_k \left(1 - e^{-j\frac{2\pi}{N}k}\right)$
Parseval's Theorem	$\frac{1}{N}\sum_{n=0}^{N-1} x[n] ^2$	$\overset{DTFS}{\longleftrightarrow}$	$\sum_{k=0}^{N-1}  a_k ^2$