A2L knot: part and joint map

10 freshly partitioned knot sections. 14 joints: six fully hidden, two partly covered, six fully exposed.

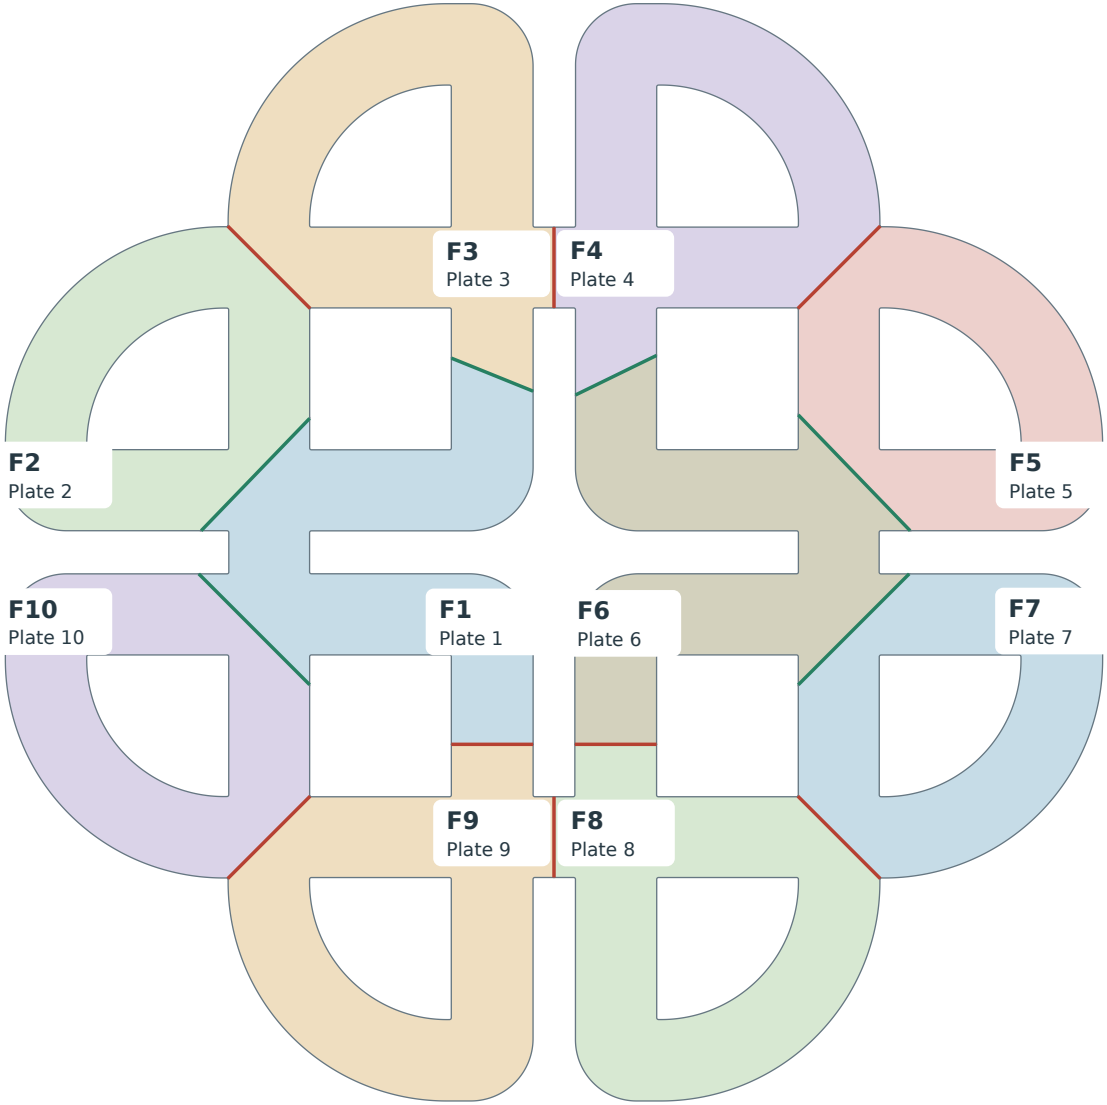


Plate / contents	Hours	g
01 F1 knot	8.0	224
02 F2 knot	7.1	208
03 F3 knot	9.0	248
04 F4 knot	9.0	251
05 F5 knot	7.2	208
06 F6 knot	7.8	221
07 F7 knot	7.4	204
08 F8 knot	8.8	248
09 F9 knot	8.7	250
10 F10 knot	7.4	205

Green: concealed behind the band-free M.

Red: seam has a visible portion.

Glue order: F9 > F8 > F10 > F7 > F2 > F5 > F4 > F3 > F1 > F6


Keep saved part rotations and prime-tower positions.

Surface directions are compensated; cosmetic edges have zero nominal gap.


A2L M: five flat cores, three veneers

All convex crown and hammer texture is in the flat-backed veneer. No seam-cover bands.

Five flat cores / plates 11-14

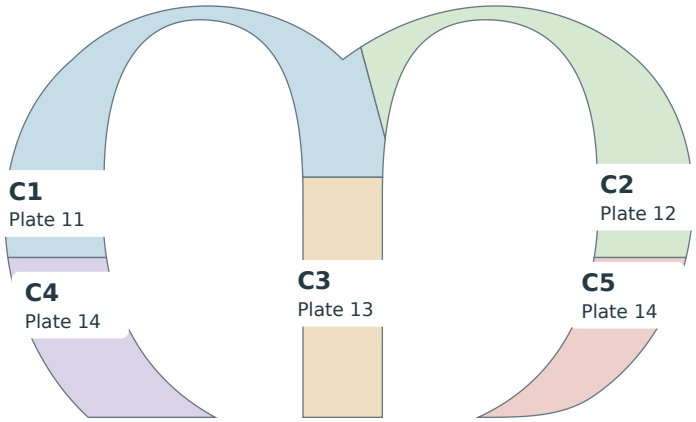

Veneers / plates 15-17

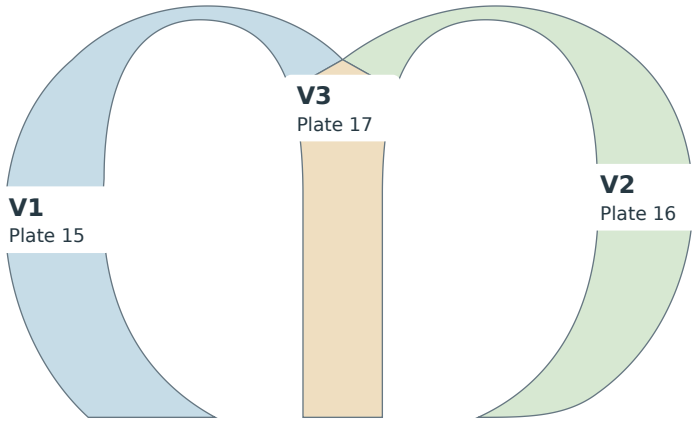

Cores: constant 8.4 mm main body. Veneer backs: Z8.6. Hidden glue space: 0.20 mm.

Two face seams in the broad fork total 105.6 mm. Narrow arches stay continuous; core seams are staggered.

All three veneers share the complete 55-degree lean and in-plane direction. Show planes run along bed Y.

Keep veneer rotations. Cut recessed necks; remove separate ribs, fins and guards. Sand hidden backs flat.

Production checklist: A2L + A1

A2L: plates 1-17, including ALL M cores and veneers. A1 companion: plates 1-3. Skip A2L 18-20.

Plate / contents	Hours	g
11 C1 upper left	3.9	99
12 C2 upper right	3.1	79
13 C3 stem	2.0	53
14 C4 + C5 lower cores	3.3	89
15 V1 veneer + carrier	30.6	457
16 V2 veneer + carrier	28.3	422
17 V3 veneer + carrier	16.6	275
A1-1 Backers 1, 3, 5, 7	2.3	99
A1-2 Backers 2, 4, 6, 8	2.3	99
A1-3 4 wall blocks + 32 retainers	5.0	145

Print tracking: A2L plates 1-17

☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8 ☐ 9 ☐ 10

☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16 ☐ 17

A1 companion: ☐ 1 ☐ 2 ☐ 3

Split plan: 177.8 hours / 4086 g including support and purge.

Filament lot / adhesive: _____

Fit, reflection, cleanup notes: _____

_____

- ☐ Open each 3MF as a project; verify its printer.
- ☐ Verify slots: white / tan / copper silk / blue.
- ☐ Inspect plate preview before each first print.
- ☐ Print a full joint pair; check fit and 8% stiffness.
- ☐ Print one full veneer; inspect restraint / cupping.
- ☐ Trim fins progressively; cradle the hammered face.
- ☐ Sand rear lands flat; preserve locators and edges.
- ☐ Dry-fit all five cores on a flat reference.
- ☐ Dry-fit veneers; inspect both seams in grazing light.
- ☐ Check matching M pins, screws and screw tips.
- ☐ Glue in hidden relief; keep stops and edges dry.
- ☐ Confirm photos, backers, retainers and wall blocks.