Knot section and plate map

The existing A1 knot remains 20 sections with 32 mirrored joints. Its saved slices are preserved.

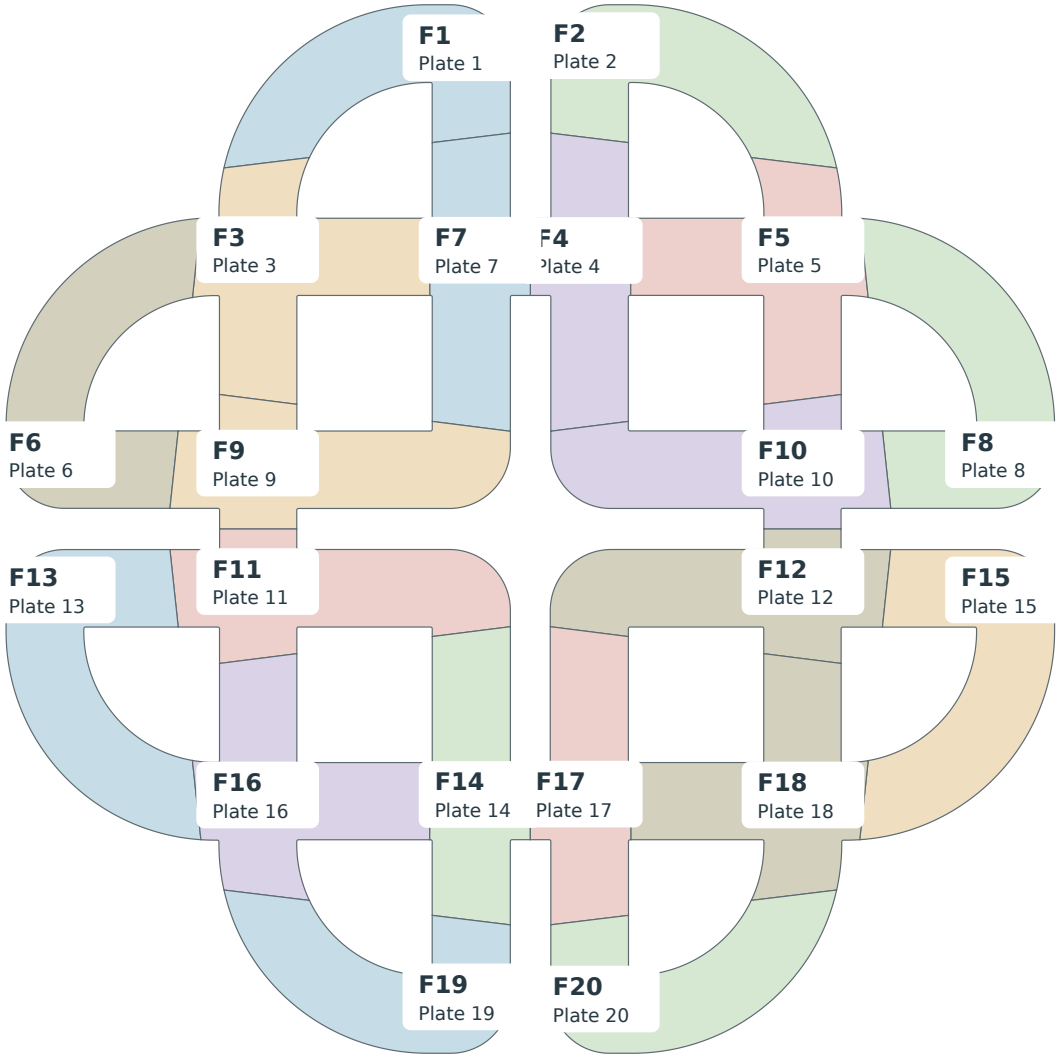


Plate	Part	Hours	g
01	F1	6.8	124
02	F2	6.8	124
03	F3	8.5	143
04	F4	6.2	107
05	F5	8.5	143
06	F6	8.1	146
07	F7	6.2	110
08	F8	8.0	146
09	F9	7.7	135
10	F10	7.5	134
11	F11	8.0	140
12	F12	7.6	137
13	F13	8.1	146
14	F14	6.2	110
15	F15	8.1	146
16	F16	8.4	142
17	F17	6.1	106
18	F18	8.8	146
19	F19	6.8	124
20	F20	6.6	122

White / wood tan / blue remain in their saved slots.


Knot zero-gap refinements remain a separate test.

Keep saved scale and rotations. Open Dara.3mf as a project, with its embedded settings and slices.


Flat M core and veneer map

Use the six new cores and six matching veneers together. The original M parts and cover bands are superseded.

Flat structural cores

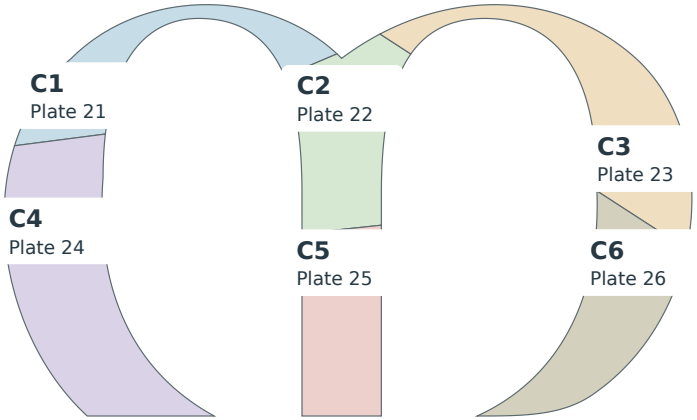

Hammered veneers

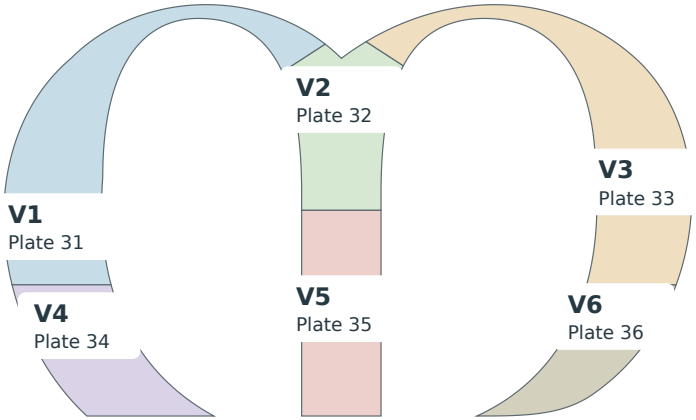

Cores: flat 8.4 mm main body. Veneers: flat backs with all crown and hammer texture on the front.

Zero nominal veneer seam gap. Hidden veneer-to-core glue space: 0.20 mm. No cover bands.

V1-V6 share the complete 55-degree orientation. Broad face planes run along bed Y; lean is across X.

Do not rotate individual veneers. Moving them on the bed preserves direction; automatic reorientation does not.

M printing and remaining plates

A1 / 0.4 mm nozzle / 0.20 mm layers / textured PEI. Filaments: 1 white, 2 tan, 3 copper silk, 4 blue.

Plate	Part	Hours	g
21	C1	2.8	49
22	C2	2.9	54
23	C3	3.5	65
24	C4	4.3	87
25	C5	2.5	47
26	C6	3.0	57
31	V1	24.3	272
32	V2	10.6	117
33	V3	37.7	470
34	V4	11.6	136
35	V5	10.4	118
36	V6	10.9	124

Plate	Part	Hours	g
27	Backers 1, 3, 5, 7	2.9	99
28	Backers 2, 4, 6, 8	2.8	99
29	4 wall blocks + 32 retainers	8.8	151
30	Optional finish sample	1.4	18

Six-core + six-veneer M estimate:

1596 g / 124.5 hours including supports

The 8% infill trial remains in the sample project.

Current samples: All-Development-Tests-A1-Sliced.3mf

Complete project estimates include optional plate 30.

Cores: 15% gyroid, 4 walls, 5 top/bottom layers.

Veneers and bonded fin carriers: 100% infill.

Fins and starter shoes are intentionally bonded.

V1/V3: remove the sacrificial perimeter guards too.

Trees supplement the carriers; trim deliberately.

Cradle the hammered face while cutting supports.

Sand hidden rear lands flat on the granite plate.

Preserve the stops, locator pockets and seam edges.

Dry-fit all cores and veneers before using adhesive.

Keep glue off the stops and cosmetic closing lands.

Use light clamping, a soft liner and release film.

Physical fit, support removal and finish need checking.

Old copper bands on former plate 31 are removed. Plate 31 now prints veneer V1.

Inspect the native preview before printing. This map follows the saved release plate numbers.