A2L knot: part and joint map

10 freshly partitioned knot sections. 14 joints: six fully hidden, two partly covered, six fully exposed.

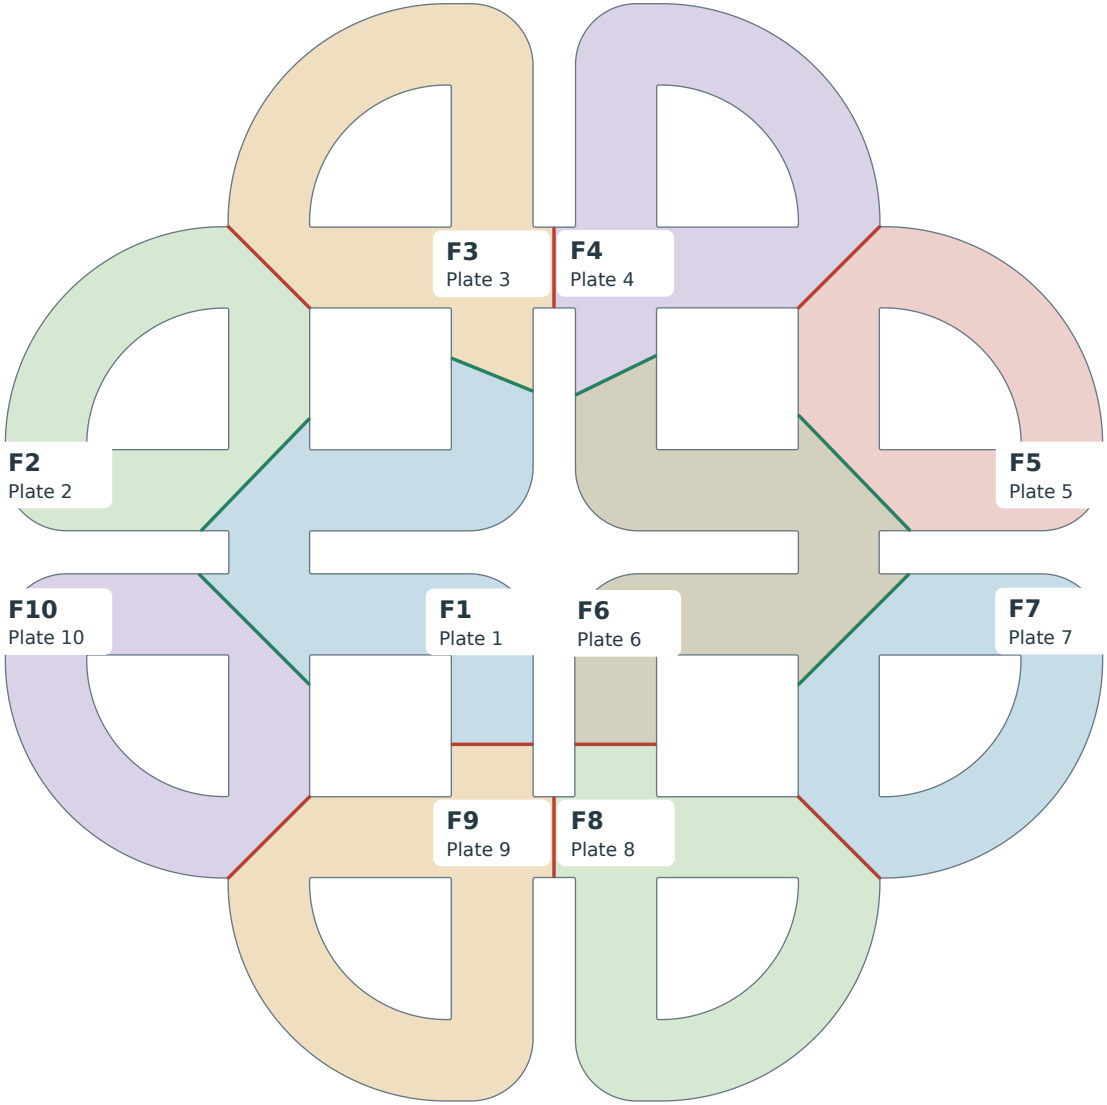


Plate / contents	Hours	g
01 F1 knot	8.1	224
02 F2 knot	7.2	208
03 F3 knot	9.0	248
04 F4 knot	9.0	251
05 F5 knot	7.2	208
06 F6 knot	7.8	221
07 F7 knot	7.4	205
08 F8 knot	8.8	248
09 F9 knot	8.7	250
10 F10 knot	7.4	205

Green: concealed behind the band-free M.

Red: seam has a visible portion.

Glue order: F9 > F8 > F10 > F7 > F2 > F5 > F4 > F3 > F1 > F6


Keep saved part rotations and prime-tower positions.

Surface directions are compensated; cosmetic edges have zero nominal gap.


A2L M: four flat cores, three veneers

All convex crown and hammer texture is in the flat-backed veneer. No seam-cover bands.

Flat cores / plates 11-14

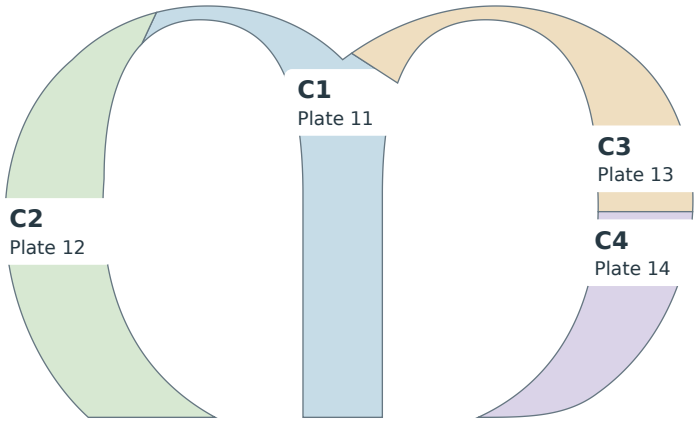

Veneers / plates 15-17

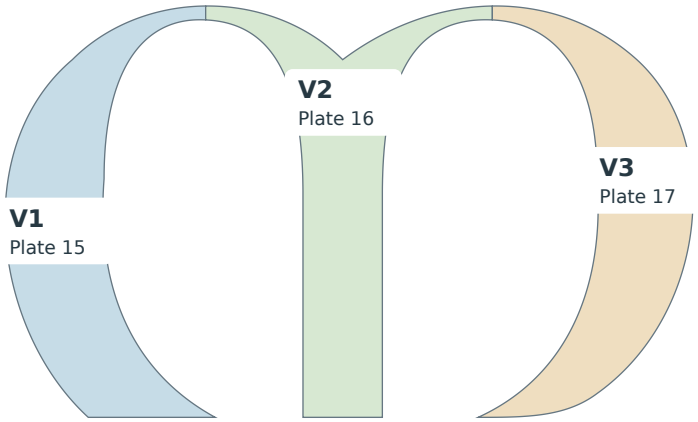

Cores: constant 8.4 mm main body. Veneer backs: Z8.6. Hidden glue space: 0.20 mm.

Two veneer seams total about 24 mm in front projection; their actual front edges match at zero nominal gap.

All three veneers share the complete 55-degree lean and in-plane direction. Show planes run along bed Y.

Do not rotate individual veneers. Clip bonded fins, tabs, starter shoes and perimeter guards; sand hidden backs flat.

Production checklist

Print one demanding knot joint and one core / veneer first. Physical fit, silk restraint and finish need confirmation.

Plate / contents	Hours	g
11 C1 flat core	3.7	98
12 C2 flat core	3.8	100
13 C3 flat core	2.5	63
14 C4 flat core	2.0	51
15 V1 veneer + carrier	27.5	433
16 V2 veneer + carrier	22.2	368
17 V3 veneer + carrier	24.8	386
18 Backers 1, 3, 5, 7	2.3	99
19 Backers 2, 4, 6, 8	2.3	99
20 4 wall blocks + 32 retainers	5.0	145

Print tracking: mark each plate when complete

☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8 ☐ 9 ☐ 10

☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16 ☐ 17 ☐ 18 ☐ 19 ☐ 20

- ☐ Open the 3MF as a project; verify the A2L profile.
- ☐ Verify slots: white / tan / copper silk / blue.
- ☐ Inspect plate preview before each first print.
- ☐ Print a full joint pair; check fit and 8% stiffness.
- ☐ Print one full veneer; inspect restraint / cupping.
- ☐ Trim fins progressively; cradle the hammered face.
- ☐ Sand rear lands flat; preserve locators and edges.
- ☐ Dry-fit the four cores on a flat reference.
- ☐ Dry-fit veneers; inspect both seams in grazing light.
- ☐ Check matching M pins, screws and screw tips.
- ☐ Glue in hidden relief; keep stops and edges dry.
- ☐ Confirm photos, backers, retainers and wall blocks.

All 20 plates: 176.6 hours / 4111 g including support and purge.

Filament lot / adhesive: _____

Fit, reflection, cleanup notes: _____

_____