

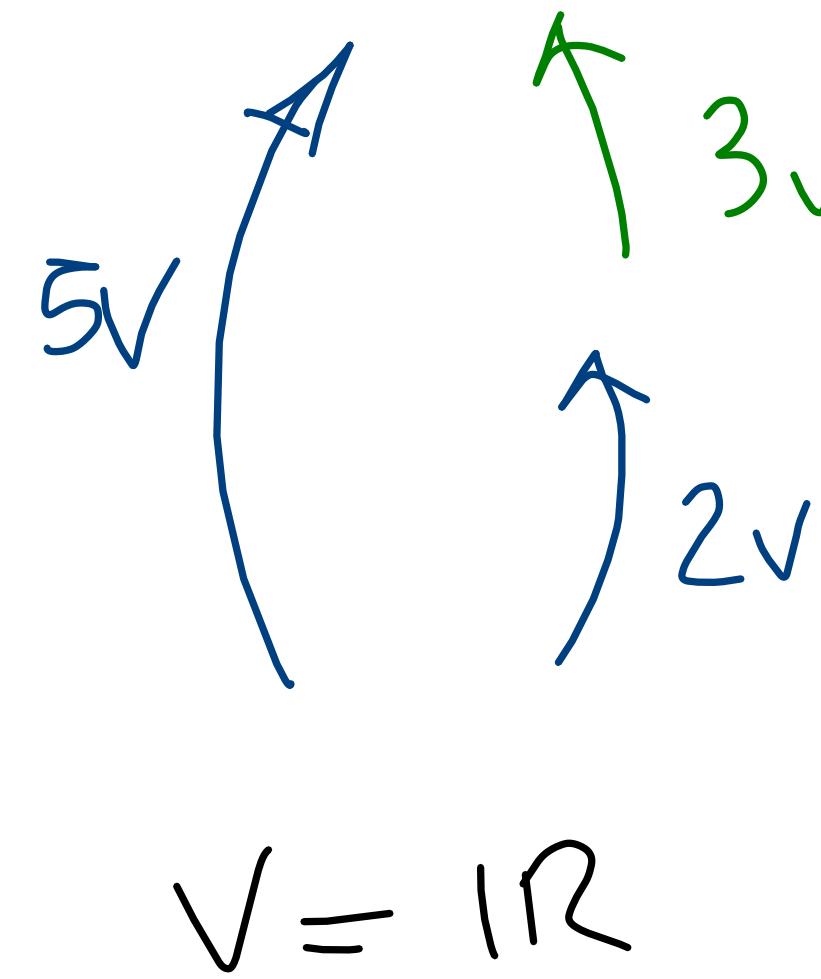




$$10 \text{ mA} \quad 0,01 \text{ A}$$

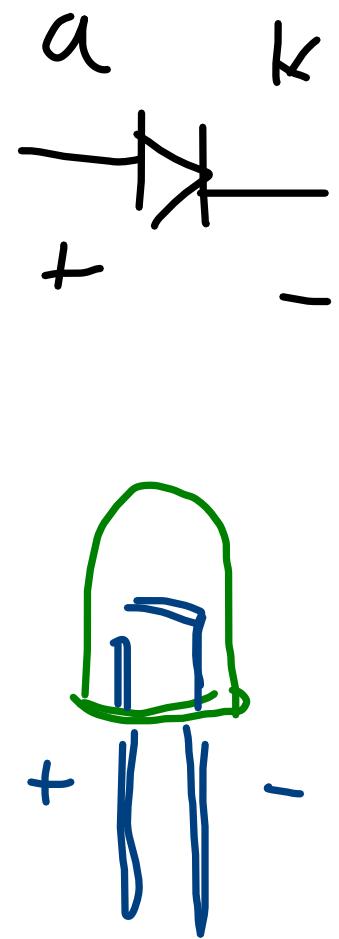

$$R = \frac{V}{I} = \frac{3V}{0,01} =$$

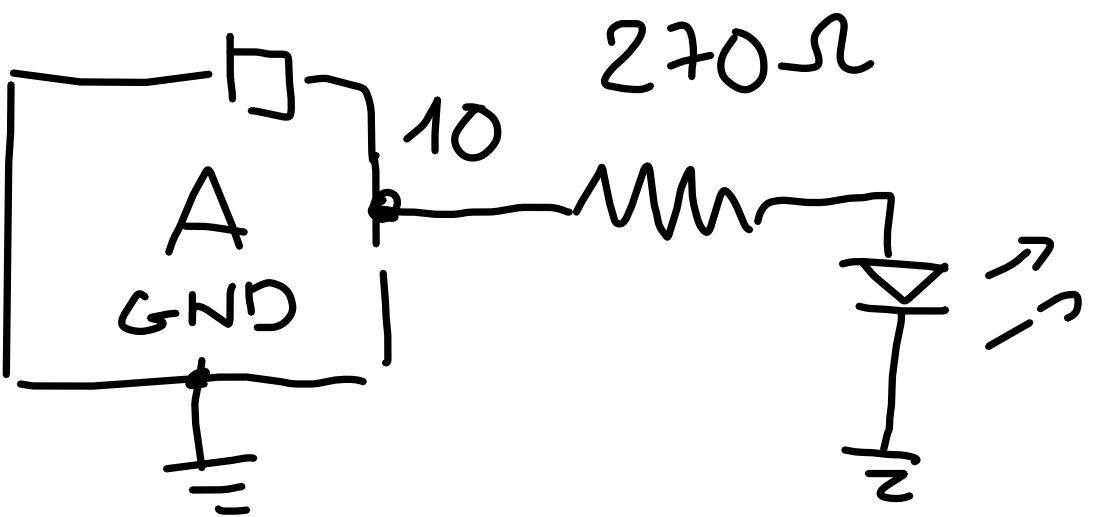


PWM Pulse Width Modulation

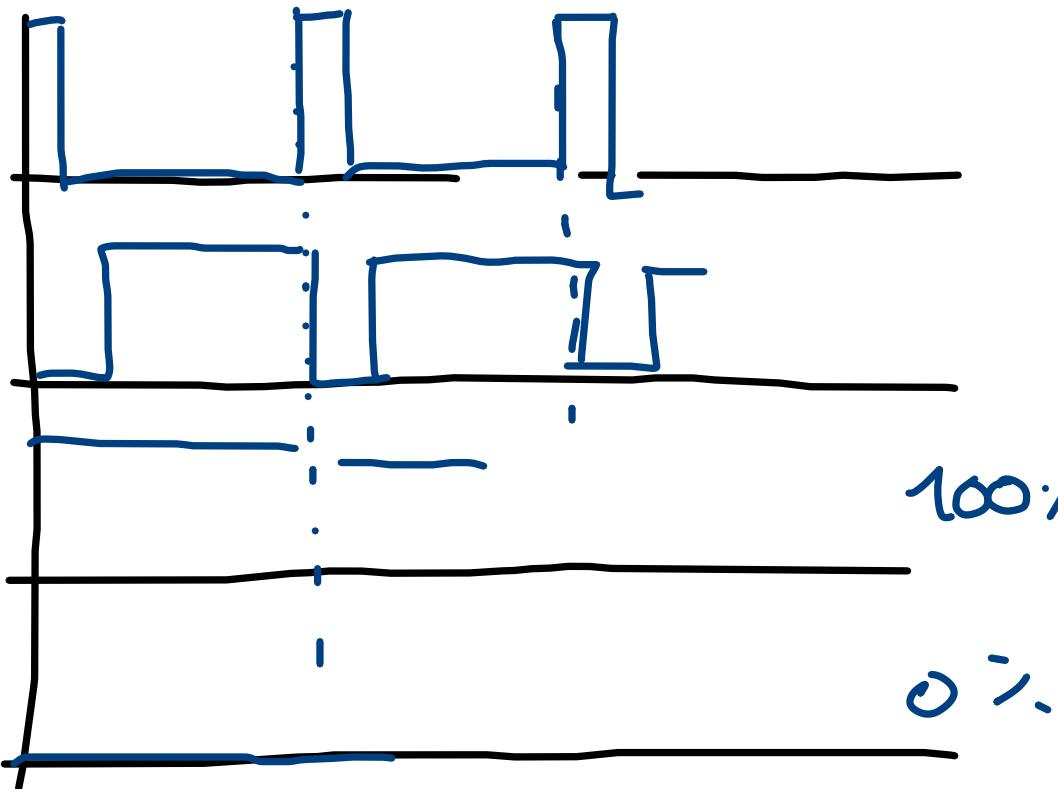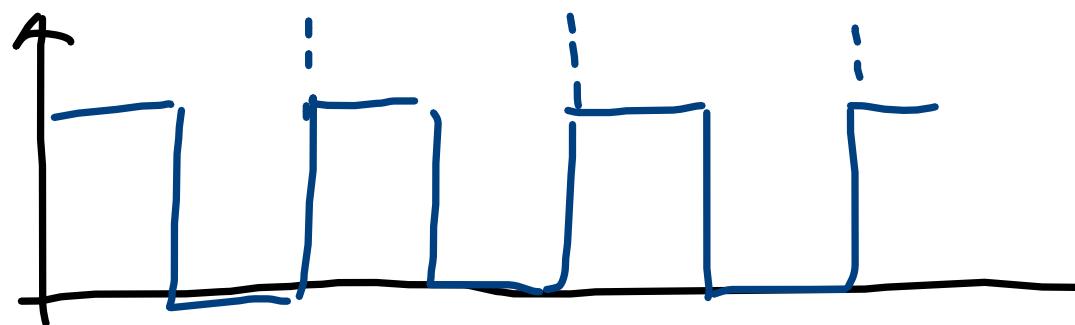


100%



0%

PULSANTÍ

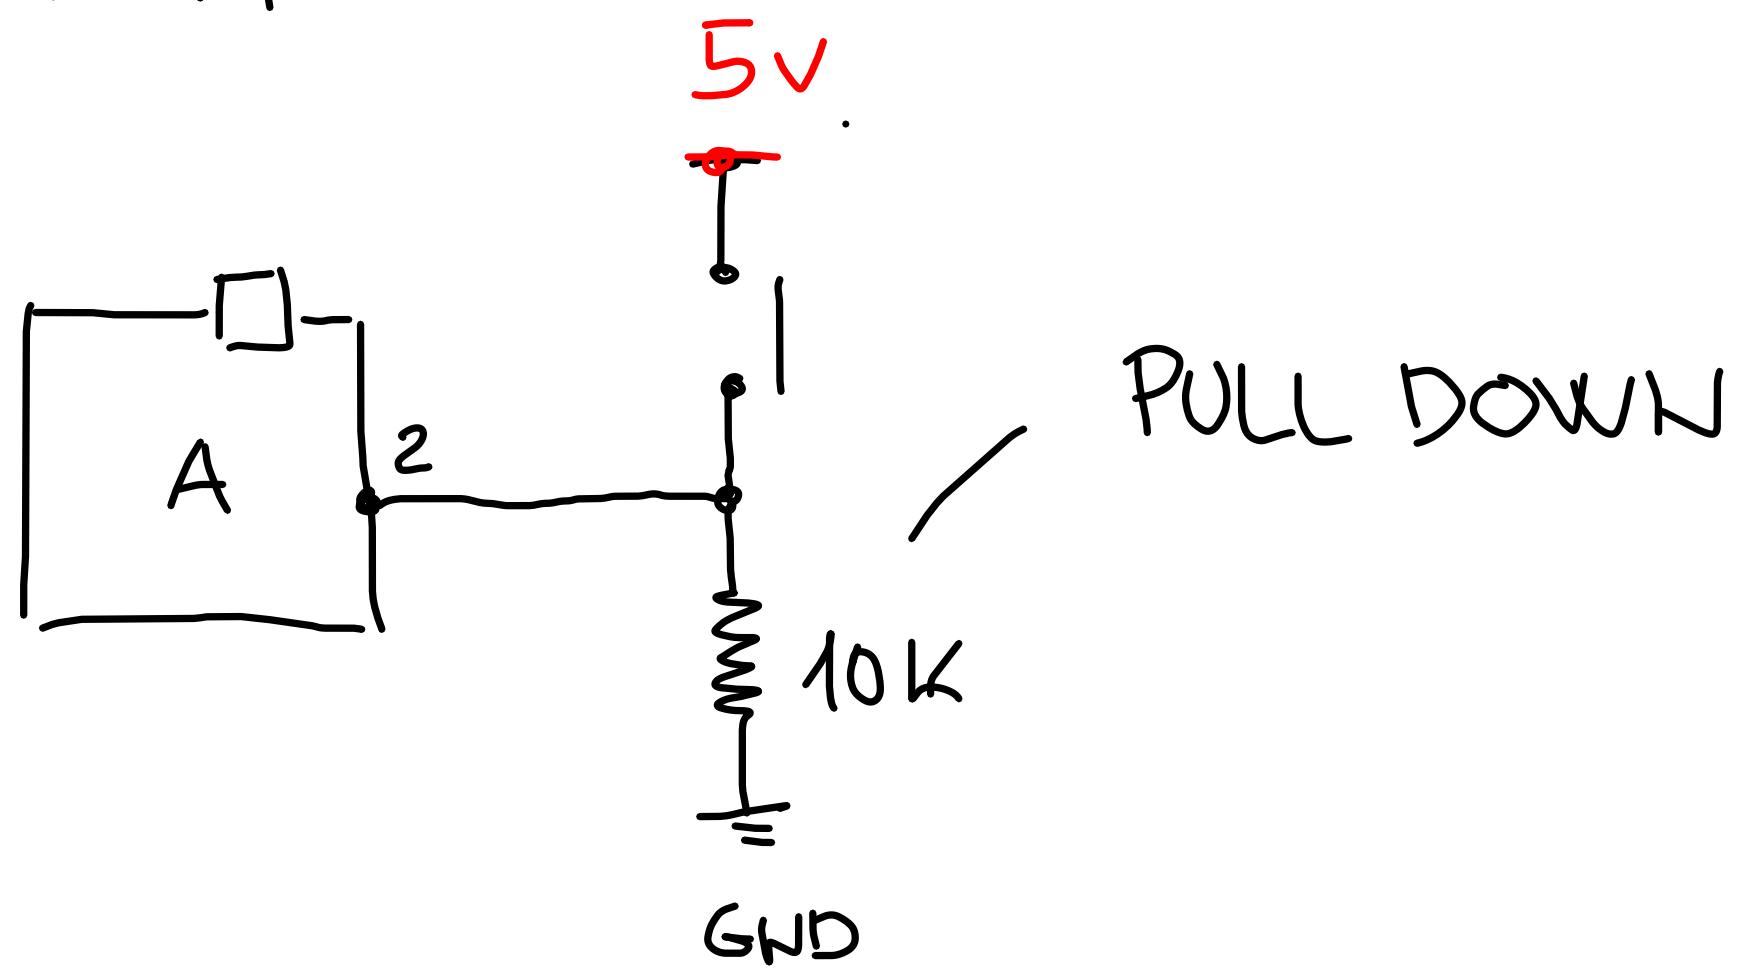


PULL UP

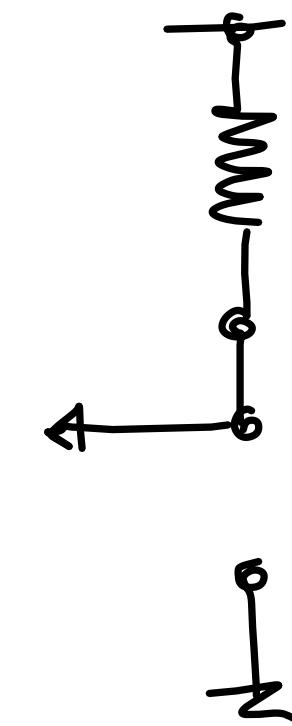

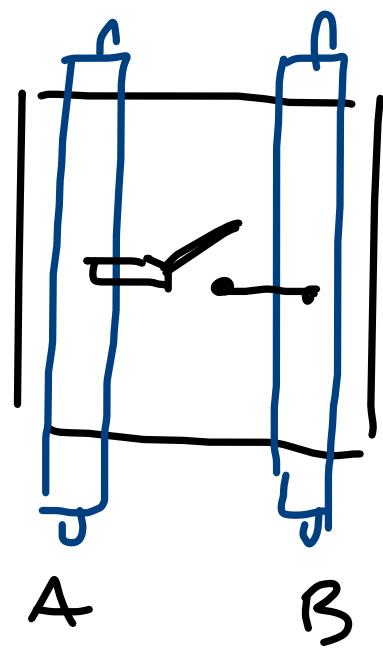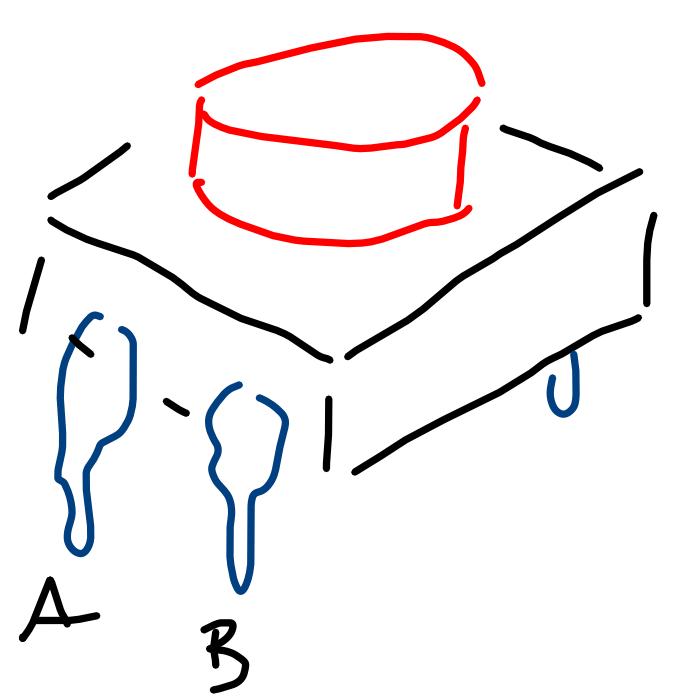


IF SE

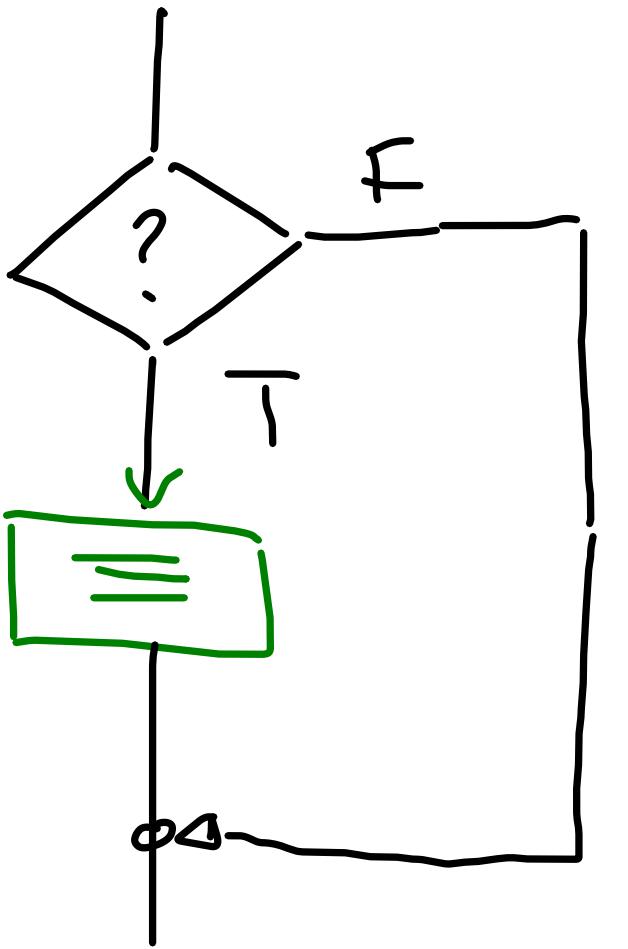

if (expr) {

 }

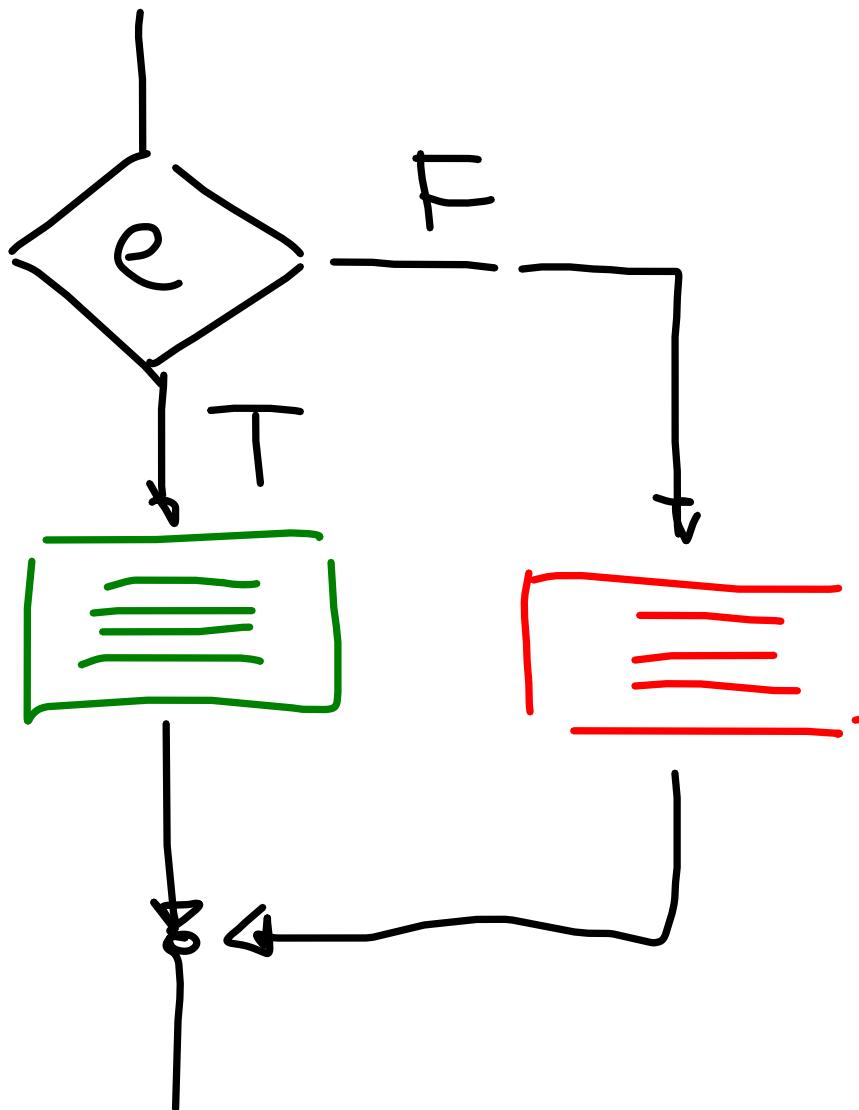

```
if (expr) {  
    ====  
} else {  
    ====  
}
```