



**8-Lead Ultra Thin Small Outline No-Leads (ND) - 2x2 mm Body [USON]
(Also known as UDFN); SST Legacy Package; QU8E/F**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

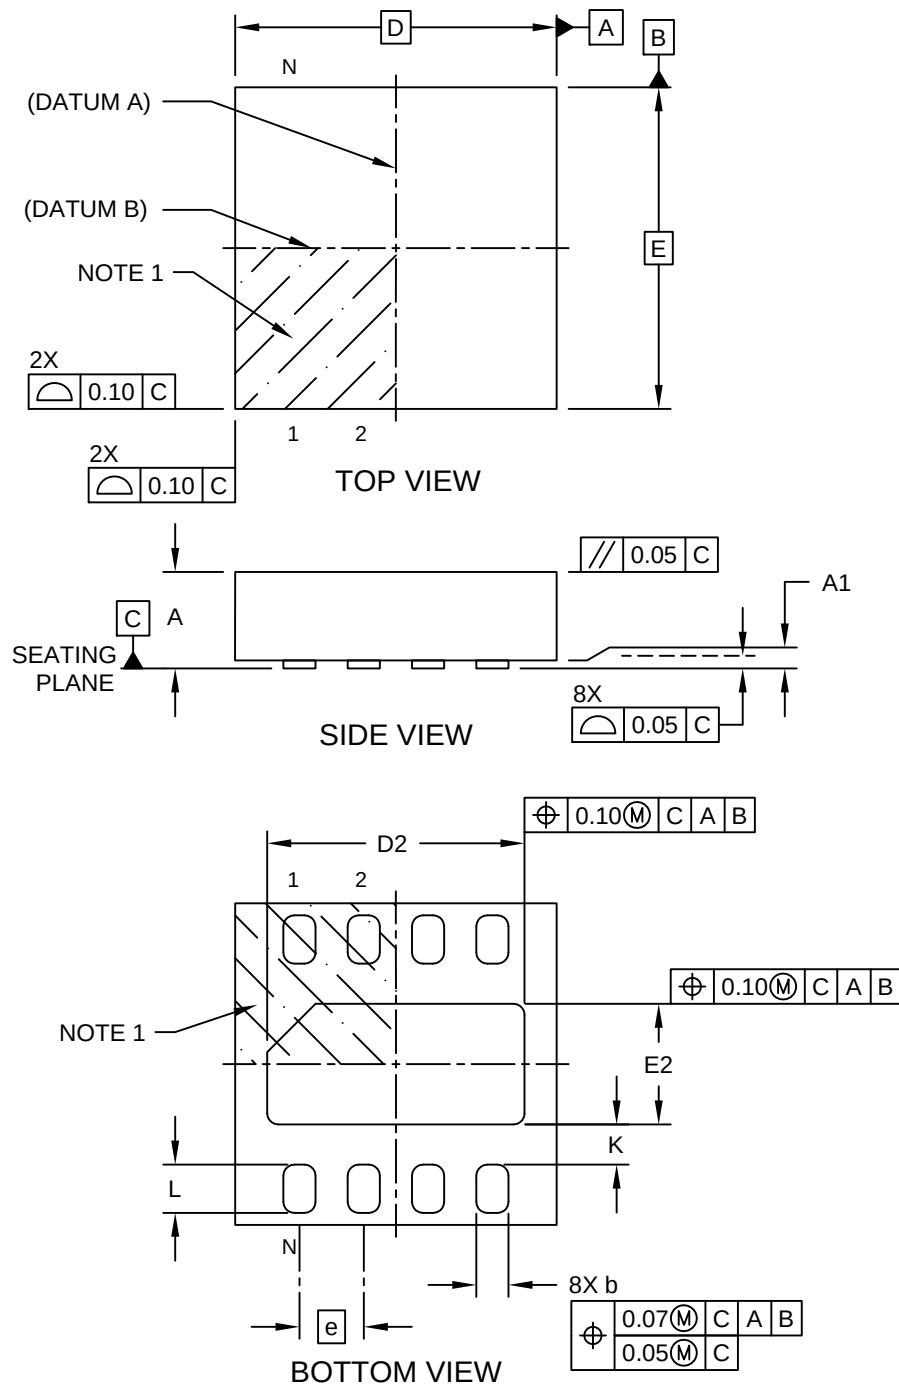

**8-Lead Ultra Thin Small Outline No-Leads (ND) - 2x2 mm Body [USON]
(Also known as UDFN); SST Legacy Package; QU8E/F**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

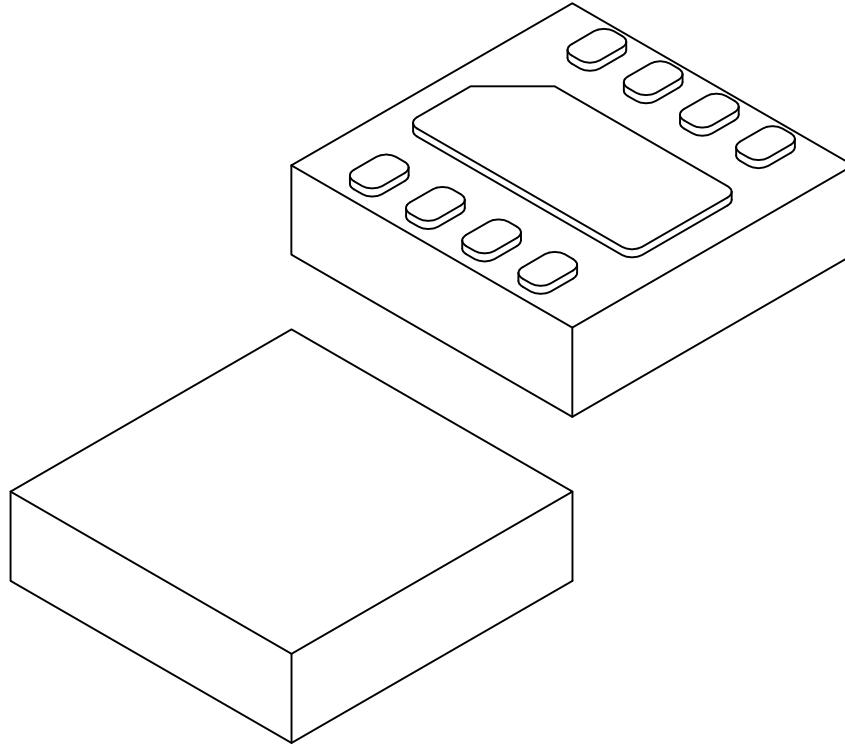

Units		MILLIMETERS		
Dimension Limits		MIN	NOM	MAX
Number of Terminals	N	8		
Pitch	e	0.40 BSC		
Overall Height	A	0.50	0.55	0.60
Standoff	A1	0.00	0.02	0.05
Overall Length	D	2.00 BSC		
Exposed Pad Length	D2	1.50	1.60	1.70
Overall Width	E	2.00 BSC		
Exposed Pad Width	E2	0.65	0.75	0.85
Terminal Width	b	0.15	0.20	0.25
Terminal Length	L	0.20	0.30	0.40
Terminal-to-Exposed-Pad	K	0.20	-	-

Notes:


1. Pin 1 visual index feature may vary, but must be located within the hatched area.
2. Package is saw singulated
3. Dimensioning and tolerancing per ASME Y14.5M

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.

**8-Lead Ultra Thin Small Outline No-Leads (ND) - 2x2 mm Body [USON]
(Also known as UDFN); SST Legacy Package; QU8E/F**

Note: For the most current package drawings, please see the Microchip Packaging Specification located at <http://www.microchip.com/packaging>

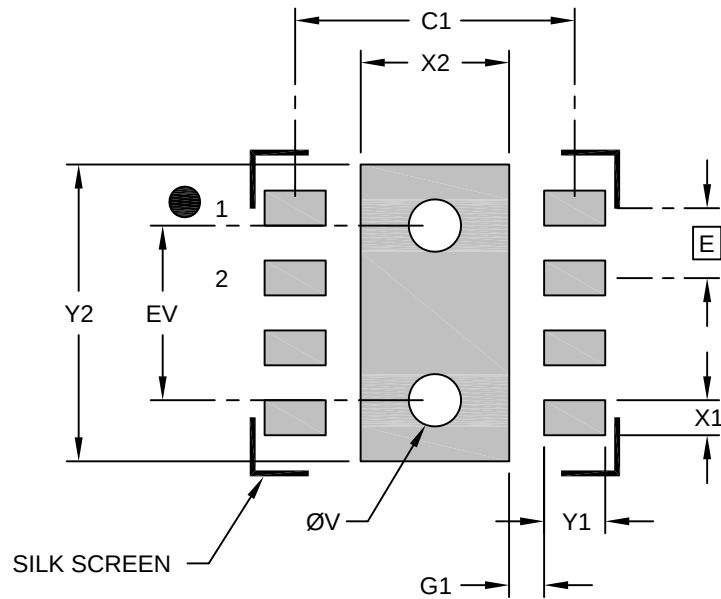

RECOMMENDED LAND PATTERN

Units		MILLIMETERS		
Dimension Limits		MIN	NOM	MAX
Contact Pitch	E	0.40 BSC		
Optional Center Pad Width	X2			0.85
Optional Center Pad Length	Y2			1.70
Contact Pad Spacing	C		1.60	
Contact Pad Width (X8)	X1			0.20
Contact Pad Length (X8)	Y1			0.35
Contact Pad to Center Pad (X8)	G1	0.20		
Thermal Via Diameter	V		0.30	
Thermal Via Pitch	EV		1.00	

Notes:

- Dimensioning and tolerancing per ASME Y14.5M
BSC: Basic Dimension. Theoretically exact value shown without tolerances.
- For best soldering results, thermal vias, if used, should be filled or tented to avoid solder loss during reflow process