LLAMA MINIBADGE
Assembly Guide


PROTECT THE HERD
all parts mount on the BACK · ~15 min

WHAT'S IN THE KIT

1×	PCB — llama minibadge
1×	D1 red LED (reverse-mount 1206)
1×	R1 470 Ω resistor (0805)
4×	1×2 male headers (0.1")

Tools: fine-tip iron, thin solder, flux, tweezers

BACK OF BOARD (solder side)

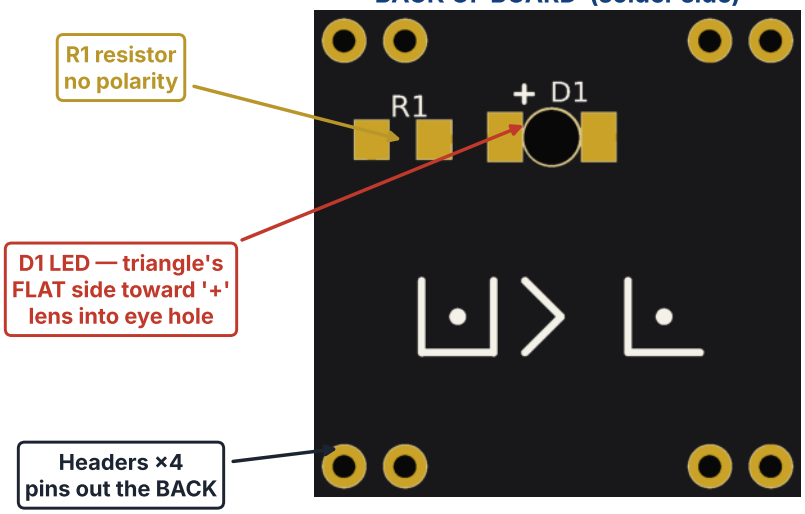

STEPS


1. **Solder R1 (resistor).**
   No orientation — sits either way. Tack one pad, then the other.

2. **Solder D1 (LED) on the back.**
   The LED has a green triangle. Its FLAT side is + (anode); the POINT is – (cathode). Put the flat side toward the '+' on the board. Clear lens faces DOWN into the eye hole.

3. **Add the 4 headers.**
   Snap the strip into four 1×2 pieces. Set them in the 8 corner holes so the long pins stick OUT the back; solder all 8.

4. **Plug it in.**
   Push into a host badge's minibadge socket. The host clock blinks the eye — no firmware needed.

LED ORIENTATION

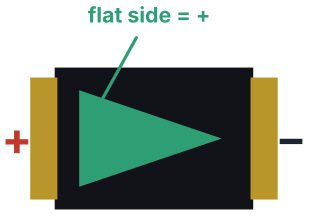

Match this '+' to the '+' on the board

⚠ GET THESE RIGHT

D1 LED	Triangle's flat side = + → put it toward the board's '+'. Backwards = no light.
R1	Any direction is fine.
Headers	Pins point OUT the back, so they plug into the host.

Circuit: CLK → R1 → D1 → GND. Host clock blinks the eye.

FRONT — finished

