


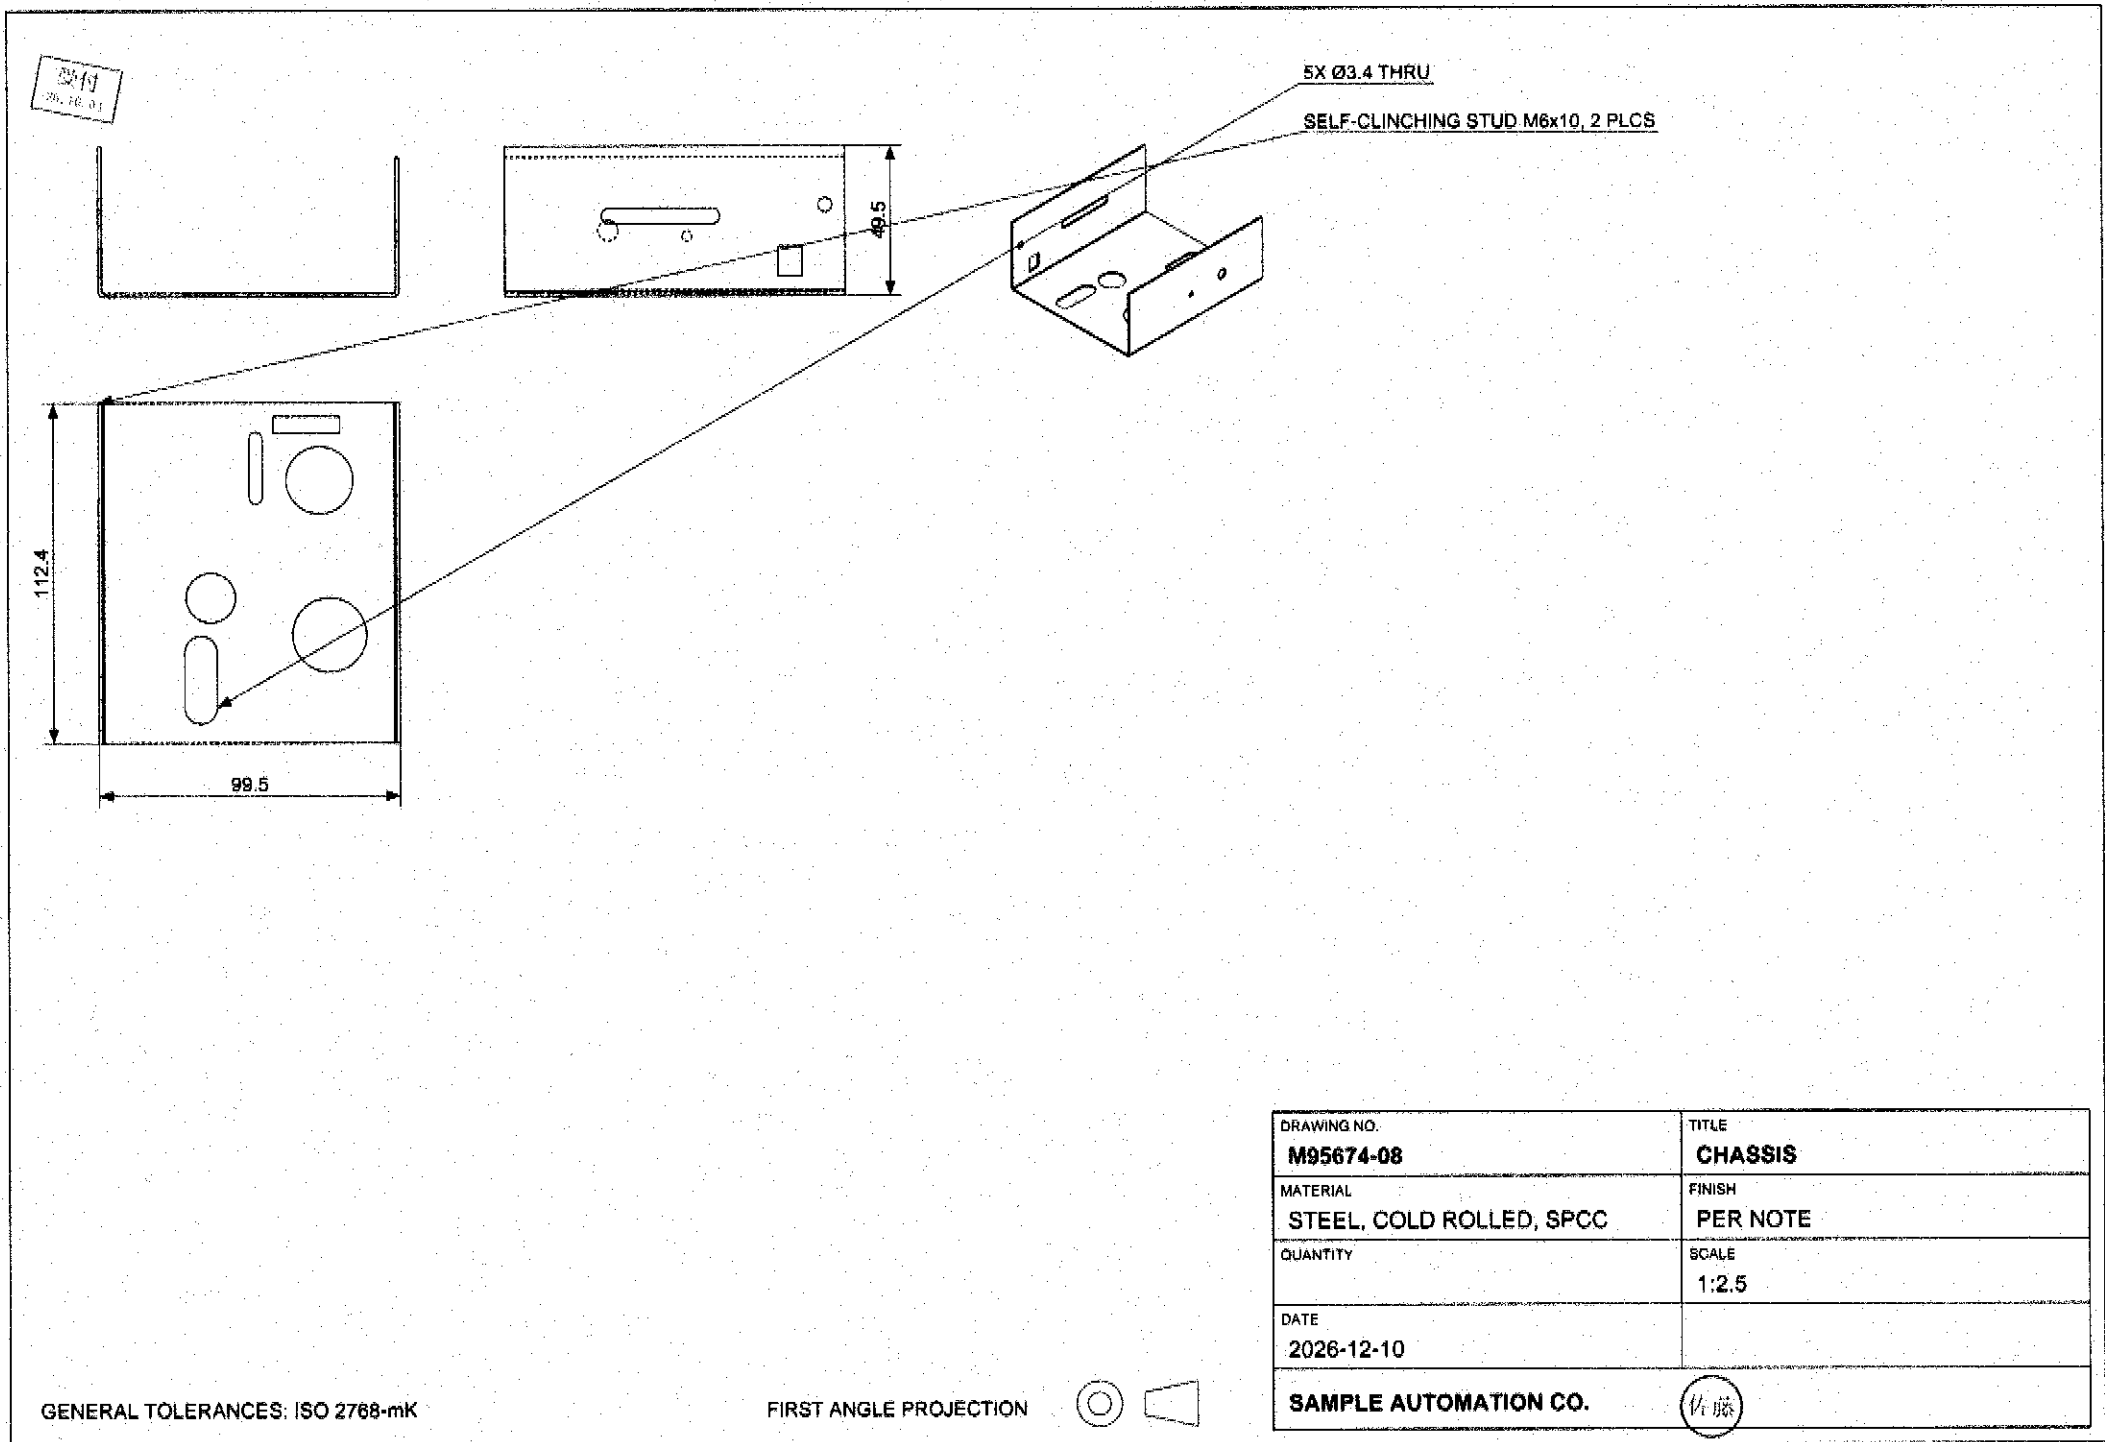

NOTES:

1. REMOVE ALL BURRS AND SHARP EDGES.
2. DO NOT SCALE DRAWING.
3. FINISH: ZINC PLATED, TRIVALENT CLEAR
4. RUSH ORDER
5. INSIDE BEND RADIUS = T UNLESS OTHERWISE SPECIFIED.

