Build Overview:

MECHANICAL MANUFACTURING INSTRUCTIONS

THERMOCOUPLE ASSY – CDU HFE RETURN TEMP

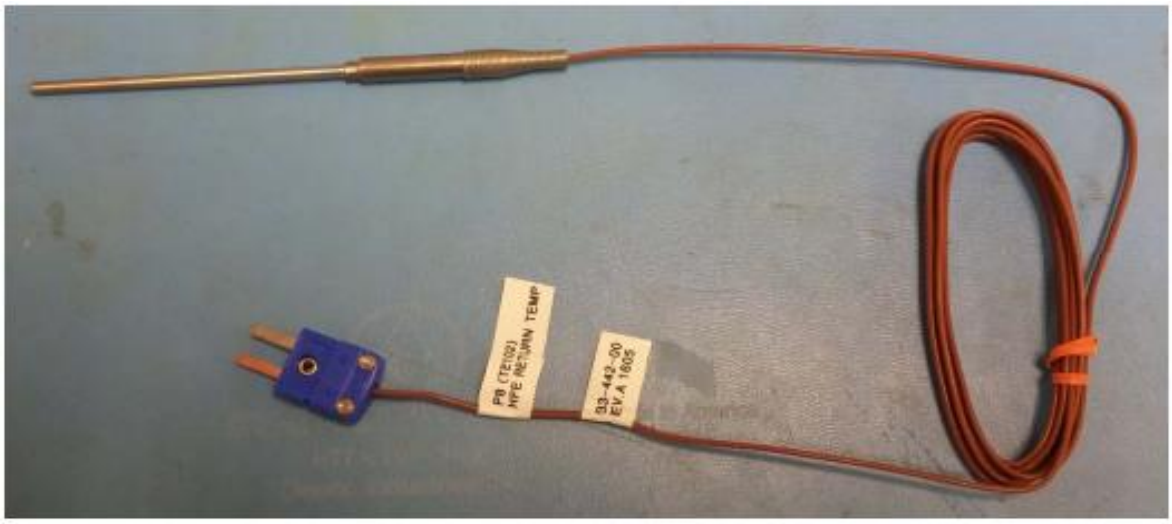

CHANGE HISTORY

Date	BPM Rev	Change Details	Updated by	
	1	New Issue	JOSEPH AMAD	**Prepared By:** JOSEPH R. AMAD, Manufacturing Engineer
				Checked By: IVAN NOWELL PANIQUE, Team Lead
				Approved By: SHERWIN ARIOSTE, Operations Manager

SPECIAL TOOLS

N/A

METHOD:

Flow chart of operation steps

SIC preparation
↓
Preparation Tools
↓
Prepare Materials
↓
Complete Operation
↓
Inventory Materials
↓
Operation Check
↓
Inventory tool

Size Hardware	Newton Meter
M2 x 0.4	0.2
M3 x 0.5	0.7
M4 x 0.7	1.6
M5 x 0.8	3.3
M6 x 1.0	5.6
M8 x 1.25	13.5

Torque Rules

- Torque values shown are for steel-to-steel material only.
- Torque all screws and nuts unless otherwise specified.
- Torque table is for reference. See MFE-500-01 for detailed information.

MAN: CERTIFIED OPERATOR, TECHNICIAN

THERMOCOUPLE ASSY – CDU HFE RETURN TEMP

1. Obtain qty. 1 Thermocouple (361-940-01).

MAN: CERTIFIED OPERATOR, TECHNICIAN

THERMOCOUPLE ASSY – CDU HFE RETURN TEMP

6. Create label and mark with location data as shown.

P8 (TE102)
HFE RETURN TEMP

7. Create label and mark with part number 633 442 00 Rev and date of manufacture **XXYY** where **XX** defines the year and **YY** defines the week.

633-442-00 Rev. X
XXYY
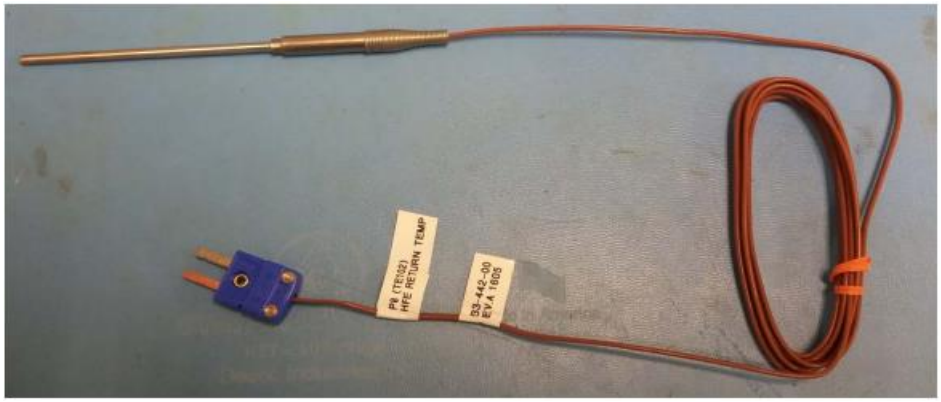
8. Install labels on finished assembly as shown.