WIP JOB ASSEMBLY COMPLETION (PRINTERS – AIT)

As part of the physical assembly process, it is required to perform an 'Assembly Completion' in Oracle for each assembly that is (re)configured.

Step 1: Use responsibility 'ZTC Reconfiguration Mobile Apps'
And navigate to 'ZBR Assy Completion'



Step 2: Enter the correct Organization and press 'Enter' on the keypad

Step 3: Enter the following details:

- LPN: Scan a new (pre-generated) LPN
- Job: Scan or enter the Job number
- Qty: '1' (defaulted)

Please note:
Serialized items must be completed 1 at a time.
However, if the WIP Job is for a non-serialized Assembly item, then you can enter the entire job quantity instead. Or alternatively the number of cartons that can fit on a single LPN (pallet)

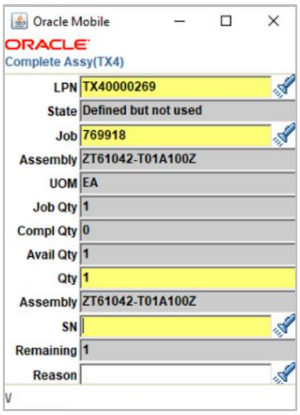

Step 4: In the 'SN' Scan the Serial Number from the device being completed.

The next screen will show the 'Serial Attributes':

- Click on the 'Accept Defaults' button to attach the default values to the Serial Number for the assembly.
- If you do not want to use the default values, then you can enter the details in the fields for 'COO' (Country of Origin), the 'Mfg Dt' (Manufacturing Date) and/or the 'Printer Key'

Click on the 'Done' button

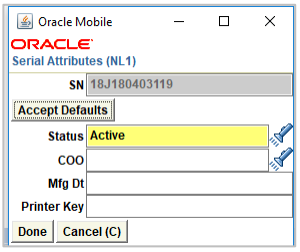

Step 5: Click on the 'Components' button to scan the Serial Numbers for the components

The serial number for <u>each</u> serialized component must be recorded. There will be at least 1 serialized component (the base printer) but there may be more.

Please note:
For the base printer, the component Serial Number must match the assembly (parent) Serial Number.
For certain Work Orders, the Serial Number for the base printer will already be defaulted in the scangun (thus eliminating the need to scan this SN again).

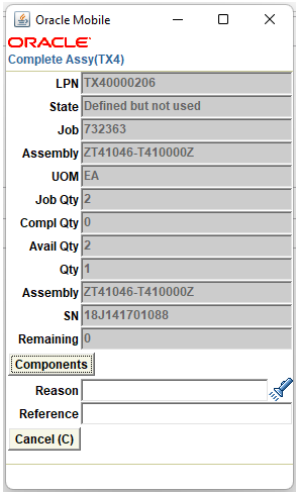

Click on the 'Done' button again

A 'Txn Success' message will be displayed at the bottom of the screen

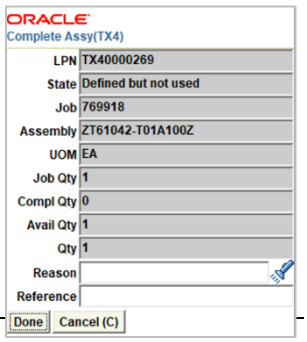

The Assembly Completion transaction is done, the quantity completed for the job

is increased by 1