


R9,R11,R10,R12 are empty pads to test at different currents by soldering sized resistors. They will be shorted incase no extra resistance is needed

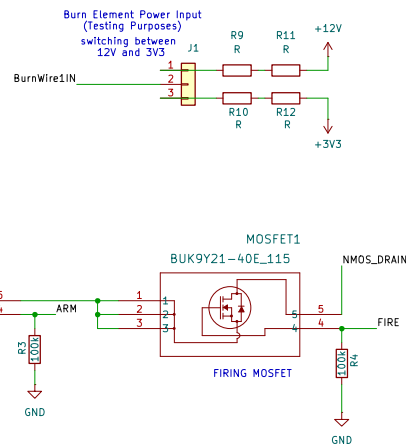

Antenna Bleeder

BLEEDER

R13 10M

R5 10M

J4

R6 549

R7 5.9k

R8 10k


TP4

This J4 is actually not a connector. It is just a solder pad soldered with the copper strip to the active pole of the dipole through a slit in the PCB

Multiple pins for burn and ground signals are included in the deployer as current rating of each pin given to be 2.5 amps. Each burn element will draw ~ 1A (depending on resistor or nichrome). Keeping 2 ensures safety.

- Additional components required
 - Ferrite core: 2661480002
 - Resistor board
 - Action switches:
- Deployment detection switches
 - L male
- headers
 - Antenna
- Housing
 - Antenna

NC switches
Switch open: antenna stowed
(holds switch open)
Switch closed: antenna deployed

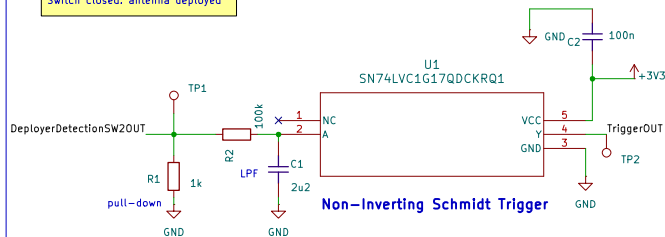

J2
Conn_02x03_Counter_Clockwise

BurnWire1IN

BurnWire1OUT

+3V3

DeployerDetectionSW1OUT

Conn_02x03_Counter_Clockwise

BurnWire1OUT 1 6 DeployerDetectionSW1OUT

2 5 DeployerDetectionSW2OUT

3 4 NMOS_DRAIN