
PAINTSHOP 2 — WORK STATION LAYOUT

PLAN VIEW (TOP) · NOT TO SCALE · MATERIAL FLOW: RIGHT → LEFT

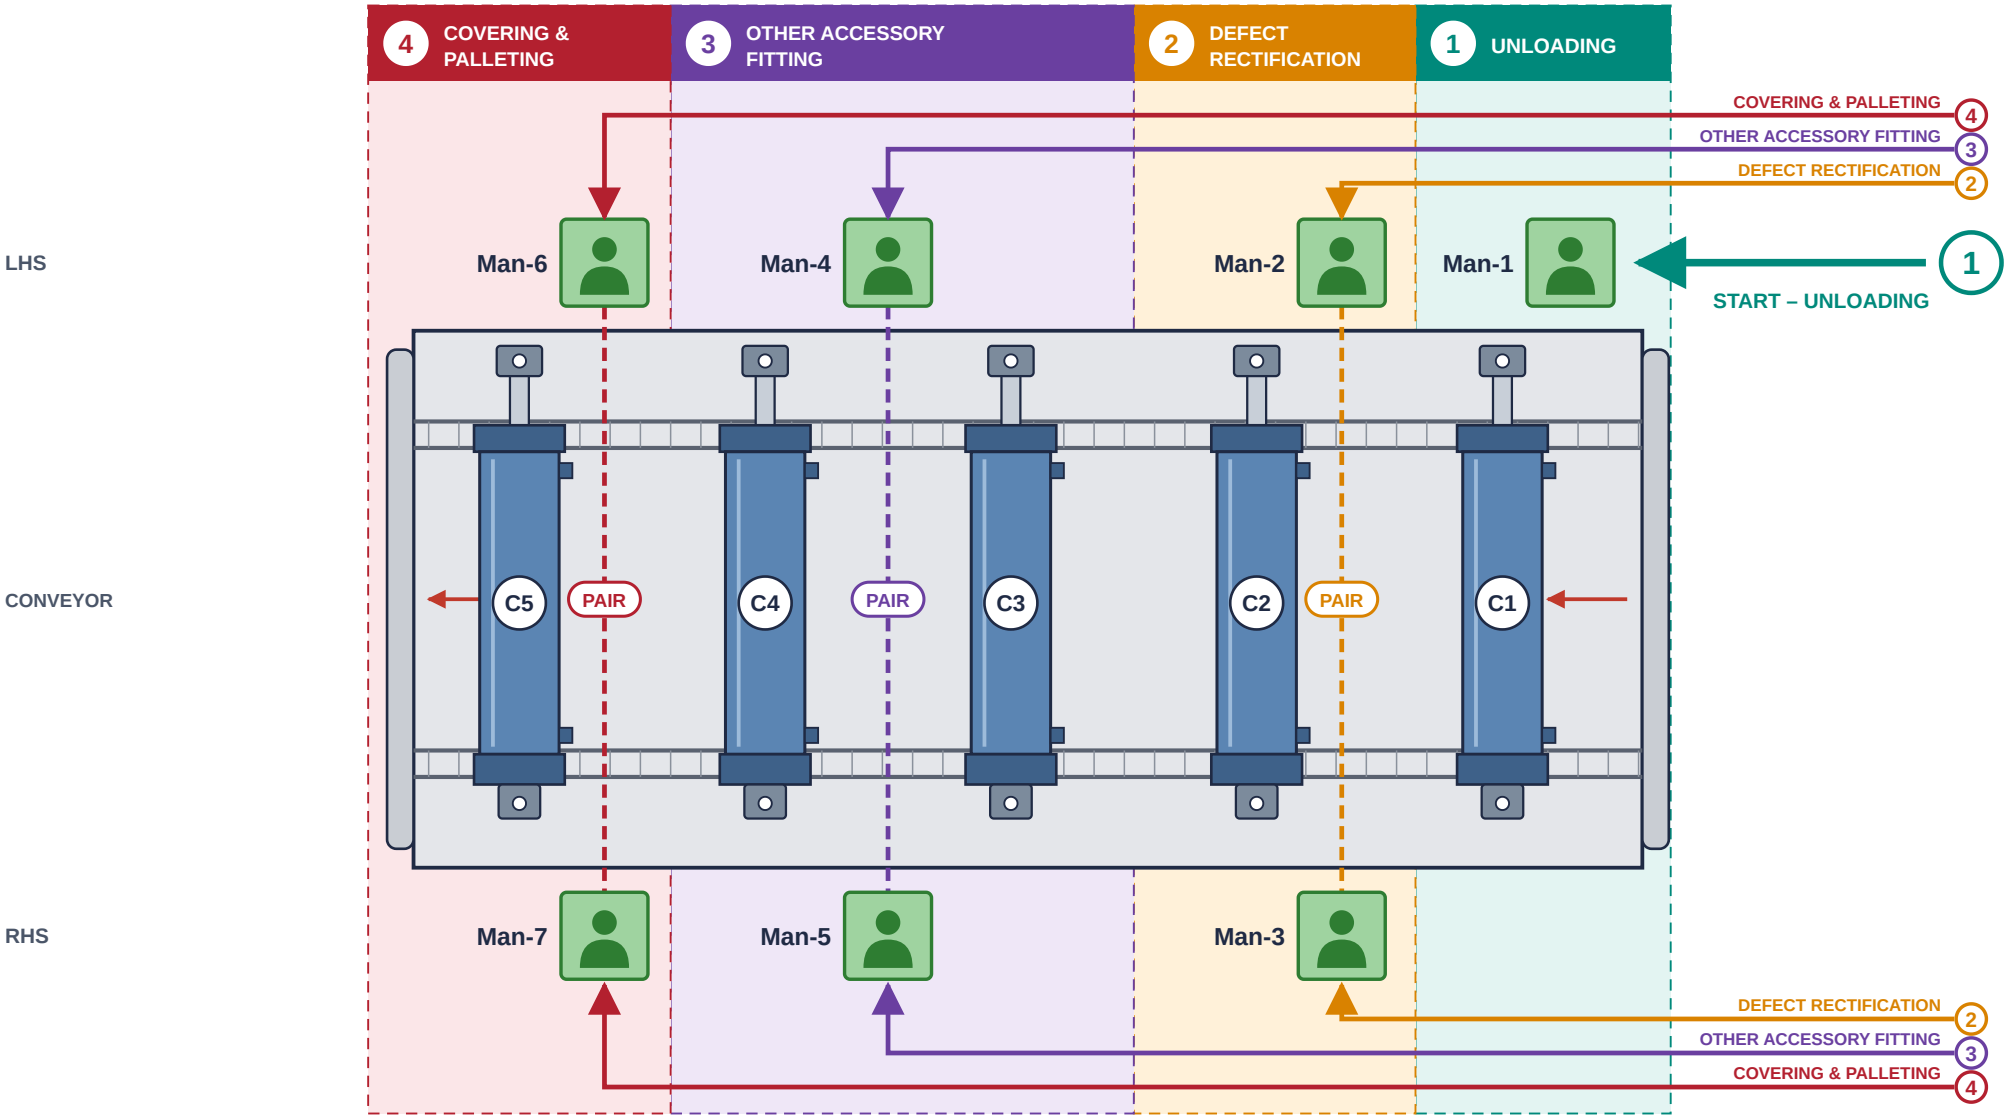

STAGE-WISE MANPOWER & WORK DESCRIPTION (read right → left, following material flow)

4 COVERING & PALLETING	3 OTHER ACCESSORY FITTING	2 DEFECT RECTIFICATION	1 UNLOADING
Manpower: 2 (Man-6, Man-7)	**LHS: 1 (Man-4) · RHS: 1 (Man-5)**	**LHS: 1 (Man-2) · RHS: 1 (Man-3)**	**Manpower: 1 (Man-1)**
After ensuring all assembly and quality inspection, cylinder to be unloaded and palletized.	Grease application on masked unpainted area, dust seal assembly / covering of rod eyes / CEC.	Scuffing and rework of the defect marked / spot touch-up with portable paint spray.	Demasking and unloading the cylinder from conveyor to flat tray.