




Handcrafting Textile Sensors from Scratch

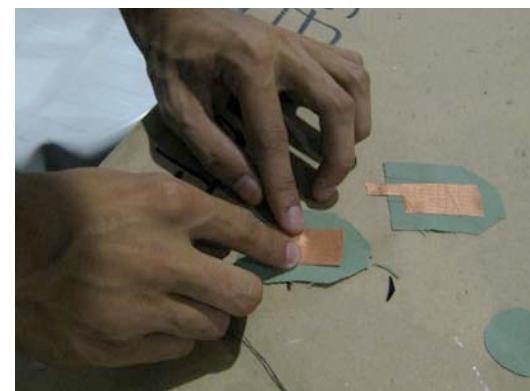

Materials


Conductive

- Stretch conductive fabric - Silver plated Nylon
- Conductive thread - 117/17 2ply silver plated Nylon
- Conductive thread - 234/34 2ply silver plated Nylon
- Metal beads



Conductive with high resistance (resistive)

- Resistive thread - 66 Yarn 22+3ply 110 PET
- Resistive yarn - Polyester and Inox steel fiber
- Velostat/Linqstat - Carbon impregnated Polyethylene film

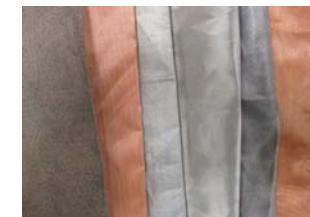


Non-Conductive (isolating)

- Neoprene - 1.5mm with polyester jersey fused to both sides
- Felting wool
- Foam
- Fusible Interfacing - "Iron-on"
- Anti-fray or Fabric glue



Tools


- Sewing needles
- Knitting needles
- Crochet hooks
- Circular knitting machine
- Spool knitter
- Needle felting tool
- Needle felting mat
- Hole maker
- Iron
- Multimeter
- LilyPad Arduino Mainboard
- LilyPad sewable LEDs

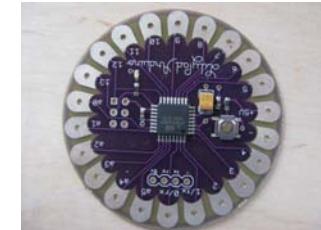




Textile Sensors

- Fabric Button
- Pressure Sensor
- Pressure Sensor Matrix
- Bend Sensor
- Tilt Sensor
- Fabric Potentiometer
- Crochet Potentiometer
- Stroke Sensor
- Knit Stretch Sensor

Bend Sensor

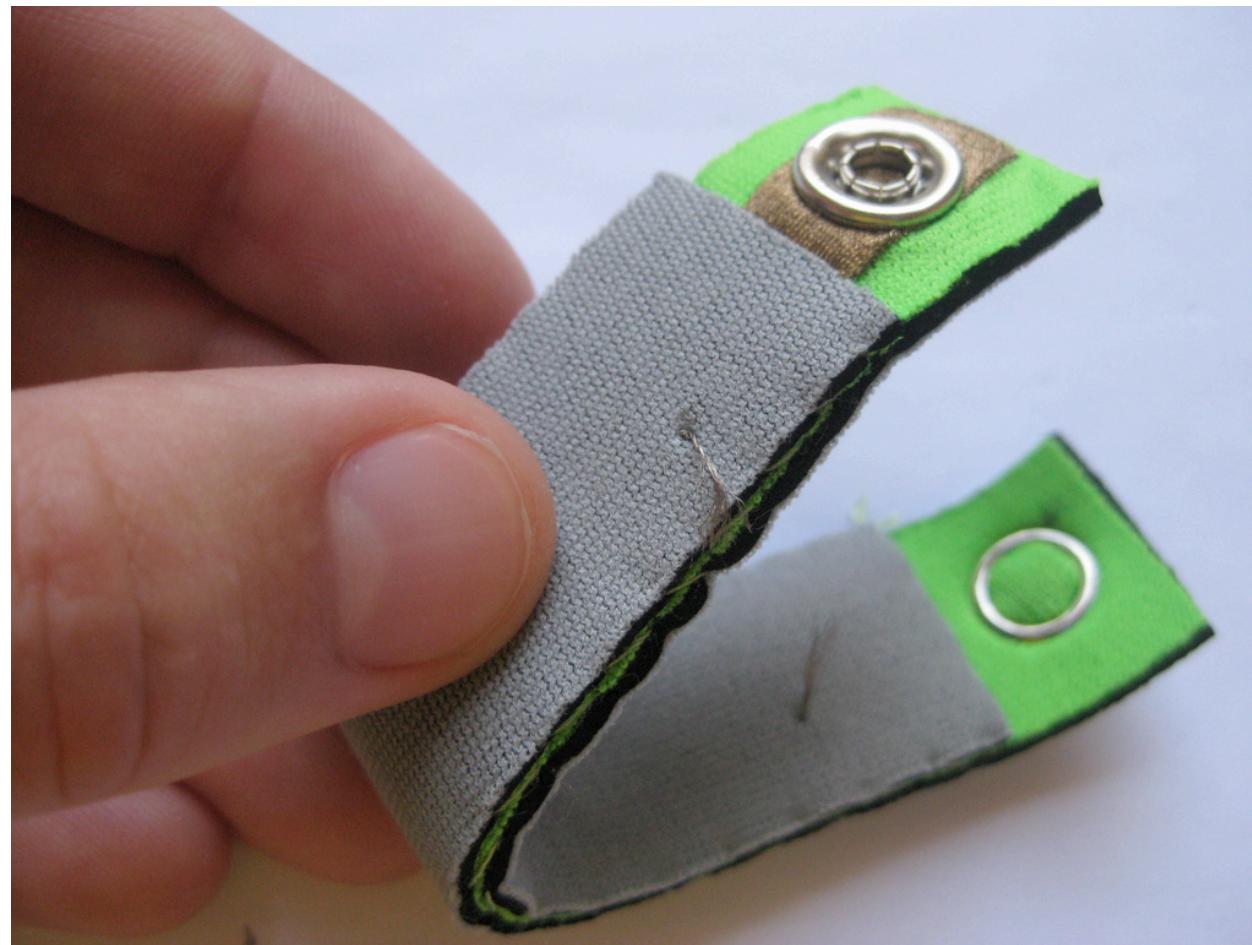

Bend Sensor

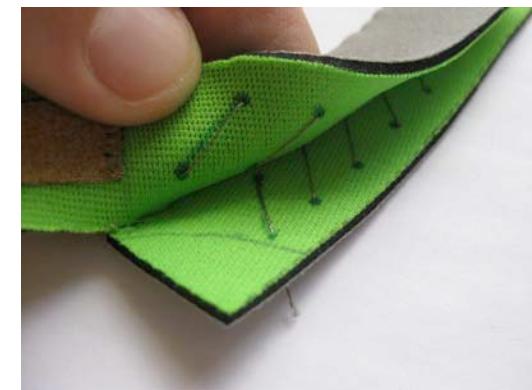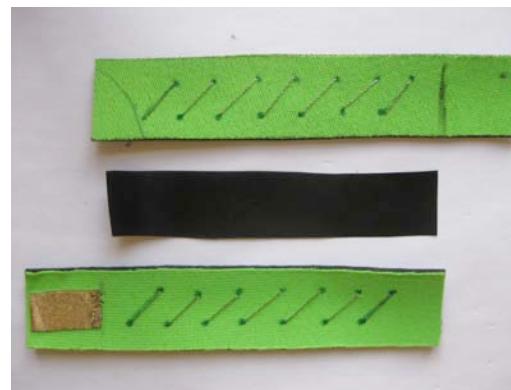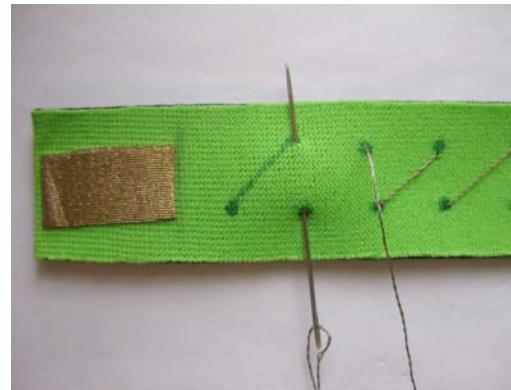


MATERIALS

- Neoprene
- Conductive thread
- Stretch conductive fabric
- Fusible interfacing
- Velostat



Bend Sensor

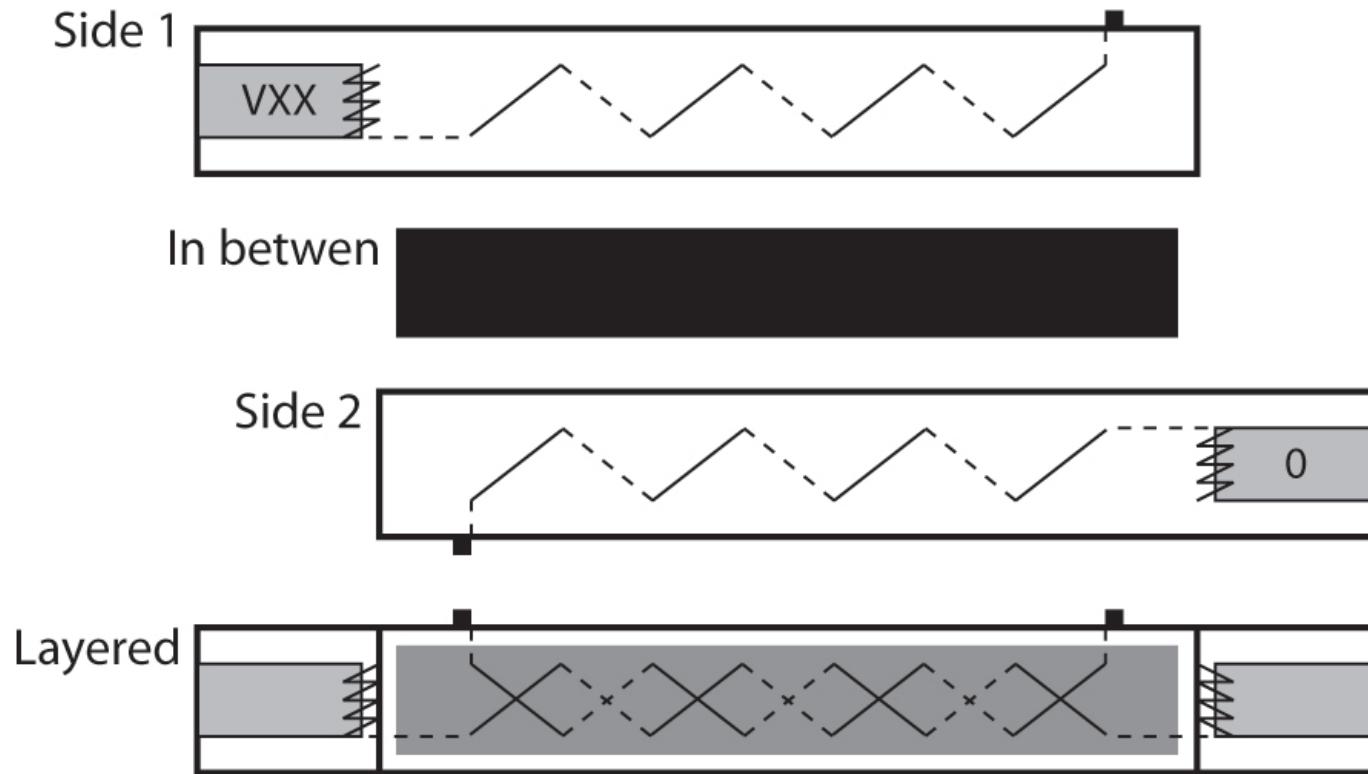

■ neoprene


■ conductive fabric

■ Velostat


— conductive thread

- - - isolated cond. thread


■ knot

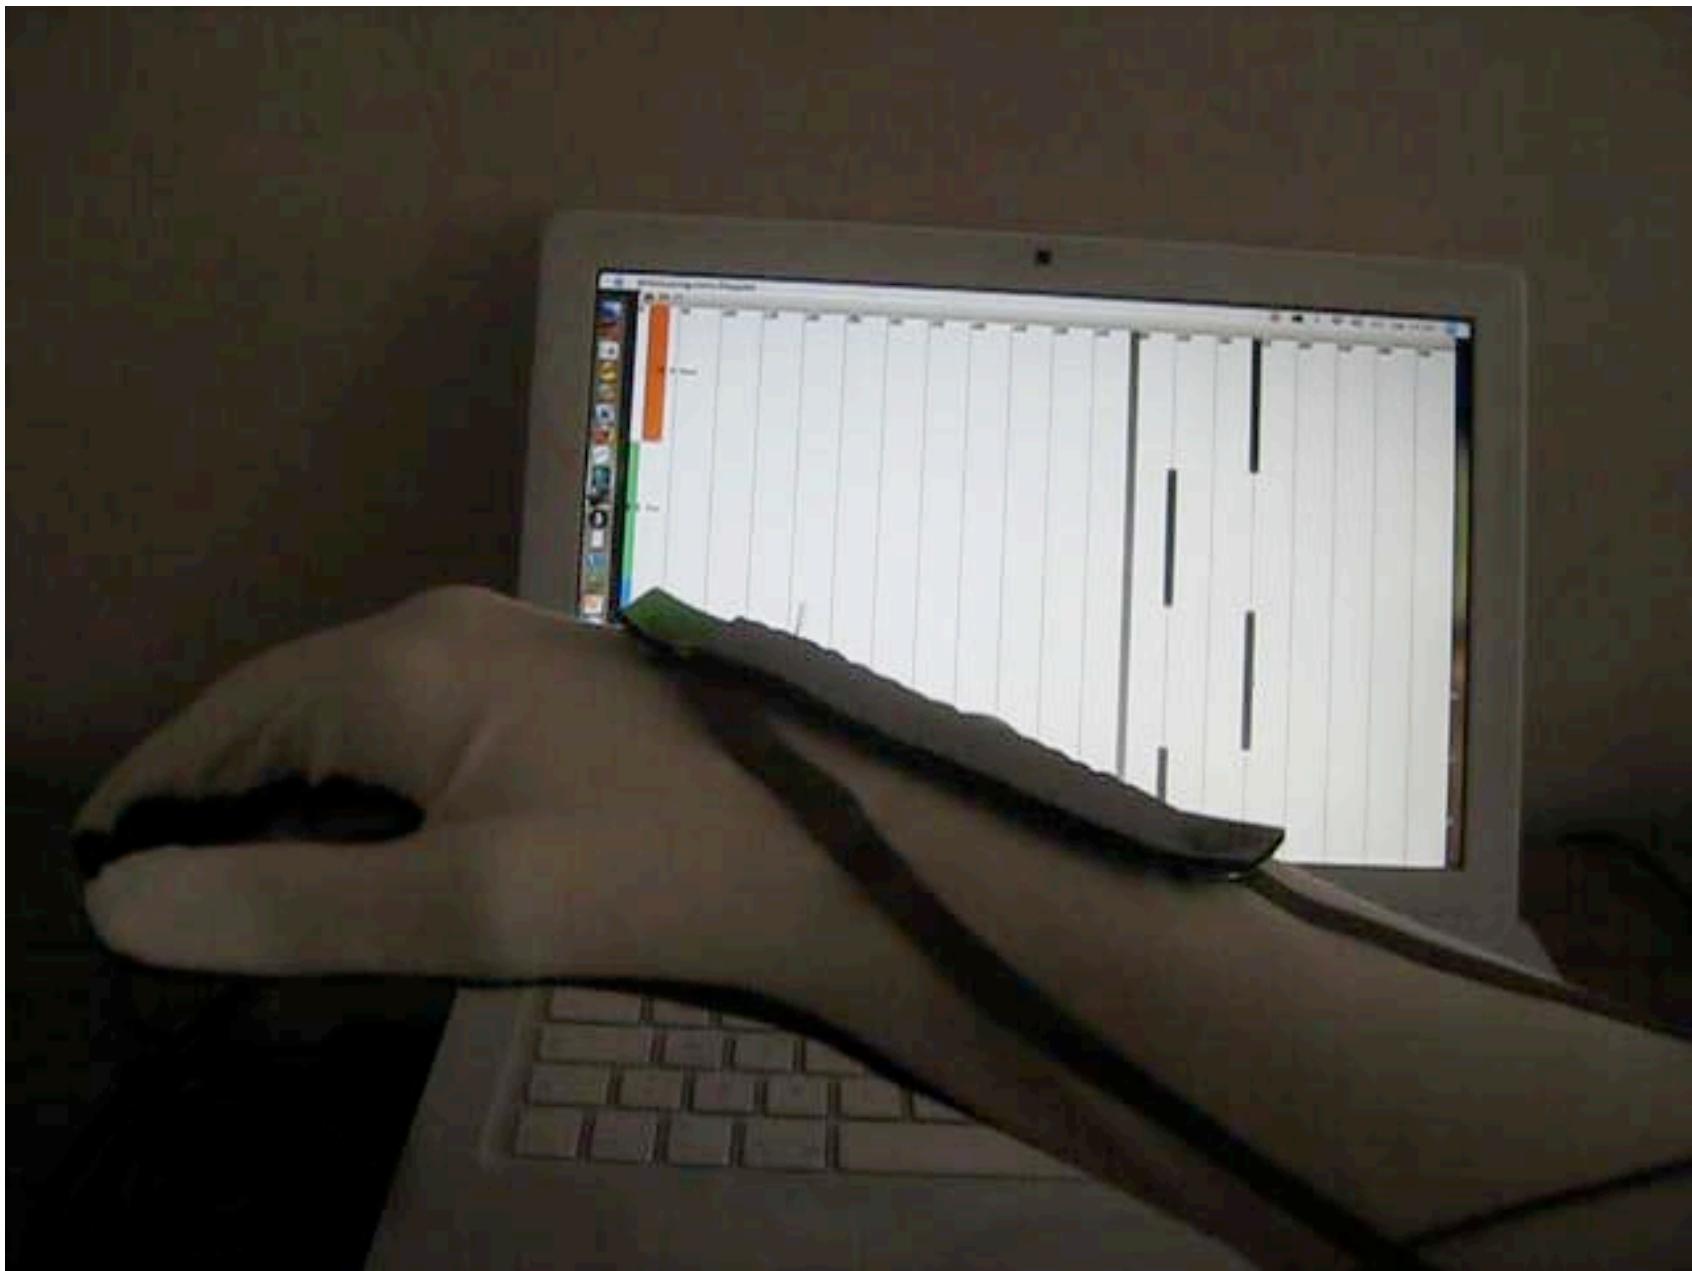

Pressure Sensor

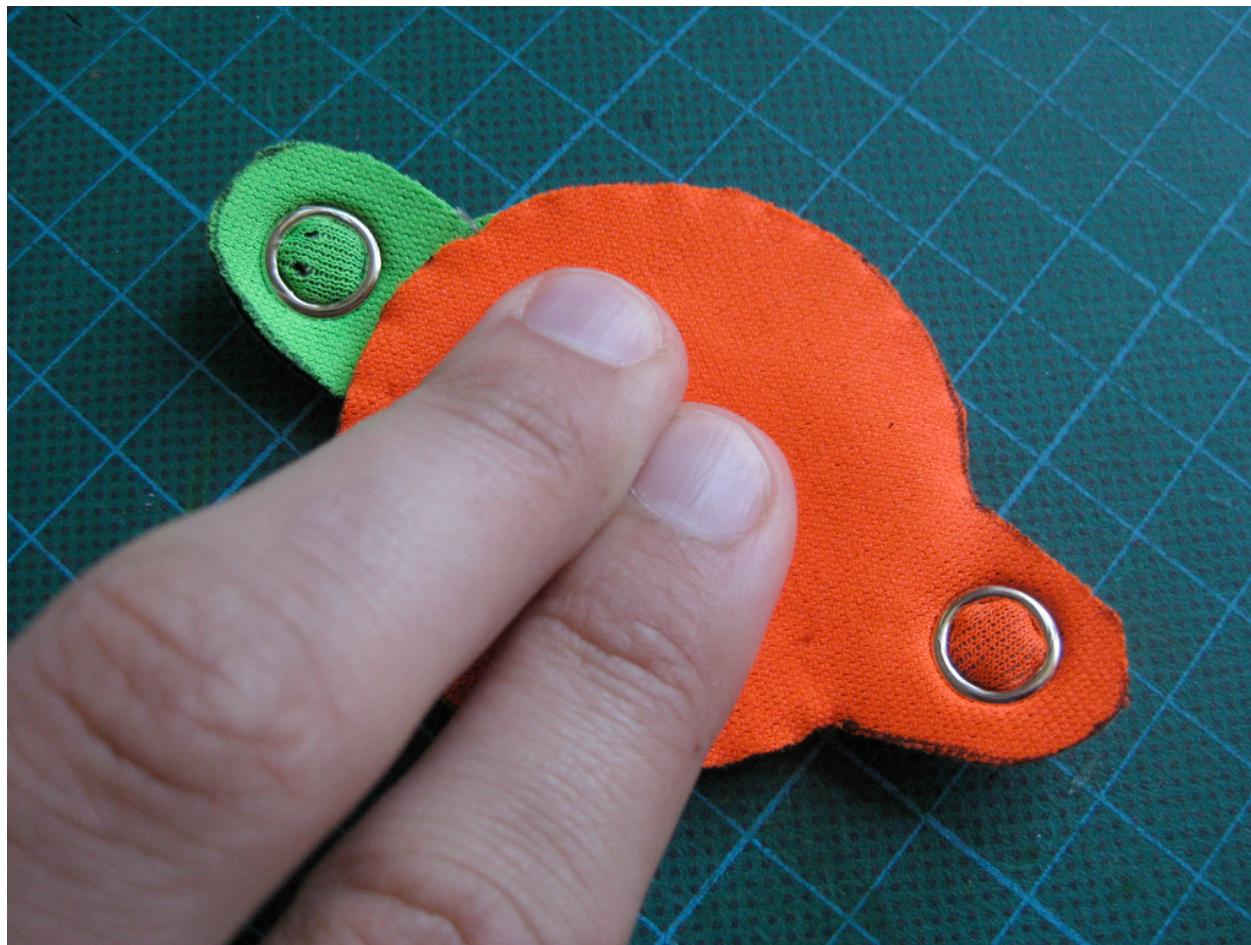


Pressure Sensor

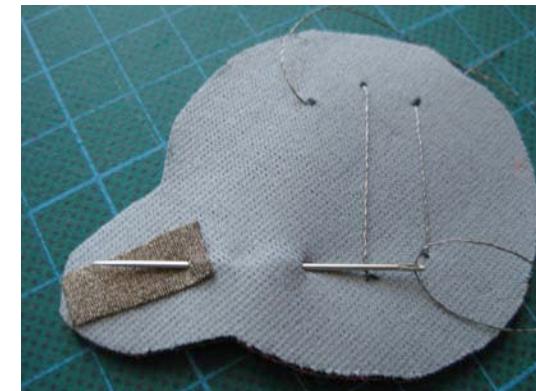


MATERIALS

- Neoprene
- Conductive thread
- Stretch conductive fabric
- Fusible interfacing
- Velostat

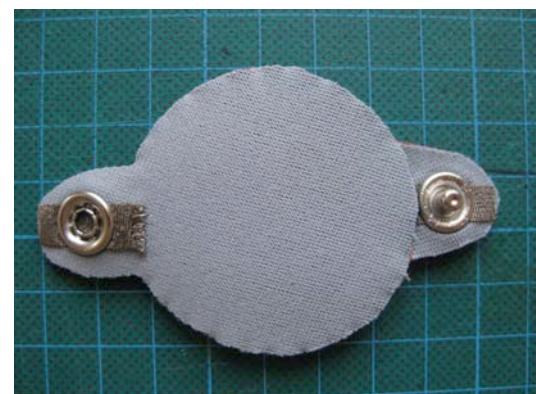


Pressure Sensor




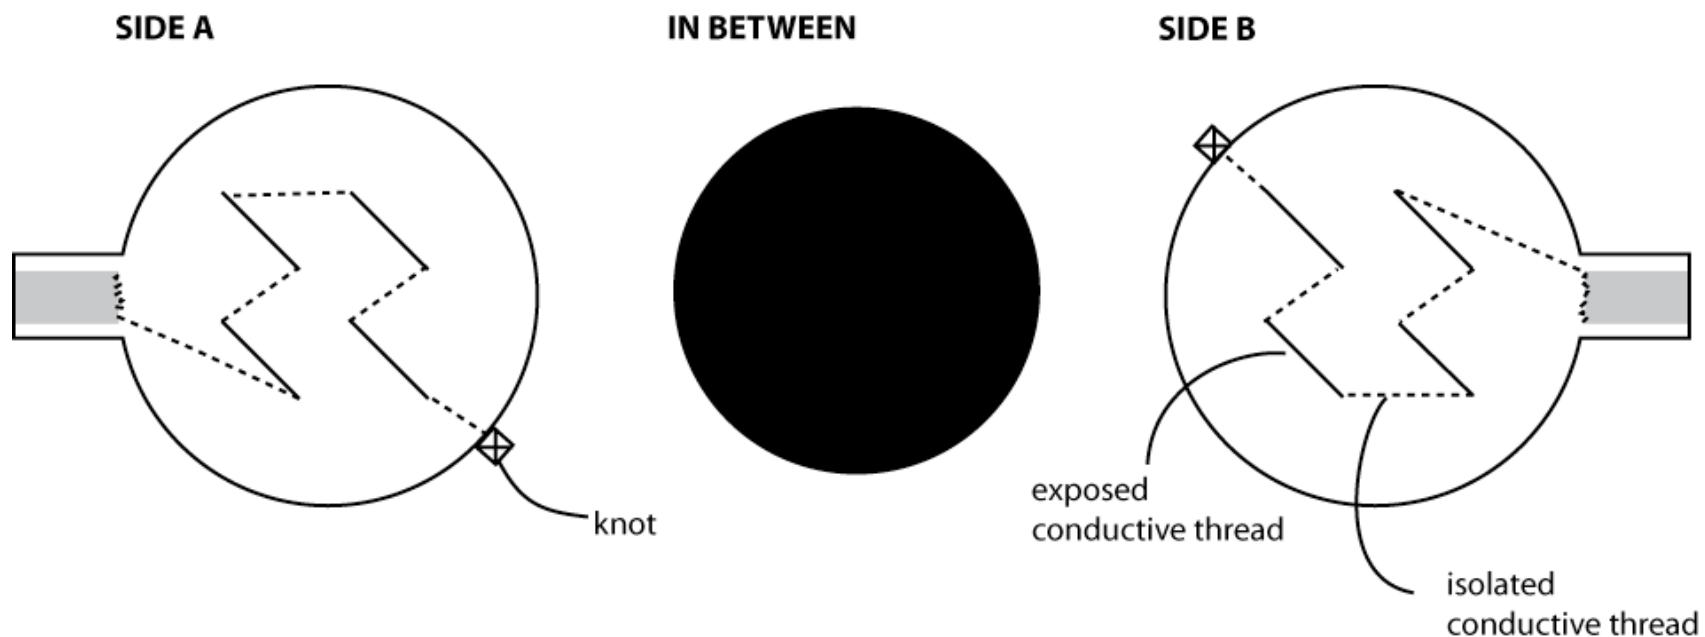




Pressure Sensor Matrix

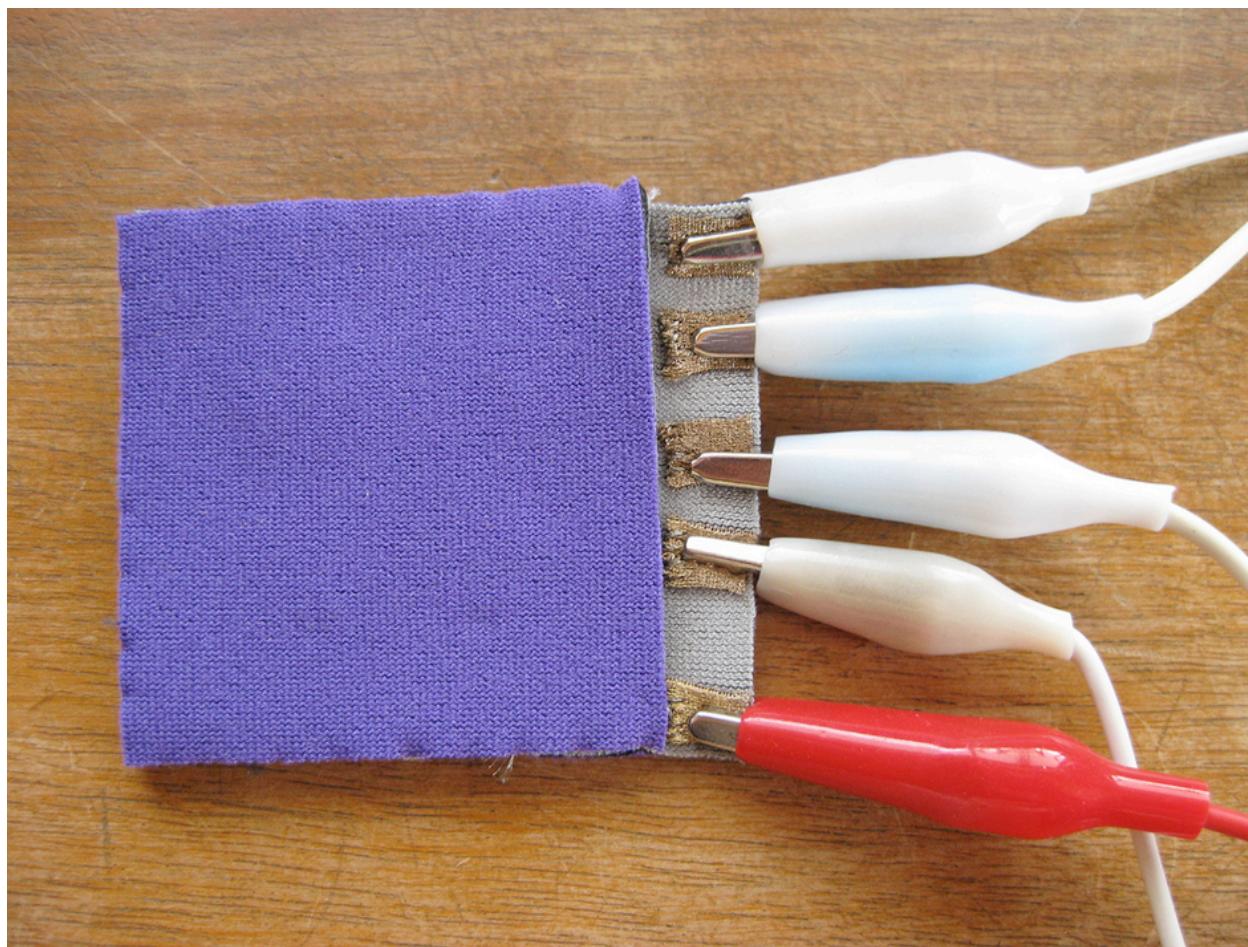


Pressure Sensor Matrix

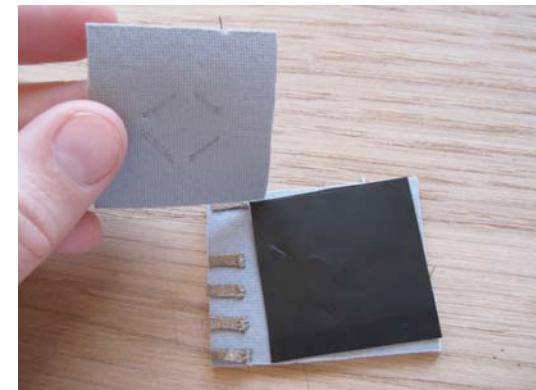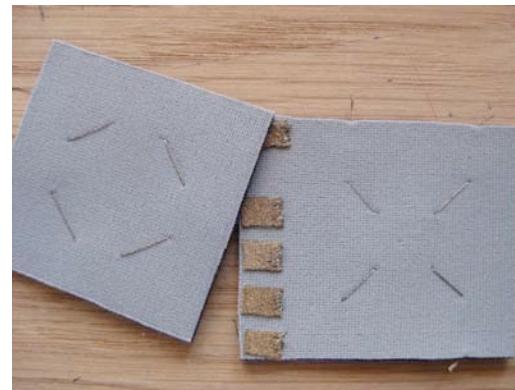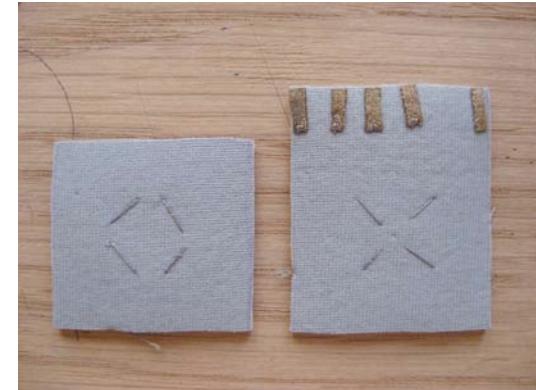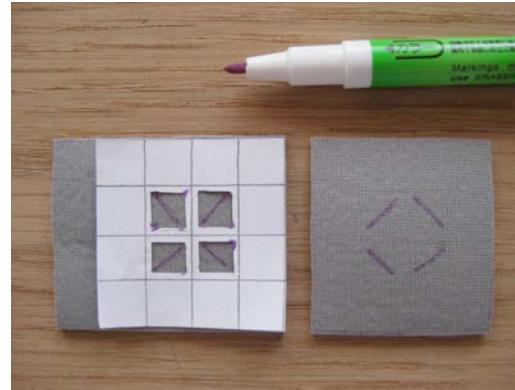



MATERIALS

- Neoprene
- Conductive thread
- Stretch conductive fabric
- Fusible interfacing
- Velostat

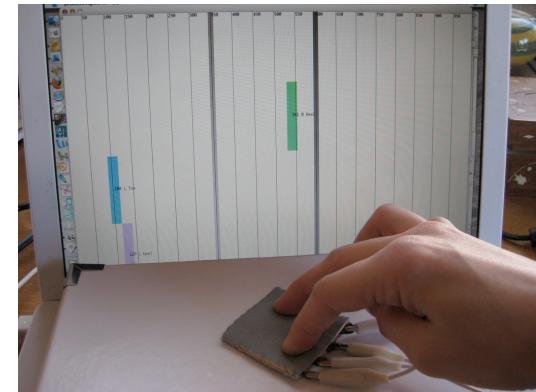

Pressure Sensor Matrix


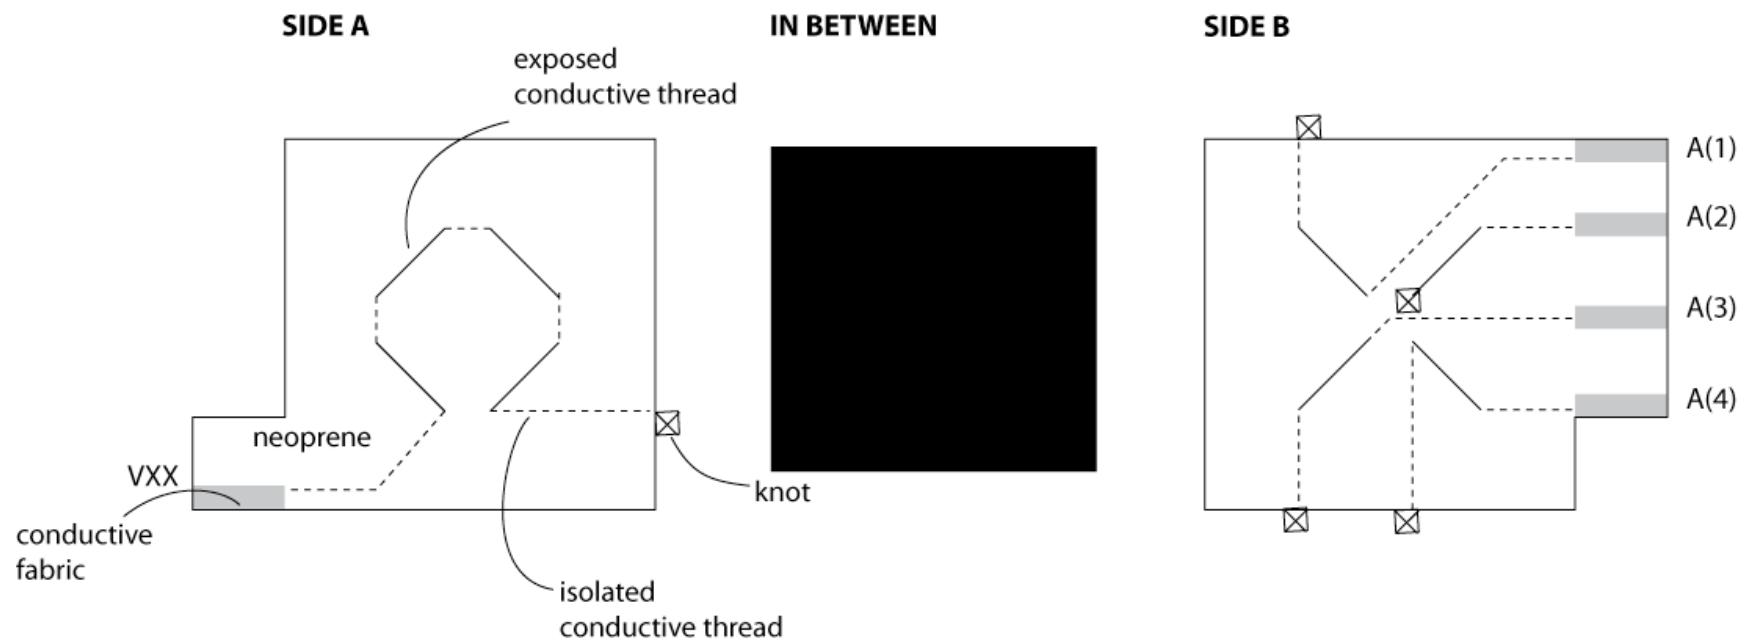


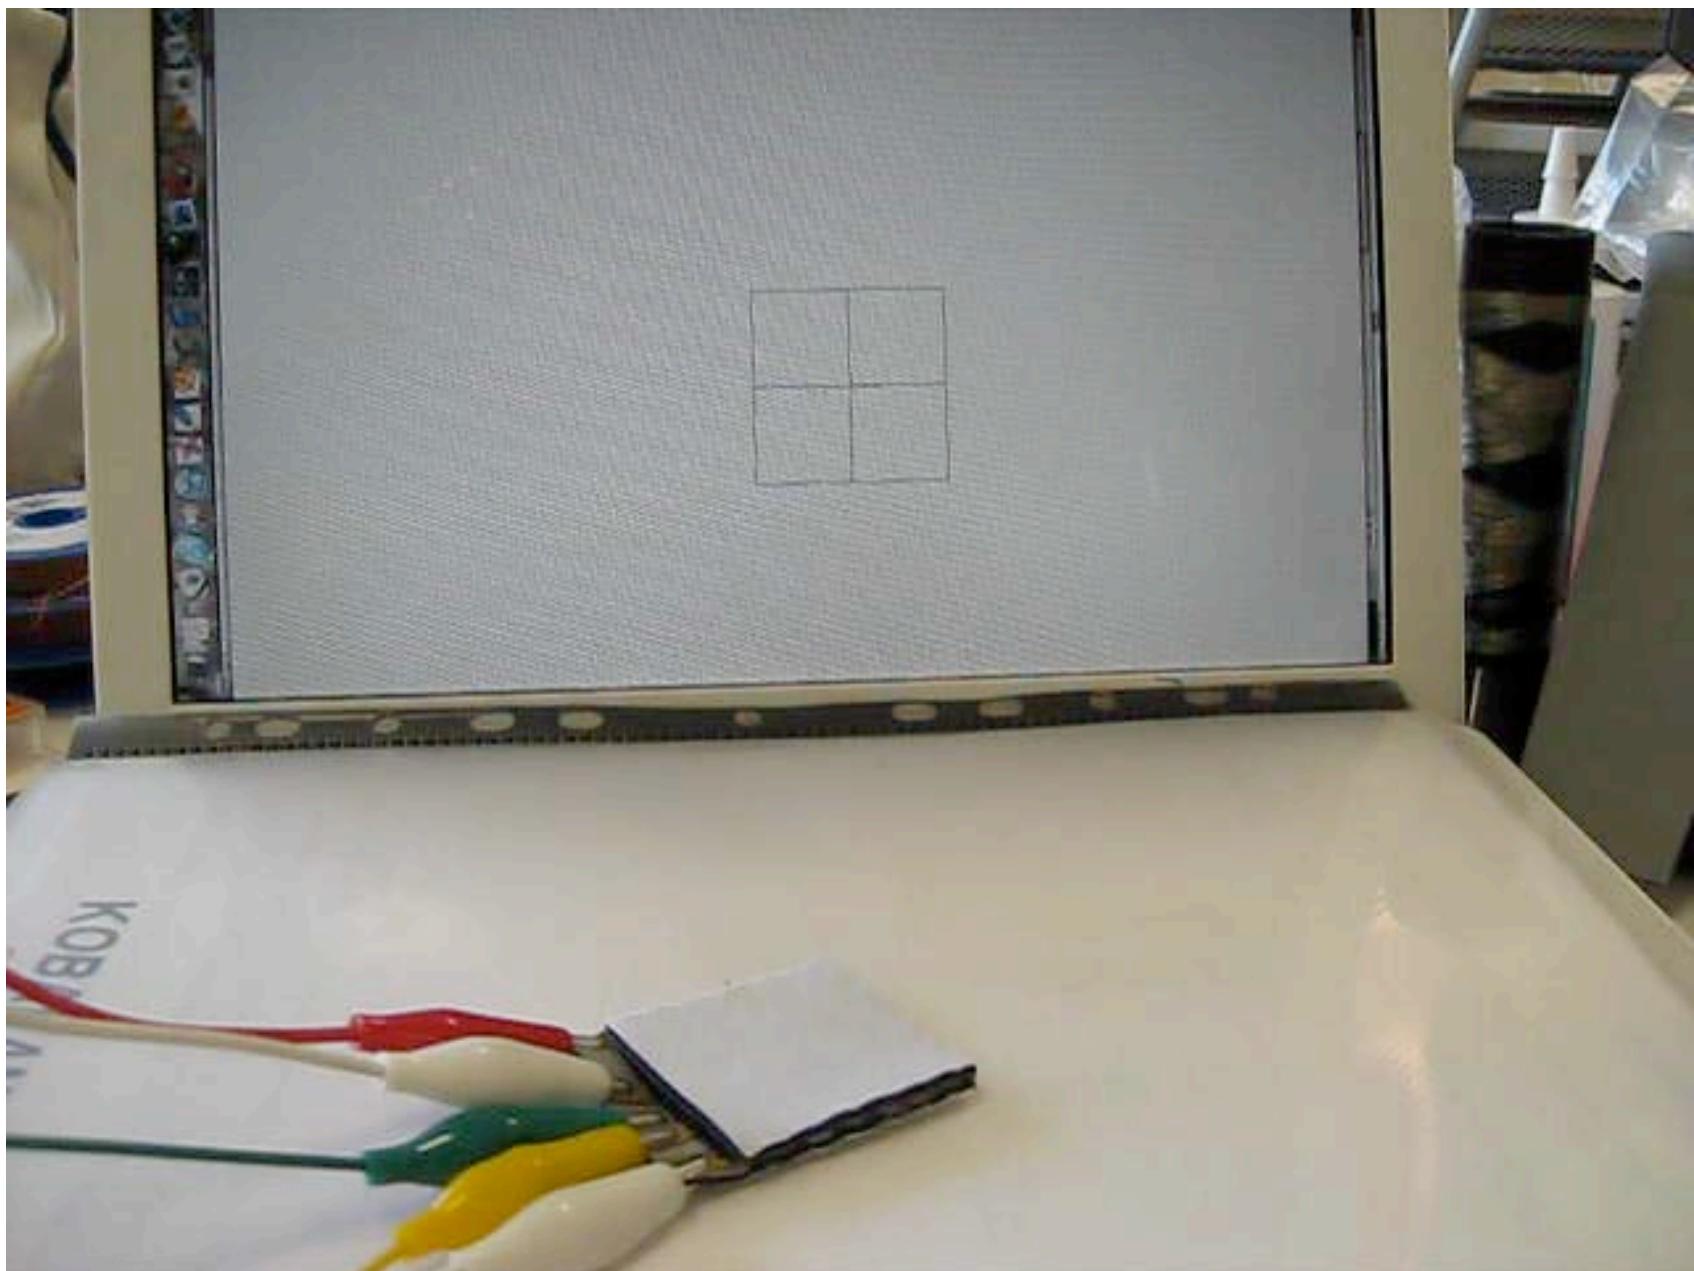

Tilt Sensor



Tilt Sensor

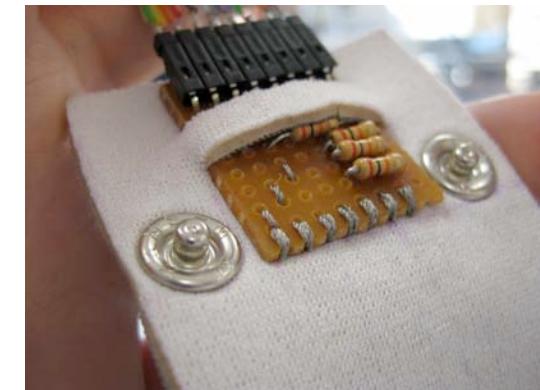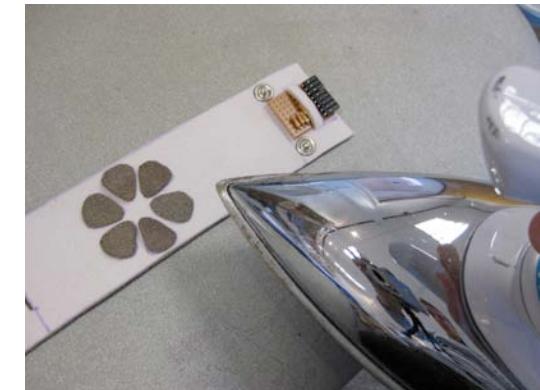



MATERIALS

- Neoprene
- Stretch conductive fabric
- Conductive thread
- Metal bead
- Stretchy fabric glue



Tilt Sensor


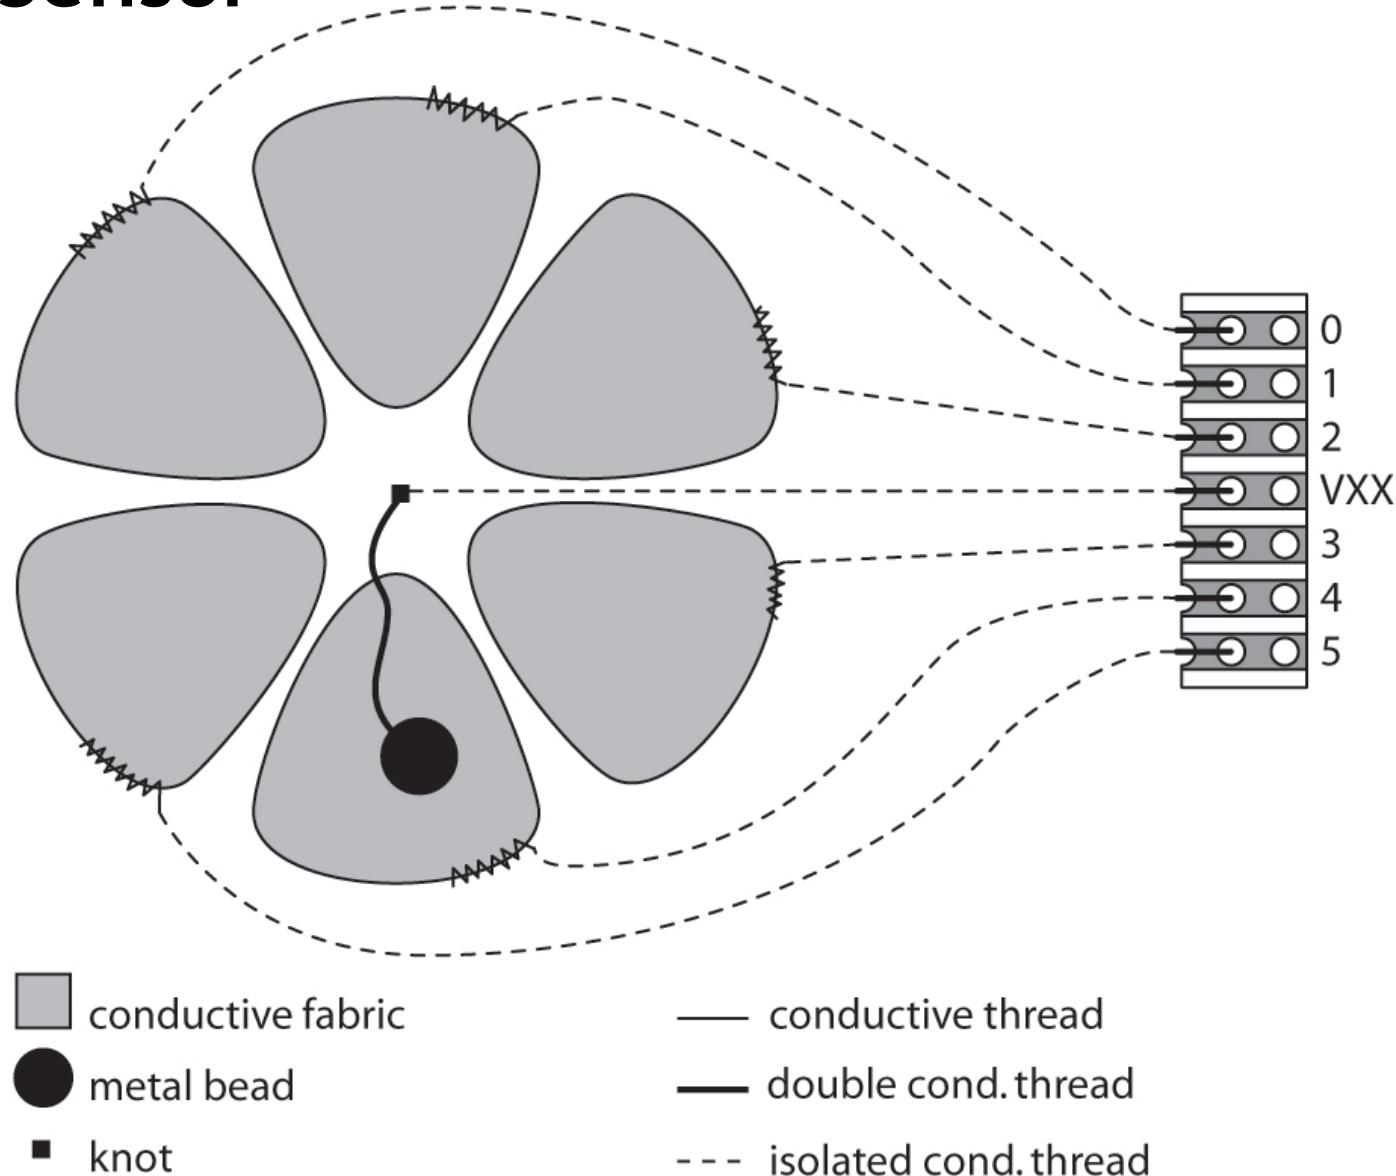


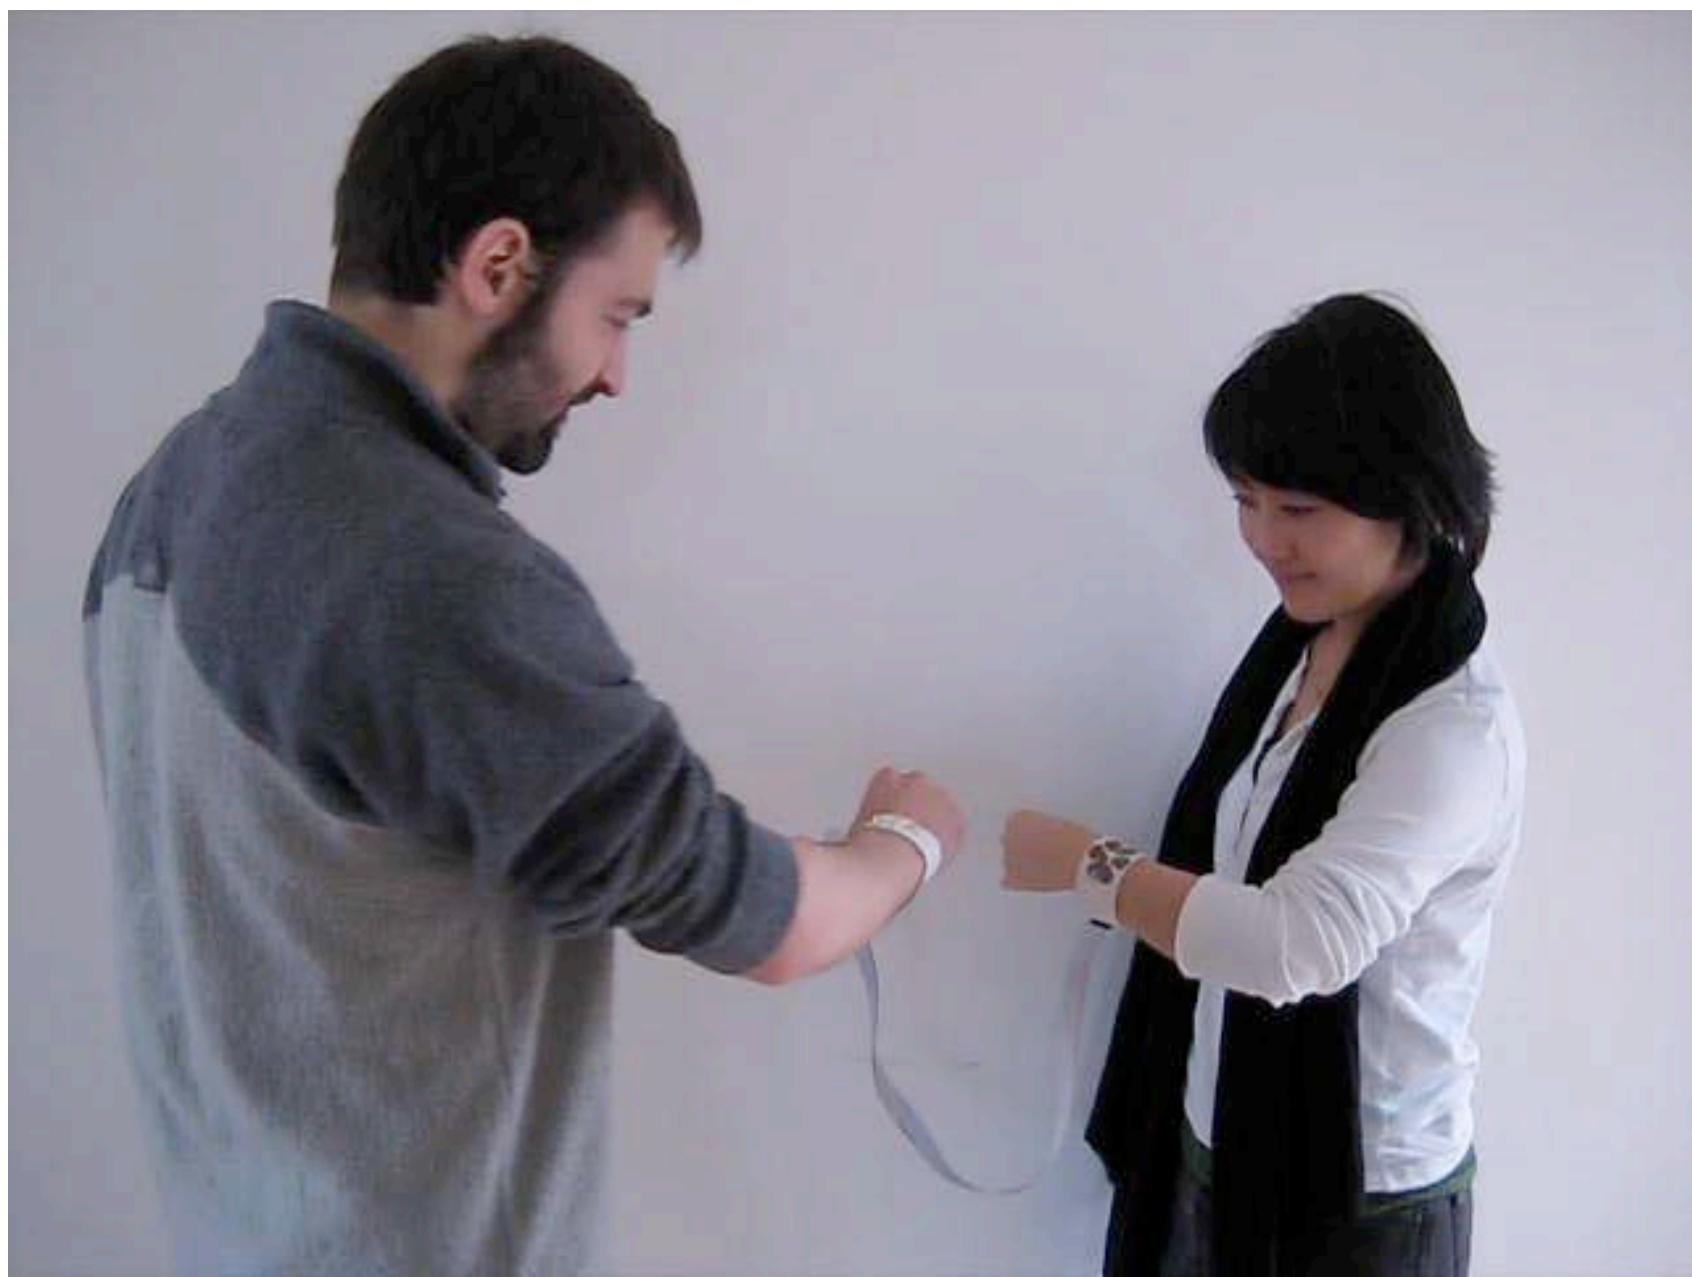

Fabric Potentiometer



Fabric Potentiometer

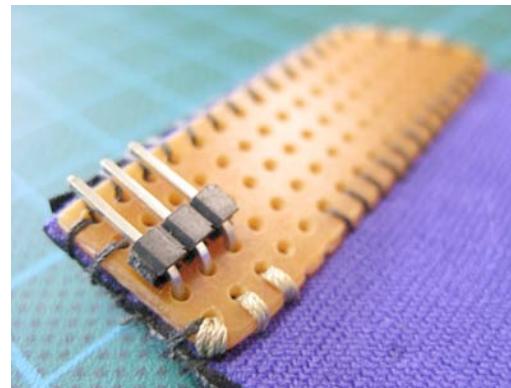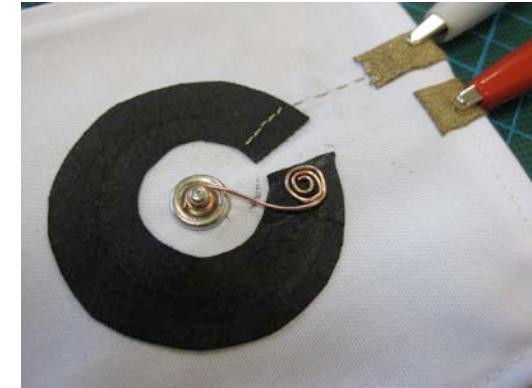


MATERIALS

- Neoprene
- Conductive thread
- Stretch conductive fabric
- Resistive fabric
- Fusible interfacing



Fabric Potentiometer

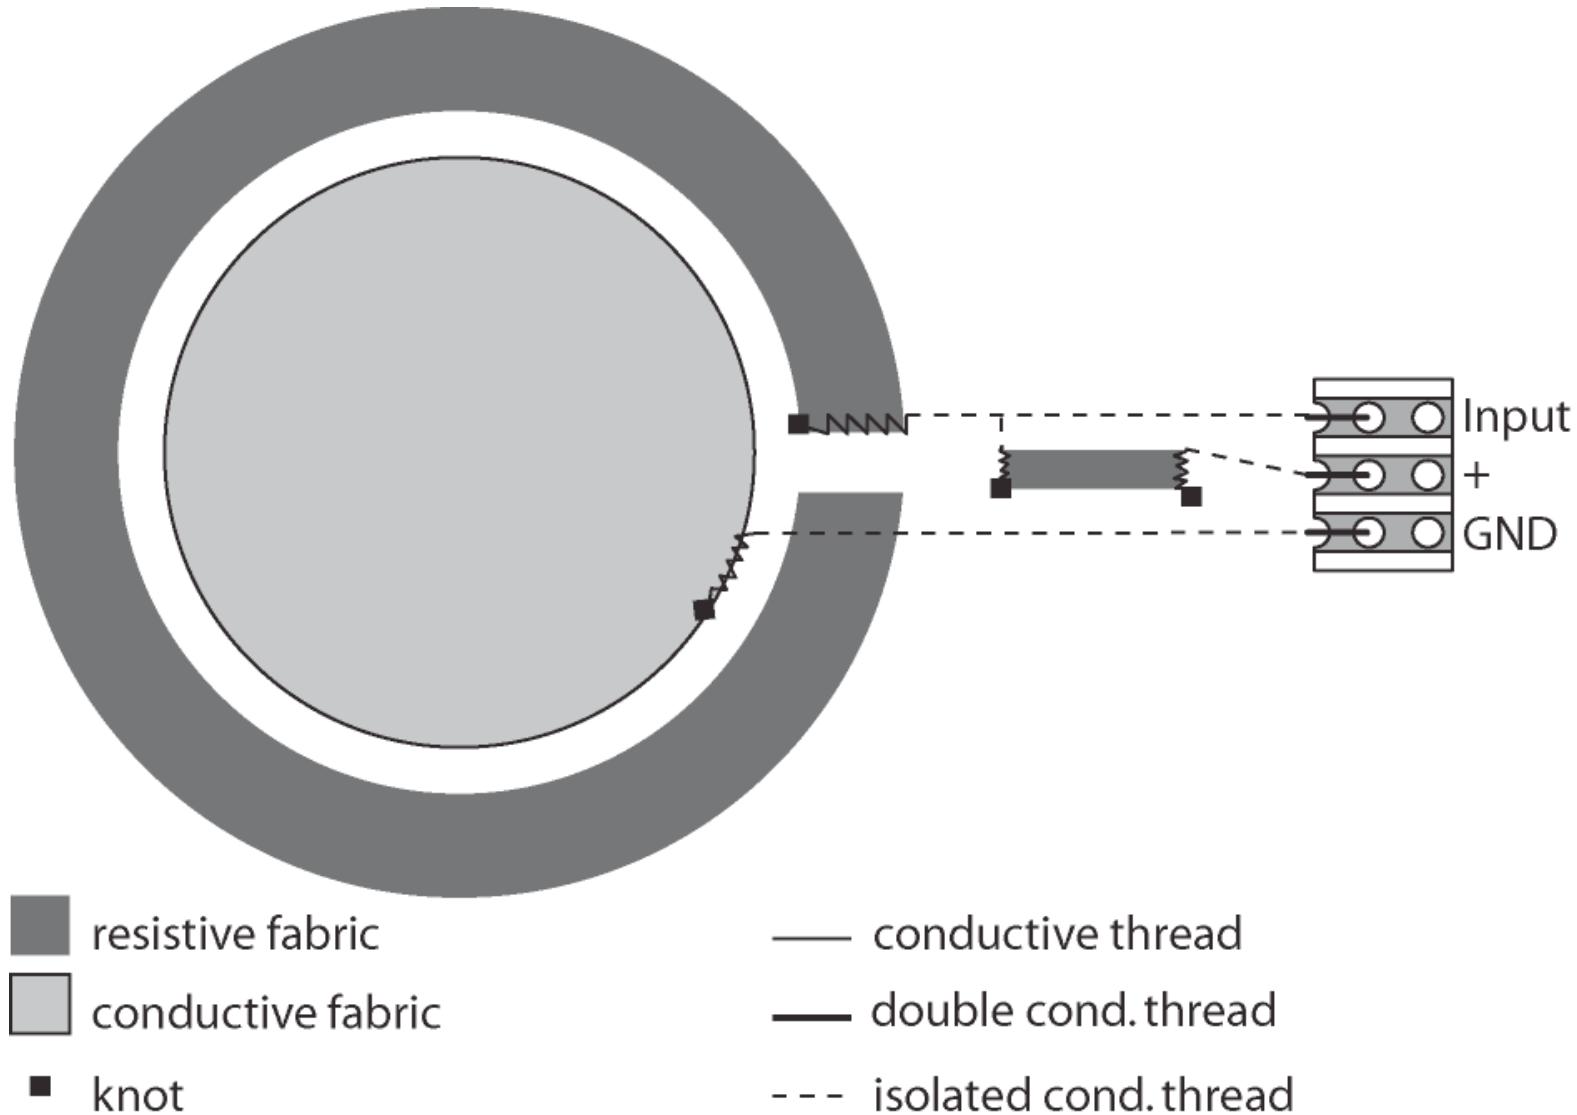



Crochet Potentiometer




Crochet Potentiometer




MATERIALS

- Resistive yarn
- Regular yarn
- Conductive thread
- Metal bead

Potentiometer

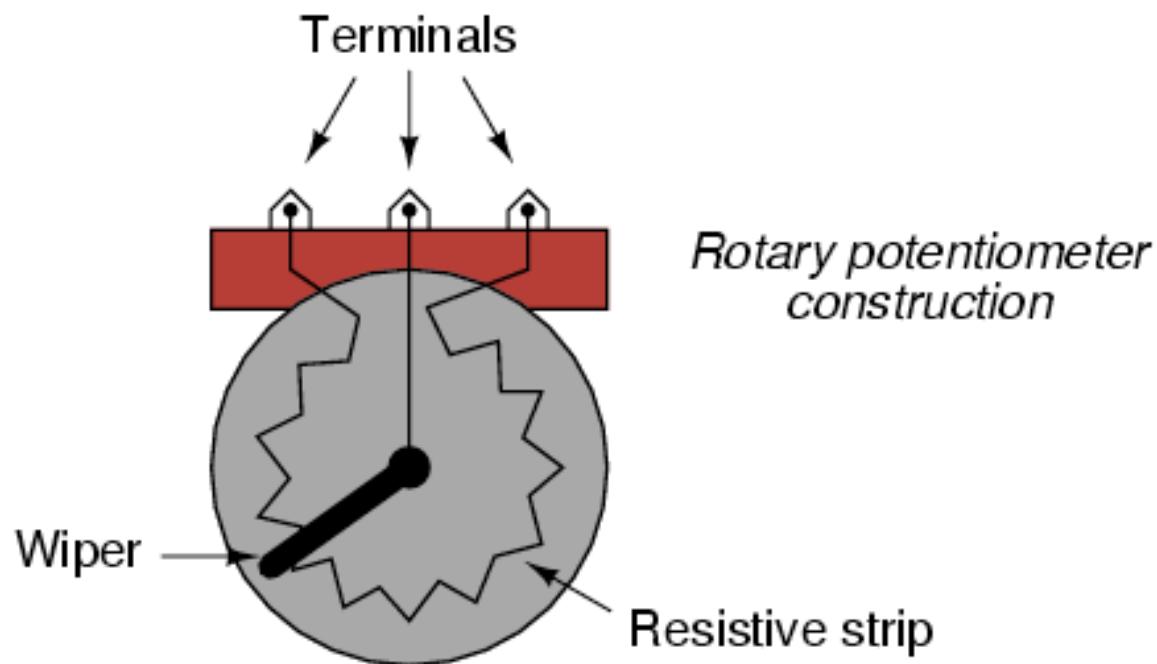


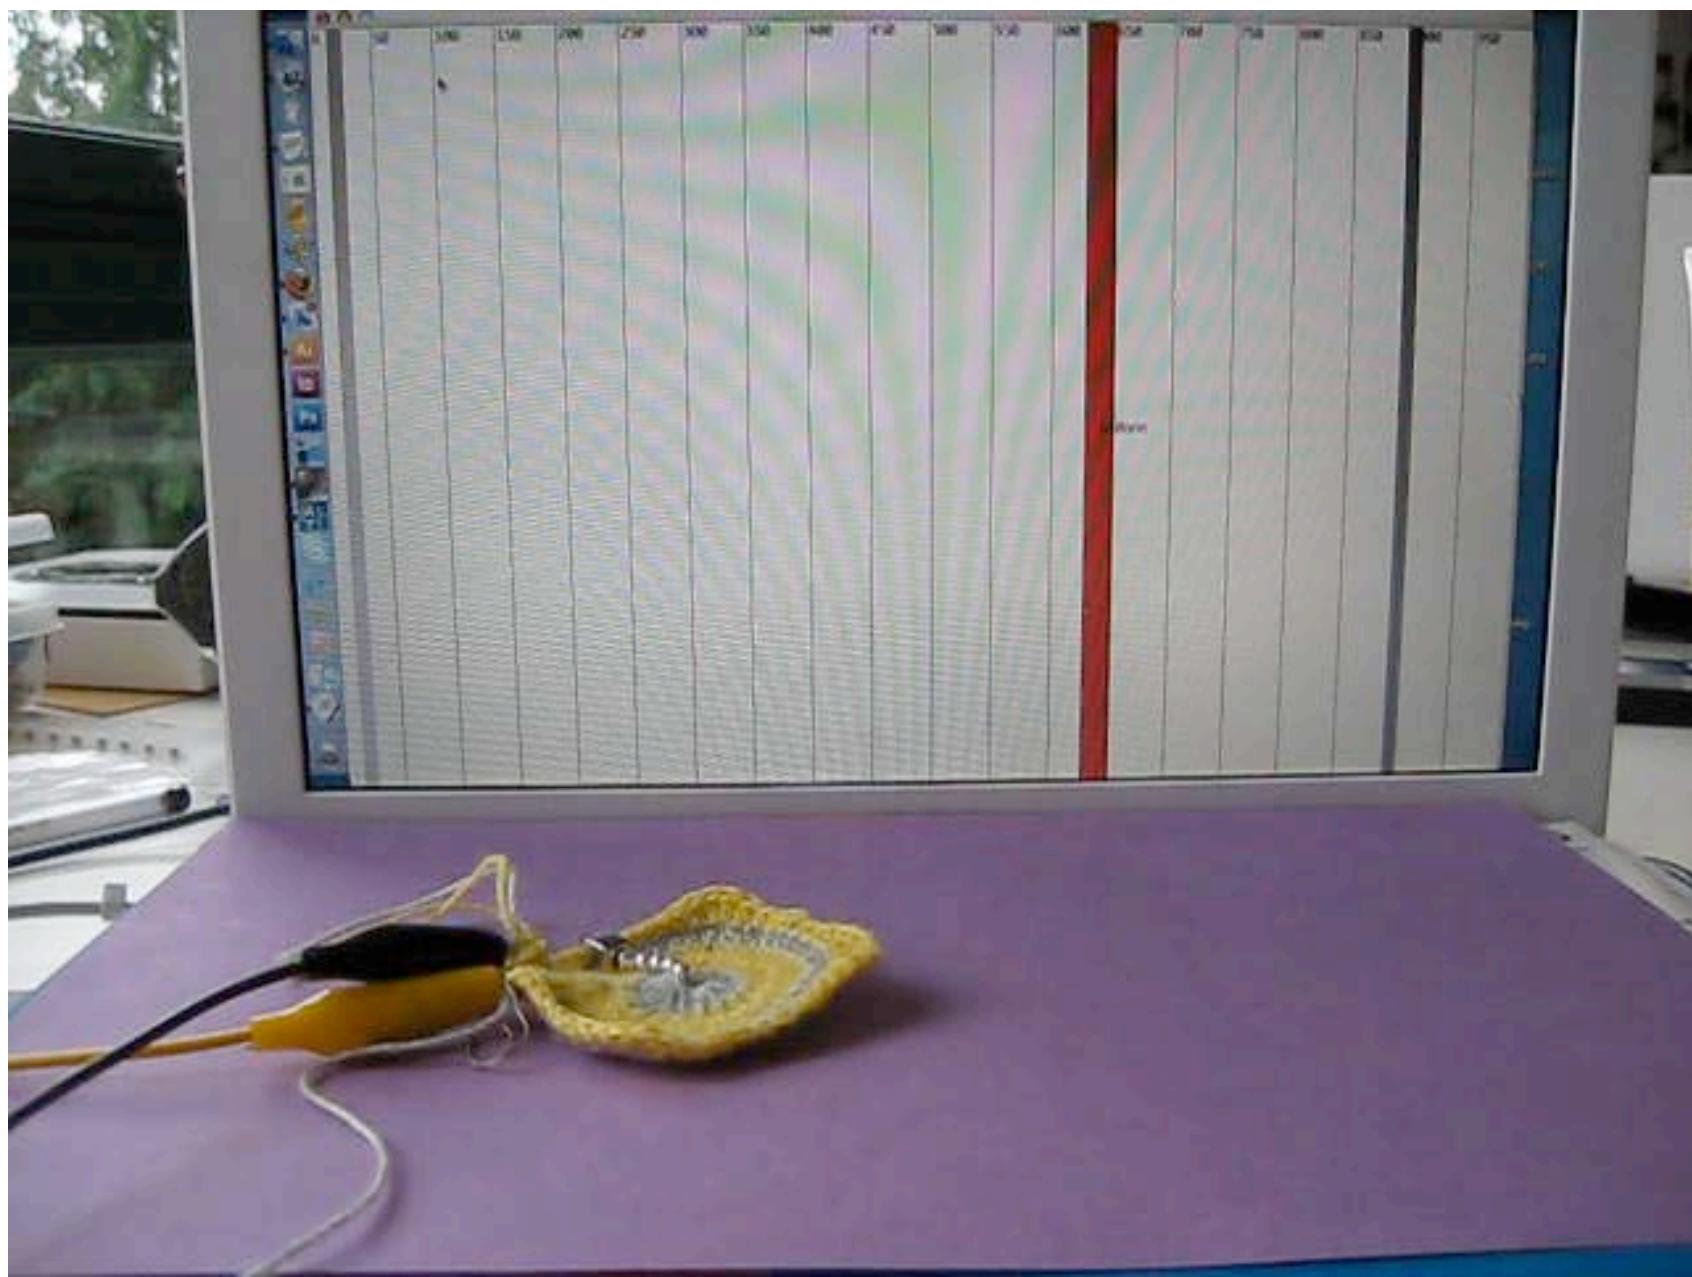

Stroke Sensor



Stroke Sensor

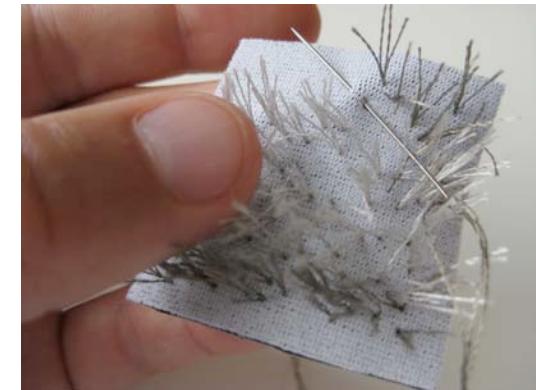


MATERIALS

- Neoprene
- Conductive thread
- Resistive thread
- Conductive fabric
- Fusible interfacing




Stroke Sensor


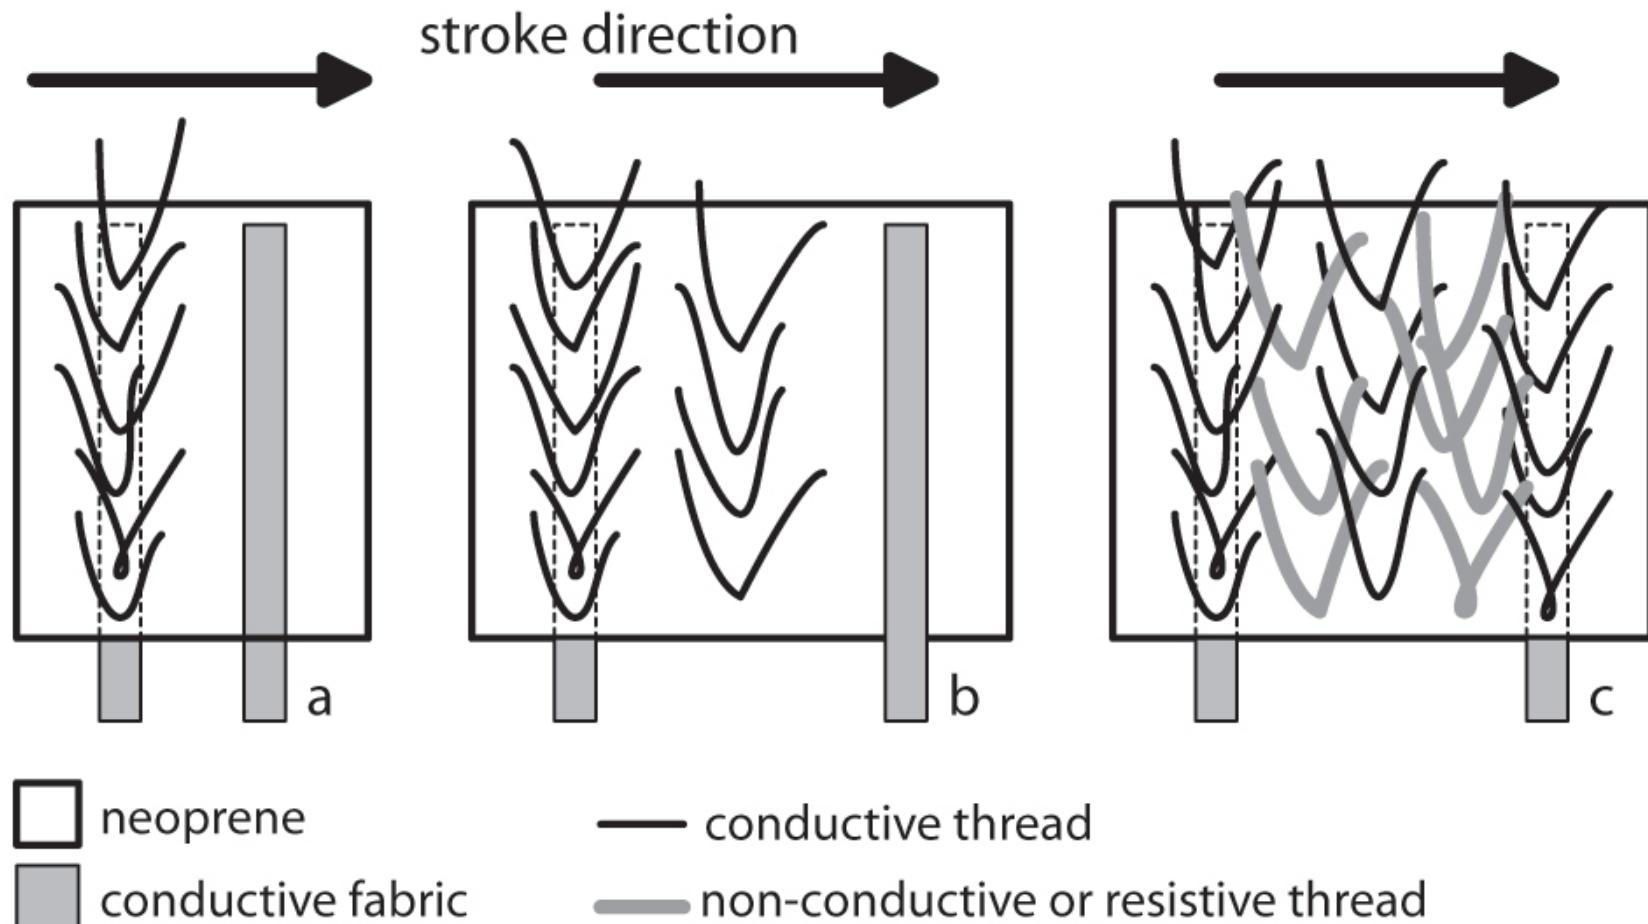


Stroke Sensor - VIDEO

Knit Stretch Sensor

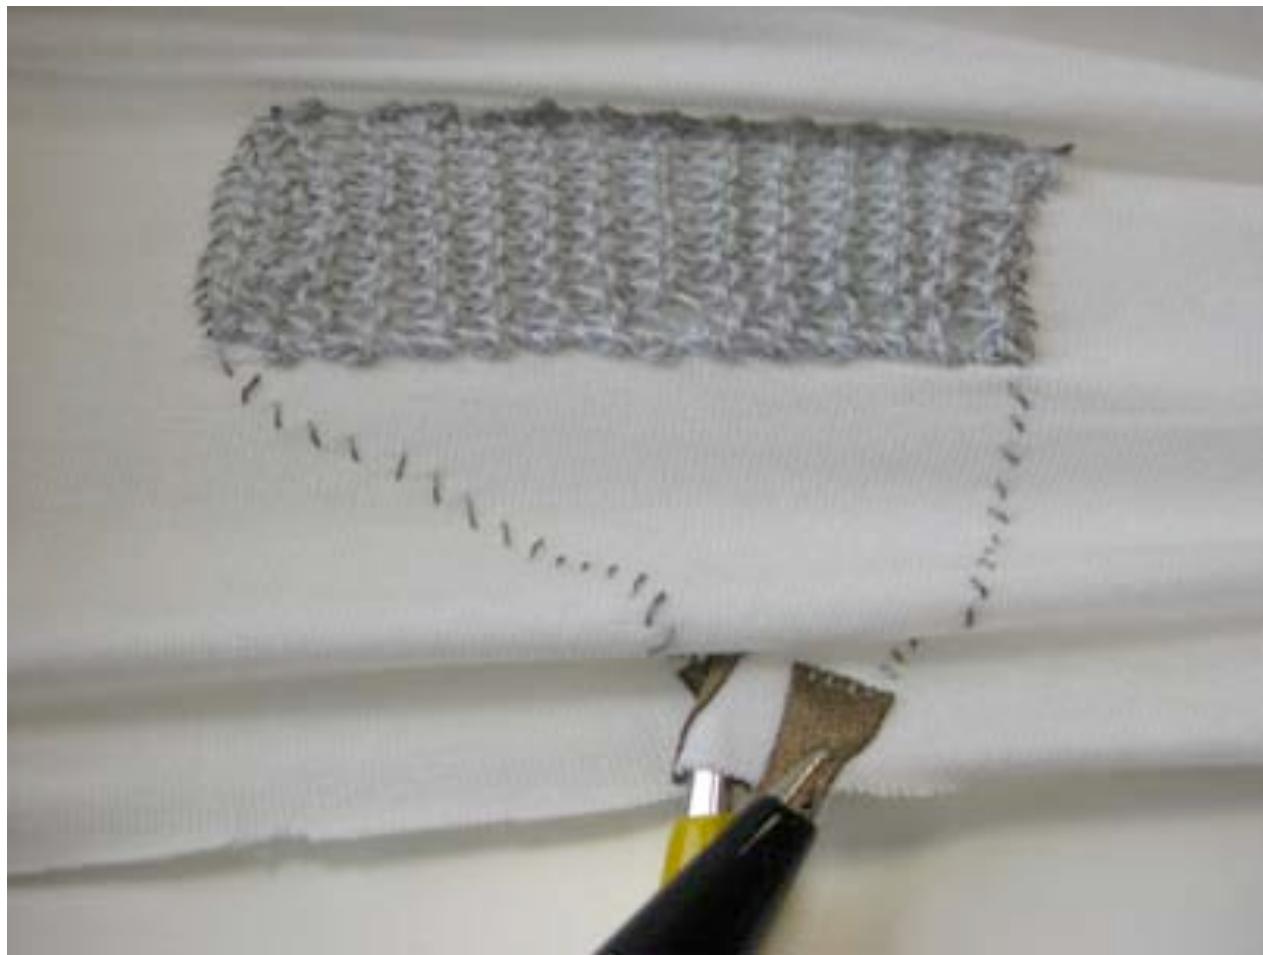


Knit Stretch Sensor

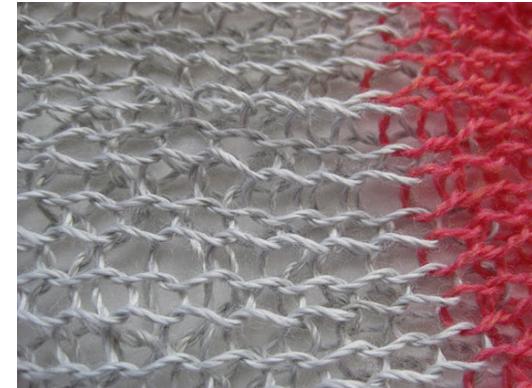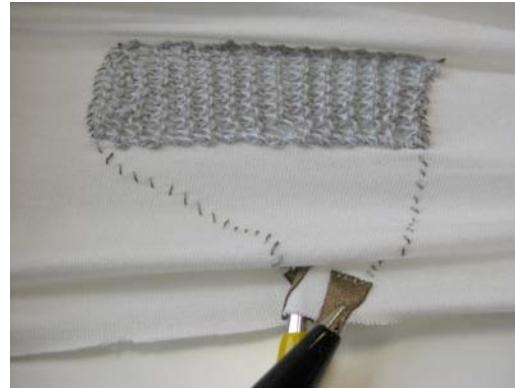


MATERIALS

- Resistive yarn
- Regular yarn

Knit Stretch Sensing Bracelet

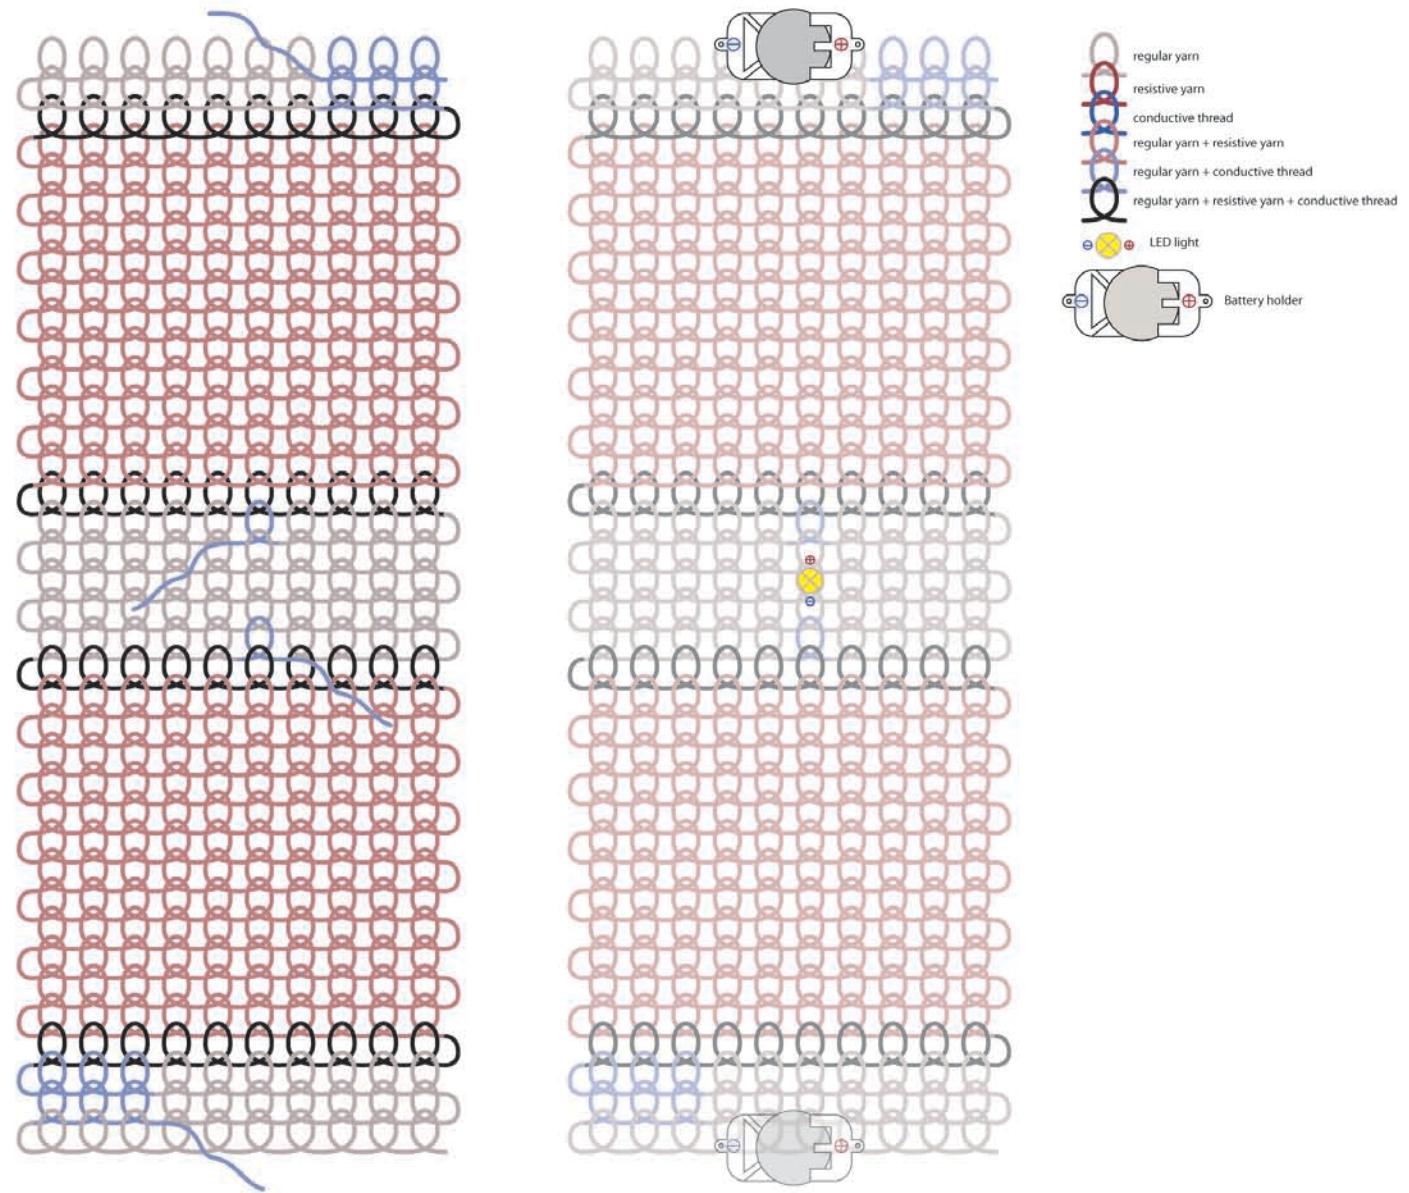


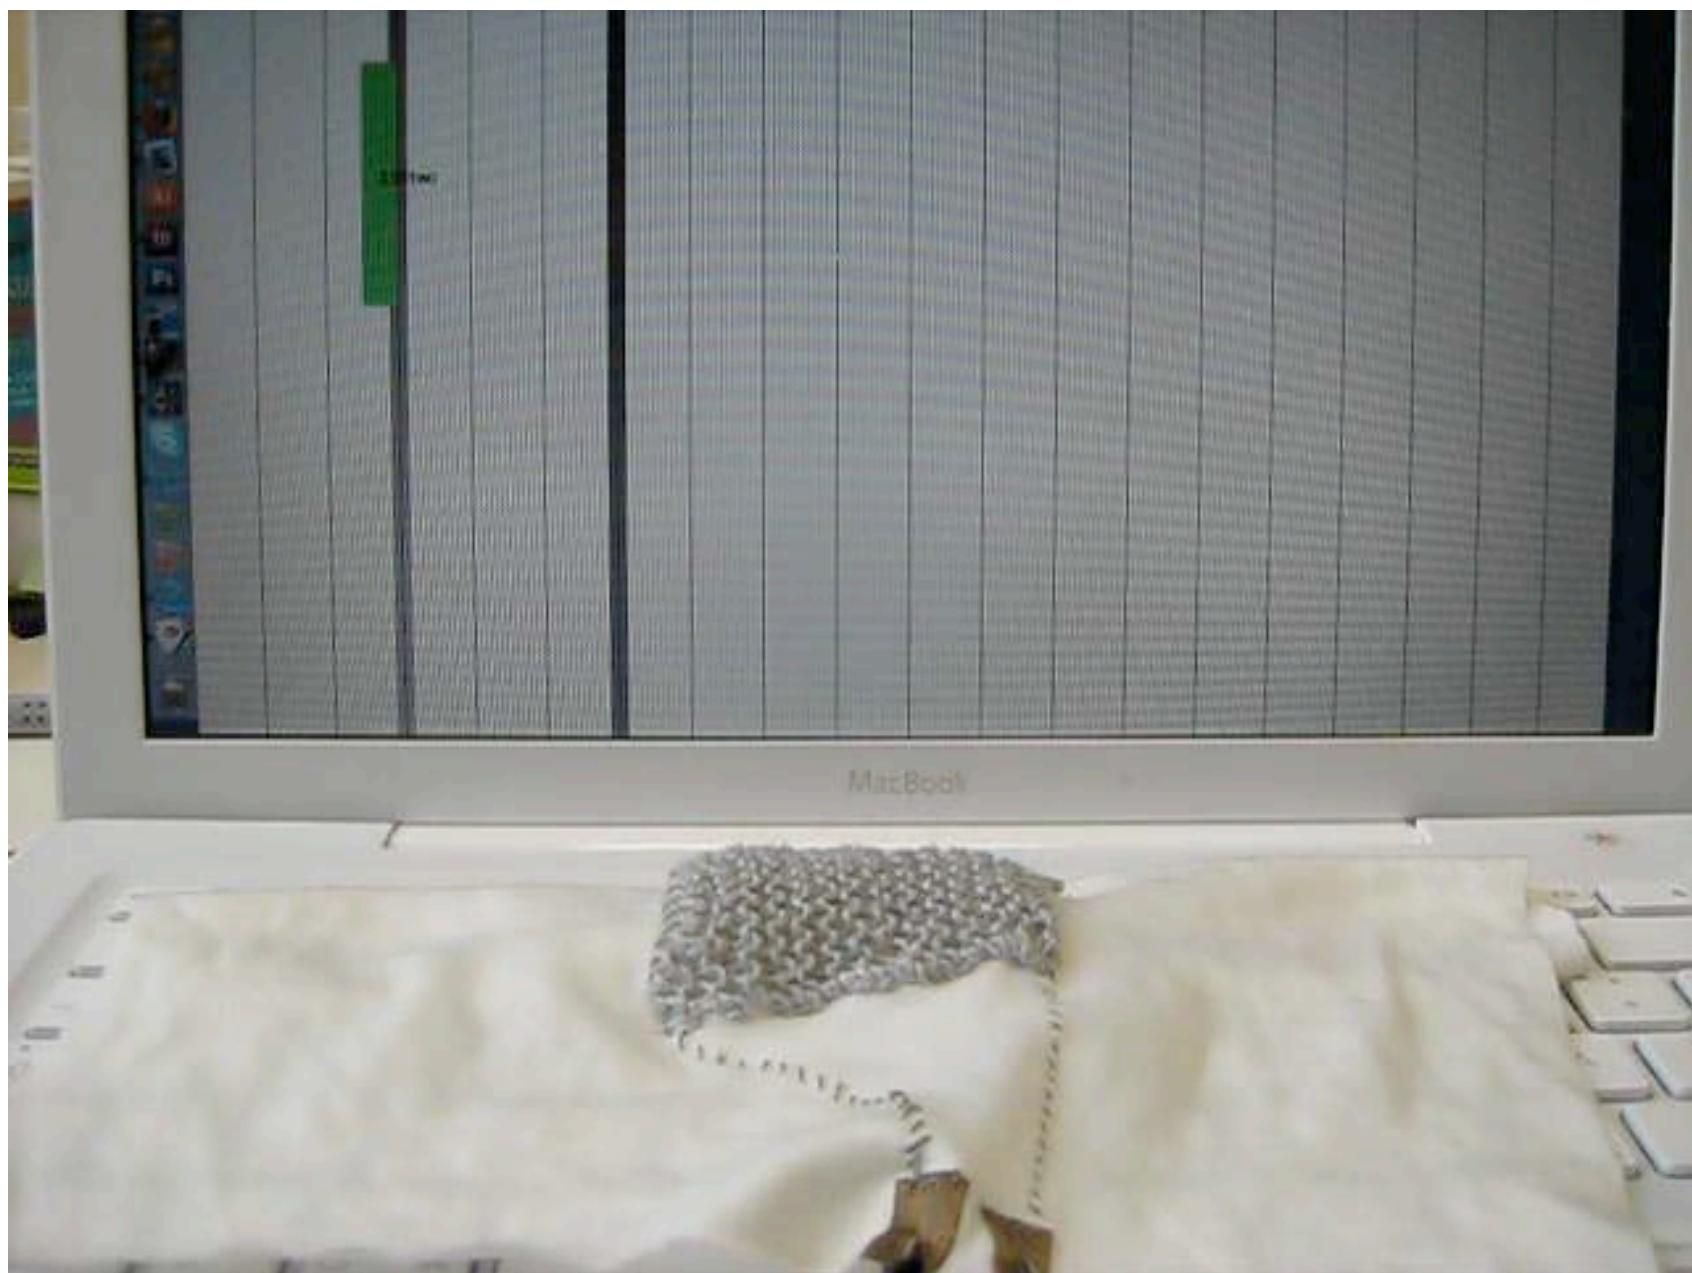

Fabric Button




Fabric Button

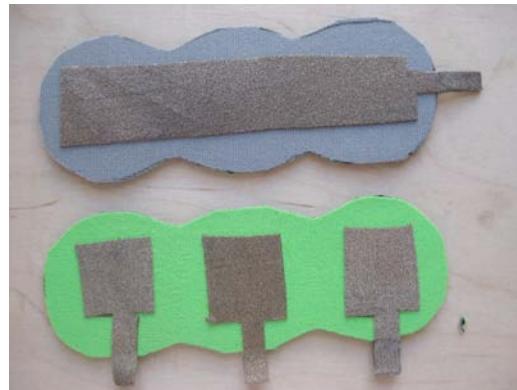


MATERIALS



- Neoprene
- Stretch conductive fabric
- Fusible interfacing
- Foam

Fabric Button

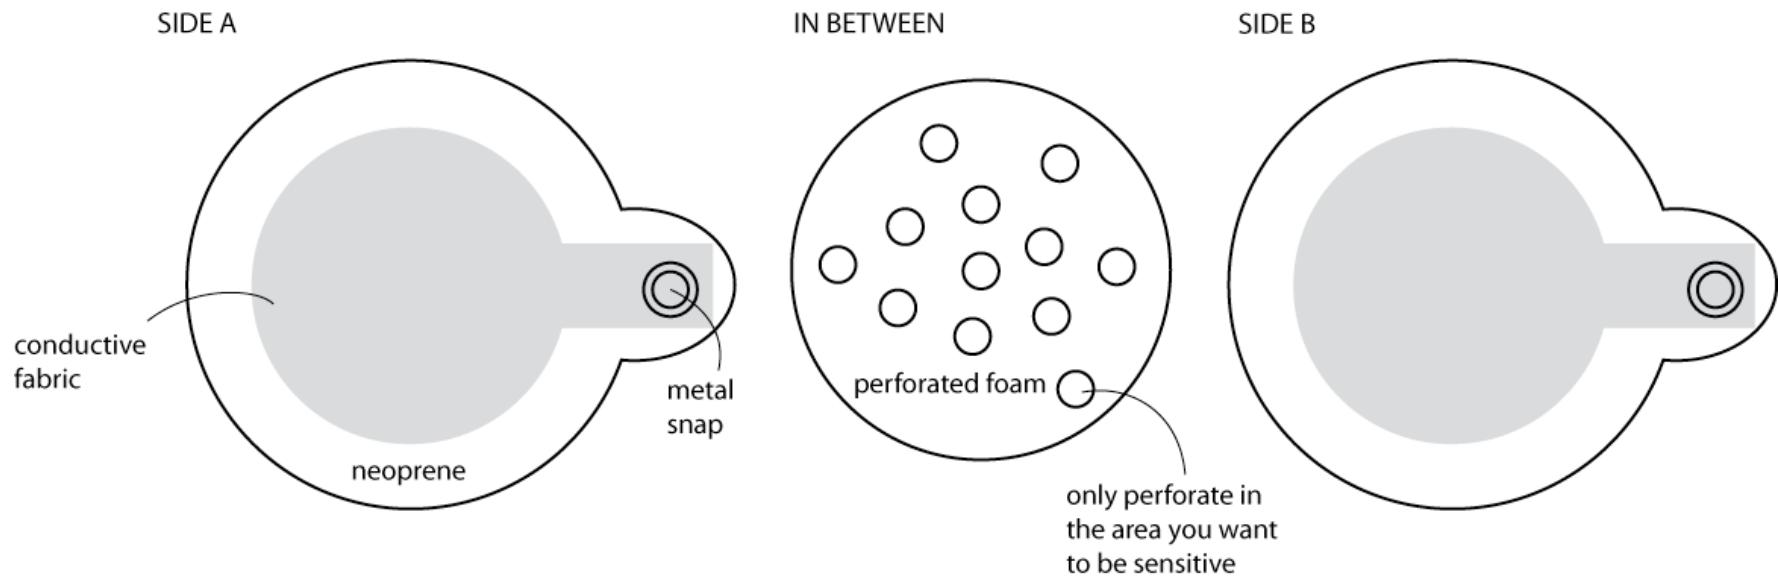

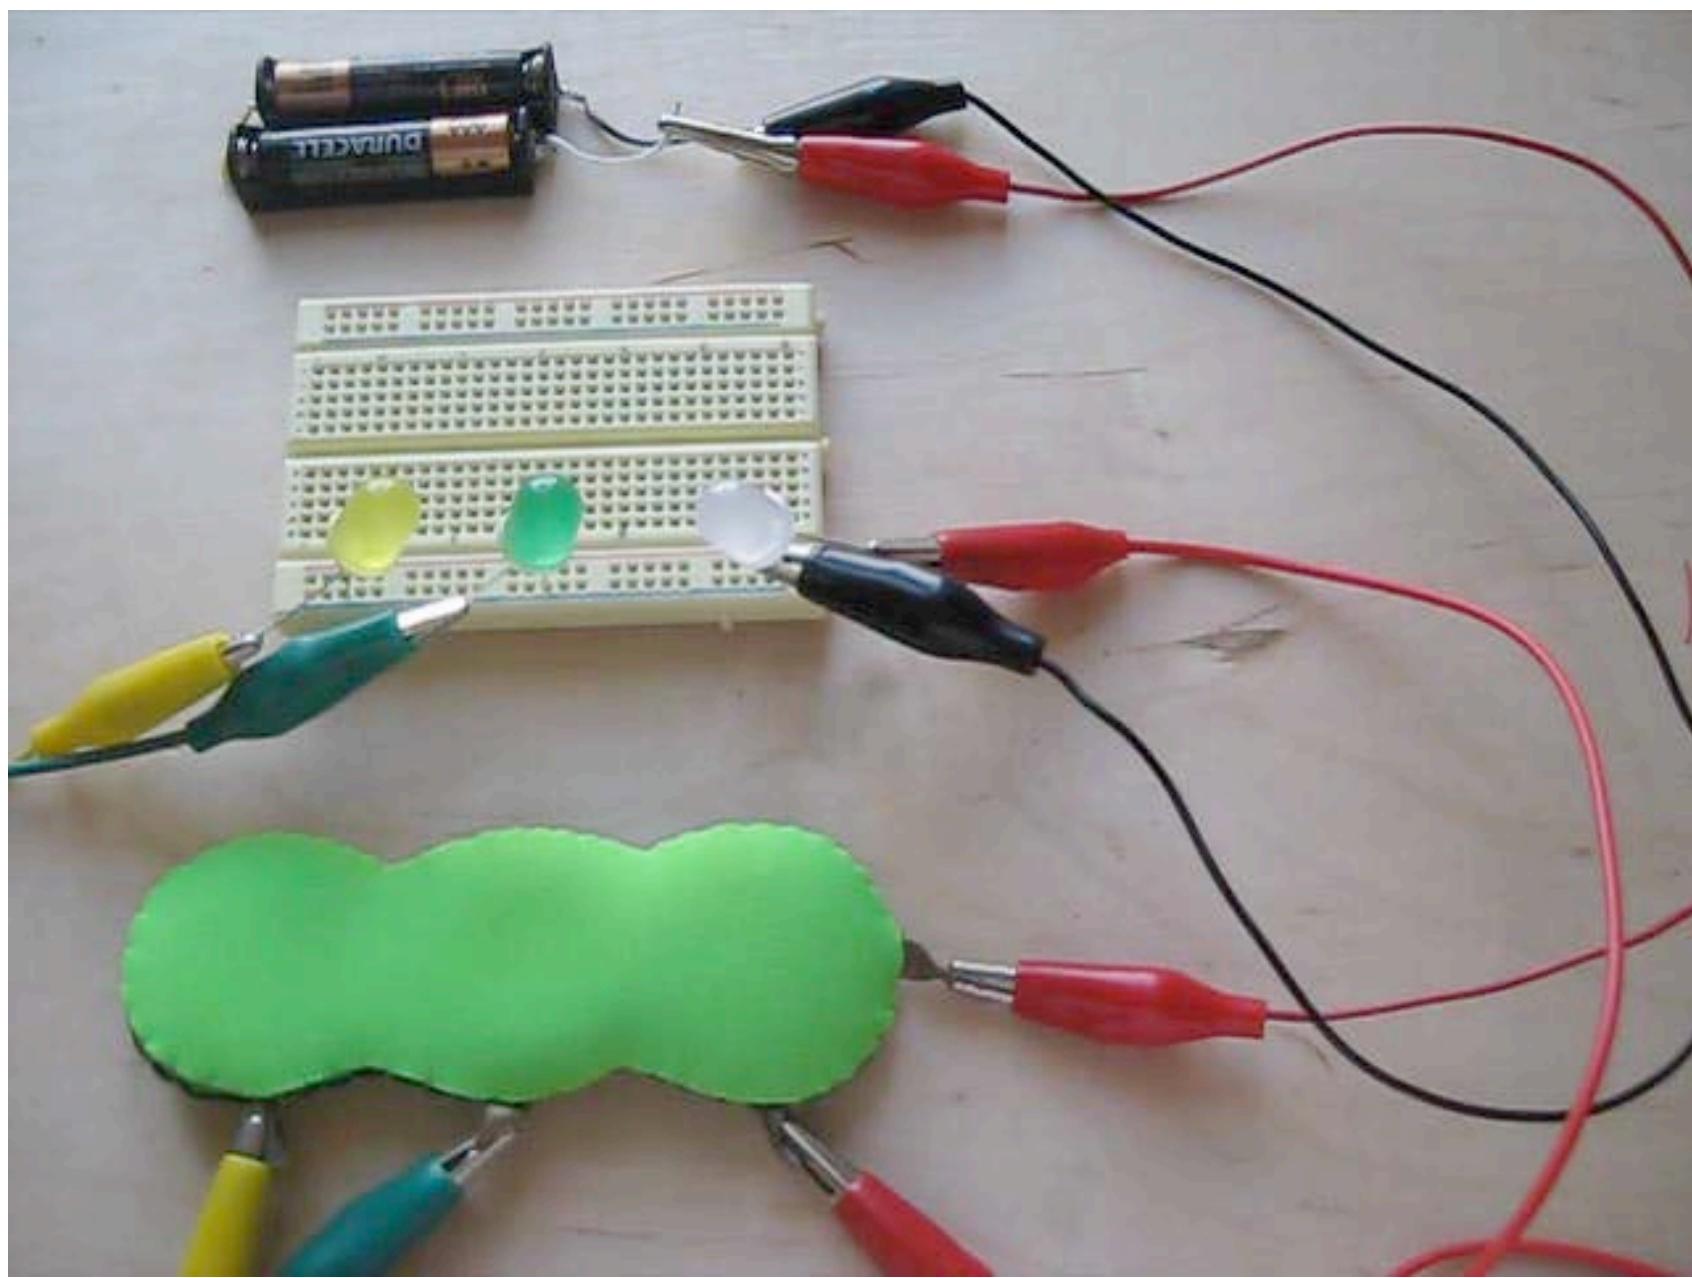

More Sensors...

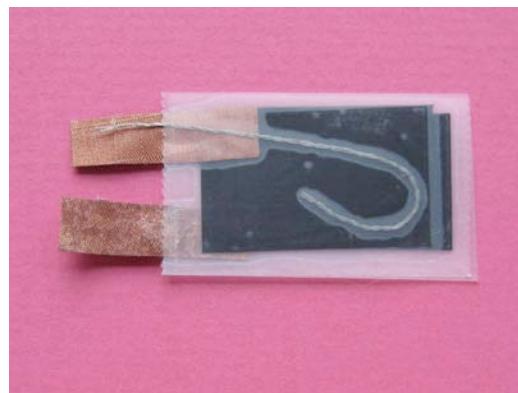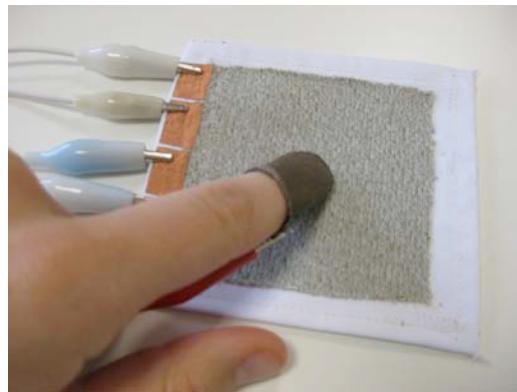

www.instructables.com/member/Plusea

instructables

Home Explore Answers Community Submit

Jan 08 May 08 Sep 08 Jan 09 May 09

All Art Craft Food Games Green Home Kids Life Music Offbeat Outdoors Pets Ride S

member : Plusea

subscribe

Instructables [rss](#)

sort by: recent | views | name | rating

1-12 of 32 [next »](#)

FEATURED Sensitive Fingertips

FEATURED Stickytape Sensors

FEATURED Neoprene Bend Sensor IMPROVED

FEATURED Limpet Push-Button

FEATURED Time Sensing Bracelet

FEATURED Tilt Sensing Bracelet

FEATURED Pressure Sensor Matrix

FEATURED Solar Necklace T-Shirt

Send Me a Patch

Private Message Me

Subscribe to Me

Plusea

Location Brooklyn, NY

Web Site <http://www.plusea.at>

Member Since: Jun 8, 2007

MEMBER STATS

Instructables: 32

Subscribers: 115

HOW TO GET WHAT YOU WANT

EXAMPLE PROJECTS

WORKSHOPS

ACTUATORS

CIRCUITS

COMMUNICATION

CONNECTIONS

POWER

SENSORS

TRACES

CONDUCTIVE

MATERIALS

NON-CONDUCTIVE

MATERIALS

TECHNIQUES

TOOLS

>> SENSORS

BEAD TILT SENSOR

CONSTRUCTED STRETCH

SENSORS

CROCHET PRESSURE

SENSOR

CROCHET TILT

POTENTIOMETER

FABRIC BEND SENSOR

FABRIC BUTTON

FABRIC POTENTIOMETER

FABRIC PRESSURE SENSOR

FABRIC STRETCH SENSORS

KNIT CONTACT SWITCH

KNIT TOUCHPAD

KNITTED STRETCH SENSORS

PAINTED STRETCH SENSOR

PRESSURE SENSOR MATRIX

SIMPLE FABRIC PRESSURE

SENSORS

STICKYTAPPS SENSORS

SENSORS

Sensors

CROCHET PRESSURE SENSOR



Here is the crochet pressure sensor.


The main principle is same as regular pressure sensor. Instead of conductive fabric or thread, I used conductive yarn from Schoeller, Nm 50/2 60/40 Pes/Inox @ Euros 65.00/kg (25,000 metres/kg). Since this yarn is very thin, it is mixed with normal yarn and crochet, which is what you can see [...]


Sensors


CROCHET TILT POTENTIOMETER



Combination of tilt sensing and potentiometer using regular wool and conductive wool from Schoeller.

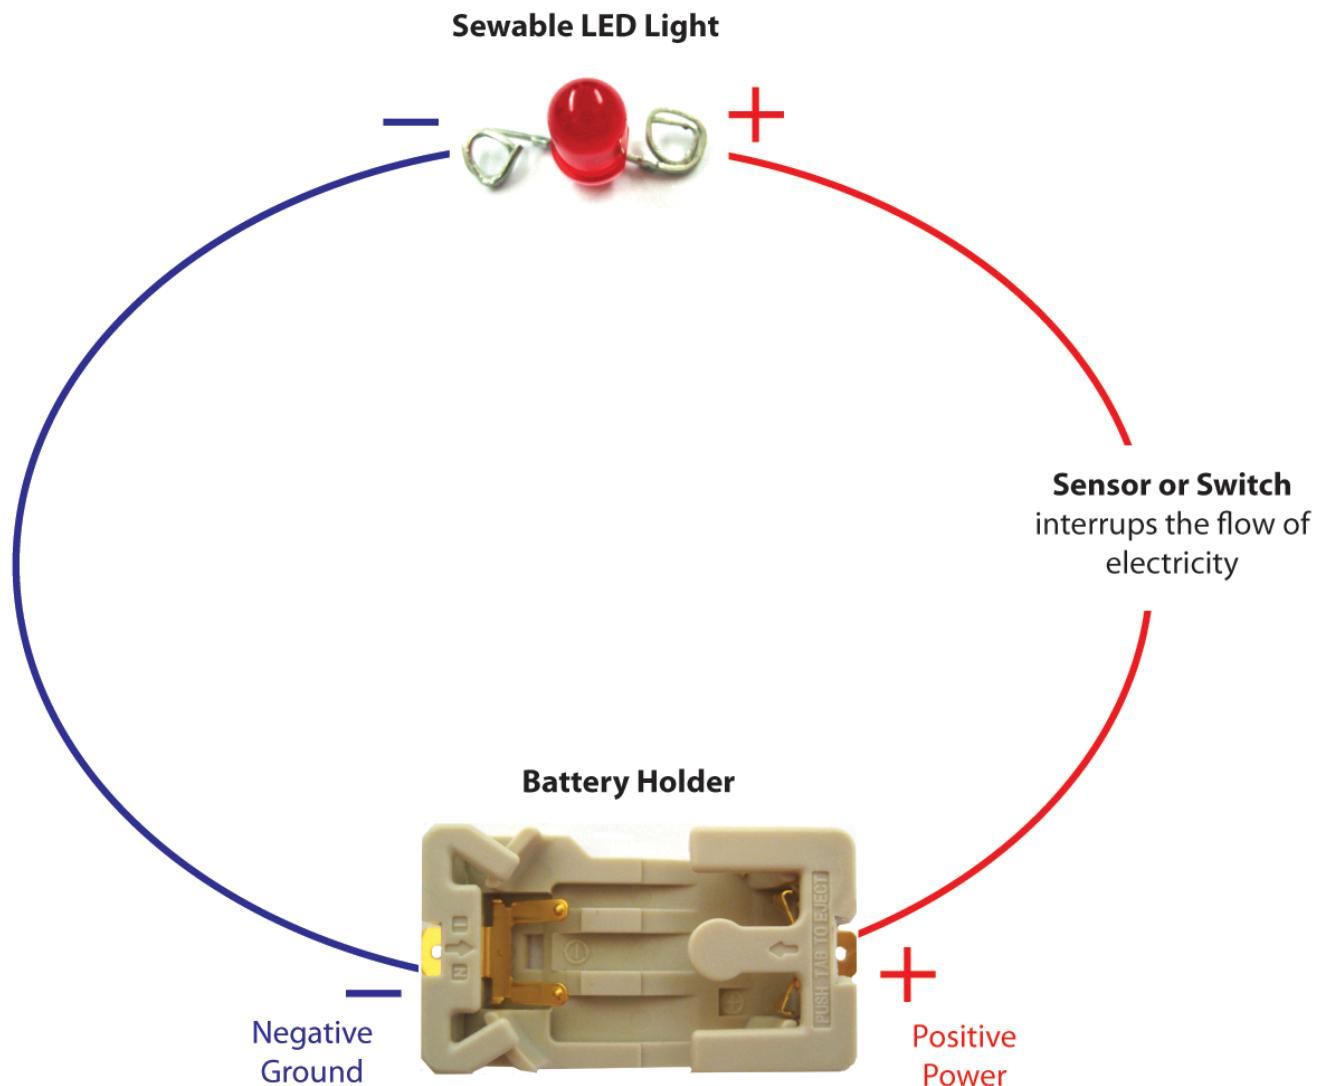

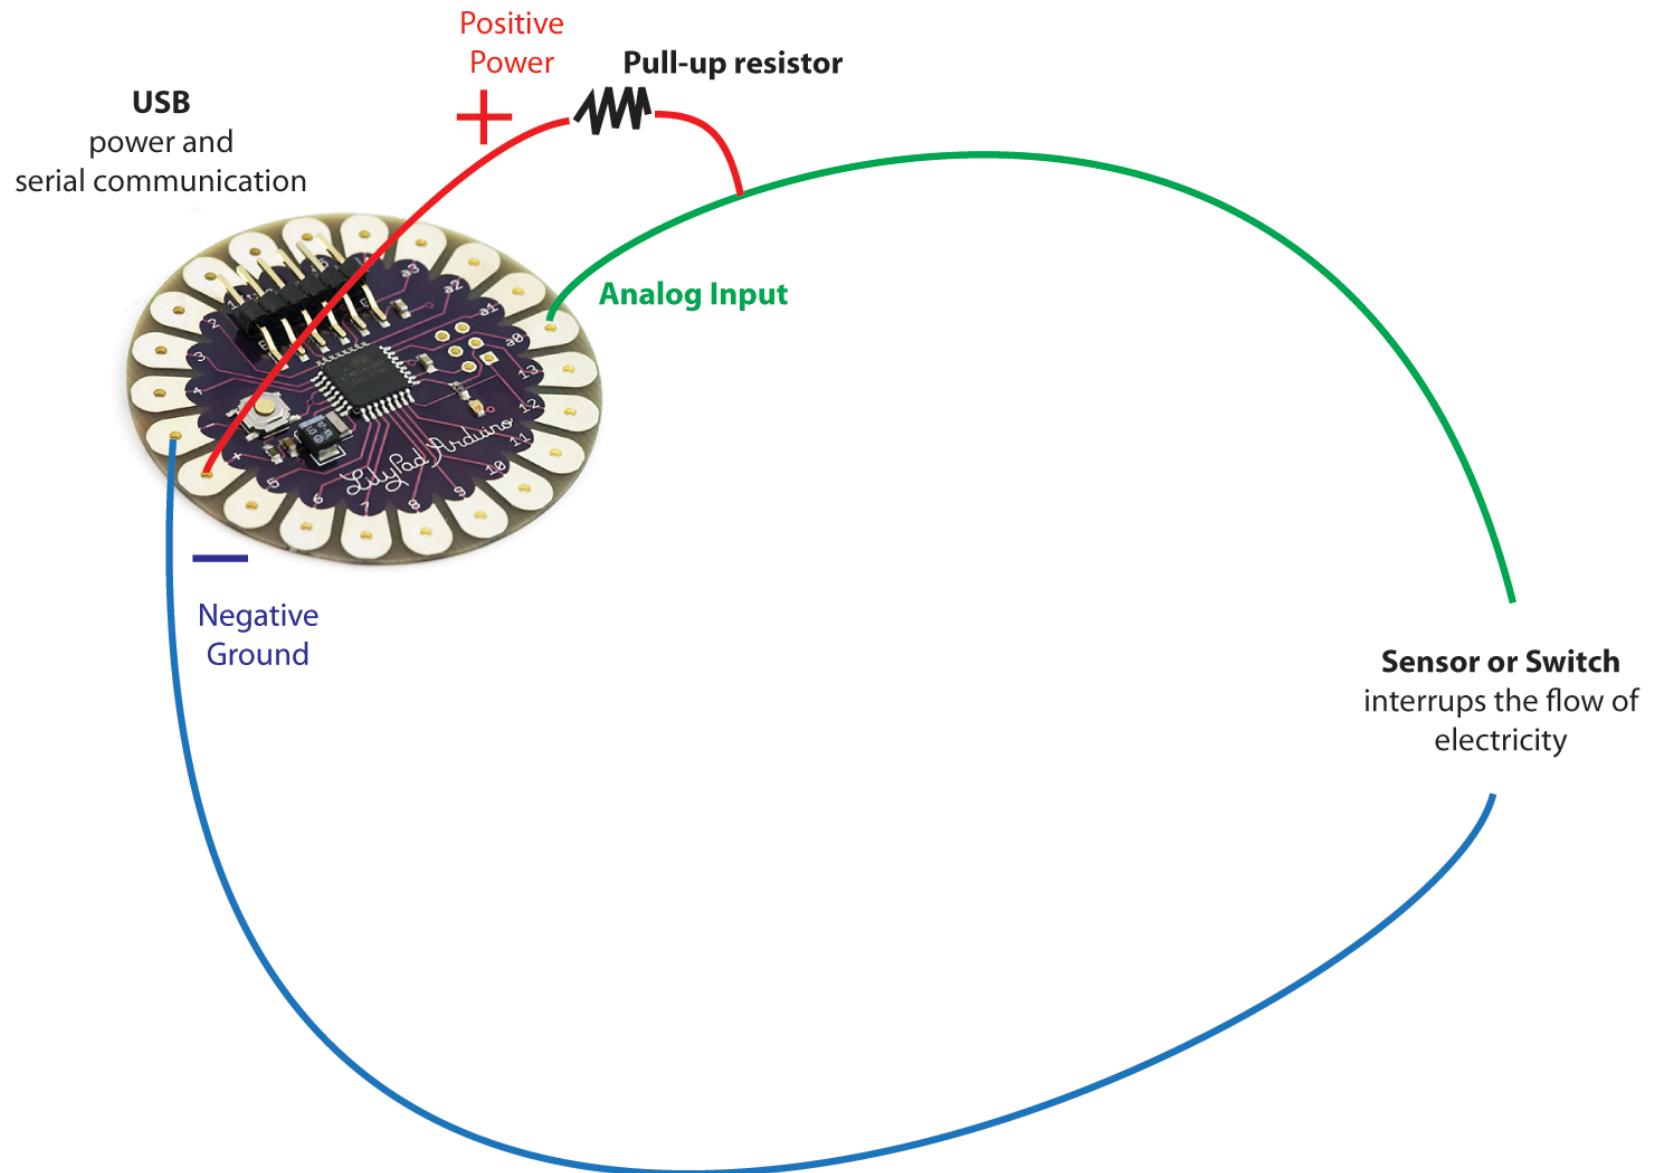

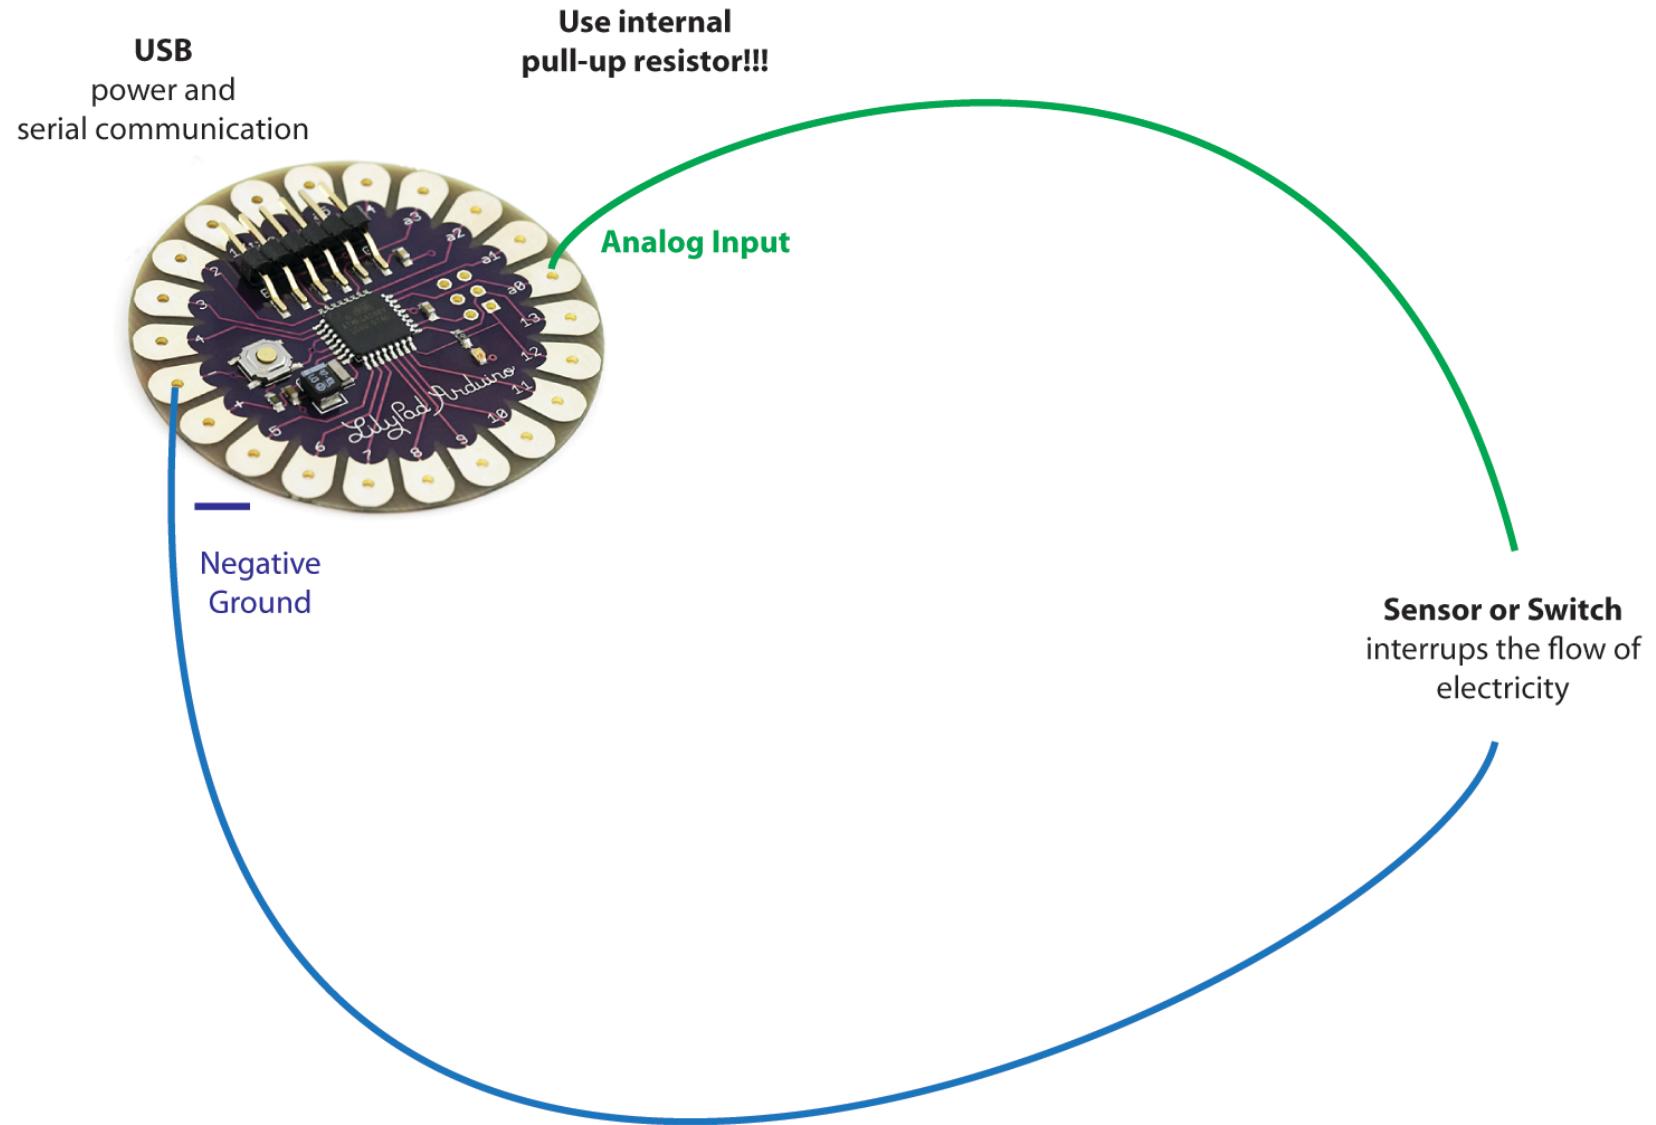

Arduino LilyPad

Blink | Arduino 0017

Play Stop Run Up Down Refresh

Blink

```
int ledPin = 13; // LED connected to digital pin 13


// The setup() method runs once, when the sketch starts

void setup() {
  // initialize the digital pin as an output:
  pinMode(ledPin, OUTPUT);
}

// the loop() method runs over and over again,
// as long as the Arduino has power

void loop()
{
  digitalWrite(ledPin, HIGH); // set the LED on
  delay(1000); // wait for a second
  digitalWrite(ledPin, LOW); // set the LED off
  delay(1000); // wait for a second
}
```

1

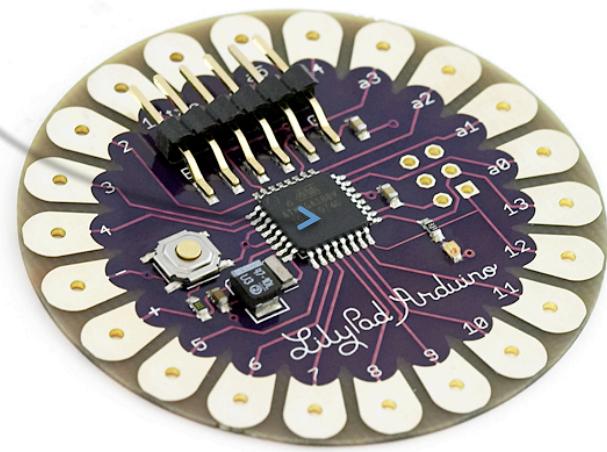

Processing

Graph_1AnIN | Processing 1.0.9

Graph_1AnIN serialEvent thresholding thresholdGraph

```
/*
 * By Hannah Perner-Wilson, www.plusea.at
 *
 * IMPORTANT: Scroll down to set your thresholds!
 */

import processing.serial.*;

// definition of window size
// you can change the size of the window as you like
// the thresholdGraph will be scaled to fit
// the optimal size for the thresholdGraph is 1000 x 400
int xWidth = 1200;
int yHeight = 800;

// xPos input array, using prefix
int[] xPosArr= {0};


//
int[] messageArr= {0};

// Arrays for threshholding
int[] threshMax= {0};
int[] threshMin= {0};

// variables for serial connection. portname and baudrate are user specific
Serial port1;

//Set your serial port here (look at list printed when you run the application)
String V3 = Serial.list()[0];
String portname1 = V3;
int baudrate = 9600;
```

1

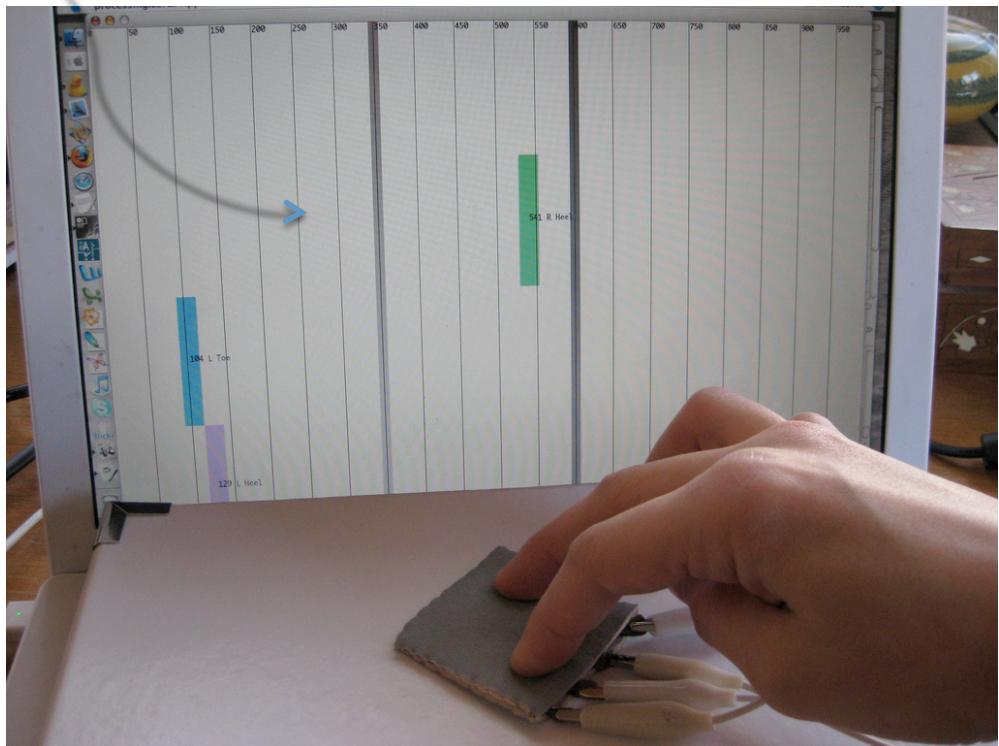

Links

Download Arduino programming environment from:

>> www.arduino.cc

(Install FTDI drivers, included in download)

Download Processing programming environment from:

>> www.processing.org

Download Arduino and Processing code for Graph:

>> www.arduino.cc/en/Tutorial/Graph

Thank you

plusea@mit.edu

www.plusea.at

www.hlt.media.mit.edu

www.media.mit.edu/~plusea

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Adafruit:](#)

[1361](#)