




SF/SA12-28 square flange mount socket assembling instruction-Solder

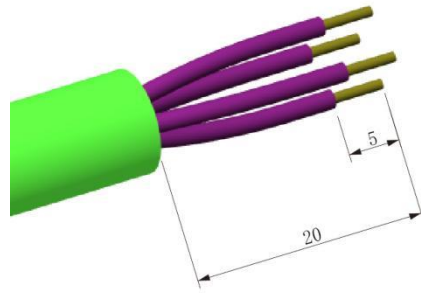


① SA/SF12-28 Strip length

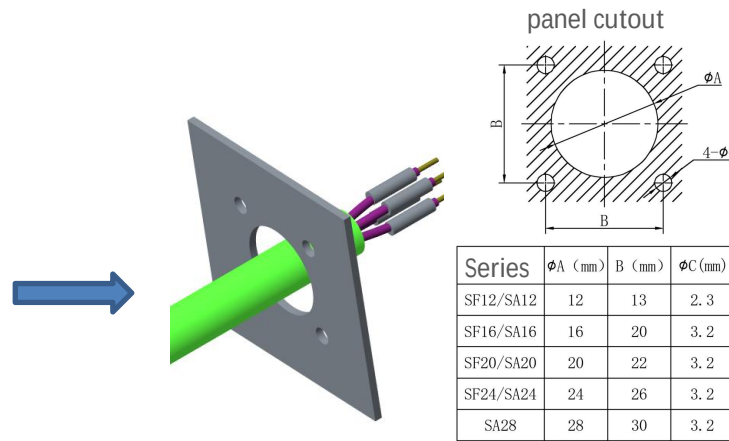


② Put the stripped cable through the panel based on above panel cutout size

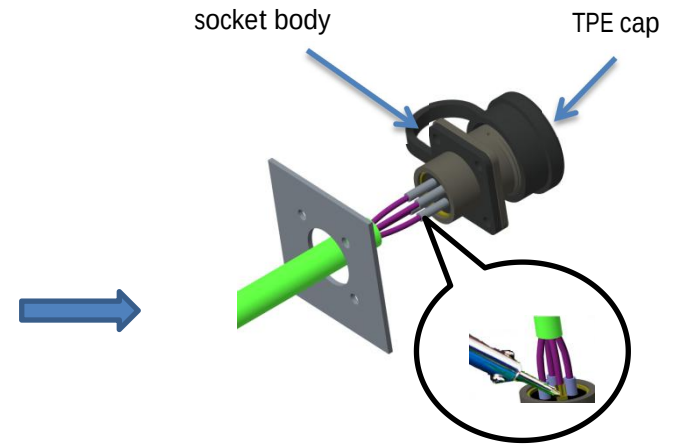


③ Put the stripped wire into contact holes and wrap with heat shrinkable tube after soldering.

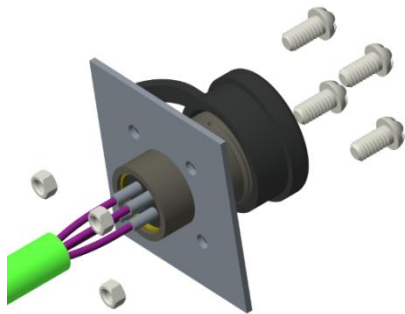

④ Tighten the socket body and panel closely

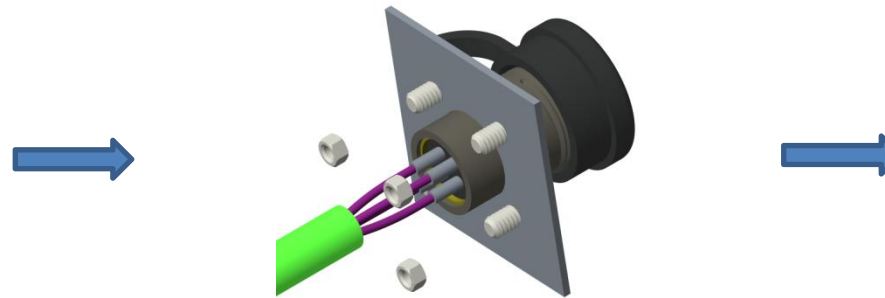

⑤ Put the screws through the flange and panel hole

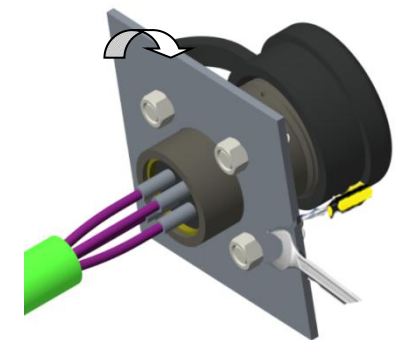

⑥ Tighten the screw according to torque of 0.5N.m