



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

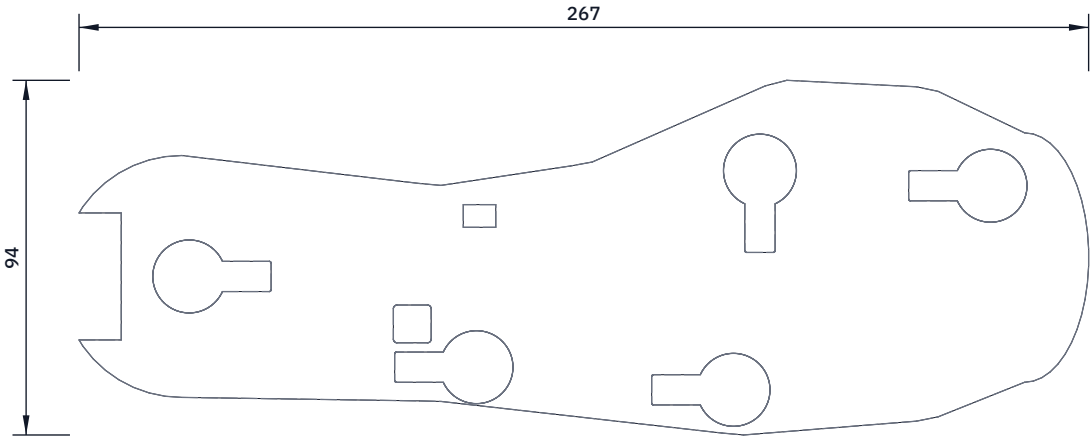

TOP VIEW
Scale 1:2; looking down (along -Z)

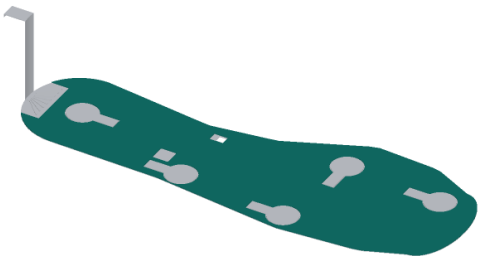

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut the foam to the insole outline.

Cut a window round each pressure sensor and its tail, 0.5 mm clear all round: lay the sensors on the foam and trace round them.

Cut a window at the heel, 16 mm long and 34 mm wide, for the tail end and its eight pads, and a notch 11 mm wide at the heel edge.

Cut a small window for the motor leads beside the motor, and a 10 x 10 mm window over the crossover patch.

Do not cut over the motor: its top sticks to this foam.

Fit: lay it over the carrier with the windows round the sensors; its adhesive side down. Nothing in a window may stand proud of the foam.

Check: run a finger over it; no sensor edge or solder joint can be felt above the foam.

STEP CUE			github.com/BoujeeEnjinia1701/stepcue		
StepCue spacer foam: making sketch					
DRAWING NO. STC-DWG-103			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Closed-cell polyethylene foam 0.5 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		