



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Smooth spline insole outline	2026-10-02	AC

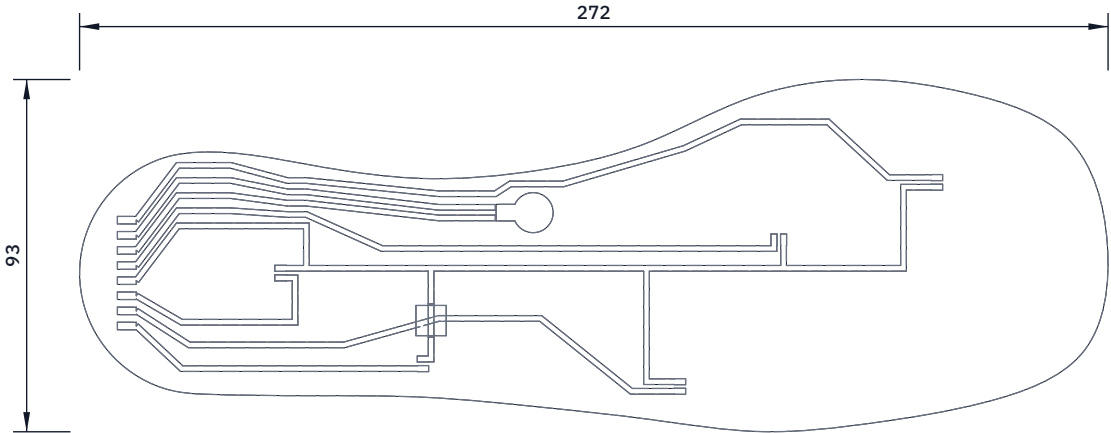

TOP VIEW
Scale 1:2; looking down (along -Z)

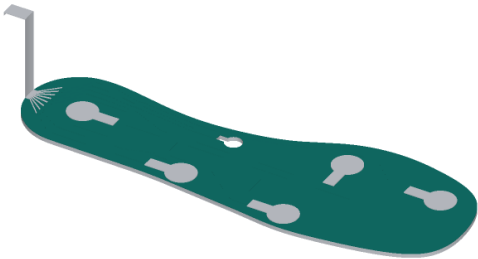

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut the film to the same outline as the EVA base, with the same 11 mm motor hole and lead notch. Polyimide, so it takes solder.

Lay the film on the insole layout picture and mark the traces, pads and sensor centres through it with a fine pen.

Cut 6 mm copper tape into 1.5 mm strips with a steel rule and a new blade. Lay each trace in one length, folding the tape at corners rather than cutting it; burnish it flat.

Eight tail pads 2 x 5 mm, 4 mm apart, 10 to 15 mm from the heel.

Two tab pads at the end of each sensor tail, 2.54 mm apart.

One crossover, beside the outer midfoot sensor: lay the outer front-foot trace, cover it with an 8 x 8 mm polyimide patch, then lay the midfoot supply branch over the patch.

Check: a meter shows no connection between any two pads.

STEPCUE

github.com/BoujeeEnjinia1701/stepcue

StepCue carrier film and copper traces: making sketch

DRAWING NO. STC-DWG-102			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-02	DRAWN Amish Chadha	
MATERIAL / NOTES 125 um polyimide film with transfer adhesive; 6 mm copper tape cut to 1.5 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		