
CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1801600

Continuity Inspection

1. Verify that the CPP switch is installed properly. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F66M-R].)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Disconnect the CPP switch connector.
4. Verify that the continuity between CPP switch terminals A and B when the clutch pedal is depressed and when it is released is according to the following table:
   - If not as verified, replace the CPP switch. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F66M-R].)

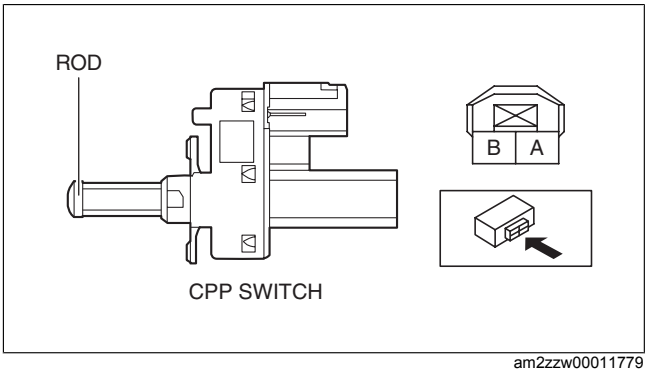

am2zzw00011779

Specification

Clutch pedal position	Continuity
Clutch pedal released(Rod is pressed.)	**No continuity**
Clutch pedal depressed (Rod is not pressed.)	**Continuity detected**