MIL-O-29390(MC)
17 November 1980

MILITARY SPECIFICATION

OVERCOAT, WOMAN'S: WOOL, GABARDINE; BLUE
(CEREMONIAL)

This specification is approved for use by U. S. Marine Corps, Department of the Navy, and is available for use by all Department and Agencies of the Department of Defense.

1. SCOPE

1.1 Scope. This specification covers requirements for blue gabardine overcoats.

1.2 Classification. The overcoats shall be of one type in the following sizes as specified (see 6.2):

Schedule of Sizes

Short	Regular	Long
6	6	
8	8	8
10	10	10
12	12	12
14	14	14
16	16	16
18	18	18
20	20	20
	22	22

2. APPLICABLE DOCUMENTS

2.1 Issues of documents. The following documents of the issue in effect on date of invitation for bids or request for proposal, form a part of the specification to the extent specified herein.

SPECIFICATIONS

FEDERAL

V-B-871 -Button, Sewing Hole, and Button, Staple, (Plastic)
V-T-276 -Thread, Cotton

Beneficial comments (recommendations, additions, deletions) and any pertinent data which may be of use in improving this document should be addressed to the Commandant of the Marine Corps (LMA-1), Headquarters, U. S. Marine Corps, Washington, D. C. 20380, by using the self-addressed Standardization Document Improvement Proposal (DD Form 1426) appearing at the end of this document or by letter.

FSC 8410

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

V-T-280	-Thread, Gimp, Cotton, Buttonhole
V-T-295	-Thread, Nylon
V-T-301	-Thread, Silk
UU-P-268	-Paper, Kraft, Wrapping
CCC-C-438	-Cloth, Buckram, Cotton
DDD-L-20	-Label; For Clothing, Equipage and Tentage, (General Use)
DDD-T-86	-Tape, Textile, Cotton, General Purpose (Unbleached, Bleached or Dyed)

MILITARY

MIL-C-326	-Cloth, Silesia Cotton
MIL-C-368	-Cloth, Satin, Rayon and Cloth, Twill, Rayon
MIL-B-371	-Braid, Textile, Tubular
MIL-B-3461	-Buttons, Insignia, Metal, Uniform and Cap
MIL-C-10176	-Cloth, Gabardine, Wool, Polyester and Wool
MIL-C-11065	-Cloth, Flannel, Wool/Nylon, 16 oz., Shrink Resistant
MIL-C-15062	-Cloth, Flannel, Wool, Undercollar Cloth
MIL-P-15064	-Pad, Shoulder and Sleeve-head
MIL-B-17757	-Box, Shipping, Fiberboard (Modular Sizes)
MIL-C-43718	-Cloth, Twill, Polyester and Cotton, Polyester Rayon
MIL-C-82114	-Coat Front for Coats, Musicians
MIL-C-82252	-Cloth, Broadcloth, Wool, and Wool Synthetic (Moth-Proofed)

STANDARDS

FEDERAL

FED-STD-191	-Textile Test Methods
FED-STD-751	-Stitches, Seams and Stitchings

MILITARY

MIL-STD-129	-Marking for Shipment and Storage
MIL-STD-1392	-Provisions for Evaluating Quality of Overcoat's Women's.

(Copies of specifications and standards required by contractors in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

2.2 Other publications. The following documents form a part of this specification to the extent specified herein. Unless otherwise indicated, the issue in effect on date of invitation for bids or request for proposal shall apply.

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

LAWS AND REGULATIONS

U. S. Postal Service Manual

(Copies of the Manual may be obtained from the Superintendent of Documents, U. S. Government Printing Office, Washington, D. C. 20402.)

UNIFORM CLASSIFICATION COMMITTEE

Uniform Freight Classification Rules

(Application for copies should be addressed to the Uniform Classification Committee, Room 1106, 222 South Riverside Plaza, Chicago, Illinois 60606.)

NATIONAL MOTOR FREIGHT TRAFFIC ASSOCIATION, INC., AGENT

National Motor Freight Classification

(Application for copies should be addressed to the American Trucking Association Inc., Tariff Order Section, 1616 P. Street, N.W., Washington, D. C. 20026.)

Department of Defense (DOD) Standard Shades for Buttons, 1968

Department of Defense (DOD) Standard Color Card of Official Standardized Shades for Sewing Threads, 1968

(Copies may be obtained from the Color Association of the United States, Inc., 200 Madison Avenue, New York, New York 10016.)

3. REQUIREMENTS

3.1 Standard samples. Standard samples are furnished solely for guidance and information to the contractor (see 6.3). Variation from this specification may appear in the sample, in which case the specification shall govern.

3.2 First article. Unless otherwise specified (see 6.2), before production is commenced, the first article, consisting of the number of finished overcoats specified by the procuring activity (see 6.2), shall be submitted, or made available, to the contracting officer or his authorized representative for inspection. The approval of the first article authorizes the commencement of production but does not relieve the contractor of responsibility for compliance with all provisions of this specification. The first article shall be manufactured by the contractor at the same facilities to be used for the manufacture of the production items.

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

3.3 Materials.

3.3.1 Basic material. The basic material shall be cloth, wool, gabardine, dark blue shade 2316 (see 6.3), 14.5 ounce, conforming to type I, class 5 of MIL-C-10176.

3.3.2 Lining. The material for lining the overcoat, the bias binding, the back part of the hanging pockets, and the left vent shall be cloth, rayon, twill, black shade 2604 (see 6.3), 3.7 ounce, conforming to class 1, of MIL-C-368.

3.3.3 Undercollar. The material for the undercollar shall be cloth, wool, flannel conforming to MIL-C-15062. The color of the cloth shall be black of an approved shade to closely match black shade 3204. The acidity (PH) requirement and colorfastness to perspiration and crocking requirements shall not apply.

3.3.4 Bias binding. The binding for the back edge of facings, raw edge of bottom turnup, raw edge of seam allowances, raw inside edge of pocket openings, raw top, back and bottom edges of hanging pockets, raw edge of right vent, and for making button loop for right vent shall be bias cut out of the lining material specified in 3.3.2.

3.3.5 Piping. The material for piping the shoulder straps and the edges of sleeve cuffs of the overcoat shall be cloth, wool, broadcloth, scarlet shade 2501 (see 6.3), 16.5 ounce per linear yard of 54 inch width, conforming to type I, class 4 of MIL-C-82252, except the color shall be produced by stock dyeing and the finished cloth shall show fair fastness to crocking, perspiration, wet (dry) cleaning, and light.

3.3.6 Tape. The 1/4-, 3/8-, and 5/8-inch wide tape shall be cotton, preshrunk, conforming to the following types and classes of DDD-T-86, except the requirements for nofibrous material shall not apply.

Width, inch	Type	Class
1/4 and 3/8	III	1, 2 or 3
5/8 or 1/2	I	1

The 1/4-inch wide and 3/8-inch wide tape shall be unbleached or dyed. The colored tape shall show good fastness to wet (dry) cleaning. The 5/8-inch wide tape shall be unbleached.

3.3.7 Collar interlining. The material for interlining the collar shall be natural or dyed, conforming to type I, class 2 of CCC-C-438.

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

3.3.8 Pocket material. The material for the pocketing shall be cloth, flannel, wool/nylon, 16 oz., shrink resistant conforming to MIL-C-11065. The flannel cloth shall be dyed a black shade to closely match shade 2604. The dyed cloth shall show good fastness to wet (dry) cleaning and laundering when tested as specified in MIL-C-11065.

3.3.9 Silesia or polyester and cotton. The material for making the stay pieces for the top end of the vent, armhole, lapel interlining and shoulder seams shall be cloth, cotton, silesia, conforming to type I of MIL-C-326 or polyester and cotton conforming to type I of MIL-C-43718. The silesia or polyester and cotton shall be black, except the requirements for nonfibrous material and seam efficiency shall not apply.

3.3.10 Thread.

3.3.10.1 Silk thread. The silk thread shall conform to V-T-301. The thread for machine sewing shall conform to type I, size A, 3 ply for all outside seaming and stitching; size B, 3 ply and size F, 3 ply, top and lower thread, respectively, for buttonholes; and size 0, 3 ply for machine felling. The thread for hand sewing shall conform to type III, class 3, size C, 2 ply. The requirements for extractable material shall not apply.

3.3.10.2 Nylon thread. As an alternate to the silk thread in all machine operations as nylon, tailoring, soft finish thread conforming to V-T-295 may be used as specified below:

Size	Ply (min)	Length per pound (yards/min)	Breaking Strength (pounds/min)	Elongation (percent/max)
0	2	16,000	2.8	35
B	2	11,001	4.1	35
F	3	4,201	11.0	35

Size "0" nylon shall be used in all machine operations where even size "0, 00 or A" silk is currently specified and size "B" nylon in lieu of size "B" silk. The nylon thread for the buttonholes shall be either size "B" for both needle and looper or size "B" for the needle and size "F" for the looper. For all hand sewing operations thread, nylon, type IV, hand sewing twist (waxed) and type V of V-T-295 shall be substituted as an alternate to the hand sewing silk on an equal size basis.

3.3.10.3 Cotton thread. The cotton thread shall conform to V-T-276, type IC2, mercerized finish, ticket No. A, 3 ply for all inside seaming and stitching, and type IB3, glazed finish, ticket No. 24, 4 ply for sewing on buttons and type IA1 or IA2, ticket No. 30, 3 ply for machine tacking armholes. The thread for basting shall be a good commercial grade.

Source: https://assist.dla.mil -- Downloaded: 202640-20T22:46Z
Check the source to verify that this is the currentversion before use.

3.3.17.1 Identification label. The identification label shall be type I, class 1 of DDD-L-20 and shall measure not less than 2-3/4 by 1-1/2 inches, with a 3/16-inch margin for sewing maintained on all four sides. The content and format shall be as follows:

Nomenclature (Item description)
Contract Number
Name of contractor
Wool Products Act information

3.3.17.2 Size label. The size label shall be type I, class 2 of DDD-L-20 and shall measure not less than 1-1/2 inches by 1 inch. The label shall consist of the numerical size designation specified in 1.2, followed by the letters S, R, or L for Short, Regular and Long, and the stock number as shown by the following example:

$$\frac{12R}{\text{Stock Number}}$$

The stock number may be incorporated on the identification label.

3.4 Design. The overcoat shall be the U. S. Marine Corps design shown on Figures 1 through 3 - a semiformfitting, double breasted, split sleeved, quarter-lined overcoat with three insignia buttons on each front; having two lower slash pockets with outside welt and cut through pocket opening; ornamental sleeve cuffs; a semiulster type collar; shoulder straps; and a two-piece half-belt to button. The ornamental sleeve cuffs and shoulder straps shall be piped with scarlet broadcloth.

3.5 Patterns. Standard patterns will be furnished to the contractor by the Government. The standard patterns shall not be altered in any way and shall be used only as a guide for cutting the contractor's working patterns. The contractor's working patterns shall be identical to the standard pattern. The standard patterns shall provide 5/8-inch seam allowance for the side and center back seams, 1/2-inch allowance for underarm darts, 3/8-inch allowance for sleeve seams and 1/8 to 3/16-inch allowance for all other seams except as otherwise specified in Table I. Standard patterns show size, and are marked and notched for proper cutting, placement and assembly of component parts.

3.5.1 List of pattern parts. Overcoats shall be cut from the material specified herein in accordance with the pattern parts indicated below:

Item	Pattern Nomenclature	No. of cut parts
	Material: Cloth, Wool, Gabardine	
1.	Front	2
2.	Side front	2
3.	Back	2
4.	Front facings	2

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

5.	Front sleeves	2
6.	Back sleeves	2
7.	Topcollar	1
8.	Topcollar stand	1
9.	Sleeve cuffs	2
10.	Pocket welts	2
11.	Half-belt	2
12.	Shoulder straps	2
	Material: Cloth, Wool, Flannel Undercollar	
13.	Undercollar	4
	Material: Cloth, Rayon, Lining	
14.	Front	2
15.	Yoke	1
16.	Front sleeves	2
17.	Back sleeves	2
18.	Hanging pocket lining	2
19.	Left vent lining	1
20.	Front, eyelet, cover	2
	Material: Cloth, Flannel	
	Hanging pockets:	
21.	Top ply	2
22.	Under ply	2
	Material: Cloth, Silesia	
23.	Lapel interlining	2
	Material: Cloth, Cotton, Interlining	
24.	Undercollar interlining	4
	Shaper	
25.	Right vent shaper	
26.	Working lapel shaper	
27.	Topcollar shaper	
28.	Undercollar shaper	
29.	Finished lapel shaper with collar	
	Markers	
30.	Belt marker for buttonholes & eyelets	
31.	Undercollar stand marker	
32.	Cuff marker (sleeve)	

3.6 Construction. The overcoats shall be manufactured in accordance with the operations and the stitch, seam and stitching types specified in Table 1. The contractor is not required to follow the exact sequence of operations as listed in Table I but all operations specified shall be used to manufacture the overcoats.

3.6.1 Stitches, seams and stitchings. The stitch, seam and stitching types specified in Table I shall conform to FED-STD-751. The number of stitches per inch as specified in Table I indicates the minimum and maximum number permitted. All overedge stitching shall be done on serging machines with a knife attachment properly set to trim the raveled edge without cutting the material.

Source: https://assist.dla.mil -- Downloaded: 202640-20T22:46Z
Check the source to verify that this is the currentversion before use.

3.6.1.1 Ends of seams and stitching. Ends of seams and stitching produced with 301 type stitch, when not caught in other seams or stitching, shall be backtacked not less than 1/4 inch; thread breaks (all stitch types) shall be secured by stitching back of break not less than 1/2 inch.

3.6.2 Shade marking. The component parts of the overcoat shall be shade marked to insure a uniform shade and size throughout the garment. Any method of shade marking may be used except:

(a) Corrosive metal fastening devices.
(b) Adhesive type tickets which show discoloration and the adhesive mass which adheres to the material upon removal of the tickets.
(c) Sew-on shade tickets on lining.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD	
					NDL	BOBV LPR
1	Cutting. a. Cut the overcoats in strict accordance with patterns furnished by the Government. b. Cut all materials in the direction indicated by the directional lines on the patterns. c. Cut all wool gabardine parts from one piece of material. The four parts of the undercollar cut from undercollar cloth, shall match each other. The welts shall be cut in such a manner that in the finished overcoat, the twill lines on the top ply of the welts and fronts shall be in the same direction. d. Cut the lining for the front, yoke, hanging pocket and left vent from one piece of rayon lining material. Pairs of sleeve linings and bias bindings may be cut from ends. When pairs of sleeve linings are cut from ends, the shade of the sleeve lining parts shall match. The bias bindings					

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
1.	Cutting. (cont'd)					
	and lower edge of armholes on the bias, 3/4 inch wide and 4-1/2 ± 1/4 inches long for the shoulder and armhole seams.					
	k. The shoulder loops for attaching the epaulets shall be cut in the warp direction from basic material. The loops shall be cut of sufficient width so that the finished loop will be 5/8 ± 1/8 inch wide.					
2.	Replacement of damaged parts.					
	a. Replace at time of cutting any part of the overcoat containing holes, seriously weakening defects such as smashes, multiple floats, loose or weakening slubs, etc., expected to develop into holes, shade bars and dye streaks or unsightly slubs, etc., affecting appearance.					
	b. Replace any part damaged during manufacturing process by needle chews which may develop into holes, scissors or knife cuts, tears, holes, mends and burns in the material affecting appearance.					
3.	Shade marking.					
	a. Mark or ticket all wool gabardine component parts, including the undercollar cloth, to insure a uniform shade and size throughout the garment. All lining parts shall be marked, bundled, or ticketed to insure a uniform shade and size throughout the garment.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
3.	Shade marking. (cont'd)					
	b. The use of tickets with metal fastening devices or sew-on tickets is prohibited on the rayon lining.					
4.	Make shoulder loops.					
	Finished appearance. The finished loops shall be uniform in size and shall finish 5/8 ± 1/8 inch wide and 3/4 to 1 inch in length.					
	a. Fold the strip for the loop in half lengthwise and seam 1/4 inch from raw edges.	301	SSa-1	10-14	A	A
	b. Press seam open, smooth and flat with a heated pressing iron.					
	c. Turn strip right side out, with the seam line centered on the underside and press smooth and flat with a heated pressing iron or pressing machine.					
5.	Make shoulder straps.					
	Finished appearance. The piping shall be uniformly stitched to the shoulder straps without twists, gathers, puckers or pleats, shall be evenly and uniformly worked out to the edges and shall extend uniformly 1/8 inch beyond the seamed edges of the shoulder strap. The straps shall finish smooth and flat and shall be uniform in appearance.					
	a. The shoulder straps shall be made of one ply of basic material, piped with scarlet wool broadcloth (see Figures 1 and 2).					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
1.	Cutting. (cont'd) and lower edge of armholes on the bias, 3/4 inch wide and 4-1/2 ± 1/4 inches long for the shoulder and armhole seams. k. The shoulder loops for attaching the epaulets shall be cut in the warp direction from basic material. The loops shall be cut of sufficient width so that the finished loop will be 5/8 ± 1/8 inch wide.					
2.	Replacement of damaged parts. a. Replace at time of cutting any part of the overcoat containing holes, seriously weakening defects such as smashes, multiple floats, loose or weakening slubs, etc., expected to develop into holes, shade bars and dye streaks or unsightly slubs, etc., affecting appearance. b. Replace any part damaged during manufacturing process by needle chews which may develop into holes, scissors or knife cuts, tears, holes, mends and burns in the material affecting appearance.					
3.	Shade marking. a. Mark or ticket all wool gabardine component parts, including the undercollar cloth, to insure a uniform shade and size throughout the garment. All lining parts shall be marked, bundled, or ticketed to insure a uniform shade and size throughout the garment.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
5.	Make shoulder straps. (cont'd)					
	b. Place a 5/8-inch-wide strip of scarlet wool broadcloth piping to the shoulder straps along front and back edges and around collar end. Stitch 1/8 inch from the edges.	301	SSe-2 (a)	10-14	A (silk)	A
	c. Turn back the straps and scarlet piping uniformly, working the folded edge of the piping 1/8 inch beyond the edge of the straps. Topstitch the straps uniformly 3/16 inch from the folded edges of piping.	301	SSe-2 (b)	10-14	A (silk)	A
	d. Press the straps smooth and flat with a heated pressing iron or pressing machine. The straps shall be uniform in shape and size in accordance with the patterns.					
6.	Make front eyelet cover.					
	a. Fold front eyelet cover in half lengthwise and stitch across the top and bottom edge with a 1/4-inch seam.	301	SSa-1	10-14	A	A
	b. Turn cover right side out. Press and crease folded edge smooth and flat with a heated pressing iron or pressing machine.					
7.	Make sleeve cuffs.					
	Finished appearance. The piping shall be uniformly stitched to the upper curved edge of sleeve cuffs without twists, gathers, puckers or pleats and shall extend uniformly 1/8 inch beyond the seamed edges of the cuff. The cuffs shall finish smooth and flat and shall be uniform in appearance.					

Source: https://assist.dla.mil -- Downloaded: 20261020T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
7.	Make sleeve cuffs. (cont'd)					
	a. The sleeve cuffs shall be one ply of basic material, piped with scarlet wool broadcloth (see Figures 1 & 2).					
	b. Place a 5/8-inch-wide strip of scarlet wool broadcloth piping to the sleeve cuffs and stitch 1/8 inch from the upper curved edge.	301	SSe-2 (a)	10-14	A	A
	c. Turn back the cuffs and scarlet piping uniformly, working the folded edge of the piping 1/8 inch beyond edge of the cuffs. Topstitch the cuffs uniformly 3/16 inch from folded edges of piping.	301	SSe-2 (b)	10-14	A (silk)	A
	d. Press smooth and flat with a heated pressing iron or pressing machine.					
8.	Make pocket welt.					
	a. The welt shall be made of a single ply of basic material folded in half lengthwise and reinforced at the inside folded edge with 5/8-inch-wide cotton tape.					
	b. Position the tape lengthwise on the welt piece at the center and seam 1/16 inch from each edge.	301	SSaa-1 (each edge)	10-14	A	A
	c. Fold the welt lengthwise in half to the outside and close the ends of the welt with a 1/4-inch seam. Trim the corners of the welt for proper turning.	301	SSe-2 (a)	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION
5.	Make shoulder straps. (cont'd) b. Place a 5/8-inch-wide strip of scarlet wool broadcloth piping to the shoulder straps along front and back edges and around collar end. Stitch 1/8 inch from the edges. c. Turn back the straps and scarlet piping uniformly, working the folded edge of the piping 1/8 inch beyond the edge of the straps. Topstitch the straps uniformly 3/16 inch from the folded edges of piping. d. Press the straps smooth and flat with a heated pressing iron or pressing machine. The straps shall be uniform in shape and size in accordance with the patterns.
6.	Make front eyelet cover. a. Fold front eyelet cover in half lengthwise and stitch across the top and bottom edge with a 1/4-inch seam. b. Turn cover right side out. Press and crease folded edge smooth and flat with a heated pressing iron or pressing machine.
7.	Make sleeve cuffs. Finished appearance. The piping shall be uniformly stitched to the upper curved edge of sleeve cuffs without twists, gathers, puckers or pleats and shall extend uniformly 1/8 inch beyond the seamed edges of the cuff. The cuffs shall finish smooth and flat and shall be uniform in appearance.

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM STCH TYPE	STCH/IN	NDL	LPR
8.	Make pocket welt. (cont'd)					
	d. Turn the welt to the right side, completely working out the seamed edges and corners. Top-stitch the welt uniformly 3/8 inch from the seamed and folded edges. The welt shall finish with the cotton reinforcement tape stitched to the inside part of the welt.	301	SSe-2 (b) (seamed edges) OSF-1 (folded edges)	10-14	A (silk)	A
	e. Press the welt smooth and flat with a heated pressing iron.					
	f. On the finished overcoat, the length of the welt shall be as follows: Sizes 6-12 - 7 ± 1/8 inches Sizes 14-22 - 7-1/2 ± 1/8 inches					
9.	Make half belt.					
	Finished appearance. The belt shall finish smooth and flat without twists, pleats, puckers or raw edges. On the finished overcoat, the half belt shall be 2-1/4 ± 1/8 inches wide.					
	a. The left and right half belt shall be made of a single ply of basic material.					
	b. Fold the left and right belt pieces in half lengthwise forming two plies and seam the two plies together along the length 3/8 inch from the raw edges.	301	SSa-1	10-14	A	A
	c. Spread open the seam and press smooth and flat with a heated pressing iron.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/STCH TYPE	STCH/IN	TH	
9.	Make half belt. (cont'd)					
	d. Close the pointed ends of the belt along the slanted edges with a 3/16-inch seam.	301	SSe-2 (a)	10-14	A	A
	e. Trim the corners of the point and turn the belt through the open end, completely working out the points.					
	f. Topstitch the belt uniformly 3/8 inch from the point and folded edges. The seam of the belt shall finish off center.	301	SSe-2 (b) (seamed edges) OSf-1 (folded edges)	10-14	A	A
	g. Press the left and right half belt smooth and flat with a heated pressing iron or pressing machine.					
10.	Make buttonholes and eyelets in belt.					
	Finished appearance. The buttonholes shall be clean cut, well made and correctly positioned. The buttonholes shall be well worked over gimp to fit a 40-line insignia button. The ends of the gimp shall be pulled through to the underside of the belt and the end of the buttonholes securely bartacked. The purling of the buttonholes shall be on the upperside of the half belt. The buttonholes shall be cut-first type.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBN/ LPR
10.	Make buttonhole and eyelets in belt. (cont'd)					
	a. Mark the location for two buttonholes on the right half-belt in accordance with the belt marker.					
	b. Make two horizontal eyelet end, square bar type buttonholes, cut 1-1/8 inches long, at the mark on the left half belt. The inside edge of the eyelet end of one buttonhole shall be 1 inch from the pointed end of the belt, and the inside edge of the remaining buttonhole shall be 5-1/2 ± 1/8 inches from the pointed end.	But-ton-hole		54 per Button-hole	B (silk)	F
	c. Securely bartack the end of each buttonhole, catching the gimp in the stitching and trim the ends of the gimp and thread.	Bar-tack		21 per bartack	A (silk)	A
	d. Mark the location for two eyelets on the left half belt for removable buttons in accordance with pattern marks.					
	e. Make an eyelet at each mark through all plies.	Eye-let		22 per eyelet	A (silk)	A
11.	Join sleeves at top arm.					
	Finished appearance. The top arm seam shall finish smooth and flat without twists, gathers, puckers or pleats and shall start and finish evenly.					

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LP
11.	Join sleeves at top arm. (cont'd)					
	a. Position the front and back sleeves with notches matching and join together along the top seam with a 3/8-inch seam.	301 or 401	SSa-1	10-14	A	A
			SSa-1	10-14	A	A
	b. Spread open the seam and press flat with a heated pressing iron.					
12.	Join cuff to sleeves.					
	Finished appearance. The cuff shall be uniformly stitched to the sleeve without twists, gathers, puckers, pleats or raw edges. On the finished coat, the length of the cuff shall measure 3-1/2 ± 1/4 inches at the underarm joining seam line, 5 ± 1/4 inches at the point. In the finished coat the point of the cuff shall be aligned with the top joining seam line.					
	a. Mark the sleeve in accordance with sleeve cuff marker for positioning the cuffs, with notch and the point of the cuff marker matching the top arm seam line and the bottom edge of marker in line with the bottom raw edge of sleeve.					
	b. Position the upper edge of cuff on the sleeves at the mark.					
	c. Seam the sleeve cuff to the sleeve and stitch as close as possible to, but not on top of, the topstitching at the upper edge.	301	LSd-1	10-14	A (silk)	A

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THI...	...
13.	Seam sleeve at backarm.					
	Finished appearance. The under arm seam shall finish smooth and flat without twists, gathers, puckers, or pleats and shall start and finish evenly.					
	a. Join the front and back sleeves together at the underarm with a 5/8-inch seam, catching the ends of the cuff in the seam. The cuff shall be aligned at the underarm seam line. Any excess sleeve cuff material extending beyond the underarm seams may be trimmed off simultaneously during the seaming operation.	301 or 401	SSa-1	10-14	A	A
			SSa-1	10-14	A	A
	b. Spread open the sleeve and cuff seams and press smooth and flat with a heated pressing iron.					
14.	Tack cuff to sleeve.					
	a. Turn the bottom of the cuff to the inside in accordance with notches against the bottom end of sleeves, and baste along the turned edge of cuff.	101 or Hand				
	b. Tack the raw edge of the cuff to the body of the sleeves with blindstitching. The blindstitching shall not be exposed on, or caught to, the outside of the cuff.	103	SSm-1	4-6	A	
15.	Seam sleeve lining.					
	Finished appearance. The sleeve lining shall be uniform in appearance, uniformly stitched and shall finish smooth and flat without twists, gathers, puckers or pleats. The seam shall start and finish evenly.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBV LPR
15.	Seam sleeve lining. (cont'd)					
	a. Position the front and back sleeve lining pieces in accordance with notches on pattern and join at the top and underarm respectively, with a 3/8-inch seam.	301 or 401	SSa-1	10-14	A	A
			SSa-1	10-14	A	A
16.	Assemble sleeve and sleeve lining.					
	Finished appearance. The sleeve linings shall be properly positioned and seamed to sleeve without twists, gathers, puckers or pleats.					
	a. Properly position the sleeve lining on the sleeve with the upper edge of the lining extending 3/4 to 1 inch beyond the armhole edge of the sleeve.					
	b. Seam or tack top arm seam and under arm seam of sleeve lining to top arm seam and under arm seam of wool sleeves properly distributing lining fullness along the seam. The tacking shall extend not more than 6 inches below top of armhole and not more than 5 inches above the bottom finished end of sleeves. When tacking is done by hand, both ends of stitching shall be securely backstitched with not less than three stitches.	301 or Hand	SSa-1 1 to 1-1/2 inches in length	6-8	A Commercial	A
17.	Fell turnup of sleeve lining; press sleeves.					
	Finished appearance. The sleeve linings shall not be short, tight or twisted at bottom of sleeves, and shall extend to within 1 to 1-1/4 inches from finished end of sleeve.					

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
17.	Fell turnup of sleeve lining; press sleeves. (cont'd)				Commercial	
	a. Pull sleeves through lining, turn under the bottom edge of sleeve lining, and baste to turnup of the cuff.	Mach-ine or Hand				
	- or -					
	b. The sleeve lining may be felled to bottom of sleeve without basting.					
	c. Fell the folded edge of sleeve lining to turnup of the cuff with blindstitching.	301 or Hand	EFc-1	6-8 8-10	0 (silk) C (silk)	0
	d. Turn sleeves right side out and assemble in pairs. Insert a sleeve pad in the sleeve to avoid creasing the front and back edges, and press smooth and flat with a heated pressing machine.					
18.	Make undercollar.					
	a. The undercollar assembly consists of one ply (4 pieces) of undercollar cloth and one ply (4 pieces) of permanent finish interlining material.					
	b. Properly position and join together the center and side undercollar pieces, respectively, with a 3/8-inch seam.	301	SSa-1 (each seam)	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
18.	Make undercollar. (cont'd)					
	c. Spread open the seams and press flat with a heated pressing iron.					
	d. Properly position and join together the center and side interlining pieces, respectively, of each ply with a 1/4-inch lap seam.	301	LSa-1 (each seam)	10-14	A	A
	e. Mark the breakline of the undercollar with the undercollar stand marker. Position the undercollar on the interlining with the lower edges even and with the seams of undercollar and interlining staggered. Join the undercollar to interlining at the breakline.	301	SSv-1	10-14	A	A
	f. Quilt the interlining to the undercollar with a minimum of seven rows of blindstitching.	103	SSm-1 (each row)	4-6	A	
	g. Fold undercollar assembly on breakline to the outside and press smooth and flat with a heated pressing iron, creasing on the breakline.					
	h. Position the undercollar shaper on the outside of undercollar with the lower edge of shaper even with the center seam. Mark the upper, side and lower front edge and the location for two notches at the upper edge. Trim excess material at the mark.					
	i. Seam undercollar and interlining together 1/2 ± 1/8 inch from top and side edges.	301	SSa-1	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
19.	Assemble top collar. a. The top collar-collar stand assembly consists of a single piece of basic material each for top collar and collar stand. b. Position the top collar and collar stand with notches matching and join together at the lower edge with a 1/4-inch seam. c. Spread open the seam and press smooth and flat with a heated pressing iron. d. Position the collar shaper on the outside of topcollar with the lower edge of shaper in line with the seam joining topcollar to collar stand, and with the back edge of shaper aligned with the upper center notch of top collar. Mark the upper and side edges and the location for two notches at the upper edge. Trim excess material at the mark.	301	SSa-1	10-14	A	A
20.	Assemble topcollar and undercollar. Finished appearance. The collar shall be uniform in appearance and shall finish smooth and flat without twists, gathers, puckers or raw edges (top and sides). The felling shall not be too tight or too loose and the collar material shall be securely caught in the stitching. The edges and corners of the collar shall be smooth, flat and uniformly even. a. Position topcollar between undercollar and interlining with upper edge abutting undercollar	101 or Hand				

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBV LPR
20.	Assemble topcollar and undercollar. (cont'd)					
	interlining seam and notches aligned. Baste topcollar to undercollar 1/4 inch from top edge.					
	b. Join topcollar, undercollar and interlining together at the top edge with zig-zag stitching. The zig-zag stitching design shall be on the interlining side of the collar. In the finished collar, the stitching shall extend to within 1 inch of the upper corners.	304	LSa-1	10-14	A	A
	c. Turn the topcollar smoothly to the outside over the upper edge of interlining and baste with two rows of stitches. The outer and inner row of stitches shall be approximately 1/2 and 1-1/2 inches, respectively, from the upper edge of the collar. Baste the collar approximately 3/8 inch above breakline. The proper fullness shall be placed between the rows of basting stitches. The stitching shall extend to within 1-1/2 inches of the side edges.	101				
	d. Trim and turn the side edges of the topcollar smoothly over the interlining between the undercollar and interlining and baste the edges forming the rounded upper corners of the collar.	Hand				

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
20.	Assemble topcollar and undercollar. (cont'd)					
	e. Fell the topcollar to undercollar starting at the end of the stitching at the top edge and continuing around the corners and along each side.	Hand		8-10	C (silk)	
	- or -					
	f. Insert 1/2-or 3/4-inch bias binding (see 3.3.2) between the undercollar and interlining and stitch the three plies with a zig-zag or F stitch machine. Bias binding shall extend approximately 1/4 inch from outer edge of collar.	304 or 306	LSa-1	10-14	A	A
	g. Stitch undercollar to topcollar using a 3/16 inch knife attachment, matching notches and distributing fullness. The interlining edge shall be used as a guide for the finished stitch line and the shape of collar.	301	SSa-1	10-14	A	A
	h. Turn collar; force out edges and baste collar edge with at least 2 rows of stitching, distributing the collar fullness evenly and rolling the joining seam to underside. The first row shall be 1/4 inch from edge. Place an additional row of basting along the outside edge of collar. Note: The rayon ribbon shall not be exposed at the edge of collar.	Hand or Machine			Commercial	

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THR...	...
20.	Assemble topcollar and undercollar. (cont'd)					
	i. Press the collar smooth and flat with a heated pressing machine, removing the fullness by shrinking.					
	j. Trim the lower edge of topcollar even with the bottom edge of undercollar at gorge line, and continue to trim excess material at the center, leaving seam allowance for turning under.					
21.	Make hanging pocket.					
	a. The hanging pocket shall consist of two pieces of the pocketing material specified in 3.3.8 lined with rayon lining.					
	b. Sear the three plies together 1/8 to 3/16 inch along the raw edges, except the cut out of the pocket, with the rayon lining finished on the outside of the under ply of hanging pocket. The napped side of the pocket shall be on the inside of finished pocket.	301	SSa-1 (each edge)	10-14	A	A
	c. Bind the hanging pocket at the top, back and bottom edges with 1-1/8-inch-wide bias binding, with the raw edges of the binding turned under and caught in the stitching 1/16 inch from inner folded edges. The binding shall be evenly stitched and the materials shall be securely caught in the stitching.	301	BSc-1	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
22.	Make vent button loop.					
	a. Fold the 1-1/8-inch-wide strip of bias binding for the button loop in half lengthwise, turning the edges to the inside, and seam 1/16 inch from the turned edges to finish 1/4 to 5/16 inch wide.	301	EFp-1	10-14	A	A
23.	Hem front and yoke linings.					
	Finished appearance. The hem shall be uniformly stitched, uniform in width, and shall finish smooth and flat without twists, gathers, puckers or pleats.					
	a. Hem the botton edge of the yoke and front lining respectively, with the raw edge turned under. Stitch 1/16 inch from the folded upper edge of hem.	301	EFb-1	10-14	A	A
	b. In the finished overcoat, linings shall extend to the lower edge of the belt and the hem shall be 1/2 ± 1/8 inch wide.					
24.	Make center pleat in yoke lining; sew on label.					
	Finished appearance. The pleat shall be uniform in width and shall finish smooth and flat without puckers or pleats.					

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
24.	Make center pleat in yoke lining; sew on label. (cont'd) a. Fold the yoke lining in accordance with notches on the pattern to form a 3/4-inch-wide pleat at center back. b. Press the pleat smooth and flat from top to bottom edge of yoke lining with a heated pressing iron. The folded edge of the pleat on the outside of the lining shall be towards the left side as worn. c. Position the identification label on the outside of yoke lining so that in the finished overcoat, the label shall be midway between the center back pleat and the right side seam and the lower edge of label approximately 1-1/2 inches above the bottom finished edge of the lining. Seam the label to the lining 1/8 inch from each edge.	301	SSa-1	10-14	A	A
25.	Bind backparts. Finished appearance. The binding shall be uniformly stitched, shall not be tight or full causing puckers, gathers or pleats. The basic material and edges of binding shall be caught in the stitching. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the inner folded edge.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
25.	Bind backparts. (cont'd)					
	a. Mark the right backpart in accordance with vent marker for positioning the 3/8-inch-wide stay tape.					
	b. Bind the raw center back edge of the left and right backparts, respectively, with 3/4-to 7/8-inch wide bias binding from top edge of backparts to top end of vent. When binding the right backpart, continue to bind the raw edge of the vent for the right backpart from top to bottom end, with the vent loop positioned on the outside in accordance with the notch on pattern and the ends of the loop caught in the binding. The loop opening shall be not more than 5/8 inch long to fit a 22-line button. The binding is not required along the top end of the vent.	301	BSb-1	10-14	A	A
	c. Bind the raw edge of left and right backparts, respectively, with 3/4-to 7/8-inch-wide bias binding, from armhole edge to bottom edge of backpart.	301	BSb-1	10-14	A	A
	d. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the inner folded edge. The binding shall be evenly stitched and the basic material shall be securely caught in the stitching.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STICH TYPE	SEAM/ STICH TYPE	STICH IN	TH... MEN	... LIN
26.	Seam lining to left vent.					
	Finished appearance. The vent lining shall be uniformly stitched and shall finish smooth and flat without twists, gathers, puckers or pleats.					
	a. Fold vent lining in half, lengthwise, face to face and stitch along the top, from the notches to the folded edge, with a 5/16-to 3/8-inch seam. Turn vent lining to the right side, forcing out corner and seam.	301	SSa-1	10-14	A	A
	b. Position the raw edge of lining on the outside of left vent, with notches on the lining in line with the upper edge of vent, and seam together 3/8 inch from back edge. The lining shall extend from the notches to the bottom finished edge of coat.	301	SSe-2	10-14	A	A
	c. Turn the lining to the inside of the right vent and topstitch unformly 1/8 inch from the folded edge, with the lining 1/16 inch back from the folded edge of the vent.	301	SSe-2 (b)	10-14	A	A
27.	Join backparts.					
	Finished appearance. The backs shall be joined without gathers, puckers or pleats. The folded edge of the right vent shall be in line with the center back seam. In the finished overcoat, the right backpart shall overlap the left backpart not less than 3 inches when measured at the bottom edge of the overcoat. The right vent shall be 2 ± 1/8 inches when measured at the bound edge of bottom turnup.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the currentversion before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
27.	Join backparts. (cont'd)					
	a. Stitch the 3/8-inch-wide stay tape to the inside of right back along the vent, with the edge of the tape positioned approximately 1/8 inch in front of the folding notch of vent and stitch with a 1/16-inch seam.	301	SSa-1	10-14	A	A
	b. Properly position the backparts with edges even and join together at the center back with a 5/8-inch seam from the top edge of the backparts to approximately 3/4 inch below the top end of the vent. Continue the stitching across the top of the left and right vents. The silesia or polyester and cotton stay piece at top end of vent shall be positioned on the left backpart and caught in the stitching at the center back and top end of the vent.	301 or 401	SSa-1	10-14	A	A
			SSa-1	10-14	A	A
	c. Notch the top end of the left vent diagonally from the juncture point of the vent and center seam allowance of the left backpart to the lower end of the stitching for the center back seam.					
	d. Spread open back center seam and press flat with a heated pressing iron.					
	e. Turn the right vent to the inside in accordance with the bottom notch and joining center back seam. Baste the entire length of the vent along the folded edge. On the finished vent, the tape stitching shall not show on the outside.	101 or Hand				

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM STCH TYPE	STCHS IN	THREAD NDL	THREAD LP
27.	Join backparts. (cont'd)					
	f. Edgestitch the left vent uniformly 3/8 inch from the folded edge. The folded edge of the vent shall be in line with the center back seam.	301	OSf-1	10-14	A (silk)	A
	g. Stitch and backstitch diagonally across the top end of the vent opening on the outside through the vent lining, from the back center seam to the edge of vent.	301	SSa-1	10-14	A (silk)	A
	h. Fold the shoulder dart in accordance with notches on pattern and stitch the length of the dart. The dart shall taper from 1/4 inch at the top to a flat point at the bottom.	301	OSf-1	10-14	A	A
	i. Press each shoulder dart smooth and flat with a heated pressing iron. The dart shall be turned towards the center back.					
28.	Baste and stitch vent lining.					
	Finished appearance. The folded edge of the lining shall be accurately aligned with the center seam allowance on the left backpart.					
	a. Baste vent lining to the coat.	101 or Hand				
	b. Stitch the upper part of the vent lining to the center back on each side of the seam allowance 1/8 inch from seamed edge of lining.	301	SSa-1	10-14	A	A
29.	Join eyelet cover to front facing.					
	a. Position each eyelet cover on the outside of left and right front facing, with the back raw edge of facing and raw edge of eyelet cover even, and with the upper end of cover and notch on the facing matching.					

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBB/ LPR
29.	Join eyelet cover to front facing. (cont'd)					
	b. Stitch the eyelet cover to the facing 1/4 inch from raw edge.	301	SSa-1	10-14	A	A
30.	Seam wool facing to front lining.					
	Finished appearance. The lining shall be carefully and properly aligned, and seamed to the facing so that in the finished overcoat, the lining shall be smooth and flat along the facing without creases, bulges, overlapping of excess material or other defect or distortion.					
	a. Position the lining on the wool facing with top edges even and the bottom finished edge of lining matched with the notch in the back edge of the facing in order to insure proper seaming.					
	b. Seam the front edge of the lining to the back edge of the facing 3/8 inch from the edge.	301	SSa-1	10-14	A	A
	c. Press the facing seam and bottom edge of the lining smooth and flat with a heated pressing iron.					
31.	Bind facings.					
	Finished appearance. The binding shall be uniformly stitched, shall not be tight or full causing puckers, gathers, or pleats; the basic material and edges of binding shall be securely caught in the stitching. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from outside folded edge.					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM STCH TYPE	STCH/IN	THREAD NDL	THREAD LP
31.	Bind facings. (cont'd)					
	a. Bind the raw back edge of the facings with 3/4-to 7/8-inch-wide bias binding from the bottom edge of the overcoat to not less than 1 inch above the bottom finished edge of the lining.	301	BSb-1	10-14	A	A
32.	Join front to side front and stitch underarm darts.					
	Finished appearance. Bust lines on both sides shall be alike. Fronts and side fronts shall be carefully joined without puckers or gathers. The seams shall start and finish evenly at the seam line. The contour of the waist and hipline shall be maintained in the seaming.					
	a. Position fronts and side fronts with the notches matching and join together with a 3/8-inch seam.	301 or 401	SSa-1	10-14	A	A
	b. Spread open and press the seam smooth and flat with a heated pressing iron.					
	c. Fold side front with notches at armhole matching. Stitch the entire length of dart in accordance with marks on pattern, tapering the lower end to a flat point. Point shall be securely backtacked. Stitching shall be 1/2 inch from the base of armhole to 3/8 inch at the waistline.	301	OSf-1	10-14	A	A
	d. Press dart smooth and flat with a heated pressing iron or pressing machine. The dart shall be pressed on the dart seam without turning the darts either to the right or left.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBN/ LPR
33.	Seam reinforcement stay to armhole and shoulder.					
	Finished appearance. The silesia or polyester and cotton reinforcement stays shall be sewn to the armhole and shoulder edges of the fronts without gathers, puckers or pleats.					
	a. Seam the 3/4-inch-wide silesia or polyester and cotton stays to the underside of the fronts along the shoulder edge and upper front edge of the armhole, respectively, 1/8 inch from the edges. The top end of the armhole stay and lower edge of shoulder stay shall form a right angle at the armhole without the stays overlapping each other.	301	SSaa-1	10-14	A	A
34.	Join half belt to fronts.					
	Finished appearance. The belt shall be set without twists, gathers, puckers or pleats.					
	a. Position left and right half belt on the outside of the respective fronts with top and bottom edges of belt and notches in back edge of fronts matching, and with the raw end of belt and back edge of front even.					
	b. Join the left and right half belt to the respective front 1/8 inch from the raw edges.	301	SSa-1	10-14	A	A
35.	Bind front and side fronts.					
	Finished appearance. The binding shall be evenly stitched with no raw edges showing and the fabric caught in the stitching. The binding shall not be tight or full causing puckers, gathers or pleats.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
35.	Bind front and side fronts. (cont'd)					
	a. Bind the raw back edge of side fronts with 3/4-to 7/8-inch-wide bias binding from armhole edge to bottom edge of front, catching the end of the left and right half belt in the binding. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the outside folded edge.	301	BSb-1	10-14	A	A
	b. Bind the raw edges of the front and side front seam allowance with 3/4-to 7/8-inch-wide bias binding from the bottom edge of coat up to, and in line with, the slash pocket.	301	BSb-1	10-14	A	A
36.	Assemble hanging pocket and welt on fronts.					
	Finished appearance. The welt shall be uniform in appearance and placement, and shall lie flat and smooth, without twists, puckers, pleats or raw edges. All stitching shall be uniform in width.					
	a. Mark fronts in accordance with pattern for position of pocket welt.					
	b. Position the welt on the outside of fronts with the raw edge in line with the mark, and with the folded edge of the welt towards the front of the coat. Seam the welt to the fronts 3/16 inch from the raw edge.	301	SSa-1	10-14	A	A
	c. Position hanging pocket on the outside of the fronts with top ply of pocket next to welt and with raw edge of cutout even with the raw edge of welt. Notch top and bottom corners of the hanging pocket at the cutout to match the length of the welt.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LP
36.	Assemble hanging pocket and welt on fronts. (cont'd)					
	d. Join the top ply of the pocket through the welt and the fronts with a 1/4-inch seam, securely tacking the ends for a distance of approximately 3/8 inch on the line of stitching.	301	SSa-1	10-14	A	A
	e. Cut the opening in the fronts on a line even with the raw edge of welt and hanging pocket. Tongue notch the fronts at the top and bottom ends of the pocket opening.					
	- or -					
	f. The straight part of the opening only may be cut with a Dale Machine in the cutting room. When this method is used, the finished length of the opening shall be accomplished with hand sheers for cutting diagonally to ends of welt stitching line. The cut ends of opening, either the straight cut or the diagonal (tongue notch) cut, shall not be exposed at either end of the finished welt pocket.					
	g. Bind the raw back edge of front at the pocket opening with 1-1/8-inch-wide bias binding with edges of binding turned under and caught in the stitching 1/16 inch from outer folded edges.	301	BSc-1	10-14	A	A
	h. Turn the hanging pocket and raw edge of welt through opening to the inside. Turn back the bound edge of pocket at the opening and stitch the fronts 1/16 inch from the raised edge.	301	SSq-2 (shows finished seam)	10-14	A (silk)	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD	
					NEE	LPr
36.	Assemble hanging pocket and welt on fronts. (cont'd)					
	i. Stitch the top and bottom ends of the welt to the fronts through the hanging pocket from the stitching for the raised seam at front edge of welt to the back edge of the welt. Stitch diagonally to the outer corners of the topstitching for the welt and continue on the line of topstitching at each end of the welt to the stitching for the raised seam. Stitch on the line of stitching for the raised seam back to the row of stitches at the top and bottom ends of the welt. The stitching at the top and bottom ends of the welt shall be uniformly 1/16 inch from the ends. Care shall be taken when stitching ends of welt to preclude exposed notch at end of welt.	301	LSa-2	10-14	A (silk)	A
37.	Interline fronts.					
	a. Position left and right fronts on the respective coat front interlining. Baste along the vertical center of the fronts from approximately 3 inches below shoulder edge to approximately 1-1/2 inches above bottom edge of front, with the hanging pocket turned back in order not to be caught in the basting.	301	Hopper			
	b. Baste the fronts and interlining together starting at the breakline of lapel approximately 3 inches down from the shoulder edge of fronts and continuing to approximately 1-1/2 inches from armhole, working the fullness	301	Hopper			

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
37.	Interline fronts. (cont'd)					
	towards the armhole. Baste along the front of armhole and continue basting down the back edge of interlining.					
	c. Baste along breakline of the lapel, starting approximately 3 inches down from top edge and baste approximately 1 inch from front edge and continue basting to bottom edge of front.	301	Hopper			
38.	Baste bridle tape to lapel.					
	a. Position the 5/8-inch-wide bridle tape on the interlining side of the fronts with the front edge of the tape 1/8 inch beyond the breakline.					
	b. Baste the tape along the vertical center to the lapel evenly and smoothly and with normal tension for a distance of approximately 4 inches, properly distributing the fullness in the breast. Baste the remainder of the tape evenly and smoothly with normal tension.	101 or 301	Hopper			
	c. The tape shall extend from top edge of gorge to 3 inches above the lower end of breakline of lapel.					
39.	Pad lapels.					
	a. Pad the lapel with not less than 10 rows of blindstitching, placing one row over each edge of the bridle tape. The rows of blindstitching shall extend from approximately 1 inch from front edge of lapel to the breakline.	103	SSn-1 (each row)	4-6	A	

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD [illegible]
39.	Pad lapels. (cont'd) with the fullness properly distributed between the rows in order to roll the lapels.					
40.	Join back and fronts at sides. Finished appearance. The back and fronts shall be carefully joined at the sides without twists, gathers, puckers or pleats.					
	a. Position the back and fronts with edges even and join together at the sides with a 5/8-inch seam.	301 or 401	SSa-1 SSa-1	10-14 10-14	A A	A A
	b. Spread open the side seams and press smooth and flat with a heated pressing iron.					
41.	Tape armholes.					
	a. Sew one piece of 1/4-inch-wide stay tape to the armhole. The tape shall extend from approximately 1-1/2 inches above the notch on the front to approximately 1 inch from the shoulder. The tape shall be stitched with normal tension and shall be sewn to the wool fronts only, not the interlining. The tape shall be held taut with stitching drawing up the material 3/8 to 1/2 inch evenly distributed.	301	SSaa-1	10-14	A	A
42.	Press fronts, lapels and armholes. a. Press the fronts individually on a chest pressing machine. Press the armhole tape and lapels smooth and flat with a heated pressing iron or machine.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
43.	Shape fronts. a. Mark and shape the front edge of fronts. Mark and shape the lapels in accordance with the shaper furnished. b. Mark the overcoat 1-1/4 inches above the bottom edge for the bottom turnup. In lieu of marking, the width of the bottom turnup may be gaged when tape is sewn along bottom edge of the overcoat. The right front shall not extend below the bottom edge of left front. c. Trim the corners of the lapel interlining, the bottom edge of the interlining, and the bottom edge of overcoat, matching the length of the right and left back parts at the vent. Trim bottom corners of side seam allowances and lower inside corner of left vent. d. Trim coat front interlining 1/4 to 3/8 inch back from top and front edges of lapel and front edge of fronts. e. In the finished overcoat, the lapels shall be in accordance with the finished lapel shaper.					
44.	Bind bottom turnup. Finished appearance. The binding shall be uniformly stitched and shall not be tight or full causing puckers, gathers or pleats; the basic material and edges of binding shall be securely caught in the stitching. Only the outside raw edge of the binding shall be turned under and caught					

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
44.	Bind bottom turnup. (cont'd)					
	in the stitching.					
	a. Bind the raw edge of the bottom turnup with 3/4-to 7/8-inch wide bias binding, from the back edge of the front cutout to the edge of vent. Only the outside raw edge of the binding shall be turned under and caught in the stitching 1/16 inch from the outside folded edge.	301	BSb-1	10-14	A	A
45.	Baste facing-lining assembly to front.					
	a. Properly position the right and left facing-lining assembly to the outside of the respective fronts and baste along the lapel breakline, distributing the fullness in the breast area. Continue to baste along the front and bottom edges. Baste from the top and front edges of lapel, down to the lower end of lapel working the fullness towards the center of lapel.	301 or Hand	Hopper			
46.	Join facings and fronts with tape.					
	a. Join the facings and fronts together 3/16 inch from top and front edges of lapel, and front and bottom edges of overcoat, with the 3/8-inch-wide stay tape, positioned on the interlining side of fronts 1/8 inch from the edges, caught in the stitching.	301	SSa-1	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBV LPR
46.	Join facings and fronts with tape. (cont'd) b. The tape shall extend from approximately 1/2 inch to the back of lapel notch to the mark for the bottom turnup and continue along the bottom edge to the side seam. The tape shall be sewn with normal tension along the top and front edges of the lapel and with slight tension along the front edge of the overcoat. c. Trim the fronts even at the top and front edges of the lapel and front edges of overcoat. The edges shall be trimmed with a knife attachment on the sewing machine, or may be trimmed by hand. d. Fell inside edge of 3/8-inch-wide stay tape to coat front interlining from top end of tape to the bottom edge of interlining. e. Press the front edges smooth and flat with a heated pressing iron or pressing machine, removing the fullness. f. Remove all basting stitches, trim lower front corner of facings and corner of lapels and notch lapels for proper turning. g. Spread open the front facing seam from lapel notch to the bottom edge of overcoat and press smooth and flat with a heated pressing iron.	103	SSm-1	4-6	A	

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
47.	Baste front and bottom edge of overcoat.					
	a. Turn the facing-lining assembly to the inside of the fronts, working the corner of the lapels out completely. Turn up the bottom of the overcoat, lapping the facing on the bottom turnup and working the front corner out completely.					
	b. Baste along the top and front edges of lapel and the front and finished bottom edges of overcoat, working the seams to the edge of overcoat.	101				
48.	Baste facings (second time).					
	a. Baste approximately 1-1/4 inches from top and front edges of lapels and front and bottom edges of overcoat, holding the lower front corner in such a manner as to cause the lower front edge to roll inward.	301 or Hand	Hopper			
	b. Baste the lapels diagonally from the corner to the breakline, properly placing the fullness to allow the lapel to roll.	301 or Hand	Hopper			
	d. Baste along the breakline of the lapel, properly placing the fullness in the facing to allow lapel to roll.	301 or Hand	Hopper			
49.	Tack hanging pocket to interlining.					
	a. Turn back the facing-lining assembly, properly positioning the	301 or Hand	Hopper			

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LP
49.	Tack hanging pocket to interlining. (cont'd)					
	hanging pockets, and baste pockets to interlining and fronts.					
	b. Securely tack front edge of the hanging pockets to the coat front interlining only with overcast stitching.	Hand		4-6	A	
	- or -					
	c. The front edges of pocket may be tacked to interlining with blindstitching.	103	SSm-1	4-6	A	
50.	Baste facing to fronts; tack facing to interlining.					
	a. Turn facing-lining assemblies flat against fronts. Baste as close as possible to the facing-lining seam, placing the fullness over the chest, and continue basting along the bound edges of the facing to the bottom turnup.	301 or Hand	Hopper			
	b. Turn back the lining and tack seam allowance of facing-lining assemblies to interlining only with overcast stitching from approximately 1 inch above bottom finished edge of lining to approximately 3 inches below shoulder edge of facing.	Hand		4-6		
	- or -					
	c. The seam allowance of facing-lining assemblies may be tacked to the interlining only with blindstitching.	103 or 301	SSm-1 SSm-1	4-6 4-6	A A	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NEEDLE	THREAD LOOPER
51.	Baste yoke lining to back.					
	a. Properly position and baste rayon yoke lining to the inside of the back along the center pleat and along the armholes, shoulder (allowing room for shoulder pad) and bottom edges of the yoke.	301	Hopper			
52.	Baste and fell front lining.					
	a. Fold the front lining at the shoulder in accordance with the notches, forming the chest pleat, and baste along the vertical center of the pleat. The folded edge of the pleat on the outside of the lining shall be towards the armhole.	Hand or 301	Hopper			
	b. Baste the lining to the overcoat, starting at the lower end of the chest pleat and continuing along the lower edge of the armhole. Continue basting along the side seam and across the bottom edge of lining.	Hand or 301	Hopper			
	c. Turn under the back edge of front lining and baste to overcoat, lapping the folded edge over the side seam and yoke lining and basting to allow room for felling of side seam lining.	Hand or 301	Hopper			
	d. Fell the turned under portion of the front lining to side seam allowance of the fronts and to the yoke lining with blindstitching 1/4 to 3/8 inch from folded edge. Stitching shall extend from bottom finished edge of front lining to the lower edge of armhole.	301 or Hand	BFc-1 (b)	6-8 6-8	(silk) C (silk)	
53.	Trim lining and interlining.					
	a. Trim the excess coat front interlining and front and back lining at the armhole.					
	b. Trim yoke lining even with the back at the neck.					

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD	
					NDL	LPR
53.	Trim lining and interlining. (cont'd)					
	c. Trim the excess coat front interlining along the bound edge of the facing, from the bottom edge of coat up to approximately 1 to 1-1/2 inches above the bottom edge of pocket.					
54.	Fell facings and bottom turnup.					
	a. Fell the bound edge of the facings to the front from bottom edge of hanging pockets to bound edge of bottom turnup. Continue to fell bound edge of bottom turnup to fronts and backparts with blindstitching.	301	EFc-1	6-8	0 (silk)	0
	b. Fell facings to the outer ply of hanging pocket only from bottom edge of pocket to not less than 1 inch above the bottom finished edge of the front lining.	Hand or 301	EFc-1	8-10 6-8	C (silk) 0 (silk)	0
55.	Baste shoulder pad.					
	a. Insert shoulder pad between interlining and chest padding of coat front interlining in line with armhole edge and securely tack the pad to the interlining and chest padding only.	301 or Hand				
56.	Seam shoulders.					
	Finished appearance. The shoulder seam shall be uniformly stitched and the fullness on the backs shall be properly placed in order that the shoulders may be properly shaped.					
	a. Join the back and fronts together at the shoulders with a 3/8 inch seam, working in the proper fullness on the backs in accordance with good manufacturing practice.	301 or 401	SSa-1 SSa-1	10-14 10-14	A A	A A
	b. Spread open the shoulder seam and press flat with a heated pressing iron or pressing machine over a suitable block, holding the shoulder short. Care shall be exercised in pressing the shoulder					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBV LPR
56.	Seam shoulders. (cont'd) seam in order that the shoulders shall not have a distorted appearance in the finished overcoat.					
57.	Set shoulder straps and shoulder loops. Finished appearance. The shoulder straps shall be properly positioned and uniformly stitched to the overcoat without twists, puckers, pleats, or other distortion. On the finished overcoat, the straps, including the piping, shall measure 2-3/4 ± 1/8 inches wide at the armhole seam and shall taper to 1-3/4 ± 1/8 inches wide at the rounded neck end. a. Position the rounded end of the shoulder strap 5/8 to 3/4 inch from raw edge of the gorge (neck edge) and with the notch of the shoulder strap in line with the shoulder seam line at the armhole. b. Insert one end of the shoulder loop under, and in front of each shoulder strap 1 to 1-1/4 inches from the raw edge of armhole (see figure 1). c. Seam the shoulder straps to the overcoat at the front and back edges and around the collar end, as close as possible to, but not on top of the stitching for the piping, catching the loop in the stitching. Trim the shoulder strap even with the armhole where necessary.	301	SSa-1	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
57.	Set shoulder straps and shoulder loops. (cont'd)					
	d. Turn under the loose end of the loop and stitch through the shoulder strap 1/16 to 1/8 inch from the folded edge, catching the turned under portion of the loop in the stitching (see figure 1).	301	LSb-1	10-14	A	A
58.	Baste shoulders.					
	a. Position shoulder interlining and lining in place. Baste horizontally the upper part of each shoulder on the outside, then turn the coat on the inside.	301 or Hand				
	b. Turn under raw edge of yoke lining at the shoulders, baste the folded edge over the front lining and continue to baste across neck at back.	301 or Hand				
	c. In lieu of basting the lining as indicated in 57.b, and hand felling as required in 73.e, trim the shoulder edge of the front lining, coat front interlining, and yoke lining to approximately 3/8 inch from shoulder at the armhole edge and tapering to 1/8 inch at the neck, and join the yoke lining to the facing-lining assembly at the shoulder with 3/8-inch seam, securing the top end of chest pleat in the seam. In the finished coat, the yoke lining shall be lapped on the facing-lining assembly.	301	SSa-1	10-14	A	A
59.	Stitch hanger and size label.					
	Finished appearance. The size label and the ends of the overcoat hanger shall be properly					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
59.	Stitch hanger and size label. (cont'd)					
	positioned to the inside center back of the overcoat at the neck.					
	a. Stitch the upper edge of the size label and the ends of the hanger to the inside center back of the overcoat at the neck.	301	SSa-1	10-14	A	A
	b. The hanger opening in the finished overcoat shall be 1-1/2 inches long when measured along the lower edge of the topcollar.					
60.	Join topcollar-collarstand assembly to facing at gorge.					
	Finished appearance. The seam joining topcollar to facing at the gorge shall be of uniform gage and shall finish smooth and flat without twists, puckers, pleats or other distortions.					
	a. Properly position the collar on the inside of the overcoat with the lower edge of topcollar and collarstand even with top edge of facing and with the lapel notch and lower corners of topcollar matching.					
	b. Join the topcollar-collarstand assembly to the facings at the gorge from lapel notch to not less than 1 inch behind the lapel breakline.	301	SSa-1	10-14	A	A
	c. Notch the gorge of the facings at the end of joining seam.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
61.	Tack topcollar-collarstand assembly to fronts at gorge.					
	a. Spread open the seam joining the topcollar-collarstand assembly to the facings and tack seam allowance of the topcollar to the fronts at the gorge from lapel notch to end of the seam. The seam allowance may be pressed open with a heated pressing iron before tacking the gorge seam.	301 or Hand	SSa-1	10-14 2-4	A C (silk)	A
62.	Baste undercollar to overcoat.					
	Finished appearance. The center seam of the undercollar shall be in line with center back seam of overcoat. Fullness in the collar shall be properly placed over the shoulders to permit the collar to lie flat.					
	a. Mark the overcoat 5/8 inch along neck edge from lapel notch to lapel notch.					
	b. Position lower edge of undercollar at the mark and securely tack the corners of the collar across the juncture point of the collar and the lapel.	Hand			C (silk)	
	c. Baste the undercollar to the fronts and backparts, placing proper fullness over the shoulders, and aligning the center seam of undercollar with center seam of backparts.	Hand or Machine				

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD	
					NDL	LPR
62	Baste undercollar to overcoat. (cont'd)					
	d. In the finished overcoat, the ends of the collar and top edge of lapels, when measured from the tacked corners to finished edges of collar and lapel, shall be 3 + 1/8 inches for size 6 to 12 and 3-1/2 + 1/8 inches for sizes 14 to 22, inclusive.					
63.	Tack neck outlet.					
	a. Tack neck outlet of basic material and lining to collar interlining from gorge notch to gorge notch with overcast stitching.	Hand or Mach-ine		2-3 6-8	C (silk) A	A
64.	Baste topcollar to overcoat.					
	a. Turn under the lower edge of the topcollar from gorge notch to gorge notch, lapping the folded edge on the facing and lining at the shoulders and on the yoke lining at the back. Baste topcollar stand across neck.					
	b. In lieu of operation 62.a., 63.a and 71.b, stitch lower edge of topcollar across neck from gorge seam to gorge seam.	301	SSa-1	10-14	A	A
65.	Edgestitch overcoat.					
	Finished appearance. The overcoat shall be uniformly edgestitched without twists, puckers or pleats.					
	a. Edgestitch the bottom and front edges of the overcoat, and the front and top edges of the lapels. Continue the stitching across collar seam and edgestitch the edges of the collar.	301	SSe-2 (edges of overcoat) (shows finished seam) OSa-1 (collar)	10-14	A (silk)	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBN/ LPR
65.	Edgestitch overcoat. (cont'd)					
	b. The stitching shall be unformly 3/8 inch from all edges. The stitching along the bottom edge of overcoat shall extend the width of the facings.					
66.	Set loop on the collar.					
	Finished appearance. The location of the loop on the topcollar shall be marked so that in the finished overcoat, the loop shall be aligned with the shoulder loop and the outer edge of the loop shall be 4-1/4 ± 1/8 inch from the shoulder seam line.					
	a. Position one end of the loop on the collar at the mark and stitch the loop through collar, 1/4 inch from the end of loop.	301	SSa-1	10-14	A	A
	b. Turn under the loose end of the loop and stitch through the collar 1/16 to 1/8 inch from the folded edge, catching the turned under portion of the loop in the stitching. (see Figure 1).	301	LSb-1	10-14	A	A
67.	Make buttonholes.					
	Finished appearance. The buttonholes shall be clean-cut, well made, properly positioned, well worked over gimp to fit a 40-line					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
67.	Make buttonholes. (cont'd)					
	Insignia button and with the stitching securely caught in the basic material. The gimp and thread shall be pulled through to the underside of the buttonholes. The purling of the buttonholes shall be on the outside of the fronts. The buttonholes shall be cut-first type.					
	a. Mark the location for three buttonholes on the right front and one buttonhole on the left front in accordance with marks on pattern. In the finished overcoats, the buttonholes shall be evenly spaced and aligned with the eyelet on each front.					
	b. Make a horizontal eyelet-end square bar type buttonhole, cut 1-1/8 inches long, at each of the marks on left and right fronts. The inside edge of the eyelet end of the buttonhole shall be 3/4 inch from the front edge of overcoat.	But-ton-hole		54 per button (not including bartack)	B (silk)	F
	c. Securely bartack the end of each buttonhole, catching the gimp in the stitching, and trim the ends of the gimp and thread.	Bar-tack		21 per bartack	A (silk)	A
68.	Make eyelets in front.					
	Finished appearance. The eyelets shall be worked with the purling on the outside of the front and shall finish with a 1/8-inch diameter opening. All stitches shall be securely caught in the fabric.					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
65.	Edgestitch overcoat. (cont'd)					
	b. The stitching shall be unformly 3/8 inch from all edges. The stitching along the bottom edge of overcoat shall extend the width of the facings.					
66.	Set loop on the collar.					
	Finished appearance. The location of the loop on the topcollar shall be marked so that in the finished overcoat, the loop shall be aligned with the shoulder loop and the outer edge of the loop shall be 4-1/4 ± 1/8 inch from the shoulder seam line.					
	a. Position one end of the loop on the collar at the mark and stitch the loop through collar, 1/4 inch from the end of loop.	301	SSa-1	10-14	A	A
	b. Turn under the loose end of the loop and stitch through the collar 1/16 to 1/8 inch from the folded edge, catching the turned under portion of the loop in the stitching. (see Figure 1).	301	LSb-1	10-14	A	A
67.	Make buttonholes.					
	Finished appearance. The buttonholes shall be clean-cut, well made, properly positioned, well worked over gimp to fit a 40-line					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
67.	Make buttonholes. (cont'd)					
	insignia button and with the stitching securely caught in the basic material. The gimp and thread shall be pulled through to the underside of the buttonholes. The purling of the buttonholes shall be on the outside of the fronts. The buttonholes shall be cut-first type.					
	a. Mark the location for three buttonholes on the right front and one buttonhole on the left front in accordance with marks on pattern. In the finished overcoats, the buttonholes shall be evenly spaced and aligned with the eyelet on each front.					
	b. Make a horizontal eyelet-end square bar type buttonhole, cut 1-1/8 inches long, at each of the marks on left and right fronts. The inside edge of the eyelet end of the buttonhole shall be 3/4 inch from the front edge of overcoat.	But-ton-hole		54 per button (not including bartack)	B (silk)	F
	c. Securely bartack the end of each buttonhole, catching the gimp in the stitching, and trim the ends of the gimp and thread.	Bar-tack		21 per bartack	A (silk)	A
68.	Make eyelets in front.					
	Finished appearance. The eyelets shall be worked with the purling on the outside of the front and shall finish with a 1/8-inch diameter opening. All stitches shall be securely caught in the fabric.					

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD	
					NDL	LH
68.	Make eyelets in front. (cont'd)					
	a. Mark the left and right fronts for the location of three eyelets for removable insignia buttons to align with the buttonholes on the right front in accordance with the pattern markers. The top and center eyelets on each front shall be through all plies, the lower eyelet shall be through the front interlining and one ply of hanging pocket only.					
	b. Make an eyelet at each of the marks. The eyelet cover shall not be caught in the stitching.	Eyelet		22 per eyelet	A	A
	c. Fold back the eyelet cover and tack each end of cover across the width of cover.	Hand		8-10	C (silk)	
69.	Set sleeves.					
	Finished appearance. The sleeves shall be properly and uniformly set and the fullness at the armholes shall be properly distributed. The armhole sleeve seam shall finish smooth and flat without twists, puckers or pleats. The armhole shall not be stretched or distorted due to pressing.					
	a. Position the outside sleeves on outside of overcoat at the armholes, with back notch of sleeve matching notch in the back, and with notch in top sleeve and fronts matching.					
	b. Join the sleeves to the overcoat with a 3/8-inch seam, evenly distributing the fullness in accordance with good manufacturing practice, and catching the end of the shoulder straps in seam.	301	SSa-1	10-14	A	A

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
69.	Set Sleeves. (cont'd)					
	c. Notch armhole seam allowance on back and front and adjacent to each side of shoulder strap.					
	d. Press the entire armhole smooth and flat with heated pressing iron to remove the fullness.					
	e. Spread open the upper part of the armhole sleeve seam, (except at the shoulder strap area) from the backarm sleeve seam to approximately midway between shoulder seam and front notch. Care shall be exercised in pressing the armhole seam in order not to stretch the armhole. The ends of the shoulder straps at the armhole shall not be pressed back.					
70.	Baste armholes.					
	a. Baste around inside armholes, positioning yoke lining, shoulder pad, and front lining in place and distributing fullness evenly. Turn the overcoat on the outside.	301 or Hand				
	b. Baste around outside armhole adjacent to the armhole seam, forcing out the armhole in the basting. The basting shall extend from the backarm seam of sleeves to the front notch of the overcoat.	301 or Hand				
71.	Stitch sleeve head pads and linings at armhole.					
	Finished appearance. The armhole shall not be distorted or puckered					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
71.	Stitch sleeve head pads and linings at armhole. (cont'd)					
	due to stitching the sleeve head pads and lining at the armhole.					
	a. Position the sleeve head pad on the sleeve with the folded edge of the pad approximately 1/8 inch back from the raw edge of the armhole seam and with the front end of the pad matching the notch in the fronts.					
	b. Stitch the sleeve head pad to the sleeve from end to end through the armhole sleeve seam allowance 1/8 inch from the folded edge of the pad. The front and yoke linings and the shoulder pad shall be caught in the stitching. Continue stitching the lining around the remainder of the armhole, trimming away the excess lining and interlining.	301	SSa-1	4-6	30/3	30/3
72.	Fell collar to overcoat.					
	a. Fell the lower edge of the undercollar to the fronts and the back parts from end to end. The undercollar may be machine felled to overcoat.	Hand or Machine	LSa-1	8-10 8-12	C (silk) C (silk)	
	b. Fell the folded edge of the topcollar to the overcoat from gorge seam to gorge seam. The top edge of size label and the ends of the overcoat hanger shall be caught in the felling.	Hand or 306	LSa-1	8-10 8-12	C (silk) 0 (silk)	0
73.	Fell lining.					
	a. Position the sleeve lining at the armhole with back and forearm seams of sleeves and linings	Hand		8-10	C (silk)	

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD LPR
73	Fell lining. (Cont'd)					
	matched. Turn under the armhole edge of the sleeve lining and lap the linings on the outside of the front and yoke linings at the armhole. Fell the sleeve lining to the overcoat around the entire armhole, placing the stitching over the folded edge of sleeve lining, distributing the fullness in accordance with good commercial practice, and backstitching the lower armhole edge from approximately 1-1/2 inches to the front of forearm sleeve lining seam to the side seam of body lining.					
	- or -					
	b. The sleeve lining may be stitched by machine to the armhole on the inside from forearm seam of sleeve to backarm seam across the undersleeve. Top portion may be felled by machine (simulated hand felling stitch).	301	SSa-1	10-14	A	A
	c. Fell the top edge of the right vent lining to the overcoat and continue the felling along the front and back edges of the lining for a distance of 3/4 to 1 inch down from top edge.	Hand		8-10	C (silk)	
	d. Tack the lower front corner of front lining to the bound back edge of the facings. Tack the bottom finished edge of front and yoke linings to the side seam outlet.	Hand		8-10	C (silk)	

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
73.	Fell lining. (Cont'd)					
	e. Fell the back lining and facing-lining assembly together at the shoulder, placing the stitching over the folded edge of back lining and securing the top end of the chest pleat in the felling.	Hand		8-10	C (silk)	
74.	Tack facing and bottom turnup.					
	a. Fell the bound back edge of the facings to the overcoat from the bottom to the bound top edge of the bottom turnup.	Hand		8-10	C (silk)	
	b. Fell the ends of the bottom turnup to the body of the overcoat at the vent. The felling on the left end of the bottom shall be continued along the bound top edge of the turnup, the width of the left vent.	Hand		8-10	C (silk)	
75.	Clean overcoat.					
	a. Pull and remove all basting threads. Trim all ends of stitching and remove all loose ends of thread from the overcoat. Remove all spots, stains, and shade tickets and marking without injury to the material.					
76.	Press overcoat.					
	Finished appearance. The overcoat shall be well pressed throughout with a heated pressing iron or pressing machine of a type suitable to obtain the desired shape and appearance in accordance with good manufacturing practices.					

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
76.	Press overcoat. (Cont'd)					
	a. Press the fronts smooth and flat, straightening and shaping the front edges and working the fullness towards the chest.					
	b. Press the entire collar smooth and flat, stretching where necessary to obtain the proper shape and straighten the edges. During the pressing operation, all fullness shall be worked towards the center of the collar and removed by shrinking.					
	c. Press the upper half of the fronts on a body machine, shrinking in and properly shaping the chest.					
	d. Press the lower half of the fronts and pocket welt smooth and flat.					
	e. Press the sides, working the fullness towards the back.					
	f. Press the back smooth and flat, removing all fullness and lapping.					
	g. Insert an sleeve pad in the sleeve in order to prevent creasing and press sleeves smooth and flat.					
	h. Block the shoulders to remove the fullness and press shoulders smooth on a shoulder shaping machine. During the pressing operation, the shoulder straps					

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOB/ LPR
76.	Press overcoat. (Cont'd)					
	shall be properly positioned over the shoulder seam and pressed flat.					
	i. Press the armholes solid from the inside, creasing the armholes at the front, back and armpit. The armpit and back of armhole shall be held short while pressing.					
	j. Block the armholes on a pressing buck, shrinking in the top sleeves.					
	k. Press the lapels smooth and flat, straightening the edges. During the pressing operation, the fullness shall be worked towards the center of the lapel and removed by shrinking. The lapels shall remain roll pressed.					
	l. Press the collar on a collar machine, creasing on the breakline and shaping in order to obtain the proper contour while pressing. Creasing of the collar shall extend from shoulder seam to shoulder seam.					
	m. Remove all wrinkles and impressions from under lapels, collar and shoulder straps. Press the lining throughout, removing all wrinkles and creases. Press the front and yoke lining pleats smooth and flat. Remove all gloss marks.					
77.	Mark for and attach buttons.					
	a. Mark the location for sewing one 3+-line anchor button to the					

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

TABLE 1 MANUFACTURING REQUIREMENTS

NO	OPERATION	STCH TYPE	SEAM/ STCH TYPE	STCH/ IN	THREAD NDL	THREAD BOBN/ LPR
77.	Mark for and attach buttons. Cont'd					
	inside of right front to properly engage buttonhole on left front.					
	b. Mark the location for sewing one 22 line button to the outside of the left vent to properly engage the button-loop on the right vent.					
	c. Insert the six front buttons and two belt buttons through the eyelets and attach with toggles.					
78.	Sew on buttons.					
	a. Sew one 34-line sewing hole button to the inside right front at the mark.	101 or 301		20-22 per button or	24/4	
				14-16 per button	24/4	24/4
	b. Sew one 22-line sewing hole button at the mark on the left vent, through the vent lining.	101 or 301		20-22 per button or	24/4	
				14-16 per button	24/4	24/4

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

3.7 Finished measurements. The finished overcoat shall conform to the measurements shown in Table II.

Table II - Overcoat measurements

Size	Bust 1/	Back-length 2/	Sleeve-length 3/
Short			
6	38	39-1/4	15
8	39	39-1/2	15
10	40	39-3/4	15
12	41-1/2	40	15
14	43	40-1/4	15
16	44-1/2	40-1/2	15
18	46-1/2	40-3/4	15
20	48-1/2	41	15
Regular			
6	38	41-1/4	16-1/4
8	39	41-1/2	16-1/4
10	40	41-3/4	16-1/4
12	41-1/2	42	16-1/4
14	43	42-1/4	16-1/4
16	44-1/2	42-1/2	16-1/4
18	46-1/2	42-3/4	16-1/4
20	48-1/2	43	16-1/4
22	50-1/2	43-1/4	16-1/4
Long			
8	39	44-1/2	17-1/4
10	40	44-3/4	17-1/4
12	41-1/2	44	17-1/4
14	43	44-1/4	17-1/4
16	44-1/2	44-1/2	17-1/4
18	46-1/2	44-3/4	17-1/4
20	48-1/2	45	17-1/4
22	50-1/2	45-1/4	17-1/4
Tolerance±	3/4"	1/2"	1/2"

1/ Tolerance is on 1/2 bust. Bust measurement taken with overcoat buttoned, lying flat and without stretching, from folded edge to folded edge (in line with pit of armhole) and multiply by two.

2/ Back measurement taken along center back seam from lower edge of undercollar to bottom edge of overcoat.

3/ Sleeve length measurement taken along underarm seam from pit of armhole to bottom edge of cuff.

3.8 Workmanship. The finished overcoats shall conform to the quality and grade of product established by this specification. The occurence of defects shall not exceed the applicable point value or defect limit.

Source: https://assist.dla.mil -- Downloaded: 202640-20T22:46Z
Check the source to verify that this is the current version before use.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract, the contractor is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract, the contractor may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.1.1 Certificate of compliance. Where certificates of compliance are permitted, the Government reserves the right to check test such items to determine the validity of the certification.

4.2 Classification of inspection. The inspection requirements specified herein are classified as follows:

1. First article inspection (see 4.4).
2. Quality conformance inspection (see 4.5).

4.3 Inspection conditions. Unless otherwise specified, all inspections shall be performed in accordance with the test conditions specified in MIL-STD-1392.

4.4 First article inspection. When first article is required, inspection shall be made of a completely fabricated overcoat for all provisions of this specification.

4.5 Quality conformance inspection.

4.5.1 Testing of components. Testing of components shall be in accordance with the applicable subsidiary specifications and standards to the extent applicable, except that this specification shall govern in the event of conflict. The method of testing specified in FED-STD-191, wherever applicable.

4.5.2 In-process inspection. Inspection shall be performed during the manufacturing of the end item to ascertain that the operations are performed as specified herein. The Government reserves the right to determine the acceptability of construction methods not performed in accordance with specified requirements for operations or subassemblies.

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

4.5.3 Examination of the end item. Prior to the formation of a lot and as a final step in the contractors production control plan, each overcoat shall be buttoned on a model form and examined for those defects identified by an asterisk (*) and listed as selected defects in MIL-STD-1392. Any coat containing a selected defect shall not be included in the end item lot.

4.5.3.1 Finished measurement examination. The provisions for the finished measurement examination of the finished coat shall be as specified in MIL-STD-1392 and Table II of this specification.

4.5.4 Examination of packaging requirements. Shipping containers that are fully prepared for delivery except for closure shall be subjected to the examination of preparation for delivery described in MIL-STD-1392. The occurence of defects during this examination shall not exceed the applicable point value or defect limit specified in MIL-STD-1392.

5. PACKAGING

5.1 Preservation and packaging. Preservation and packaging shall be level A or commercial as specified (see 6.2).

5.1.1 Level A. Fold the overcoats in half lengthwise inside out with the front edges and lapels aligned, the collar turned up and sleeves lying full length between the fold. The overcoats shall be folded in half again in the length and then folded in half in the width.

5.1.2 Commercial. Overcoats shall be packaged to afford adequate protection against physical damage during shipment from the contractor to the first receiving activity. The package and the quantity per package shall be the same as that normally used by the contractor for retail distribution.

5.2 Packing. Packing shall be level A, B or commercial (see 6.2).

5.2.1 Level A.

5.2.1.1 Method 1. Ten overcoats of one size only, folded as specified in 5.1.1 shall be packed in a fiberboard shipping container with liner conforming to weather-resistant class, grade V25 size 3A of MIL-B-17757. Every other overcoat shall be placed in the shipping container with the collar at opposite ends and armholes at opposite sides. Each container shall have the contents completely covered on top and bottom with a sheet of 60-pound minimum basis weight kraft

Source: https://assist.dla.mil -- Downloaded: 20260-20T22:46Z
Check the source to verify that this is the current version before use.

paper conforming to grade B of UU-P-268. Each shipping container shall be assembled, closed and reinforced as specified in the appendix to the box specification. Towards the end of the contract, or when there is less than the requirement amount per container of the same size, mixed sizes may be packed within the same shipping container.

5.2.1.2 Method 2. When specified (see 6.2), three level B shipping containers (30 overcoats of one size only) shall be overpacked in a fiberboard shipping container conforming to weather-resistant class, size 4 of MIL-B-17757 reinforced as specified in the appendix to the box specification. Towards the end of the contract, or when there is less than the required amount per container of the same size, mixed sizes may be packed within the same shipping container.

5.2.2 Level B. Ten overcoats of one size only, folded as specified in 5.1.1, shall be packed in a fiberboard shipping container with liner conforming to domestic class, size 3A of MIL-B-17757. The fiberboard used for fabricating the container and the liner shall be grade 275 and 200 respectively. Every other overcoat shall be placed in the shipping container with the collar at opposite ends and the armholes at opposite sides. Each container shall have the contents completely covered on top and bottom with a sheet of 60 pound minimum basis-weight kraft paper conforming to grade B or UU-P-268. Each shipping container shall be assembled and closed as specified in the appendix to the box specification. Towards the end of the contract, or when there is less than the required amount per container of the same size, mixed sizes may be packed within the same shipping container.

5.2.3 Commercial packing. Overcoats, packaged as specified in 5.1, shall be packed in a manner to insure carrier acceptance and safe delivery at destination at the lowest transportation rates for such supplies. The quantity per shipping container shall be the same as that normally used by the contractor for retail distribution. Containers shall comply with the U. S. Postal Service Manual, Uniform Freight Classification Rule or National Motor Freight Classification Rule, as applicable.

5.3 Marking. In addition to any special marking required by the contract or order, interior packages and shipping containers shall be marked in accordance with MIL-STD-129.

5.3.1 Mixed sizes. Each shipping container, packed with mixed sizes only, shall have a 5 X 4 inch white paper label securely attached to the end and side directly under the printing or stenciling. The words "MIXED SIZES" shall be plainly stamped or

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

printed thereon and under these words shall be legibly stamped or printed the correct quantity and sizes contained therein.

6. NOTES

6.1 Intended use. The overcoat described herein is intended to be worn by female enlisted personnel of the U. S. Marine Corps ceremonial troops.

6.2 Ordering data. Procurement documents should specify the following:

6.2.1 Procurement requirements.

(a) Title, number and date of this specification.
(b) Size required (see 1.2).
(c) Whether first article is required (see 3.2).
(d) Number of overcoats in first article (see 3.2).
(e) Selection of applicable levels of packaging and packing (see 5.1 and 5.2).
(f) When level A, method 2, packing is required (see 5.1.1.2).

6.2.2 Contract data requirements. Data conforming to Data Item Descriptions DI-R-4803, DI-R-4805, DI-T-4901, DI-T-4902, DI-T-4903 and DI-T-4904 will usually be required for delivery in connection with this specification. When so required, such data will be specified for delivery on a Form DD-1423 included in the contract.

6.3 Standard sample. The standard sample and color sample may be obtained from the procuring activity or as directed by the contracting officer.

6.4 First article. Examinations, test and approval shall be as specified by the contracting officer (see 3.2).

6.5 Figures. Figures 1 through 3 show general design of the overcoat and are furnished for information only. In the event of conflict between these figures and the text of this specification, the test of this specification shall govern.

Preparing activity:

Navy - MC

Project Number 8410-N493

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T22:46Z
Check the source to verify that this is the current version before use.

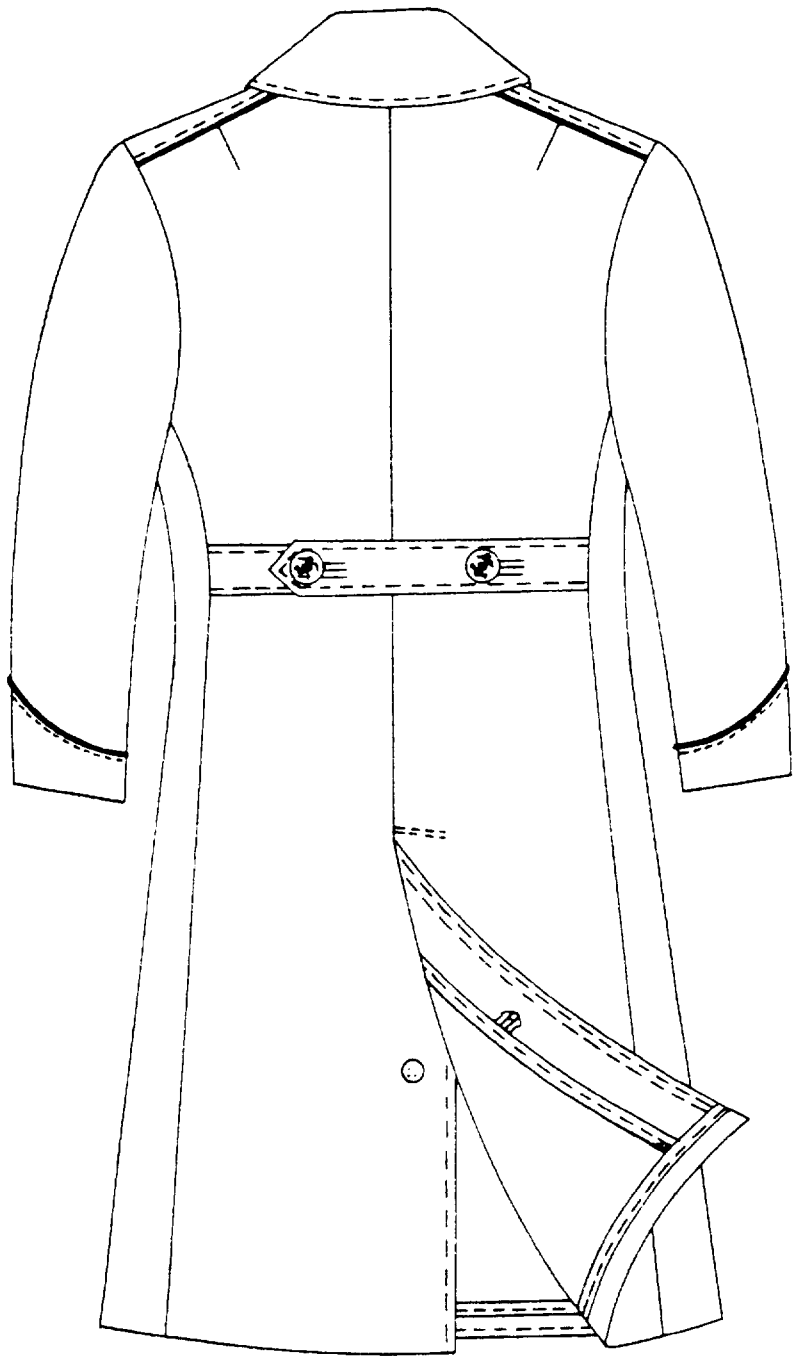


FIG 2: OVERCOAT,WOMAN'S WOOL,GABARDINE BLUE

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

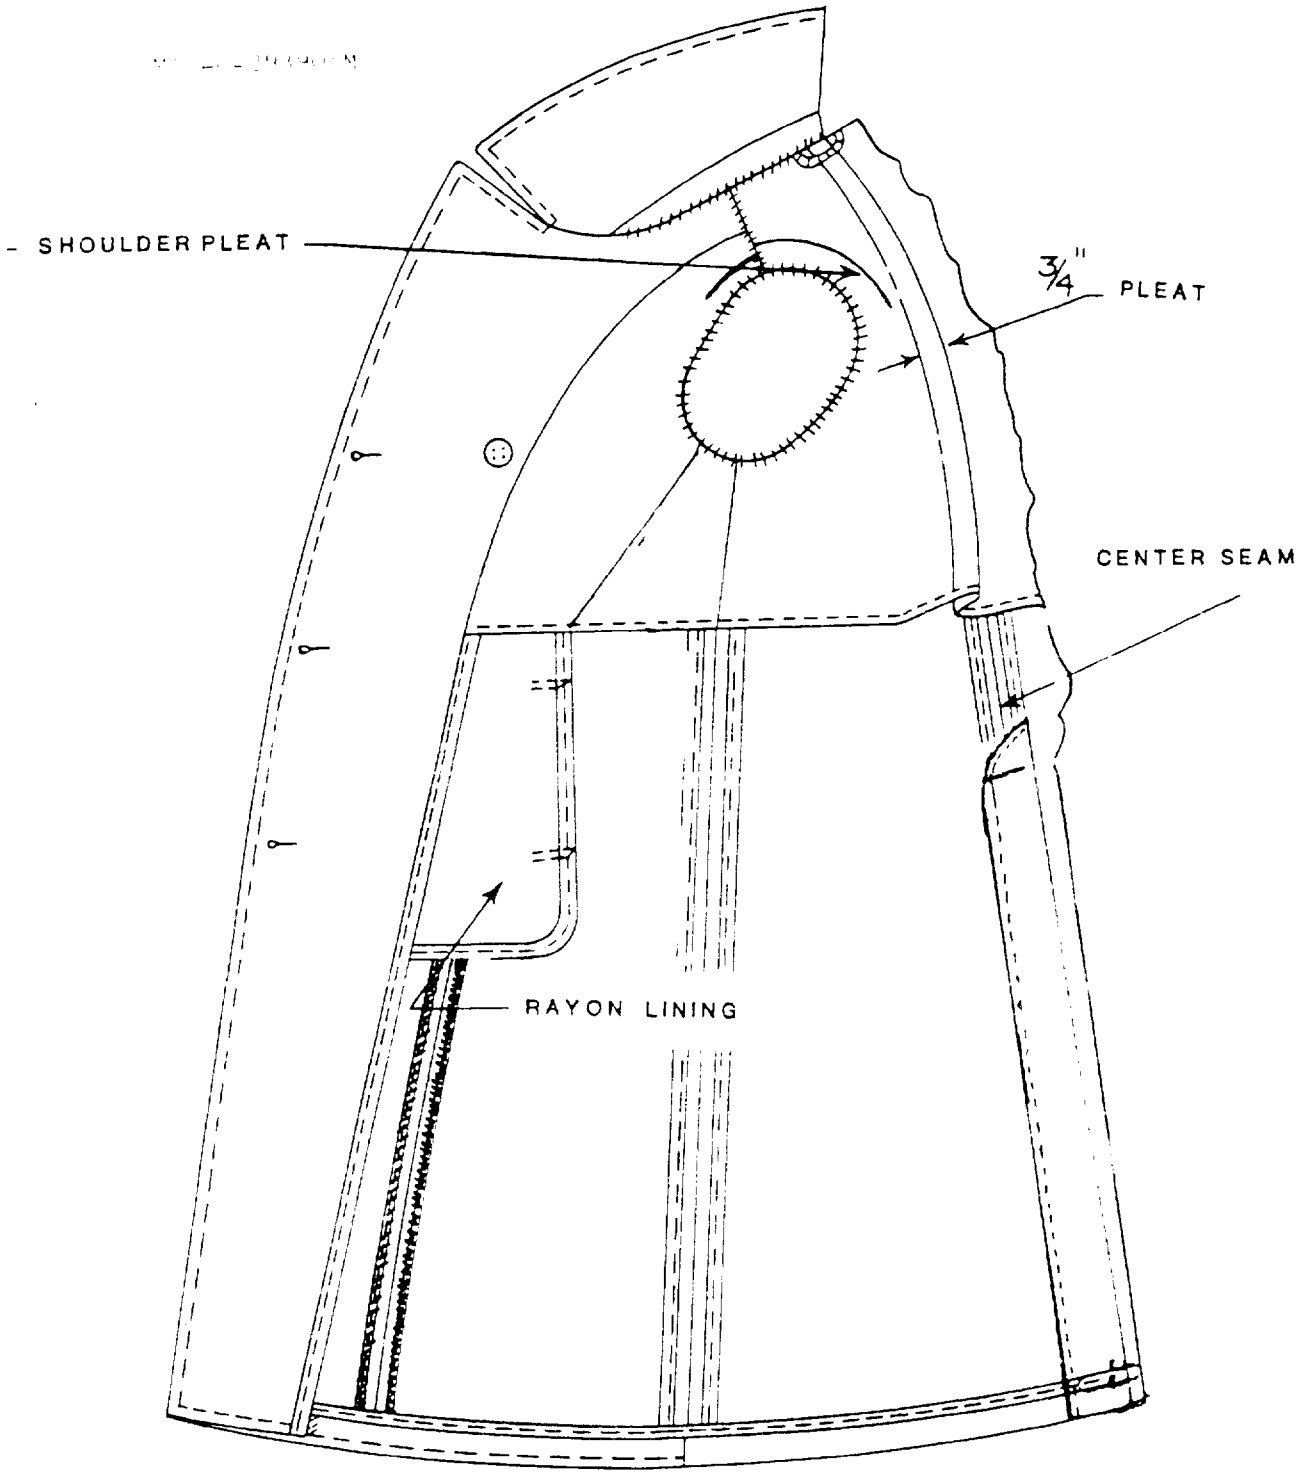


FIG 3: OVERCOAT, WOMAN'S WOOL GABARDINE BLUE

Source: https://assist.dla.mil -- Downloaded: 20261O-20T22:46Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

OMB Approval
No. 22-R255

INSTRUCTIONS. The purpose of this form is to solicit beneficial comments which will help achieve procurement of suitable products at reasonable cost and minimum delay, or will otherwise enhance use of the document. DoD contractors, government activities, or manufacturers' vendors who are prospective suppliers of the product are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity.

DOCUMENT IDENTIFIER AND TITLE

OVERCOAT, WOMAN'S: WOOL, GABARDINE: BLUE (CEREMONIAL) MIL-29390(MC)

NAME OF ORGANIZATION AND ADDRESS	CONTRACT NUMBER
	MATERIAL PROCURED UNDER A ☐ DIRECT GOVERNMENT CONTRACT ☐ SUBCONTRACT

1. HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE?

   A. GIVE PARAGRAPH NUMBER AND WORDING

   B. RECOMMENDATIONS FOR CORRECTING THE DEFICIENCIES

2. COMMENTS ON ANY DOCUMENT REQUIREMENT CONSIDERED TOO RIGID

3. IS THE DOCUMENT RESTRICTIVE?

   ☐ YES ☐ NO *(If "Yes", in what way?)*

4. REMARKS

SUBMITTED BY *(Printed or typed name and address - Optional)*	TELEPHONE NO
	DATE

DD FORM 1 JAN 72 1426 REPLACES EDITION OF 1 JAN 68 WHICH MAY BE USED. S/N 0102-LF-001-4281

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.

FOLD

DEPARTMENT OF THE NAVY
HEADQUARTERS, U.S. MARINE CORPS
WASHINGTON, D.C. 20380

POSTAGE AND FEES PAID

U.S.MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commandant of the Marine Corps
Headquarter, U.S. Marine Corps
(Code LMA-3)
Washington, D.C. 20380

FOLD

Source: https://assist.dla.mil -- Downloaded: 202610-20T22:46Z
Check the source to verify that this is the current version before use.