


μMix Assembly Guide


1 Main Board Assembly

Parts Included in Kit:

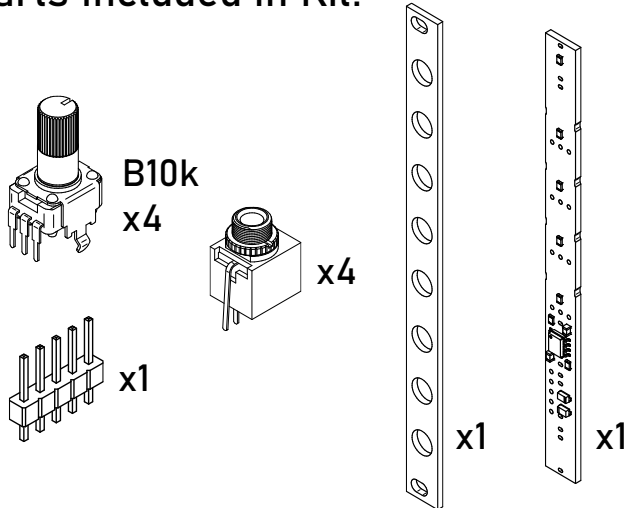

1.1 Assemble power header onto main board assembly.


1.2 Solder power header, ensuring that the power header sits flush to the back side of the board to prevent interference with the jacks.

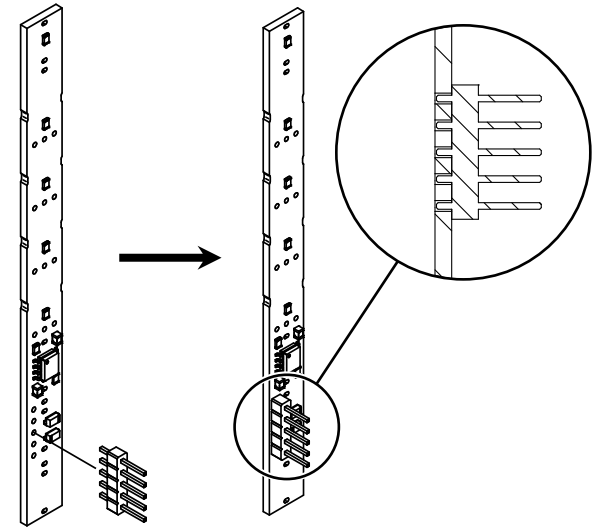

2 Jack Assembly

2.1 Place jacks on the main board and lightly thread them into the panel to ensure they line up before soldering. Carefully note the orientation of the jacks before soldering.


2.2 Once all the jacks have been oriented correctly, solder them into place on the main board.

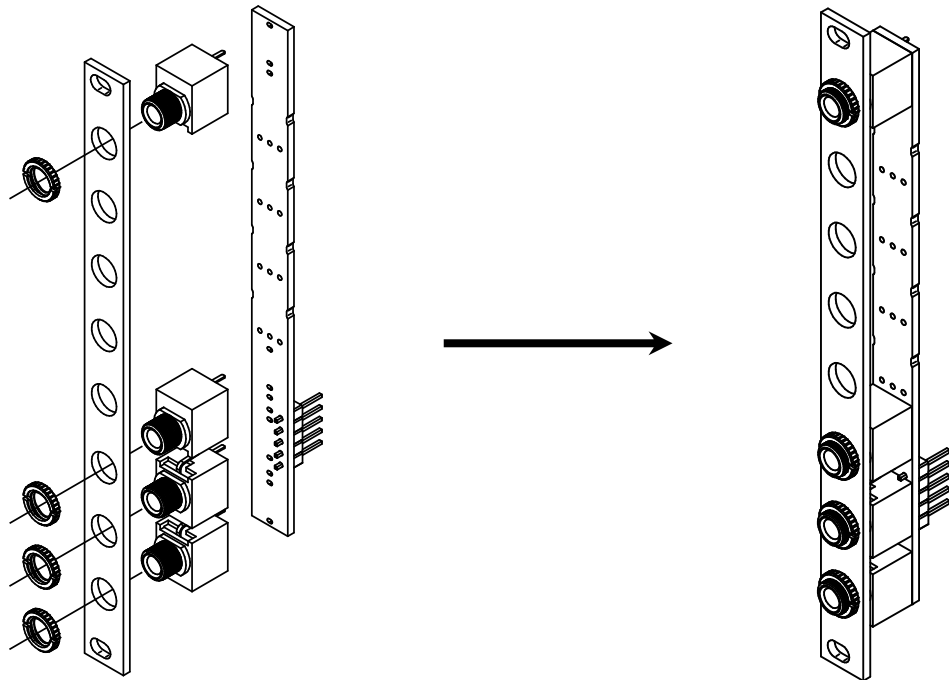

3 Potentiometer Assembly

3.1 Using needle-nose pliers, straighten both mechanical mounting pins on each of the potentiometers. This step is optional, but will make subsequent assembly steps easier and reduce the chance of damaging the module in later steps.

3.2 Remove panel from main board assembly and reassemble with potentiometers on the main board. Thread jacks lightly into the panel and solder the potentiometers into place.

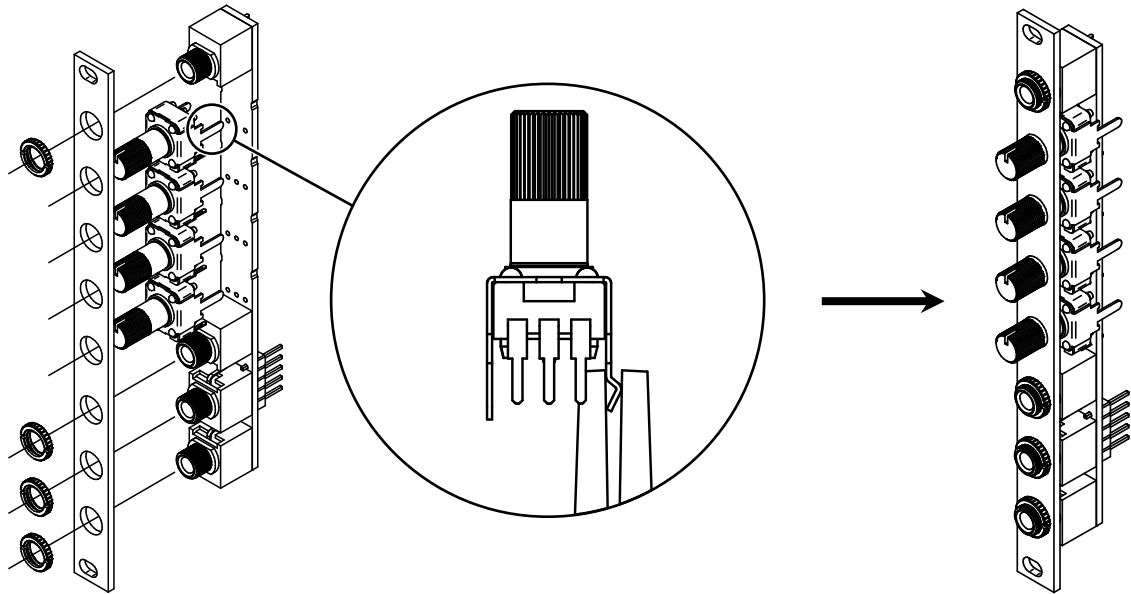

4 Final Assembly

4.1 Bend the mechanical mounting pins on each potentiometer around the main board for support. Be careful to avoid damaging the back surface of the main board as the pins are bent.

