Loader Assembly

View Materials List

Overview

The Loader Assembly moves with the core to load a dart and maintain a seal into the turnaround/barrel interface.

Steps

Step 1: Set pusher seal

- Install a 1/4-20 x 3/8 screw through a 202 o-ring into the front of the Pusher.
- Tune tightness so the seal is airtight in the Turnaround while still allowing smooth priming.
- Bolt action usually tolerates a looser seal; straight pull generally needs a tighter seal.

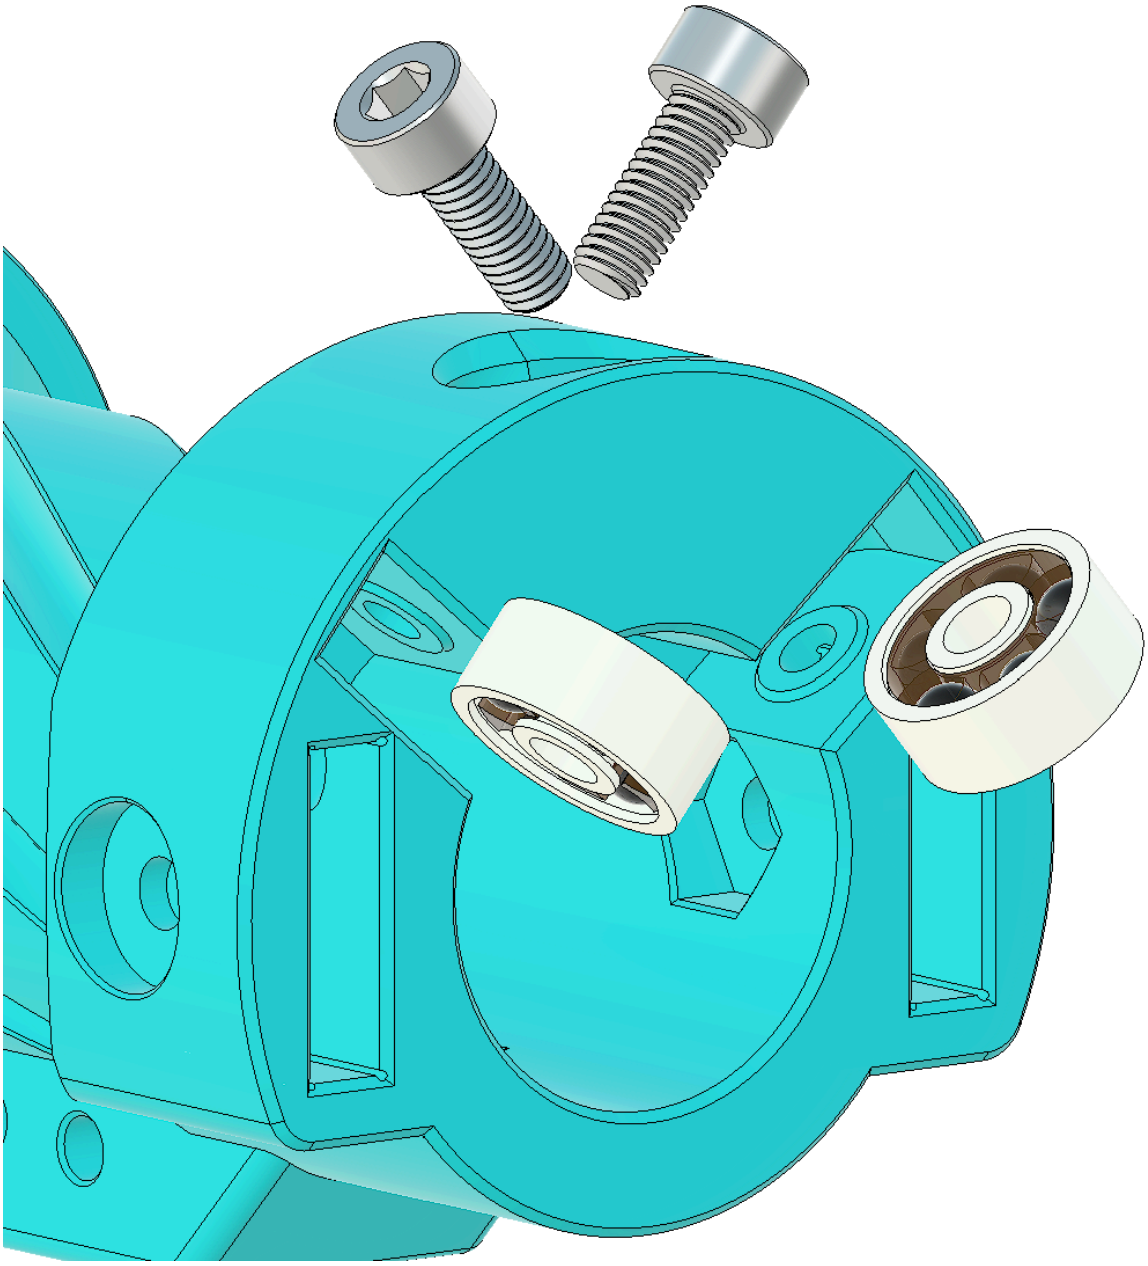

Step 2: Fit transfer bar adapter

- Test-fit TransferBarAdapter onto the front of TransferBar.
- Confirm it seats flush in the cutout and can be removed/reinstalled smoothly.
- Sand or tolerance-tune as needed.

Step 3: Attach pusher to transfer bar
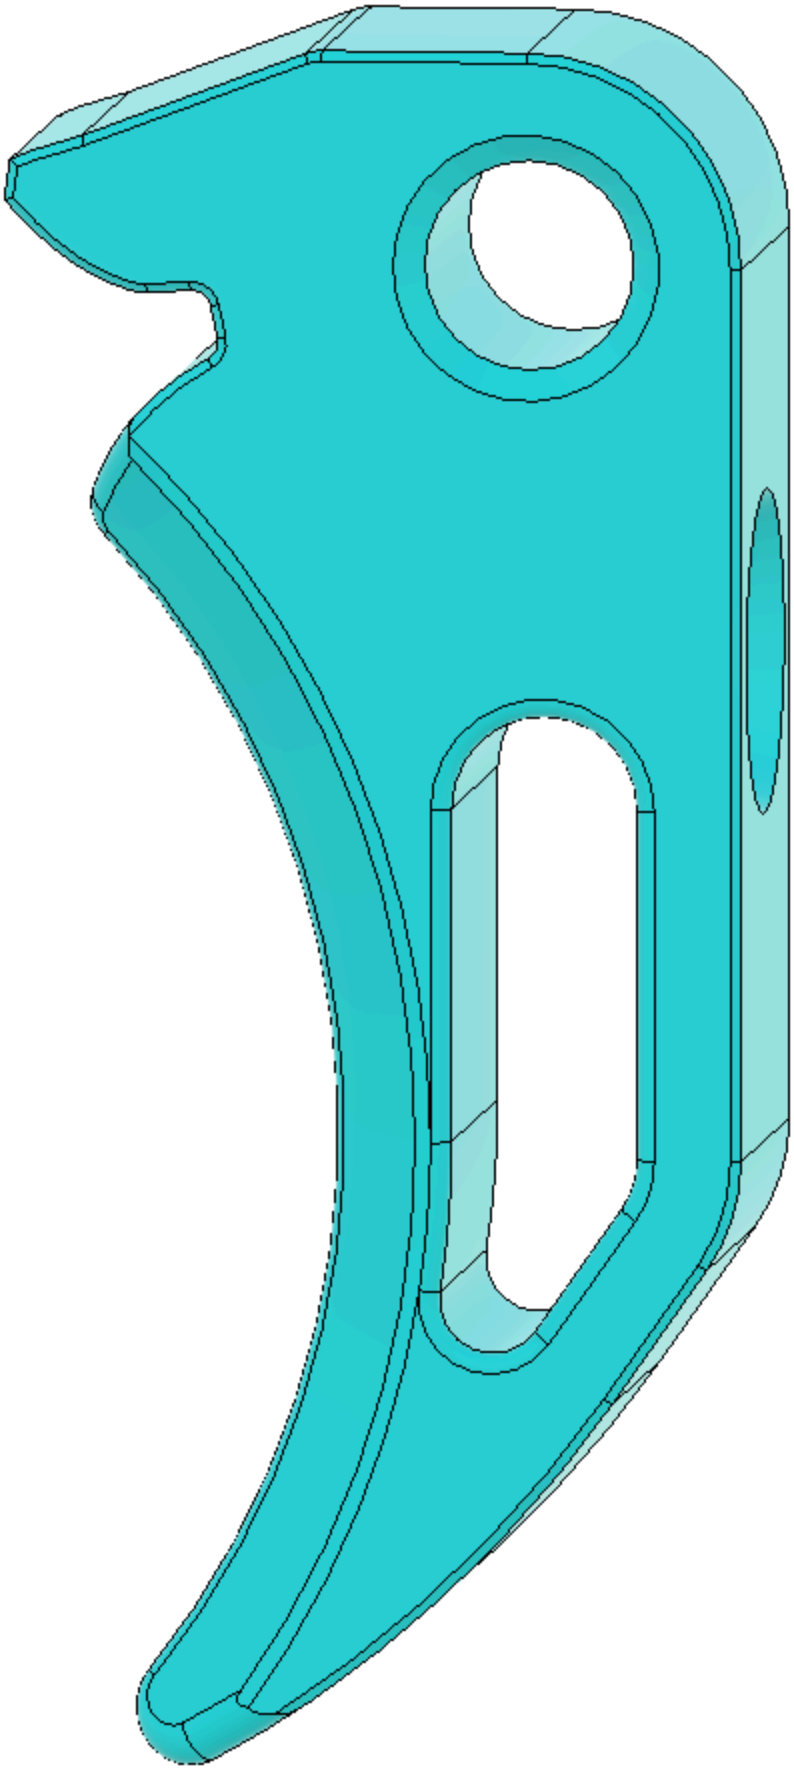
- Install Pusher onto TransferBar with two 6-32 socket head screws.
- Keep pusher on the same side as the TransferBarAdapter center cutout.