
DRAWING LIST


ITEM	QTY	DRAWING NUMBER	DESCRIPTION
1	1	S1101MFD1538	TFP ARRAY BRACKET
2	1	S1101MFA1539	TFP ARRAY COVER ASSEMBLY
3	1	S1101MFT1557-01	ID LABEL
4	1	S1101MFT1557-XX	PART AND SERIAL NUMBER LABEL


COMMERCIAL PARTS LIST

ITEM	QTY	PART NUMBER	DESCRIPTION
C1	2	MS9390-090	PIN, STRAIGHT, HEADLESS, DOWEL, CRES STANDARD, .09375 X .375LG
C2	1	MS51830CA102	MINIATURE INSERT FOR .112-40 UNJC-3A IN. FASTENER
C3	A/R	1838 B/A GREEN	3M SCOTCH WELD EPOXY ADHESIVE
C4	A/R	SCS-CMF	35 MICROMETER CARBON MONFILAMENT, SPECIALTY MATERIALS
C5	A/R	49550	LOCTITE 495 SUPER BONDER INSTANT ADHESIVE
C6	A/R	PT005130	.20mm DIA. PLATINUM WIRE, GOODFELLOW

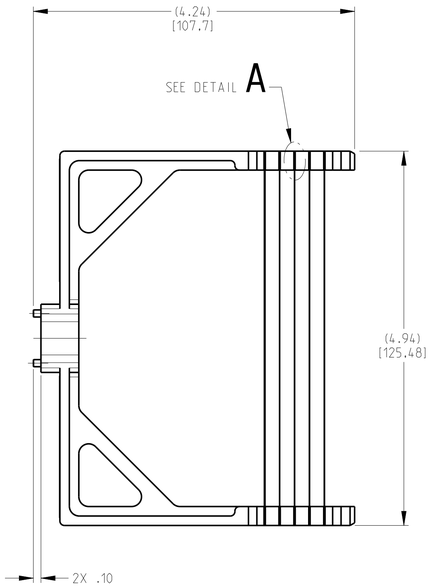


NOTE: TFP ARRAY COVER ASSEMBLY NOT SHOWN FOR CLARITY

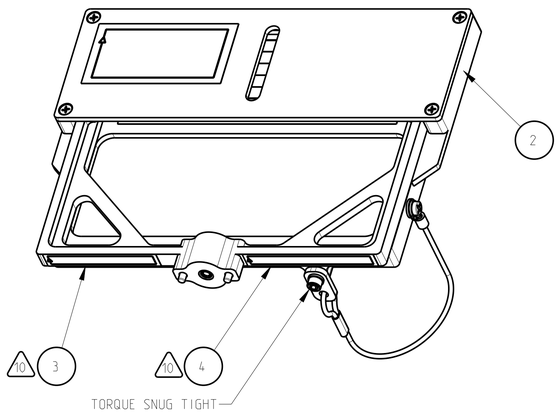

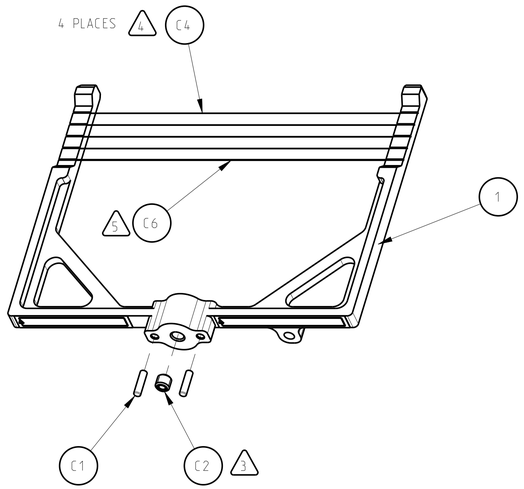

NOTE: TFP ARRAY COVER ASSEMBLY NOT SHOWN FOR CLARITY

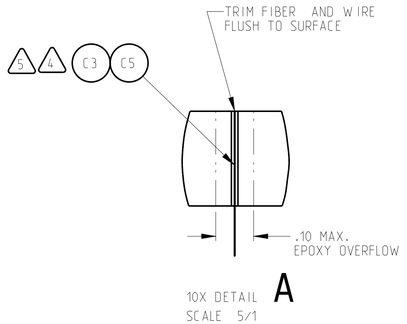

10X DETAIL A
SCALE 5/1

NOTES:

1. MATERIAL AND PROCESS CERTIFICATION REQUIRED PER QUALITY LEVEL SPECIFIED IN WORK ORDER/SOW.
2. ASSEMBLE PER APPROVED PROCESS PLAN FOR INITIAL BUILD.
3. INSTALL THREADED INSERTS PER MS51835. VERIFY INSERT IS BELOW SURFACE BEFORE SETTING KEYS.
4. FIBER ATTACHMENT PROCEDURE (4X):
   A. REMOVE A SINGLE FIBER FROM ITEM C4. LAY FIBER IN POSTION.
   B. APPLY ADHESIVE ITEM C5 INTO FIRST FIBER GROOVE & LET CURE.
   C. APPLY 7.8±.1 GRAM TENSILE LOAD ON OPPOSITE END OF FIBER AND SET INTO GROOVE. APPLY ADHESIVE ITEM C5.
   D. LET CURE FOR 5 MINUTES MINIMUM. REMOVE LOAD AND TRIM FIBER TO LENGTH.
   E. APPLY EPOXY ITEM C3 TO COVER GROOVE AND FIBER CONTACT AREAS.
5. WIRE ATTACHMENT PROCEDURE (1X):
   A. TRIM A PIECE OF WIRE (ITEM C6) TO 9" AND LAY INTO POSITION.
   B. APPLY ADHESIVE ITEM C5 INTO LAST GROOVE & LET CURE.
   C. APPLY 35-40 GRAM TENSILE LOAD ON OPPOSITE END OF WIRE AND SET INTO GROOVE. APPLY ADHESIVE ITEM C5.
   D. LET CURE FOR 5 MINUTES MINIMUM. REMOVE LOAD AND TRIM WIRE TO LENGTH.
   E. APPLY EPOXY ITEM C3 TO COVER GROOVE AND WIRE CONTACT AREAS.
6. CHEMICAL CONVERSION COAT ANY DAMAGED OR MACHINED AREAS ON ALUMINUM PARTS PER MIL-DTL-5541, TYPE I, CLASS 3 (GOLD COLOR).
7. CLEAN ALL SURFACES WITH ISOPROPYL ALCOHOL AND LET AIR DRY. WIPE WITH CLEAN COTTON SWABS AND/OR LINT-FREE CLOTH.
8. HANDLE WITH CLEAN, LINT-FREE GLOVES.
9. BEFORE STORAGE, PROTECT WITH CONTAMINATION BARRIER. USE CLEAN, NEW, TRANSPARENT POLYETHYLENE BAG FOR SMALL ITEMS OR 4 MIL THICK MINIMUM POLYETHYLENE SHEET AND SEAL. MARK PART NUMBER, A DASH, AND A SERIAL/LOT NUMBER AS SPECIFIED IN WORK ORDER/SOW, BY TAGGING PER SAE-AS478-35D.
10. APPLY LABEL TO CLEAN, DRY SURFACE IN LOCATION SHOWN.

REV	DESCRIPTION	APPROVED
B	INCORPORATED ACME-ECO-514 AND ACME-ECO-587.	AK 11/07/16 LF 11/07/16 AD 11/07/16
A	INCORPORATED ACME-ECO-428	AD 03/30/15 JO 03/27/15 GF 03/26/15

REVISION HISTORY

S1101MFA0100
NEXT ASSEMBLY

UNLESS OTHERWISE SPECIFIED:
1. ALL DIMENSIONS ARE IN INCHES
2. BREAK EDGES .010-.020
3. INSIDE CORNERS R.02 MAX
4. LINEAR TOLERANCES:
   .X ± .03
   .XX ± .01
   .XXX ± .005
5. ANGULAR TOLERANCE ± .5°

THIRD ANGLE PROJECTION

THIS DRAWING IS UNDER CONFIGURATION CONTROL: DO NOT REVISE WITHOUT AN APPROVED ECO.
APPROVED:
PRIOR TO USE, CHECK WITH CONFIGURATION MANAGEMENT FOR ANY OUTSTANDING ECOS.

DESIGNER	K.RHODES 11/10/14	QUALITY	D.SEELEY 11/17/14
REVIEWER	G.FEDEVICH 11/12/14	MATERIALS	M.WILKINSON 11/10/14
MECHANICAL	A.DRAKE 11/10/14	PROJ LEAD	B.BOROWSKI 11/17/14
ELECTRICAL	T.GOBELI 11/10/14		
STRUCTURAL	C.WEAVER 11/14/14		
SAFETY	R.BORRELLI 11/12/14		

DIMENSIONS AND TOLERANCING PER ASME Y14.5M-1994

CONTRACT NUMBER: NNC14CA02C
PROJECT CODE: S2-BT3

ZIN TECHNOLOGIES
8745 ENGLE ROAD
AIRPORT EXECUTIVE PARK
CLEVELAND, OHIO 44130
(440) 625-2200
www.zin-tech.com

NATIONAL AERONAUTICS AND SPACE ADMINISTRATION
JOHN H. GLENN RESEARCH CENTER
LEWIS FIELD
CLEVELAND, OHIO

TITLE
35 MICRON TFP CALIBRATION ARRAY ASSEMBLY

SIZE	CAGE CODE	DWG NO	REV
D	0SG68	S1101MFA1557	B

SCALE 1/1 & NOTED | INITIAL REL DATE 11/17/14 | SHEET 1 OF 1

RELEASE LEVEL: RELEASED
MODEL: S1101MFA1557

PRO/E VERSION: Wildfire 5.0

REV B | SH 1 | DWG NO S1101MFA1557

ZIN_D_2012.frm