
1075-07 Mod 3 · Parts & assembly checks

Revision 3 · October 29, 2026 · Matte Black · Original 13 mm · 44.16″ H × 88.84″ W × 65.46″ D

Part	Quantity	Details
Original 13 mm tubes		
265	28	9.88″
460	27	17.68″
595	44	22.87″
Original zinc connectors		
3T	5	Original
4T	18	Original
5T	17	Original
6T	2	Original
Glass shelves		
1717	3	17 9/16″ square
1722	15	17 9/16″ × 22 3/4″
Accessories		
620	72	Curved corner clip
705	14	One foot per leg
012	72	One bumper per clip


Tools & preparation

913 nylon mallet, wood support block, safety glasses and secure frame supports. Check all connector directions before seating. Keep feet until all hammering is complete.

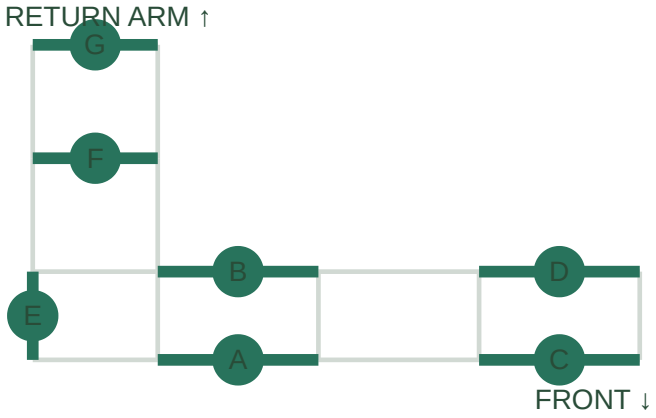

A: #595 / 22.87″ / 5T–5T · B: #595 / 22.87″ / 6T–5T · C: #595 / 22.87″ / 5T–4T · D: #595 / 22.87″ / 5T–4T · E: #460 / 17.68″ / 4T–5T · F: #460 / 17.68″ / 5T–5T · G: #460 / 17.68″ / 4T–4T

1. Sort the parts

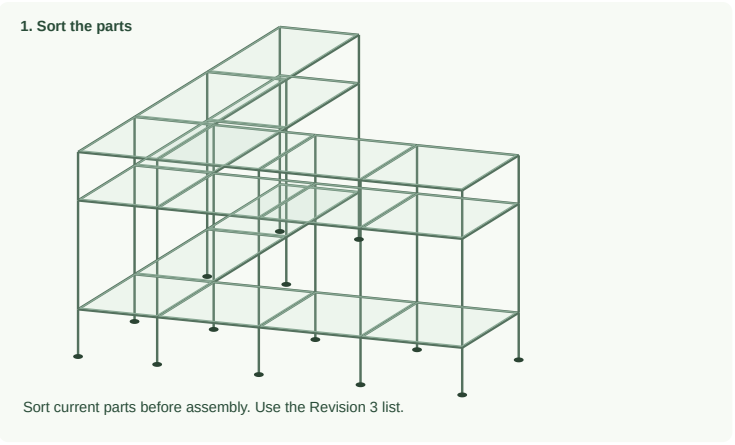


Sort current parts before assembly. Use the Revision 3 list.

New parts: None. No previously assembled sections required. Tools: No additional tools.

☐ Count all listed parts against the current Revision 3 list.
☐ Identify tubes by code AND inch length; set out mallet and wood block.

2. Bones & connectors

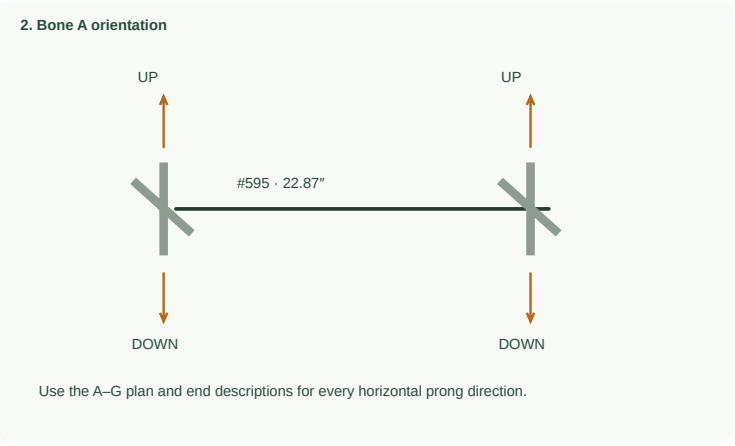


Use the A–G plan and end descriptions for every horizontal prong direction.

New parts: None. No previously assembled sections required. Tools: No additional tools.

☐ Find bones A–G on the plan.
☐ Check both connector types and every unused prong direction.

3. Prepare the base bones

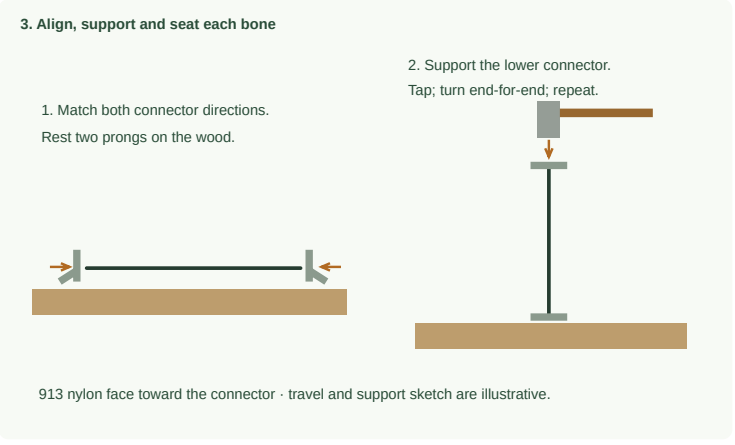


913 nylon face toward the connector · travel and support sketch are illustrative.

New parts: 3 × 460, 4 × 595, 5 × 4T, 8 × 5T, 1 × 6T. No previously assembled sections required. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Two prongs rest on the wood during alignment.
☐ Both tube ends meet connector shoulders flush; orientations match the plan.


4. Lay out seven bones

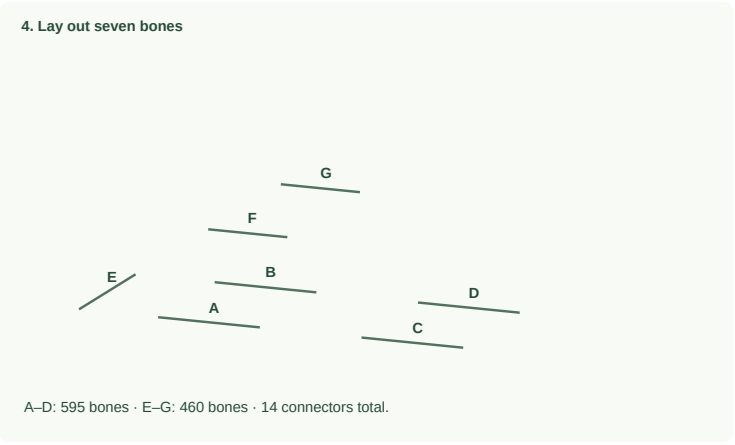

New parts: None. Use the seven completed bones A–G; no new parts in this step. Tools: No additional tools.

☐ Seven bones A–G are in their marked locations.
☐ Four 595 bones and three 460 bones cover fourteen distinct connectors.


5. Join the L-shaped base

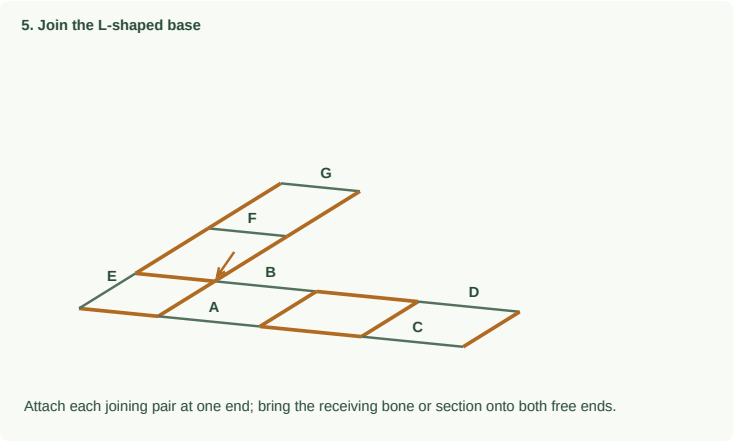

New parts: 6 × 460, 6 × 595. Use completed bones A–G; joining pairs are new. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ All twelve joining tubes are seated; base has nineteen tubes.
☐ L footprint is square and all fourteen connector orientations match.


6. Fit fourteen uprights

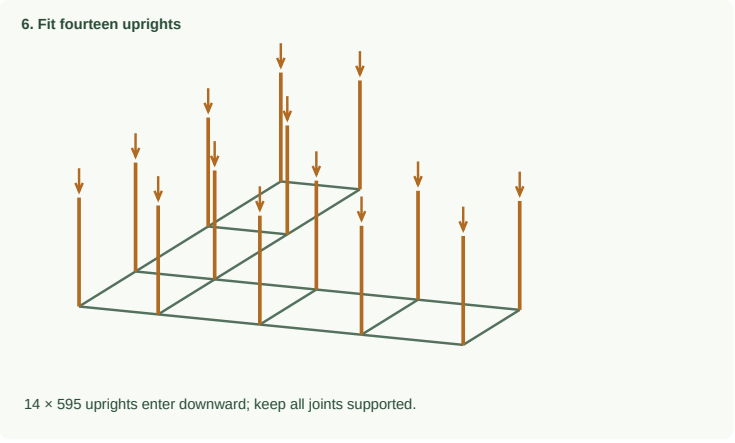

New parts: 14 × 595. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Fourteen 595 uprights are seated flush.
☐ All uprights are parallel and matching joint heights agree.

7. Fit the middle ladder

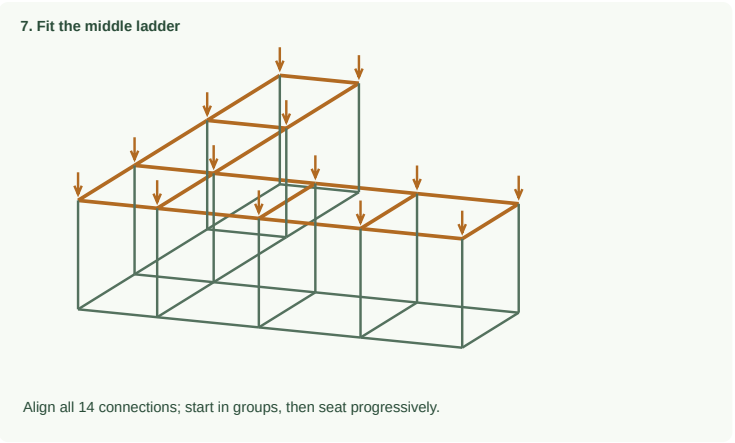


Align all 14 connections; start in groups, then seat progressively.

New parts: 9 × 460, 10 × 595, 5 × 4T, 8 × 5T, 1 × 6T. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Middle ladder has fourteen matching connections.
☐ Remaining vertical prongs face upward; joints are seated progressively.

8. Fit fourteen upper uprights

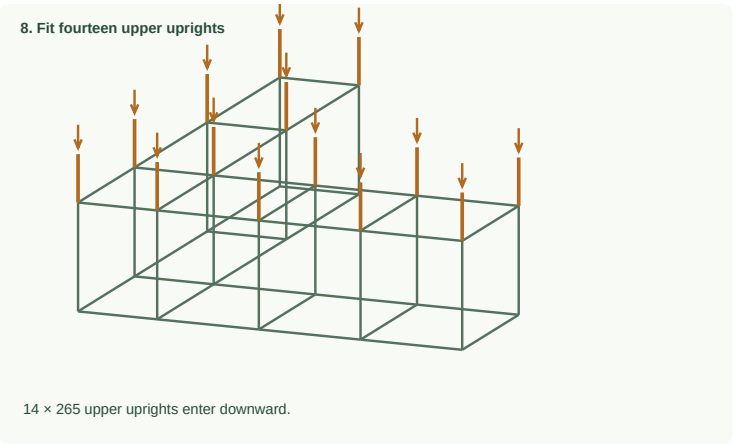


14 × 265 upper uprights enter downward.

New parts: 14 × 265. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Fourteen upper 265 uprights are seated flush.
☐ All upper joints are aligned before fitting the top.

9. Fit the top ladder

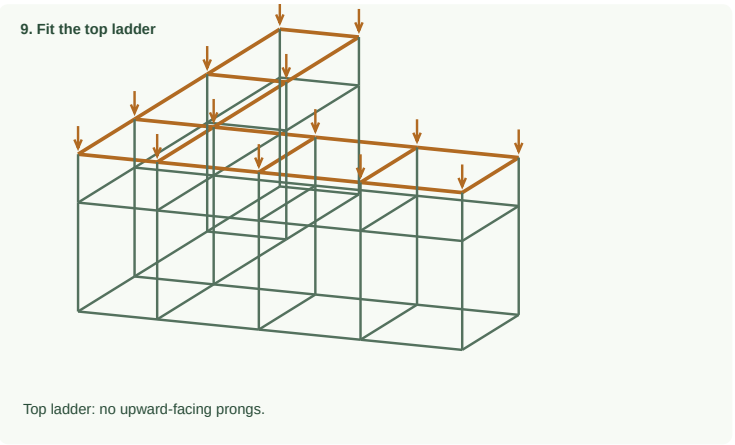


Top ladder: no upward-facing prongs.

New parts: 9 × 460, 10 × 595, 5 × 3T, 8 × 4T, 1 × 5T. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Top ladder has no upward-facing prongs.
☐ All frame joints are flush before fitting short legs.


10. Insert fourteen short legs

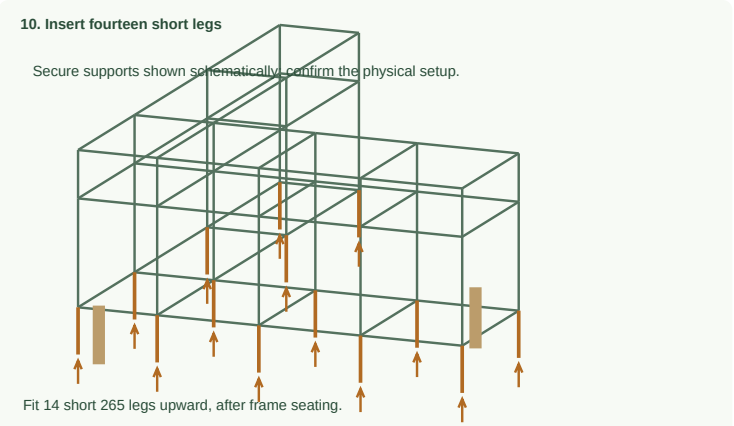

New parts: 14 × 265. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Frame is securely supported before working below it.
☐ Fourteen short 265 legs meet the downward connector shoulders flush.


11. Fit adjustable feet

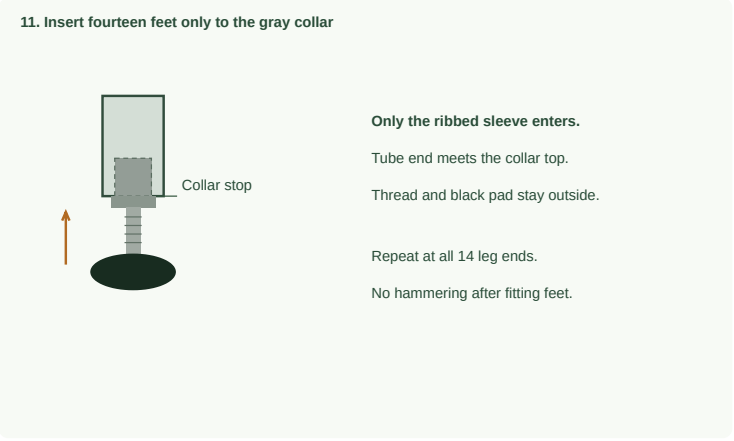

New parts: 14 × 705. Use the frame completed through the previous step. Tools: Secure frame supports — no hammering

☐ Fourteen feet are installed; gray collars meet the tube ends.
☐ Threaded shafts and black pads remain outside; no more hammering.


12. Fit 620 corner clips

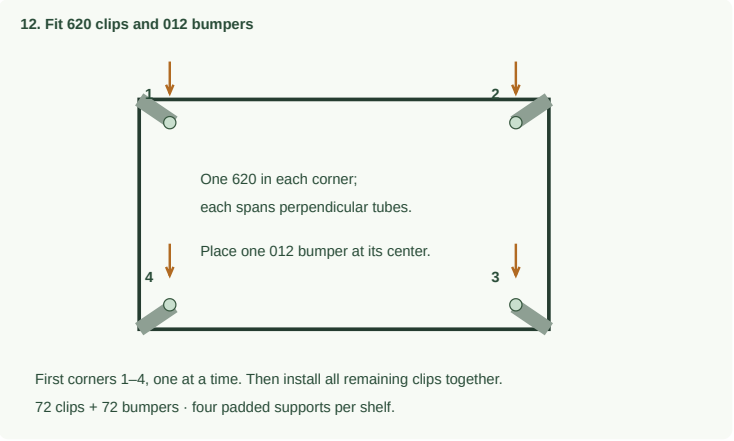

New parts: 72 × 620, 72 × 012. Use the completed frame and installed feet. Tools: No additional tools.

☐ One 620 bridges two perpendicular tubes at each corner.
☐ All 72 clips have 012 bumpers; each shelf position has four padded supports.

13. Place the glass shelves

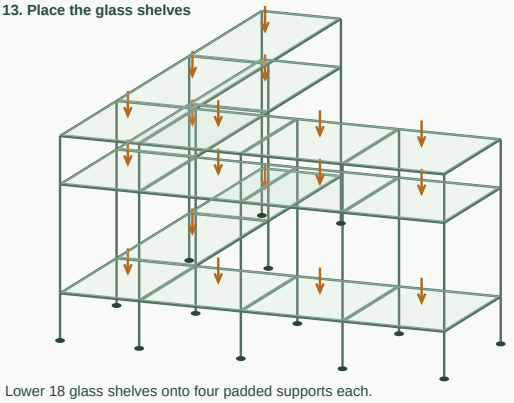


Lower 18 glass shelves onto four padded supports each.

New parts: 3 × 1717, 15 × 1722. Use the frame with all 72 clips and 72 bumpers fitted. Tools: Protective handling equipment appropriate for glass

☐ All four bumpers are present before placing each shelf.
☐ 18 glass shelves rest evenly on padded supports: 15 rectangular + 3 square.

14. Inspect the unit

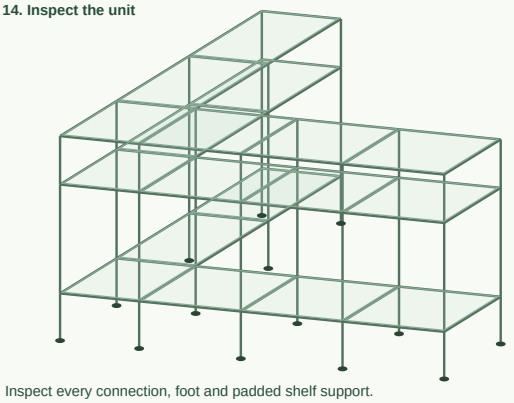

Inspect every connection, foot and padded shelf support.

New parts: None. Use the fully assembled unit; no new parts. Tools: No additional tools.

☐ Check flush joints, squareness, feet and all shelf supports.
☐ Confirm site-specific stability and load requirements before loading.

Manufacturer guidance reviewed: September 2025 assembly instructions, steps 2–8. Paired grouping for this custom L and the support arrangement remain illustrative; confirm physical working orientation and support with the supplier. Casting/clip fits and structural loading are unverified. Original drawing and revision comparison are in the interactive Drawing notes. Glass mesh thickness remains 4 mm.