STANDARD OPERATING PROCEDURE OF Lace Abrasion VF-C09


Lab /SOP/ 18




Lace Abrader
Tension weights



Test six (6) samples
Prepare the hardware by cutting it from the finished footwear or by mounting the hardware to a suitable piece of leather.

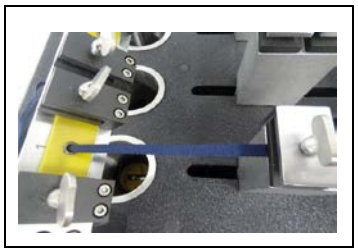


Mount the hardware on the lace abrader and center the test eyelet.
With the abrader in the fully extended position measure and cut a length of lace with sufficient length

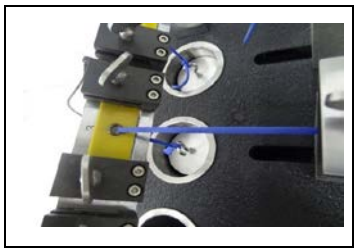


Attach a 0.5 kg weight to the end of the lace.
Pass the lace through the hardware mounted on the lace abrader and clamp it in place.




Reset all of the counters, set the cycle counter and start the machine.

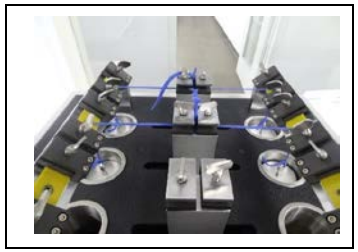

Stop the test when all lace samples have failed or when the desired number of wear cycles has been reached.

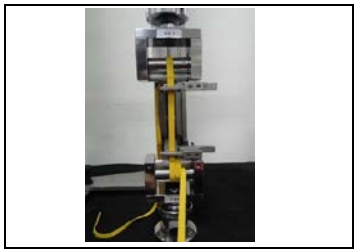

For laces that have not failed the abrasion test, perform a tensile test on the worn area in order to determine the tensile strength after abrasion. Testing should be performed at a speed of 100 mm/min). Record the force at break in kg.

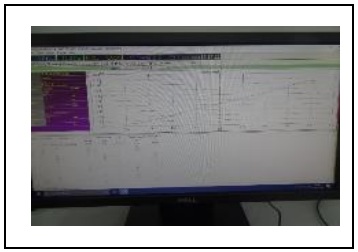

Report the lace description, abrasion rating, force at break before and after abrasion, and any deviations from this procedure.

Prepared by	Approved by	REVISION		DATE	